

漂移赛车使用说明书

感谢您使用本公司的玩具产品,为了您对本产品有更好的了解,请您在使用前熟读以下说明,这将为您带来不一样的操作体验。

注意

- 电控产品:本产品适合6岁及以上儿童使用。由成人组装/充电完成后,再由儿童玩耍。
- 请在成年人的监督下使用该产品;请不要擅自拆卸或改装本产品,任何改动将有可能导致产品无法正常使用。

使用注意事项

1. 遥控器使用1块3.7V可充电锂电池;遥控器使用2节1.5V“AA”非充电电池;
2. 电池取出和装入应按玩具电池盒内的极性和电压正确进行操作;
3. 非充电电池不可充电;
4. 充电电池必须在成人监护下充电;
5. 充电电池在充电前应从玩具中取出;
6. 不同类型的电池或新旧电池不能混用;
7. 车身电池必须使用原厂配置的电池,并使用原厂配送的USB线为车身电池充电;
8. 用尽的电池应从玩具中取出;若长期不使用,请将玩具中的电池取出;
9. 电源端子不得短路;
10. 用螺丝刀拧开遥控器电池盖上的螺丝,按照正确的正负极装入电池,用螺丝刀拧开车身电池盖上的螺丝,将电池插头与车身电源线按照正确的极性连接;
11. 维修跟保养:本产品为塑料、五金件和电子元件组成,不得入水或长期在潮湿环境下放置或使用,定期检查电线、插头、外壳和其他部件是否缺损,发现缺损时应停止使用,直至修复完好。

2.4G自动对码说明

1. 遥控器装好电池,开关拨至“ON”位置,指示灯闪烁,打开遥控车开关,进入连接状态。连接成功时,遥控器指示灯熄灭,遥控车指示灯长亮。注:连接不成功请重复以上操作。
2. 每个遥控器只可与一辆遥控车连接,当连接成功后,每辆车互不干扰。注:多辆车同时使用时可以依次打开连接。
3. 遥控器对码不成功时,45秒后进入休眠。
4. 当需要配对其他同型号遥控器或遥控车时,需取出遥控器电池并关闭遥控车电源开关后方可重新配对。
5. 当遥控车开机后10分钟没操作,自动断电,需要重新打开开关。

遥控器功能说明



1. 将遥控器操纵杆向后拨,遥控车前进,向前拨则遥控车后退。当操纵杆向后拉一半时,遥控车将缓慢前进;当操纵杆完全向后拉时,遥控车将迅速前进。
2. 顺时针旋转“右转/右转向盘”车子右转、逆时针旋转,“左转/左转向盘”车子左转。
3. 高低速切换:出厂默认高速档,按一下切换键、切换到低速档。
4. 灯光开关:按一下打开车身灯光,再按下关闭车身灯光。



如何充电

1. 这个新的3.7V电池,需要充电后才能使用。
2. 先把电池的电线插头按照正确的极性连接插在充电器的插头上,再把充电器插头插在插座上。(备注:请勿使用快充充电器充电,避免USB充电线和电池损坏。)
3. 电池充满电量所需时间为2-3小时左右,充电插头充电指示灯,充电中为“红灯”常亮,充满时指示灯为“熄灭”状态。不要过量充电,过长时间的充电也不会使电量增加。
4. 定期检查玩具和电池,充电线的电线、插头,这些配件如有破损应停止使用,直到修好或更换后方可使用。



如何安装电池

一、遥控器

1. 打开遥控器电池盖,依照遥控器电池仓里的正负极的极性来装入1.5V“AA”电池;
2. 盖好电池盖,锁好螺丝。

二、遥控车

1. 打开车底电池盖,把可充电电池连接到电源插口装入车底电池仓;
2. 盖上电池盖,锁好螺丝。

遥控器和车子的操作

操作“前进/后退”扳机,遥控车前进/后退。



轻按灯光按键,可以关闭灯光,再长按一次,可以打开。



操作“左转/右转”旋钮,遥控车向左转/右转。



开机默认高速模式,短按“调速开关”按键,切换为低速模式,再按一次,切换为高速模式。



指示说明

使用该玩具的电池充电器必须拿起来检查,以防损坏电线和其它部件。如果损坏,则必须在损坏修复后才能使用。

一般故障处理方法

故障症状	故障原因	处理方法
车辆不能行使	1. 遥控器没有连接或遥控车的开关没有打开。 2. 遥控器或遥控车未正确装入电池。 3. 充电电池电力不足。	1. 重新打开遥控车和遥控车开关,重新连接遥控车。 2. 将电池正确的装入遥控器或遥控车内。 3. 对充电电池进行充电。
车辆不受控制、遥控距离近	1. 遥控器内电池或充电电池的电力不足。 2. 场地附近可能有干扰源。	1. 将遥控器内电池更换为新电池,或对充电电池进行充电。 2. 更换场地。
异常保护	当遥控车功能受到外力阻碍而无法完成功能动作时,或电路电池短路的。	重新打开电源开关或取出电池断电后再重新装入。

致消费者

1. 在室内玩遥控车时,请注意不要造成家具或玻璃的损坏。
2. 请在户外安全的地方玩耍。不要在道路和人群中玩遥控车,以免发生危险。
3. 在室外玩遥控车听到打雷时,应立即停止玩耍。
4. 车轮旋转时,不要将手伸进,以免受伤,更不可卷入头发,衣服等。
5. 不可将遥控车对着人行驶。
6. 不可将遥控车乱扔、乱抛。
7. 放置遥控车时,请远离火源及高温的地方。
8. 本车采用了复杂电子电路及大量零配件,请不要随意对电路板进行拆装或改装。
9. 遥控车玩后沾满泥土、灰尘时,须用湿布轻轻的擦拭。
10. 不要把遥控车放在水里,这样会损坏电子元件。

警告: 内部小部件有窒息危险,不适合3岁及以下儿童玩耍,使用时必须有成年人在场,以便监护和指导。该说明书有重要信息,不可丢弃以便查询。

DRIFT RACING CAR USER MANUAL

Thank you for using our company's toy product. To help you better understand this product, please read the following instructions carefully before use. This will bring you a different operating experience.

Notice

- Electronic Product: This product is suitable for children aged 6 and above. After being assembled / charged by an adult, it can be played with by the child.
- Please use this product under the supervision of an adult; please do not disassemble or modify this product without authorization. Any modification may cause the product to fail to function normally.


Usage Precautions

1. The remote control car uses 1 piece of 3.7V rechargeable lithium battery; the remote control uses 2 pieces of 1.5V "AA" non-rechargeable batteries;
2. Removing and installing batteries should be operated correctly according to the polarity and voltage inside the toy's battery compartment.
3. Non-rechargeable batteries cannot be charged.
4. Rechargeable batteries must be charged under adult supervision.
5. Rechargeable batteries should be removed from the toy before charging.
6. Different types of batteries or new and old batteries cannot be mixed.
7. The car body battery must use the original factory-configured battery, and use the original factory-supplied USB cable to charge the car body battery.
8. Exhausted batteries should be removed from the toy; if the toy will not be used for a long time, please remove the batteries from the toy.
9. Power terminals must be short-circuited.
10. Use a screwdriver to unscrew the screws on the remote control's battery cover, install the batteries according to the correct positive and negative polarity. Use a screwdriver to unscrew the screws on the car bottom battery cover, connect the battery plug wire to the car body power wire according to the correct polarity.
11. Maintenance and Care: This product is composed of plastic, hardware parts, and electronic components. It must not be immersed in water or placed/used in a humid environment for a long time. Regularly check whether wires, plugs, casings, and other parts are damaged. Stop using if damage is found until repaired to good condition.

2.4G Auto-Pairing Instructions

1. Install batteries in the remote control, switch to the "ON" position, indicator light flashes. Turn on the remote control car switch to enter connection state. When connection is successful, the remote control indicator light goes off, the remote control car indicator light stays on. Note: If connection is unsuccessful, please repeat the above operation.
2. Each remote control can only connect to one remote control car. After successful connection, each car does not interfere with each other. Note: When using multiple cars simultaneously, they can be turned on and connected one by one.
3. When remote control pairing is unsuccessful, it enters sleep mode after 45 seconds.
4. When needing to pair other remote controls or remote control cars of the same model, it is necessary to take out the remote control batteries and turn off the remote control car power switch before re-pairing.
5. When the remote control car is turned on for 10 minutes without operation, it automatically powers off and needs the switch to be turned on again.

Remote Control Function Description

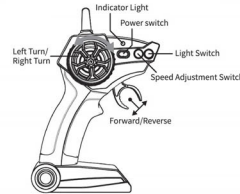

1. Pull the joystick of the remote control backward to make the car move forward, and push it forward to make the car move backward. When the joystick is pulled halfway backward, the car will move forward slowly; when it is pulled all the way backward, the car will move forward quickly.
2. Turn the "Right/Right Steering Wheel" clockwise to make the car turn right, and turn it counterclockwise to make the car turn left.
3. High and Low Speed Buttons: Factory default is high speed. Press the toggle button once to switch to low speed.
4. Light Switch: Press once to turn on the vehicle lights, press again to turn them off.




How to Charge

1. This is a new 3.7V battery, it needs to be charged before use.
2. First connect the battery's wire plug to the charger's plug according to the correct polarity, then plug the charger plug into the socket. (Note: Do not use a fast charger to charge, to avoid burning out the USB charging cable and battery.)
3. The time required for the battery to be fully charged is about 2-3 hours. The charging plug has a charging indicator light. During charging, the "red light" stays on constantly. When fully charged, the indicator light is in the "off" state. Do not overcharge, charging for too long will not increase the power.
4. Regularly inspect the toy and battery, the wires and plug of the charging cable. If these accessories are damaged, stop using them until they are repaired or replaced before use.



How to Install Batteries

- A. Remote Control
1. Open the remote control battery cover, install 1.5V "AA" batteries according to the positive and negative polarity inside the remote control battery compartment.
2. Cover the battery cover and lock the screws.
- B. Remote Control Car
1. Open the car bottom battery cover, connect the rechargeable battery to the power socket and install it into the car bottom battery compartment.
2. Cover the battery cover and lock the screws.

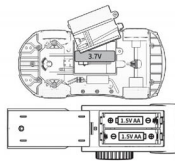

Operation of Remote Control and Car

Operate the "Forward / Reverse" trigger, the remote control car moves forward / backward.



Lightly press the light button to turn off the light, and long press again to turn it on.



Operate the "Left Turn / Right Turn" knob, the remote control car turns left / right.



The default high-speed mode is when starting up. Press the "speed control switch" button briefly to switch to low-speed mode, and press it again to switch to high-speed mode.

Indication Description

The battery charger for this toy must be picked up and inspected to prevent damage to wires and other parts. If damaged, it must not be used until the damage is repaired.

General Troubleshooting Methods		
Fault Symptom	Fault Cause	Handling Method
Vehicle cannot move	1. The remote control is not connected or the remote control car switch is not turned on. 2. The remote control or remote control car did not have batteries installed correctly. 3. Insufficient power in the rechargeable battery.	1. Turn on the remote control car and remote control switch again, reconnect the remote control car. 2. Install the batteries correctly into the remote control or remote control car. 3. Charge the rechargeable battery.
Vehicle uncontrollable, Short remote control distance	1. Insufficient power in the remote control batteries or rechargeable battery. 2. There may be interference sources near the site.	1. Replace the batteries in the remote control with new ones, or charge the rechargeable battery. 2. Change the site.
Abnormal Protection	When the remote control car function is obstructed by external force and cannot complete functional actions, or if the circuit battery is short-circuited.	Turn the power switch back on or take out the battery to cut off power, then reinstall it.

To Consumers

1. When playing with the remote control car indoors, please be careful not to cause damage to furniture or glass.
2. Please play in safe outdoor places. Do not play with the remote control car on roads or in crowds to avoid danger.
3. When playing with the remote control car outdoors and hearing thunder, stop playing immediately.
4. When the wheels are rotating, do not put your hands in to avoid injury, and especially do not get hair, clothes, etc. entangled.
5. Do not drive the remote control car towards people.
6. Do not throw or roughly collect the remote control car.
7. When placing the remote control car, please keep it away from fire sources and high-temperature places.
8. This car uses complex electronic circuits and a large number of components. Please do not disassemble or modify the circuit board at will.
9. When the remote control car is covered with mud or dust after play, it must be gently wiped with a damp cloth.
10. Do not put the remote control car in water, as this will damage the electronic components.

WARNING: Internal small parts pose a choking hazard. Not suitable for children aged 3 years and below. Must be used with an adult present for supervision and guidance. This manual contains important information and must not be discarded for future reference.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.