 


Bluetooth Keypad Deadbolt Smart Lock

Installation Guide / Quick Start Guide

Thank you for purchasing our products. Please review this manual thoroughly before operating your device.
All pictures in this manual are for illustration purposes only. Actual product may vary due to product upgrade.

1

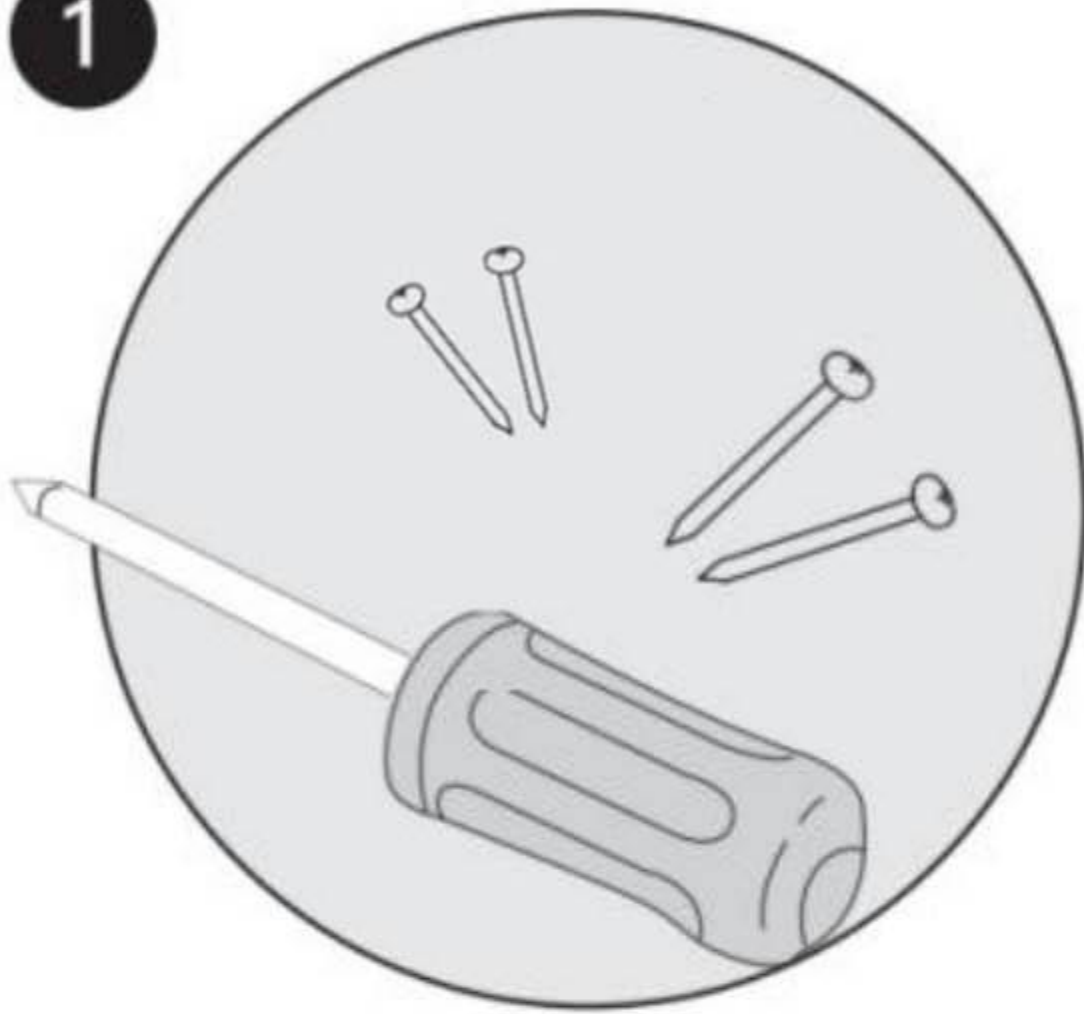

Follow the installation instructions to install the smart lock.

2



 
Scan the QR Code to download the Senselook App.

3



Register and login to the Senselook App. Add the device to your account by scanning the QR Code found on the Battery Cover.

4

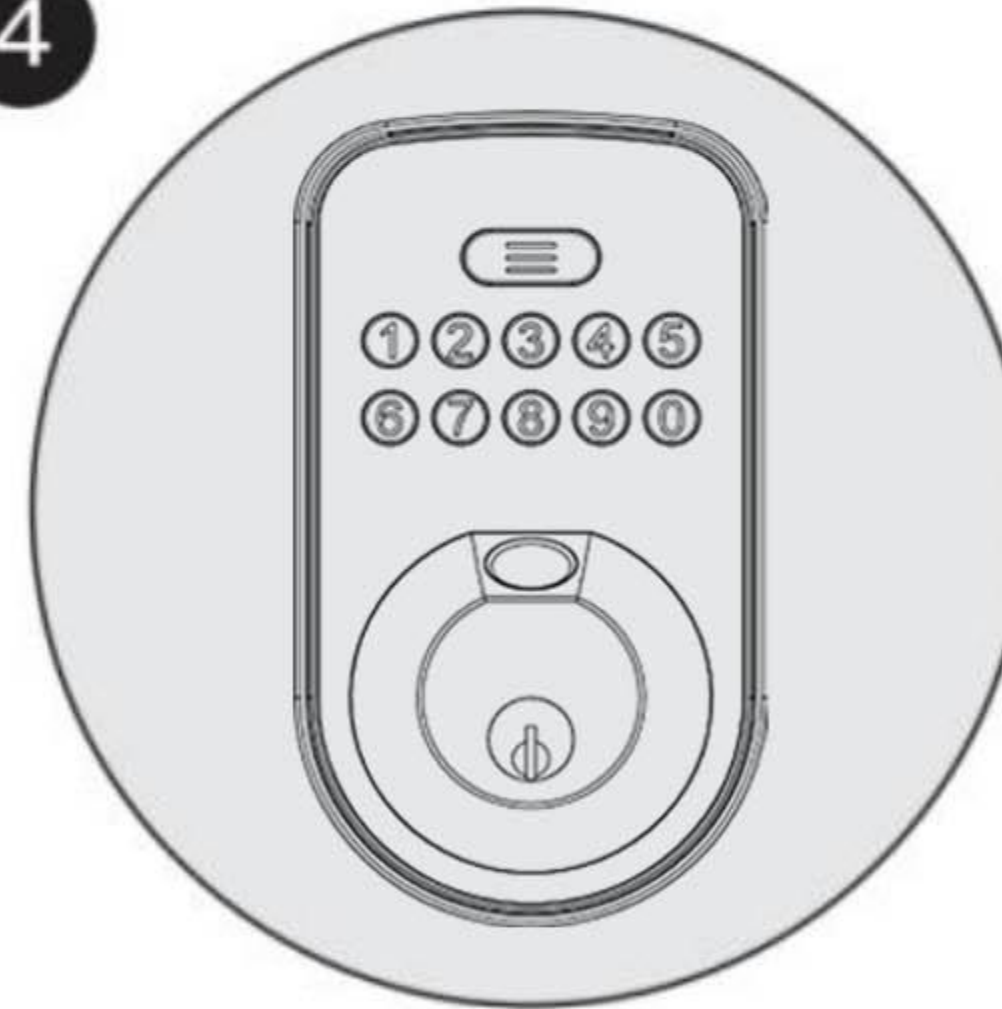

Calibrate the smart lock and complete the Bluetooth setup in the app.

Installation Guide

Read this manual carefully before installing and operating.

STEP 1: Prepare the door and check dimensions

STEP 2: Install the latch and strike

 
STEP 3: Install exterior assembly

STEP 4: Install interior assembly







STEP 5: Determine Door Handing

IMPORTANT: Do not load batteries until the lock is completely installed.

INSTALLATION GUIDE

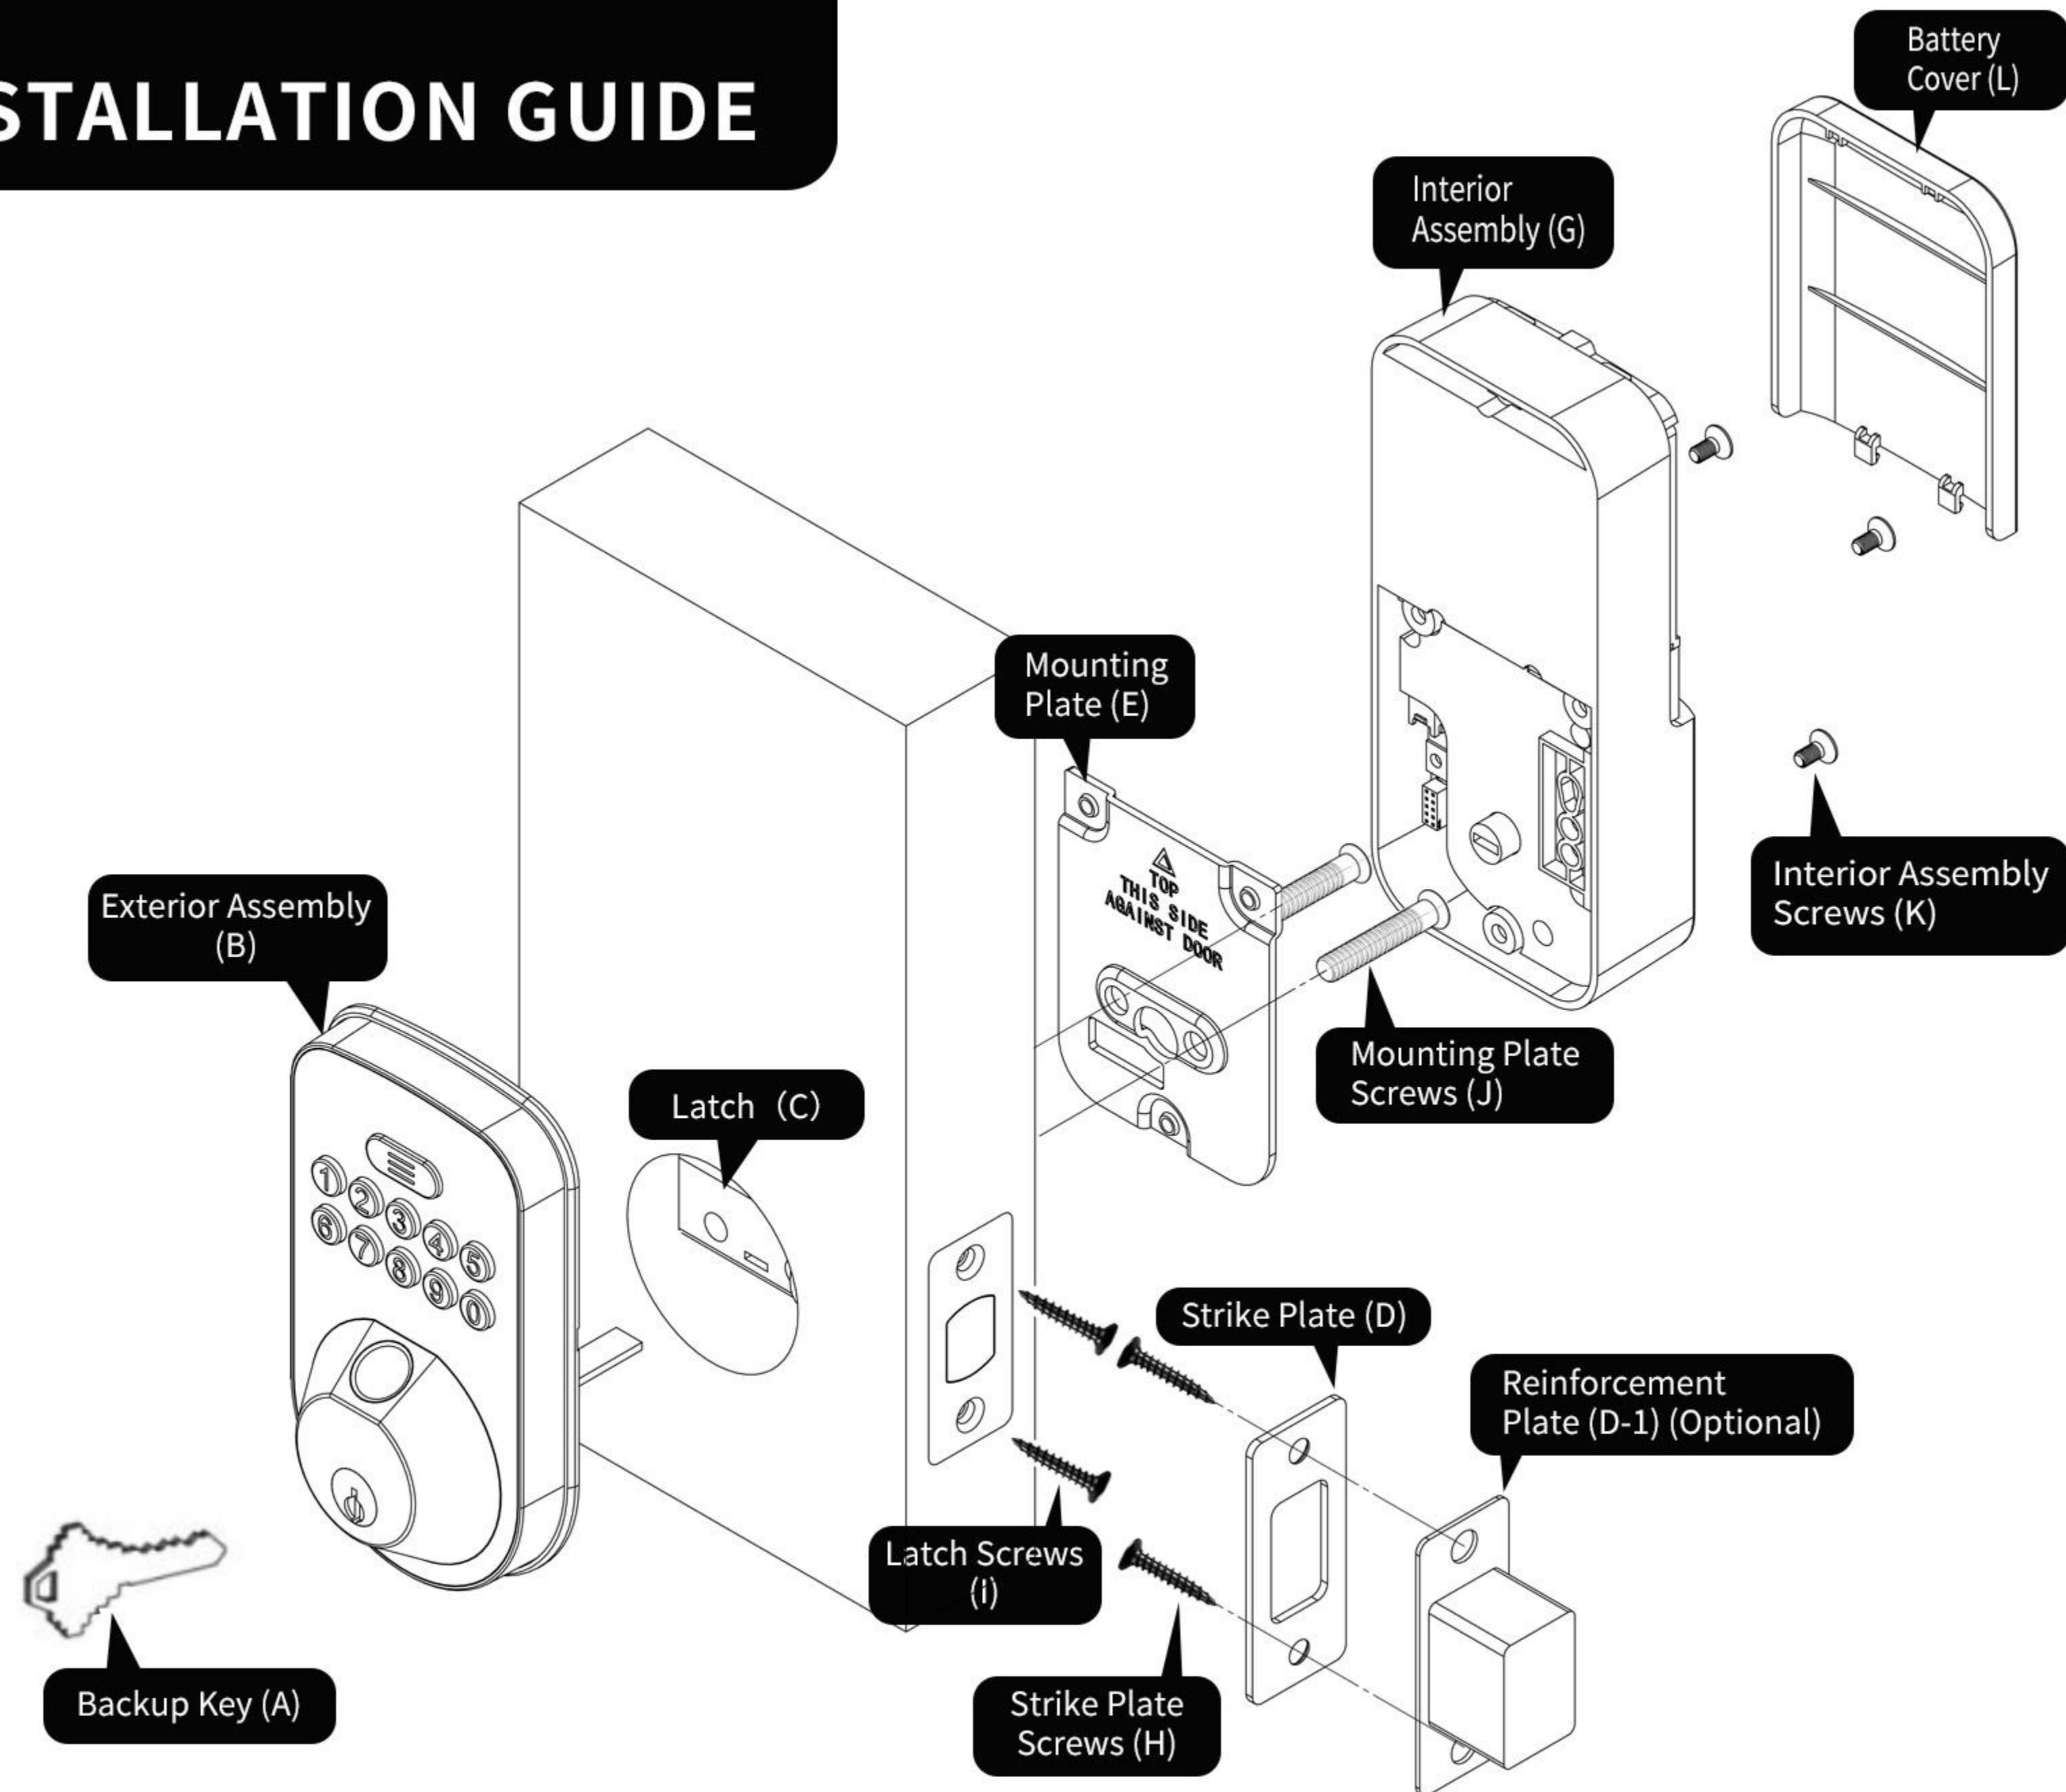

Parts List

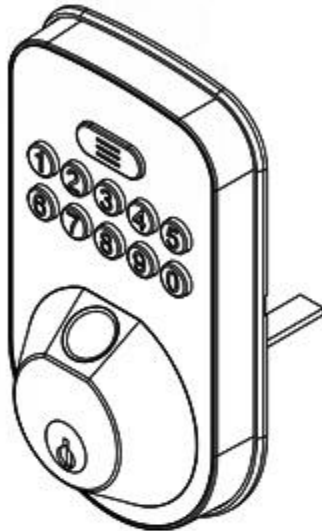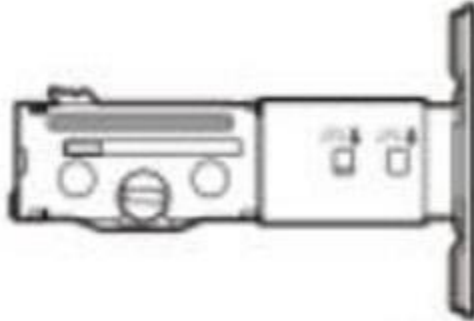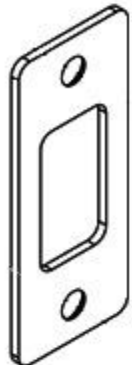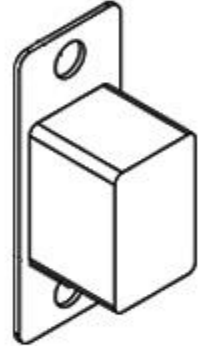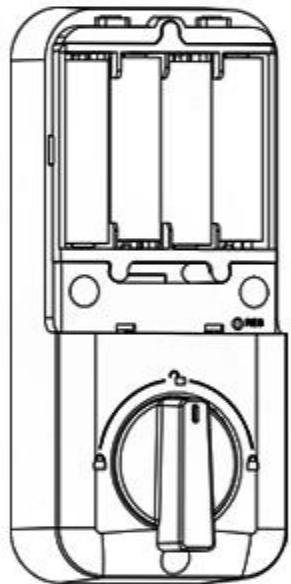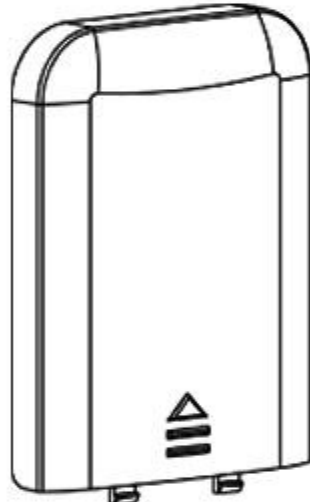      
A Backup Key x2 	B Exterior Assembly x1 	C Latch x1 	D Strike Plate x1  D-1 Reinforcement Plate x1 (optional) 
E Mounting Plate x1 	F Interior Assembly x1 	G Strike Plate Screws x2  H Latch Screws x2 	I Battery Cover x1 
J Mounting Plate Screws x2  Door fitting: 1-3/8"~2" (35mm~50mm)	K Interior Assembly Screws x3 		

STEP


1 prepare the door and check dimensions**A**

Measure to confirm that the bore hole is 1 - 1/2 " or 2 - 1/8 " (38mm or 54mm).

 
Measure to confirm that the hole in the door edge is 1 " (25mm).

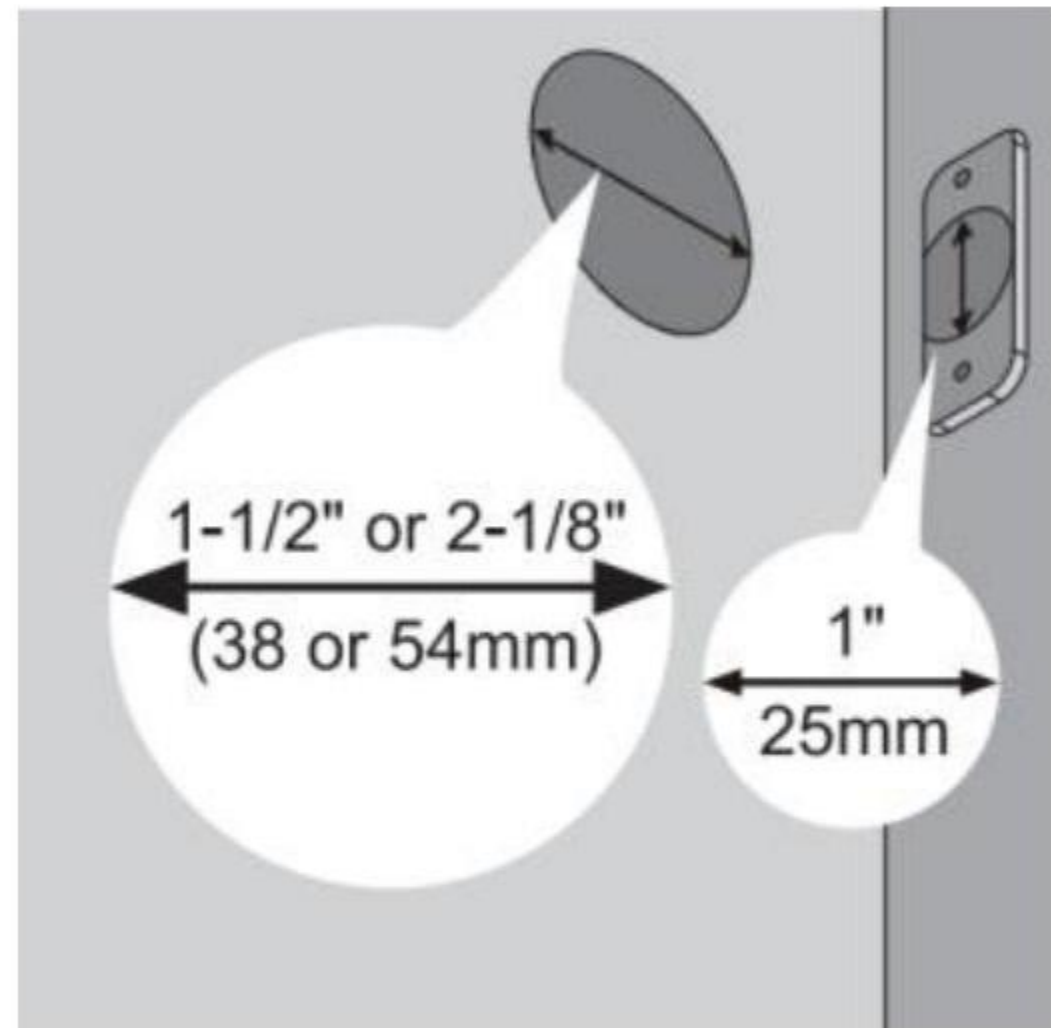**B**

 
Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70mm).

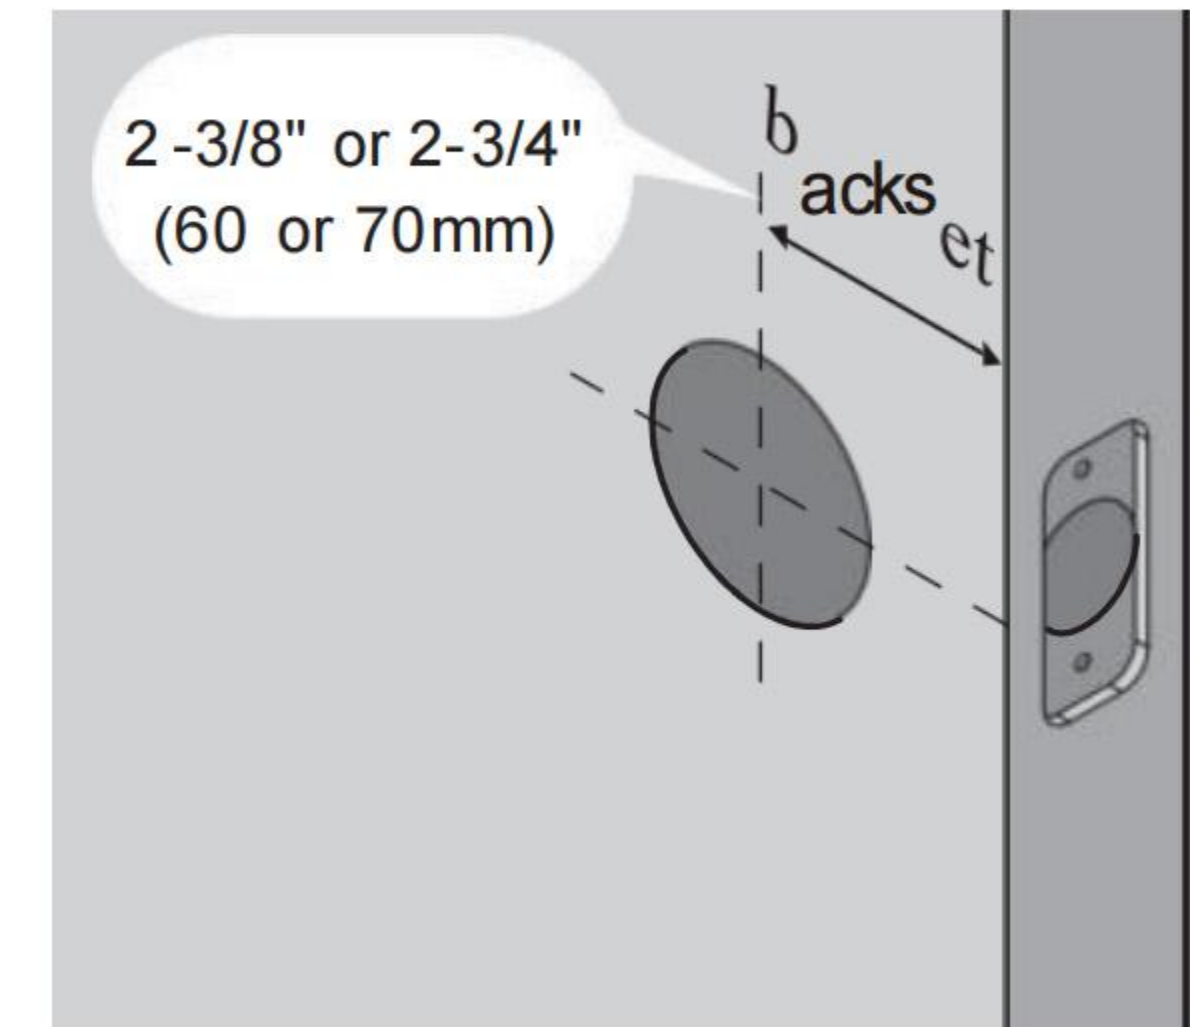**C**

 Measure to confirm that the door is 1 - 3/8" to 2" (35mm to 50mm) thick.

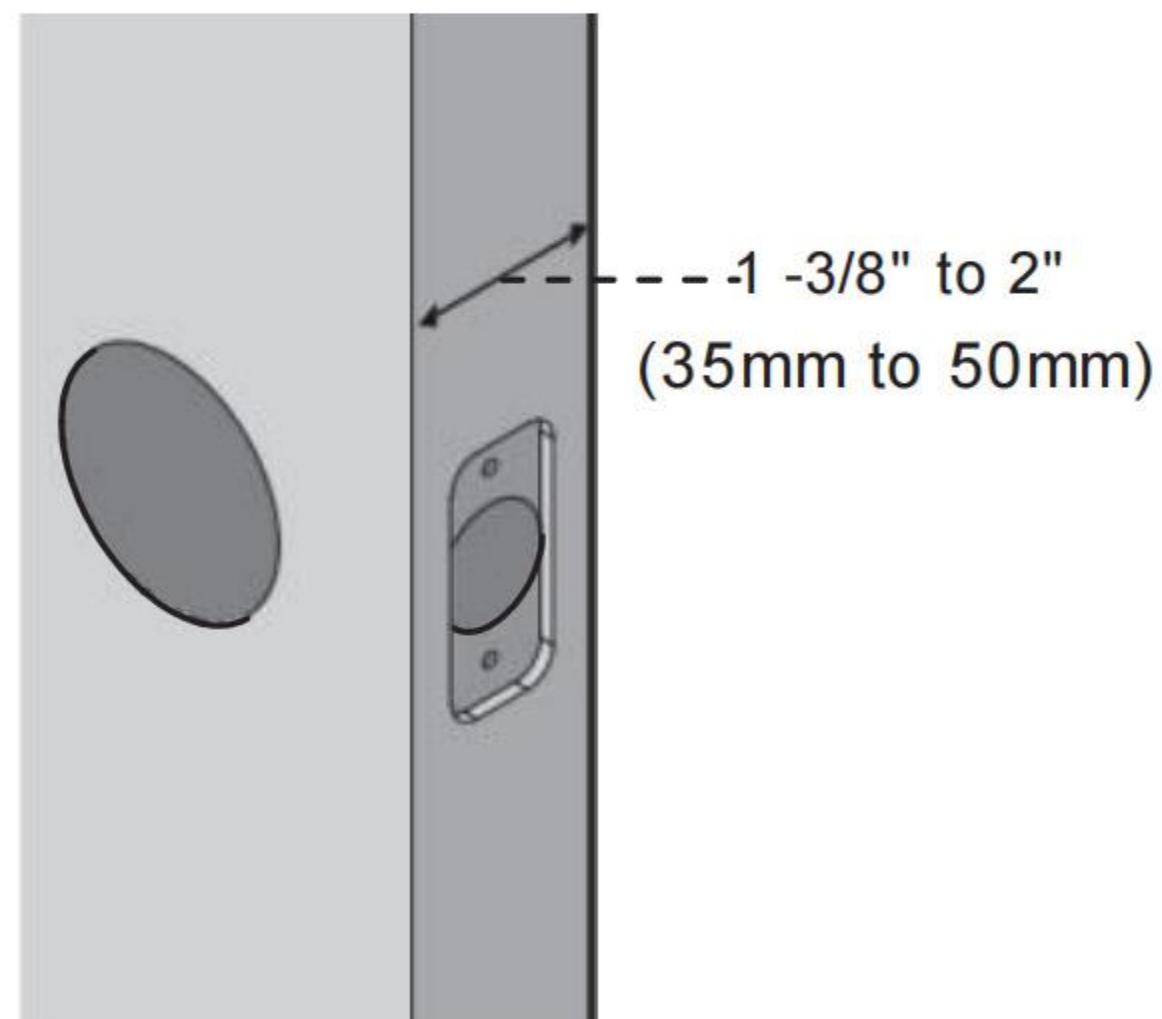**D**

 Make sure the hole in the door frame is drilled a minimum of 1" (25mm) deep, to leave enough space for the deadbolt to extend into the door frame when the door is locked.

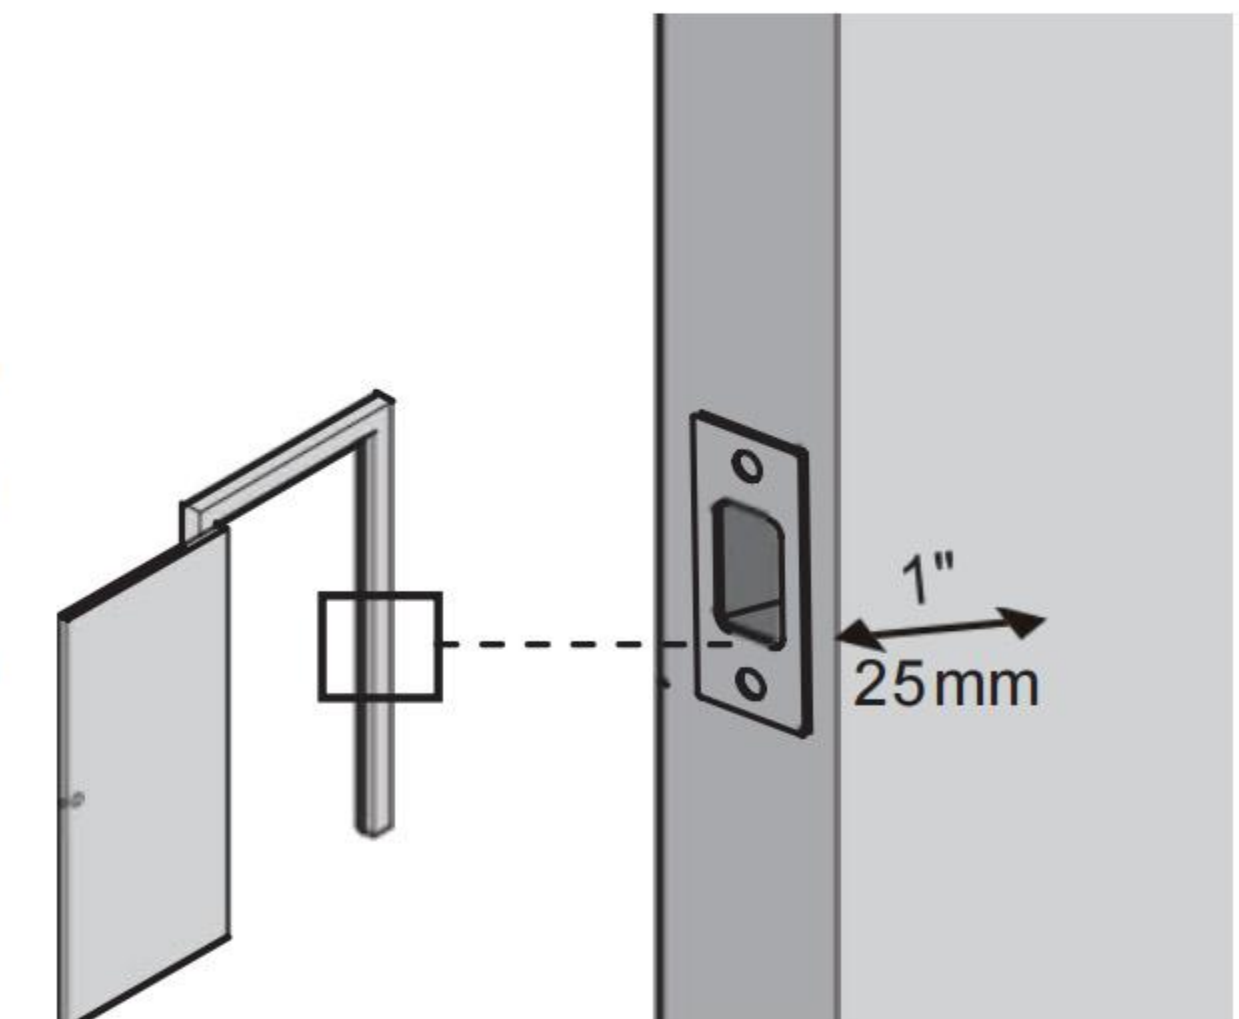


Notes: Make sure the door frame is aligned with the door and there are no obstructions stuck in the door frame.

STEP


2 Install the latch and strike

A

 Determine backset and adjust the latch.

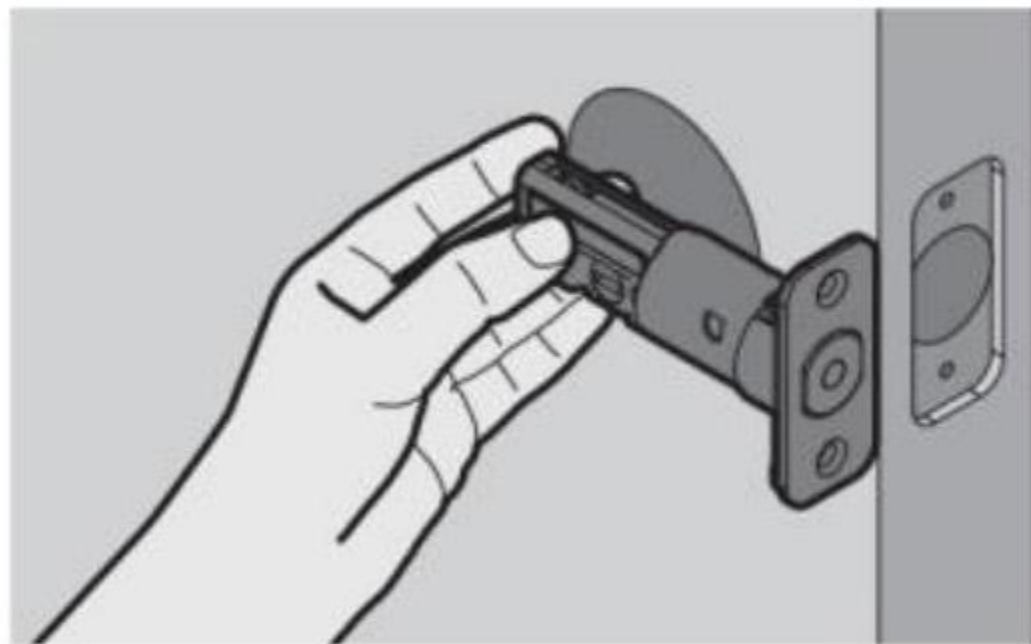


 Hold the latch in front of the bore hole, with the latch face flush against the door edge. Is the slotted hole centered in the door hole?

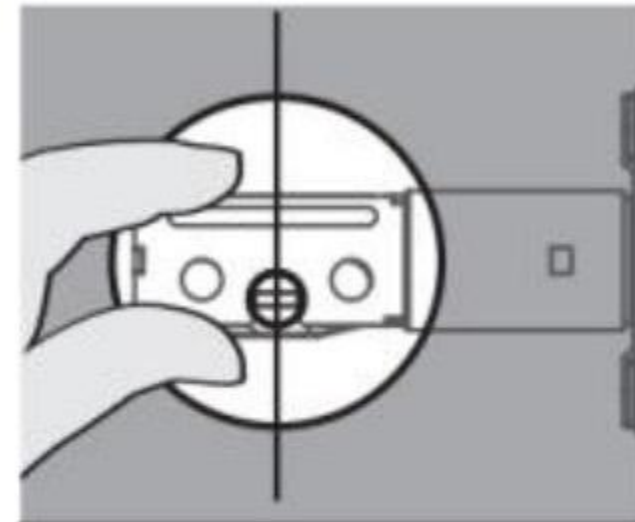

YES

 
No adjustment is required.
Proceed to next step.

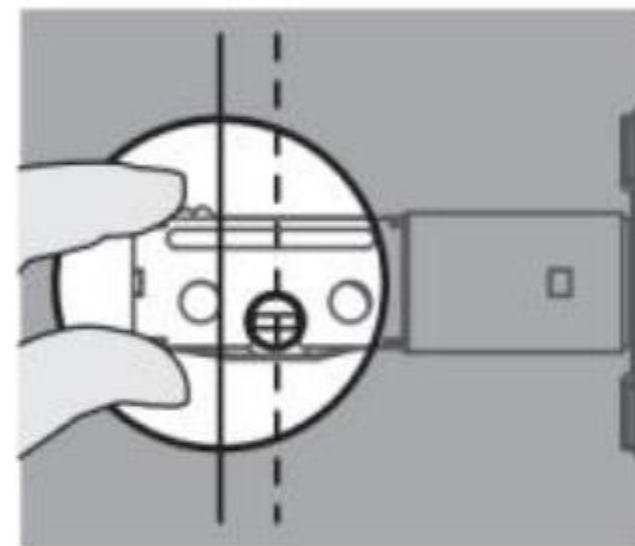

NO



Slotted hole is
NOT centered.

 Rotate and pull the
latch as shown to extend latch.

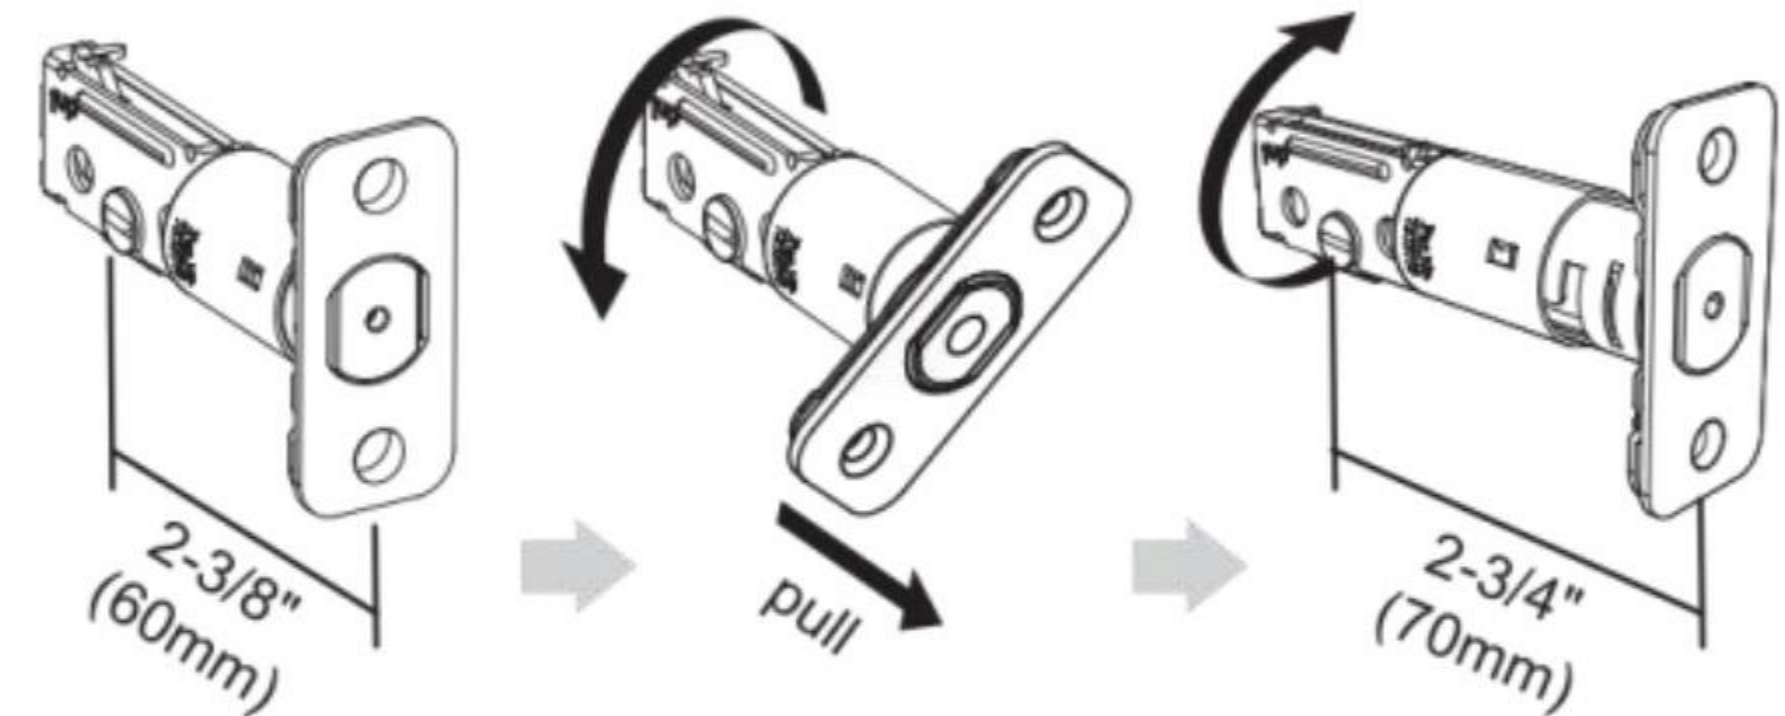


B

  Install the latch.

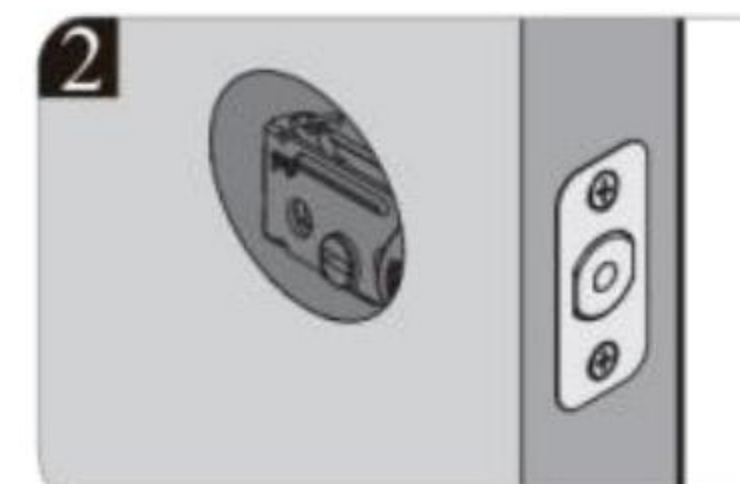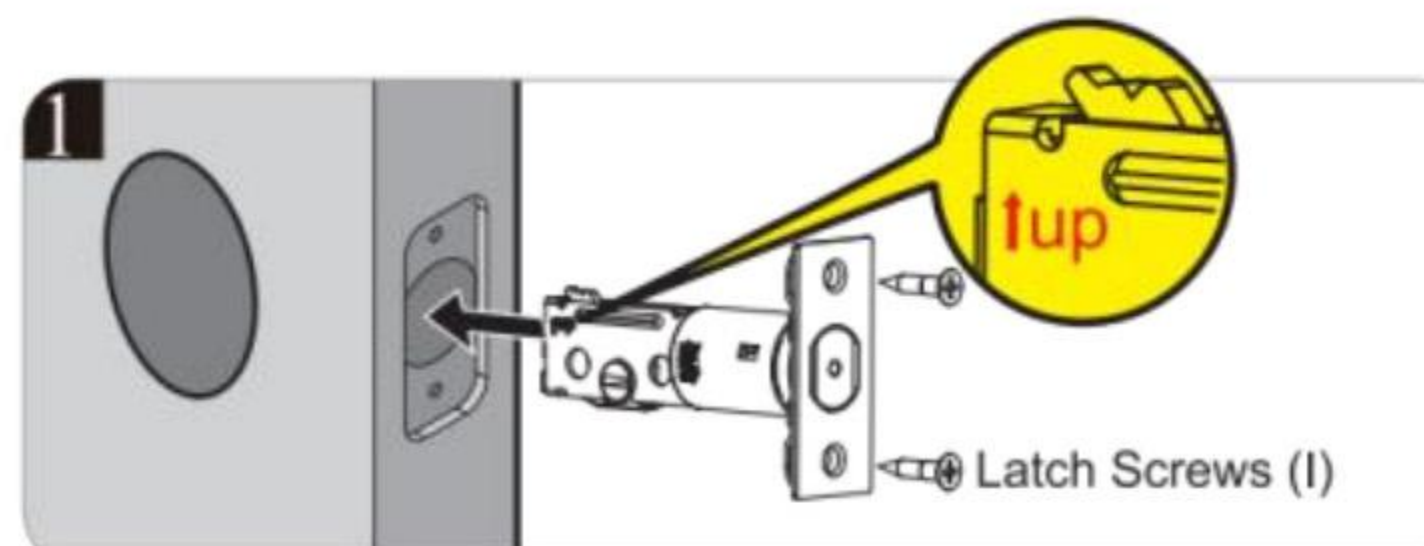

 
- C Use a screwdriver to test if deadbolt works smoothly.

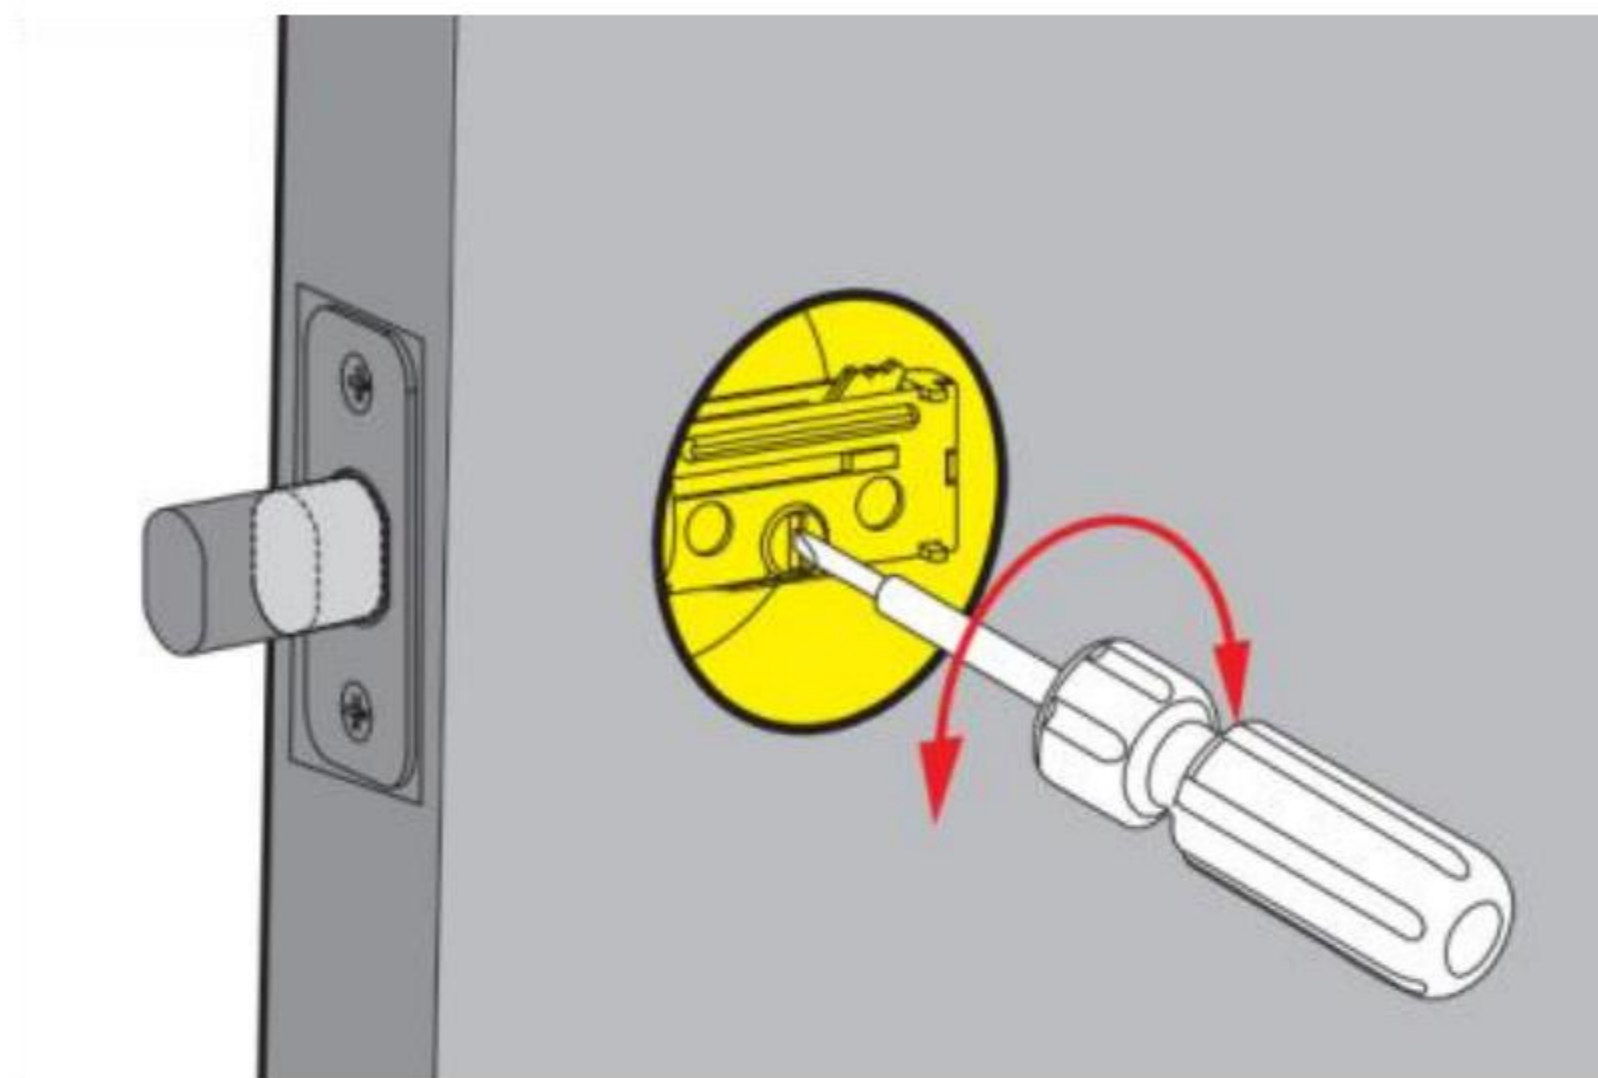

- D Install strike on the door frame.

! IMPORTANT:

 Make sure the hole in door frame is drilled a minimum of 1" (25mm) deep.

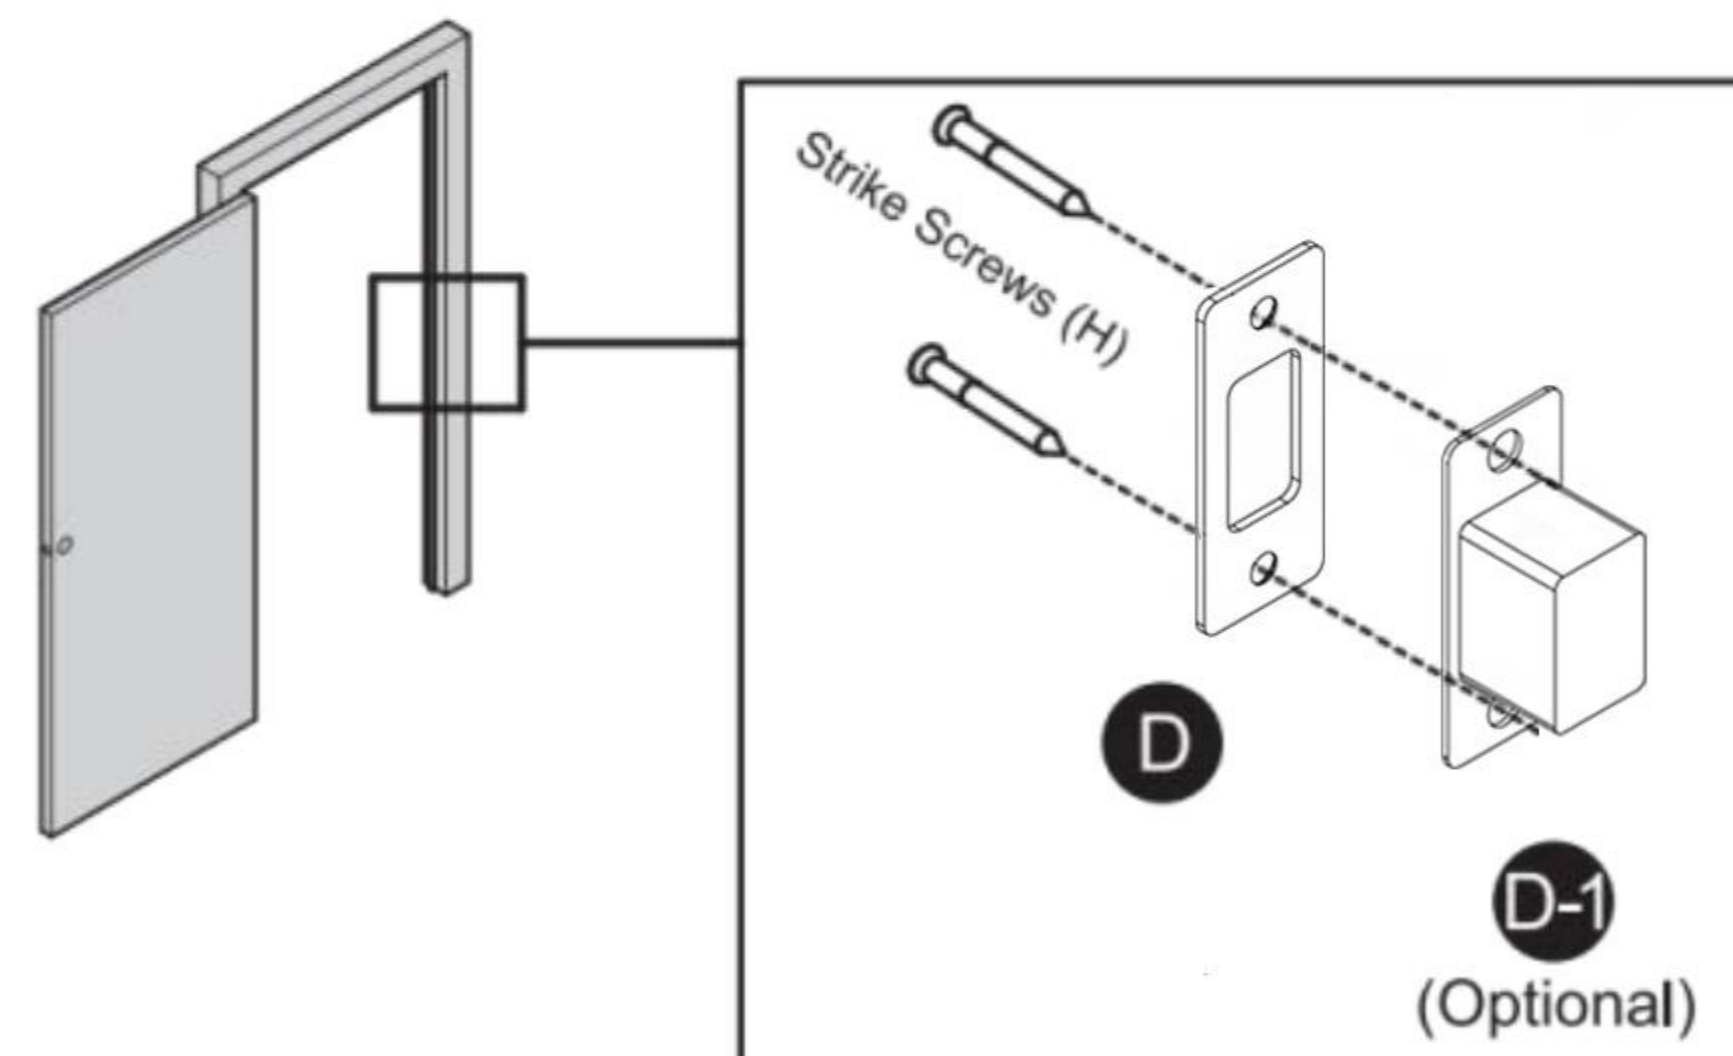


3 Install exterior assembly



IMPORTANT:

Before installation, make sure the latch is fully retracted (in the unlocked position).

 
Unlocked

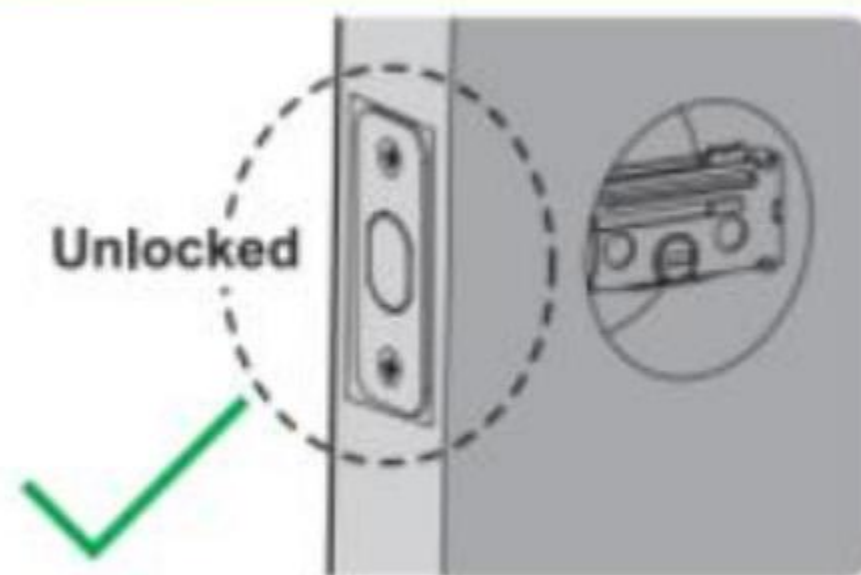


Locked



 - A** With the latch fully retracted (in the unlocked position), route the cable below the latch, and insert the tailpiece through the slot in the latch.

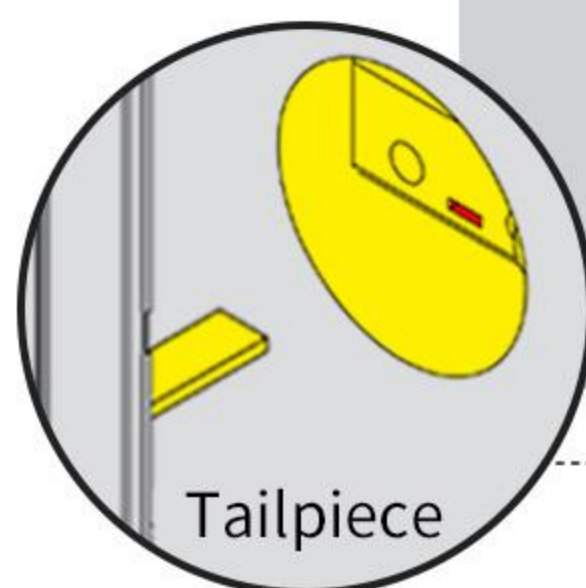


Tailpiece

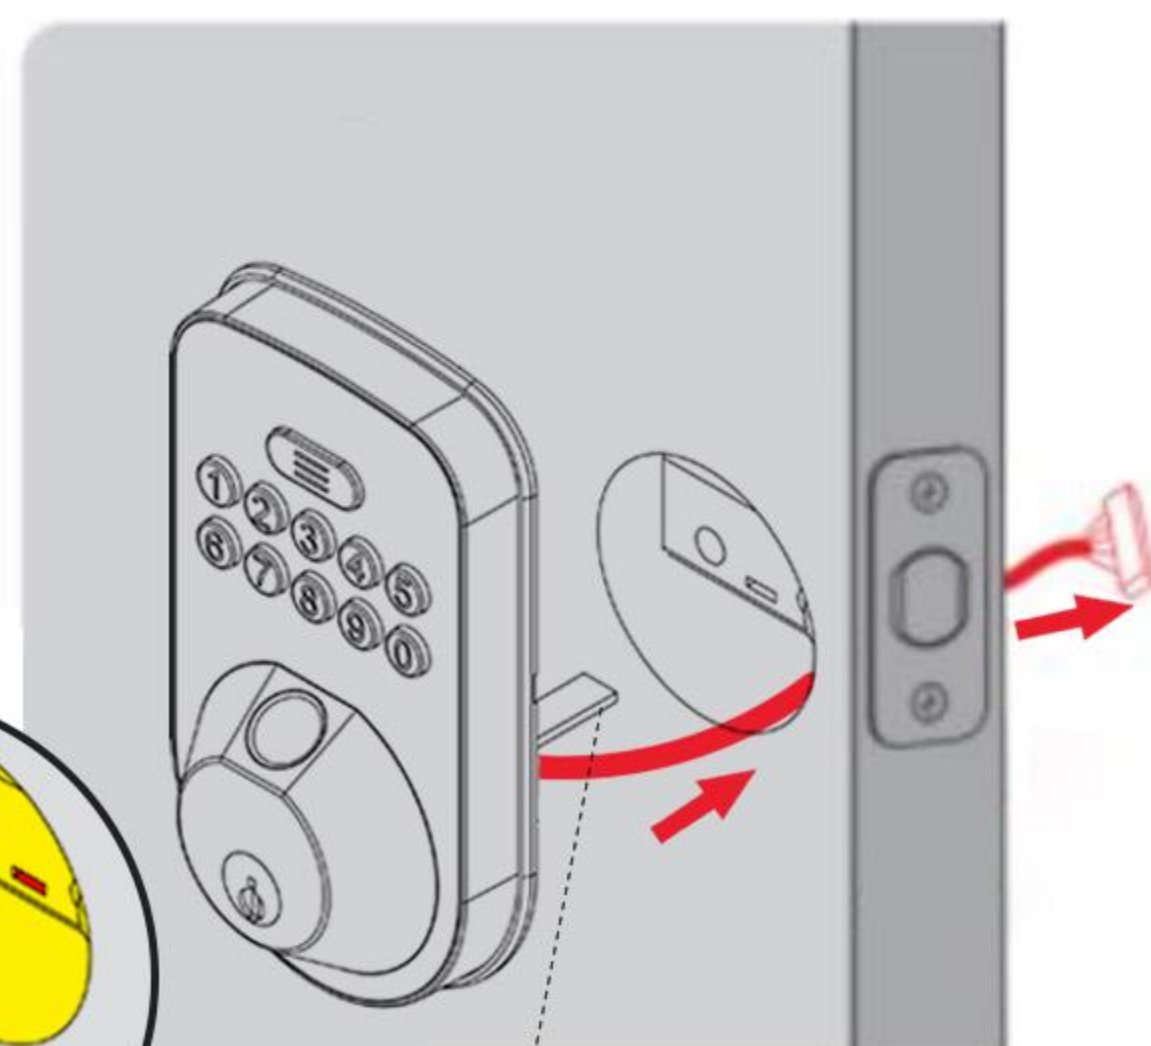 


- B** Secure the mounting plate with the supplied screws. Do not overtighten screws.

 Keep parallel to door edge.

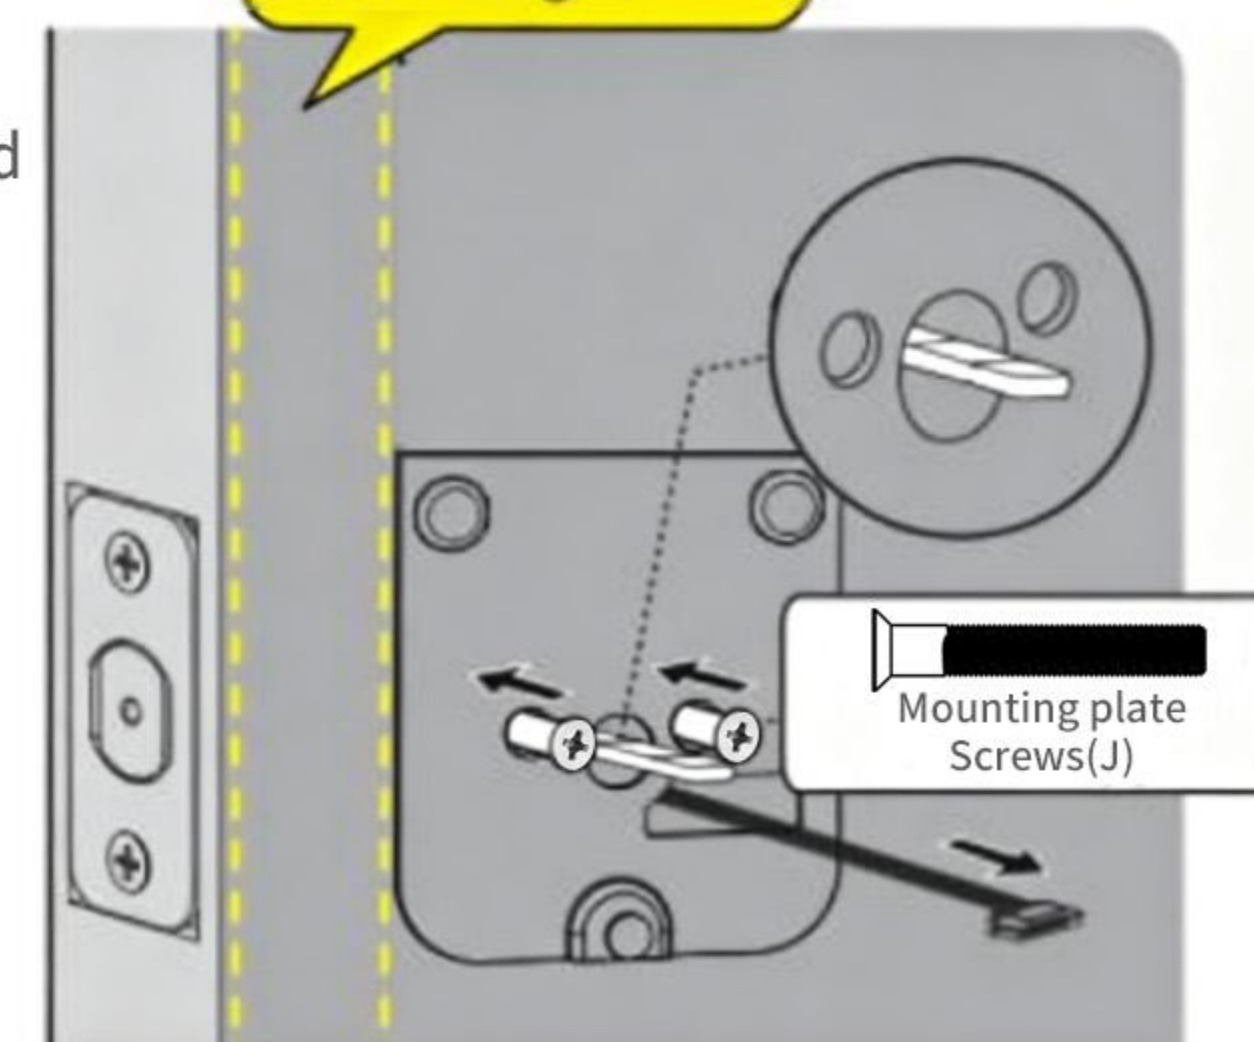


4 Install interior assembly

 
A Push the battery cover up in the direction as illustrated.

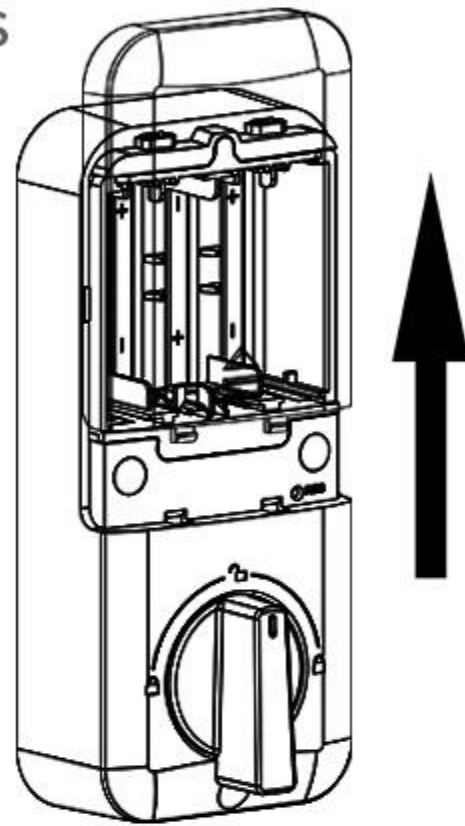

 
B Insert the cable into the connector. Push the connector in firmly until it is completely attached.

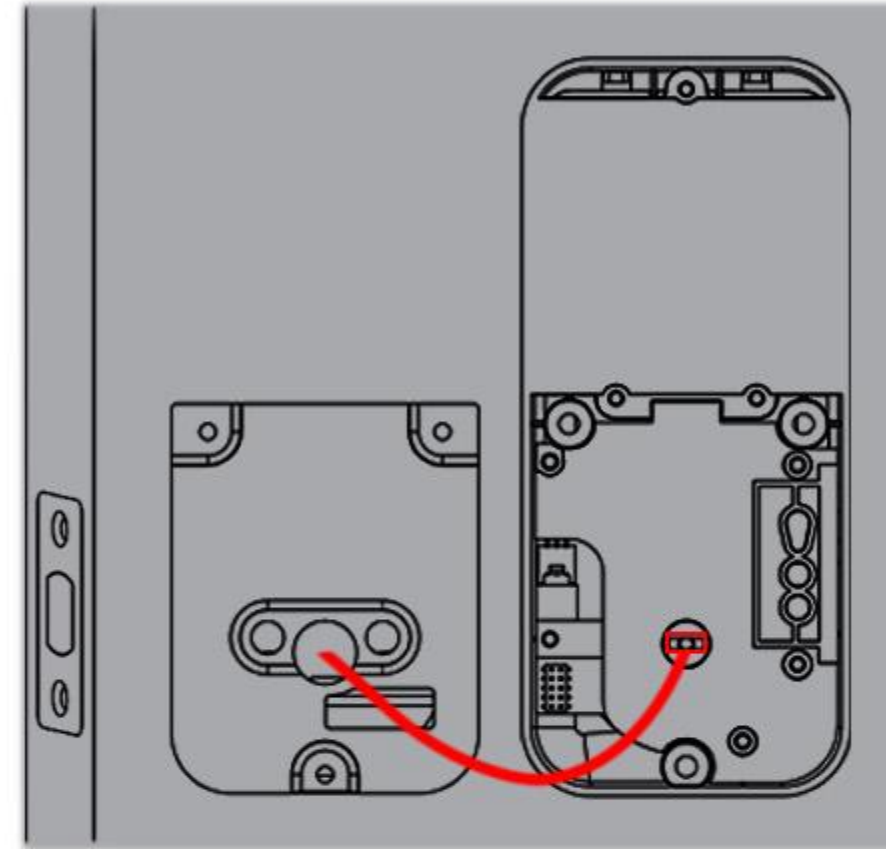

 
C Keep the thumb turn in the vertical position and install the interior assembly.

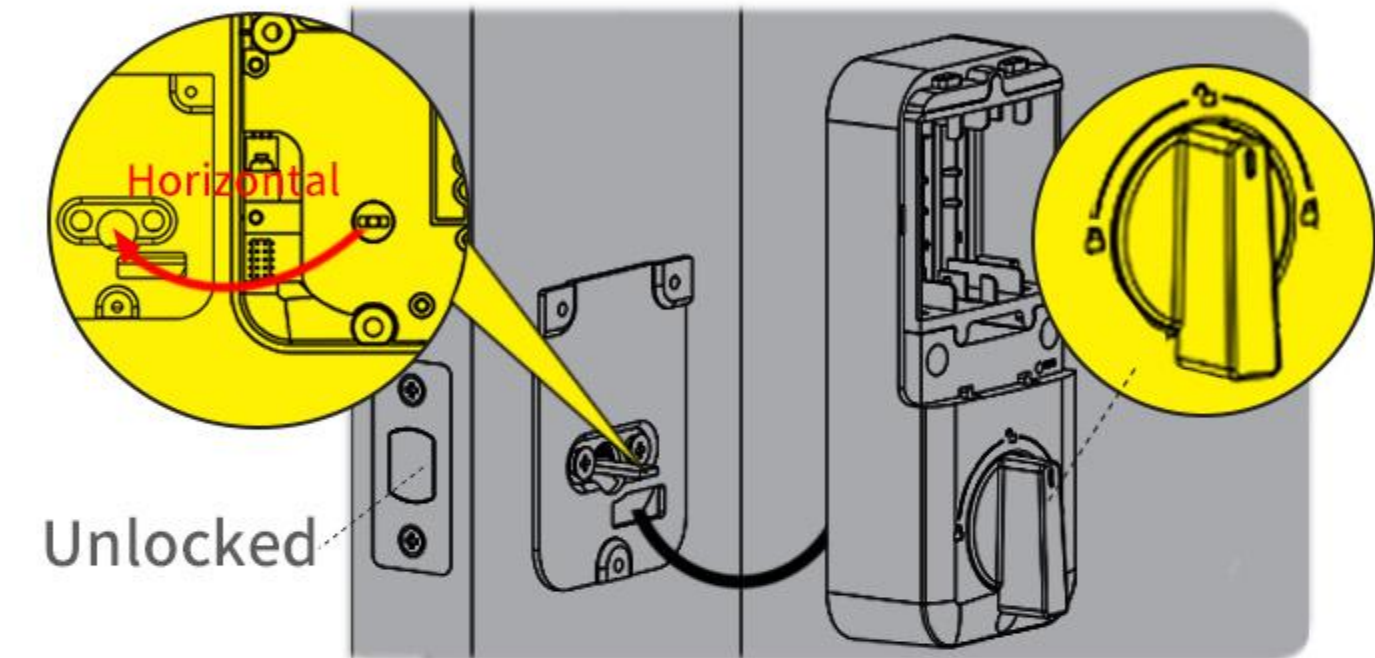

 D Attach interior assembly to mounting plate and tighten 3 screws.

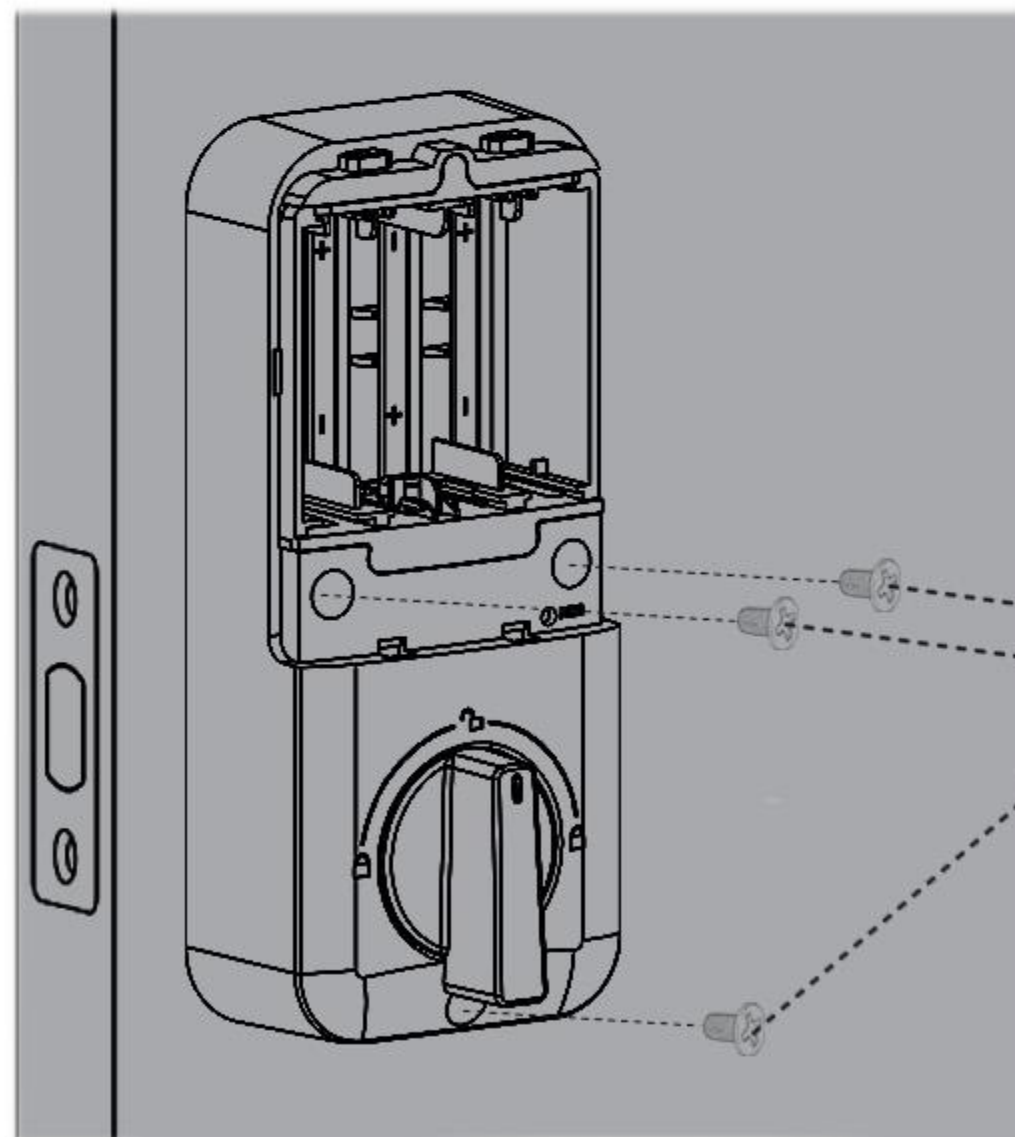

 
E Test the lock by rotating the thumb turn to see if the bolt can be extended and retracted smoothly.

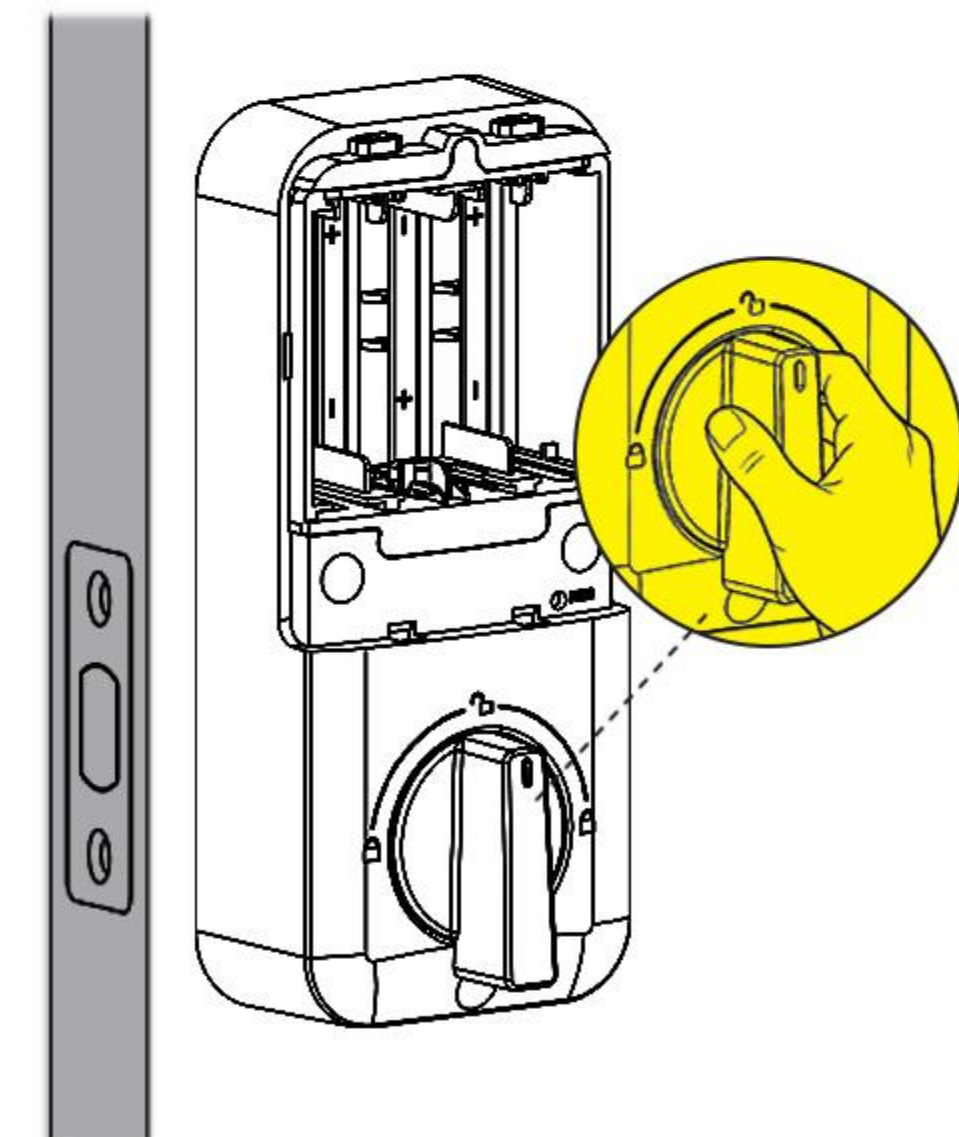

Quick start Guide


QUICK START GUIDE

 Features At a Glance

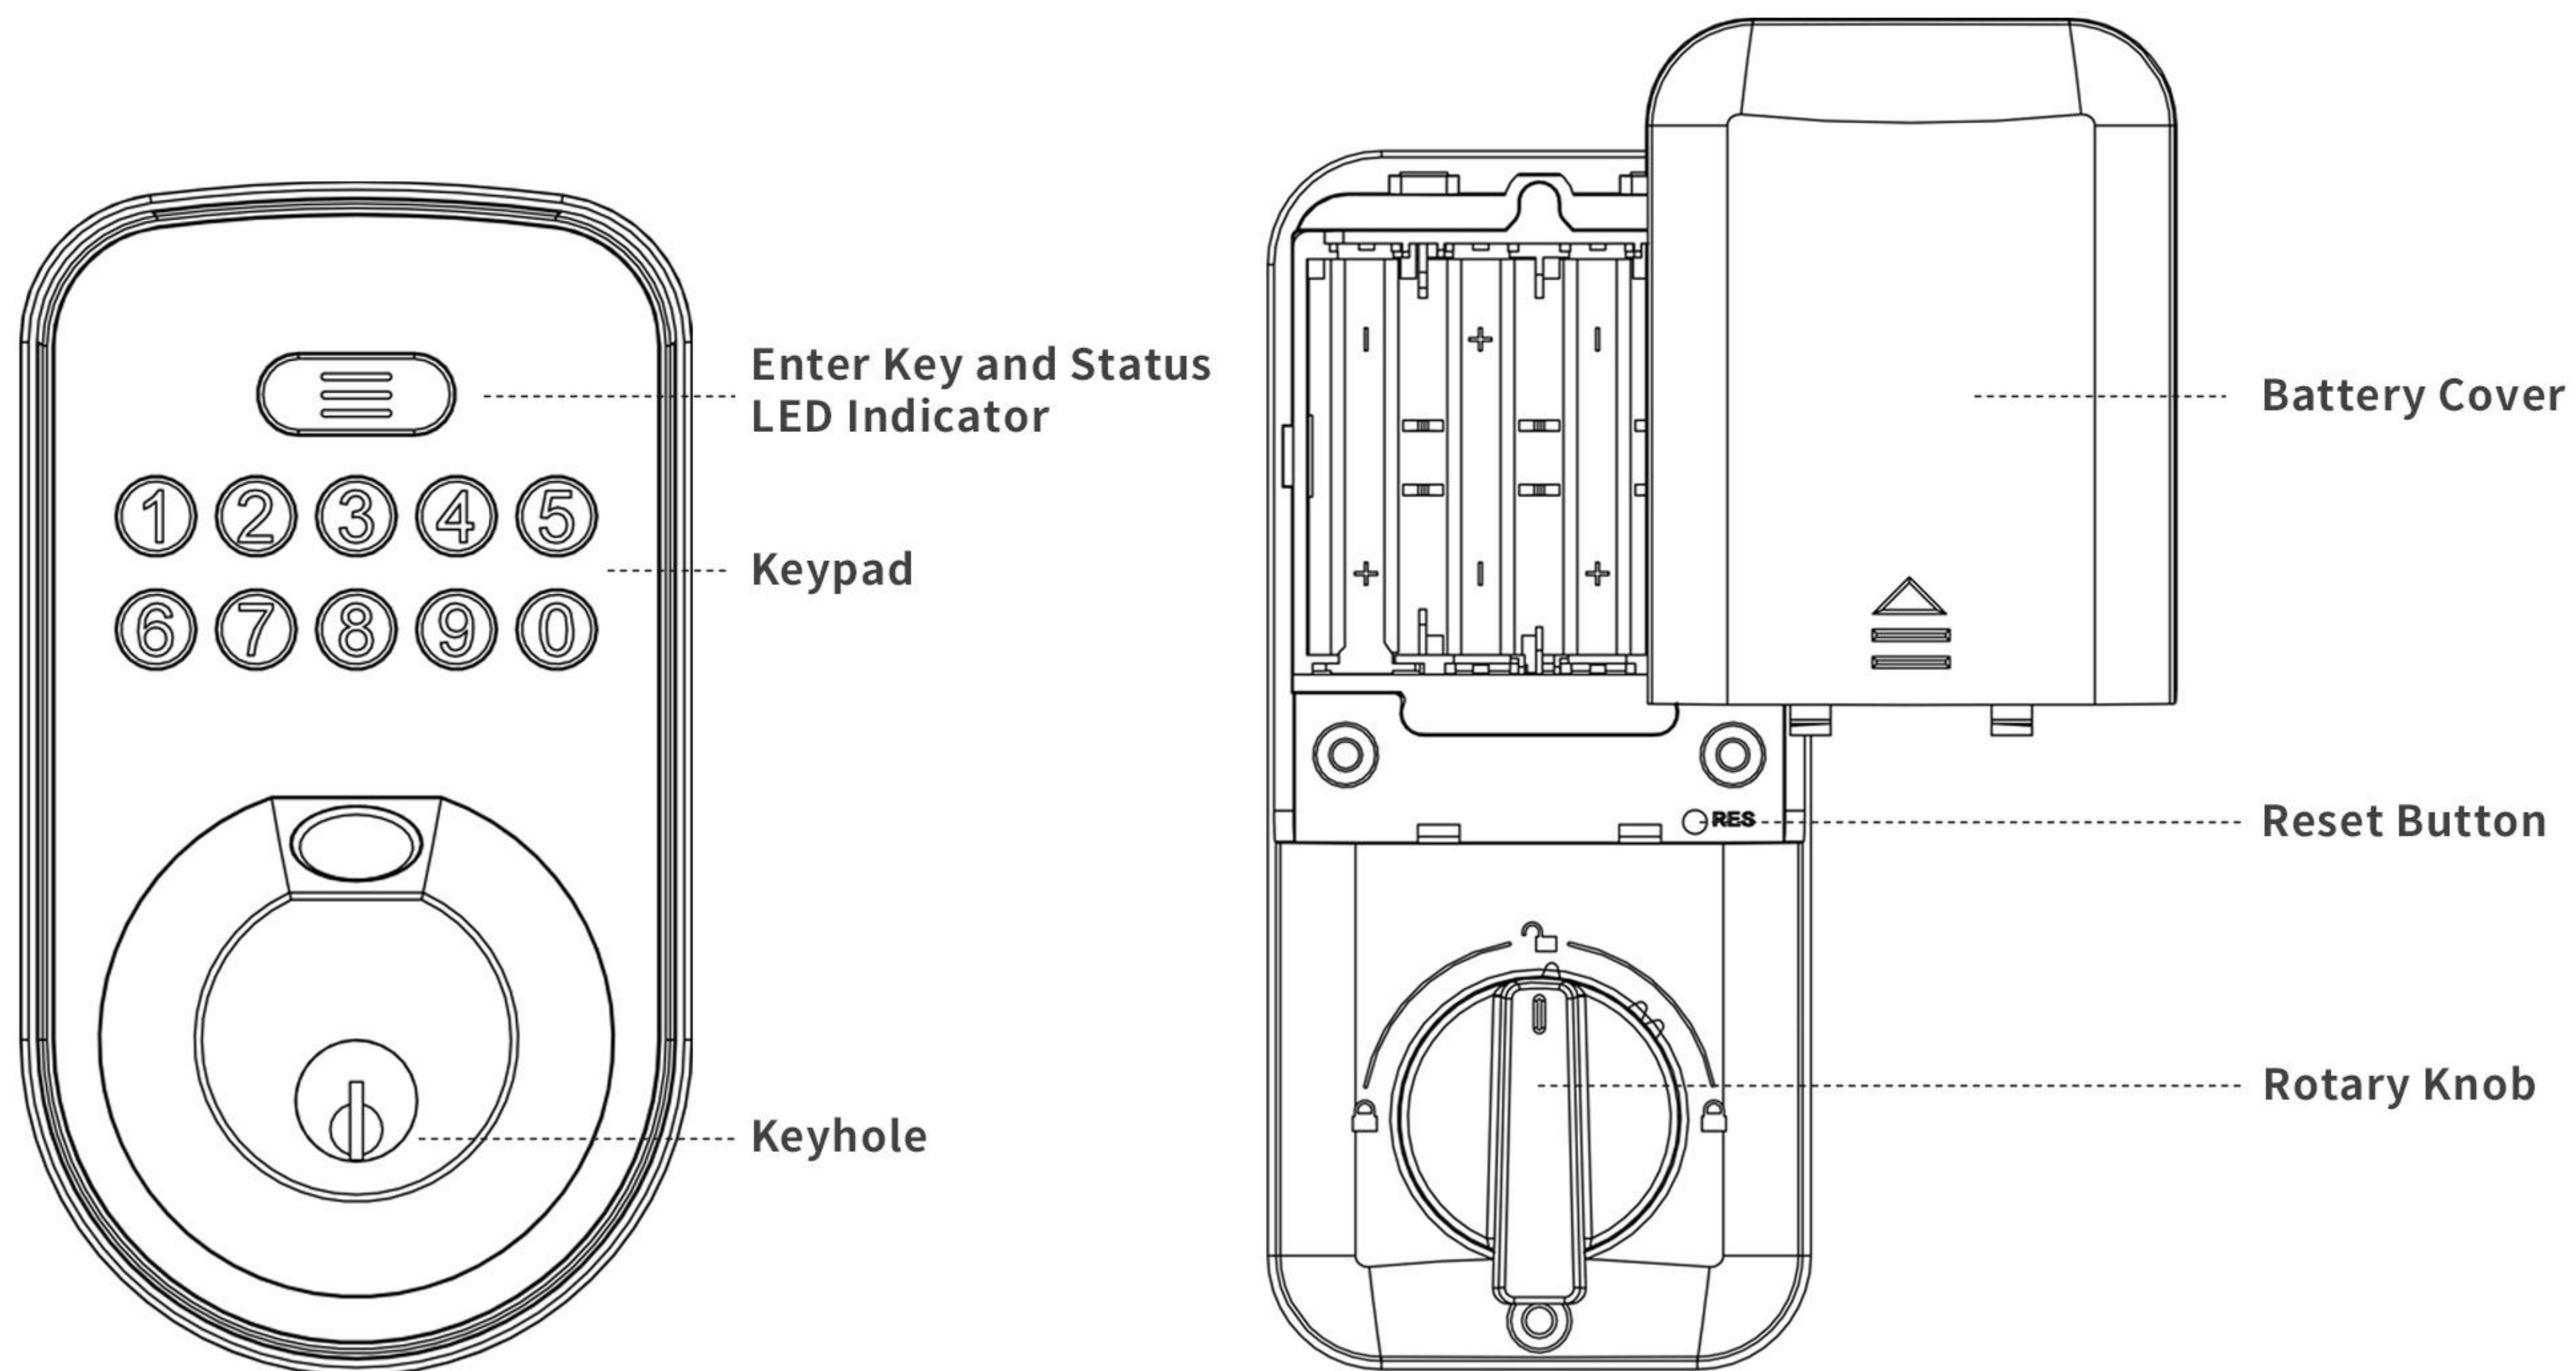


How to Lock / Unlock

 
Unlocking the door from outside

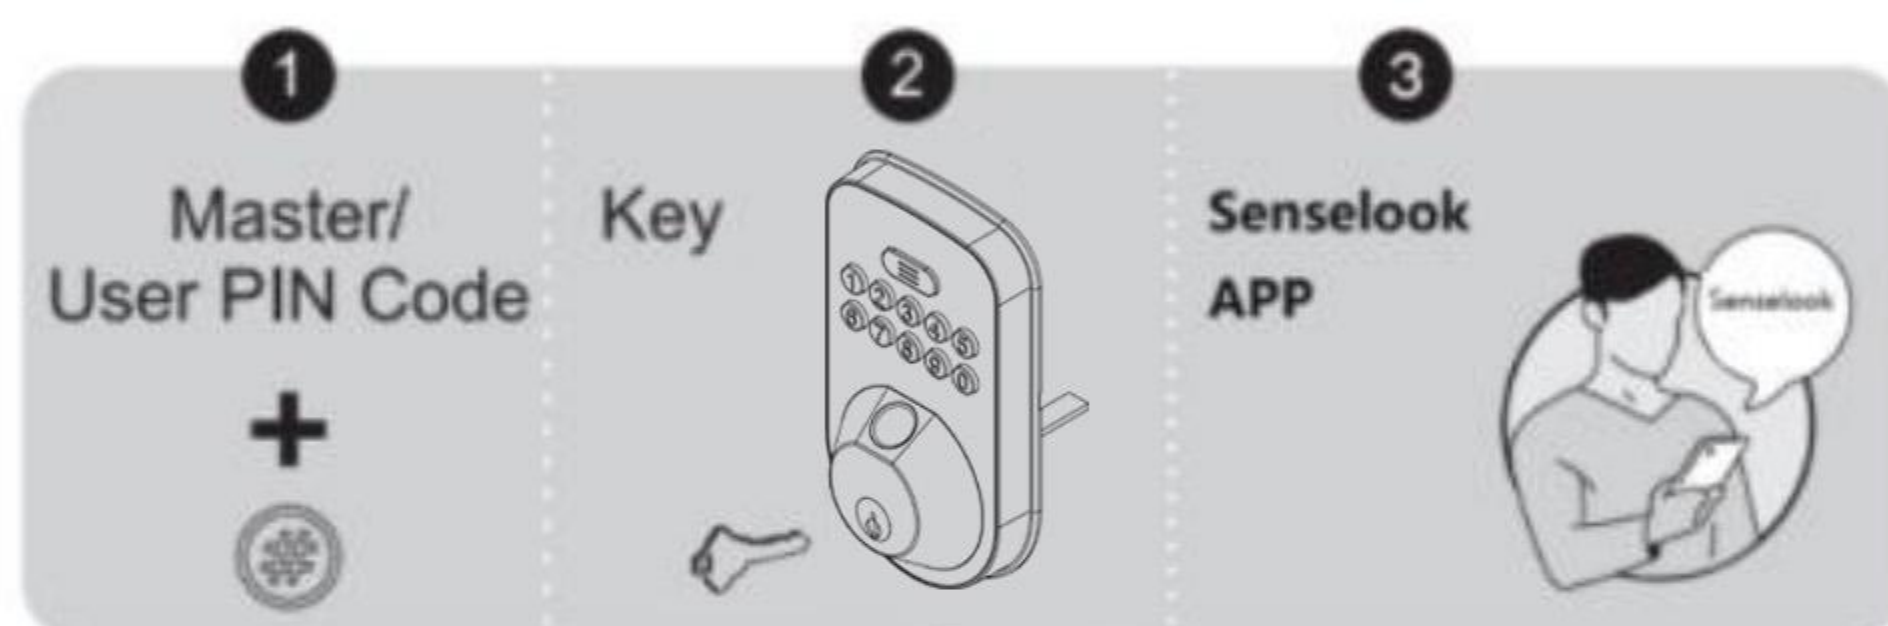


Unlocking the door from inside

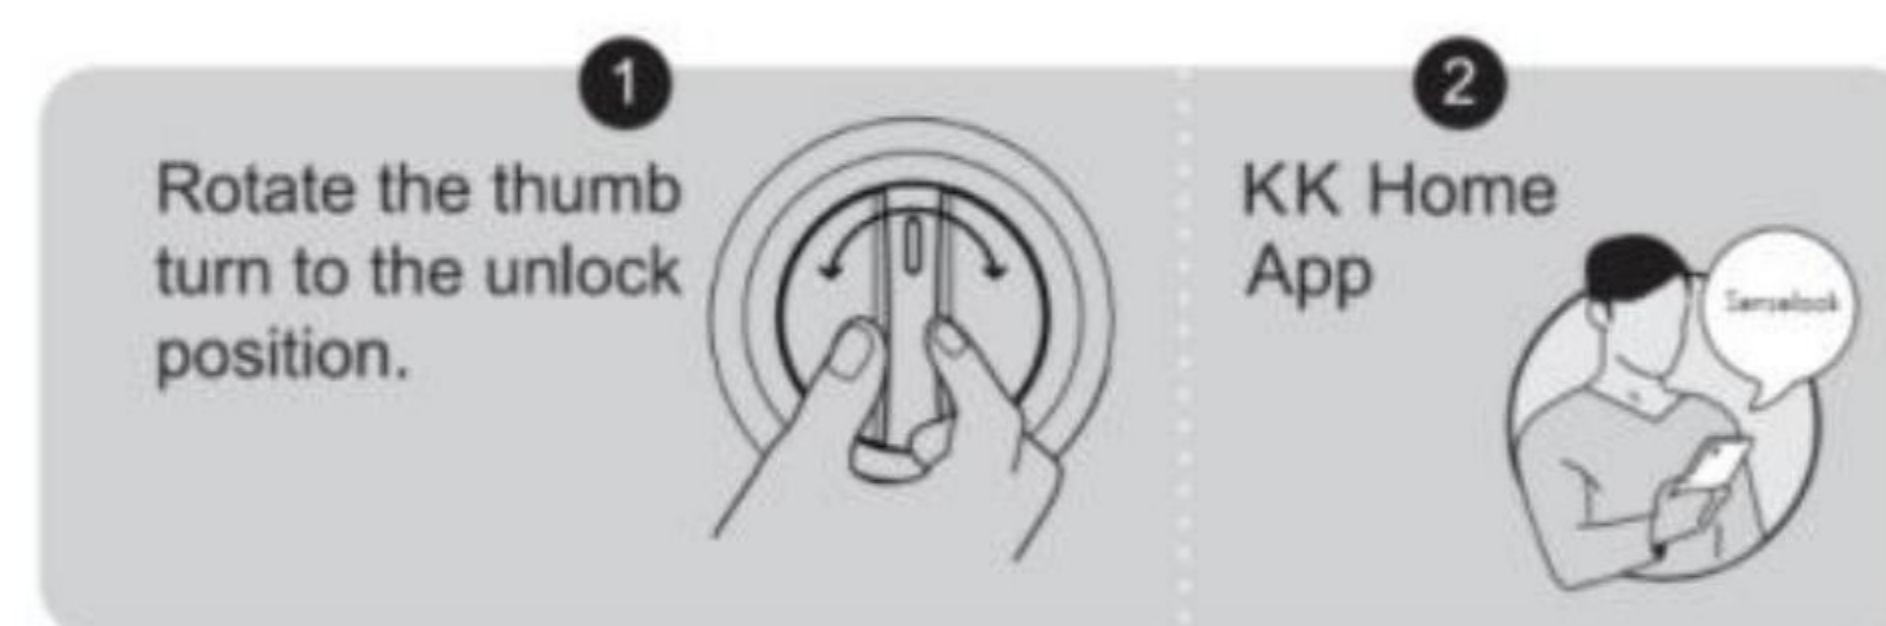 

Locking the door from outside

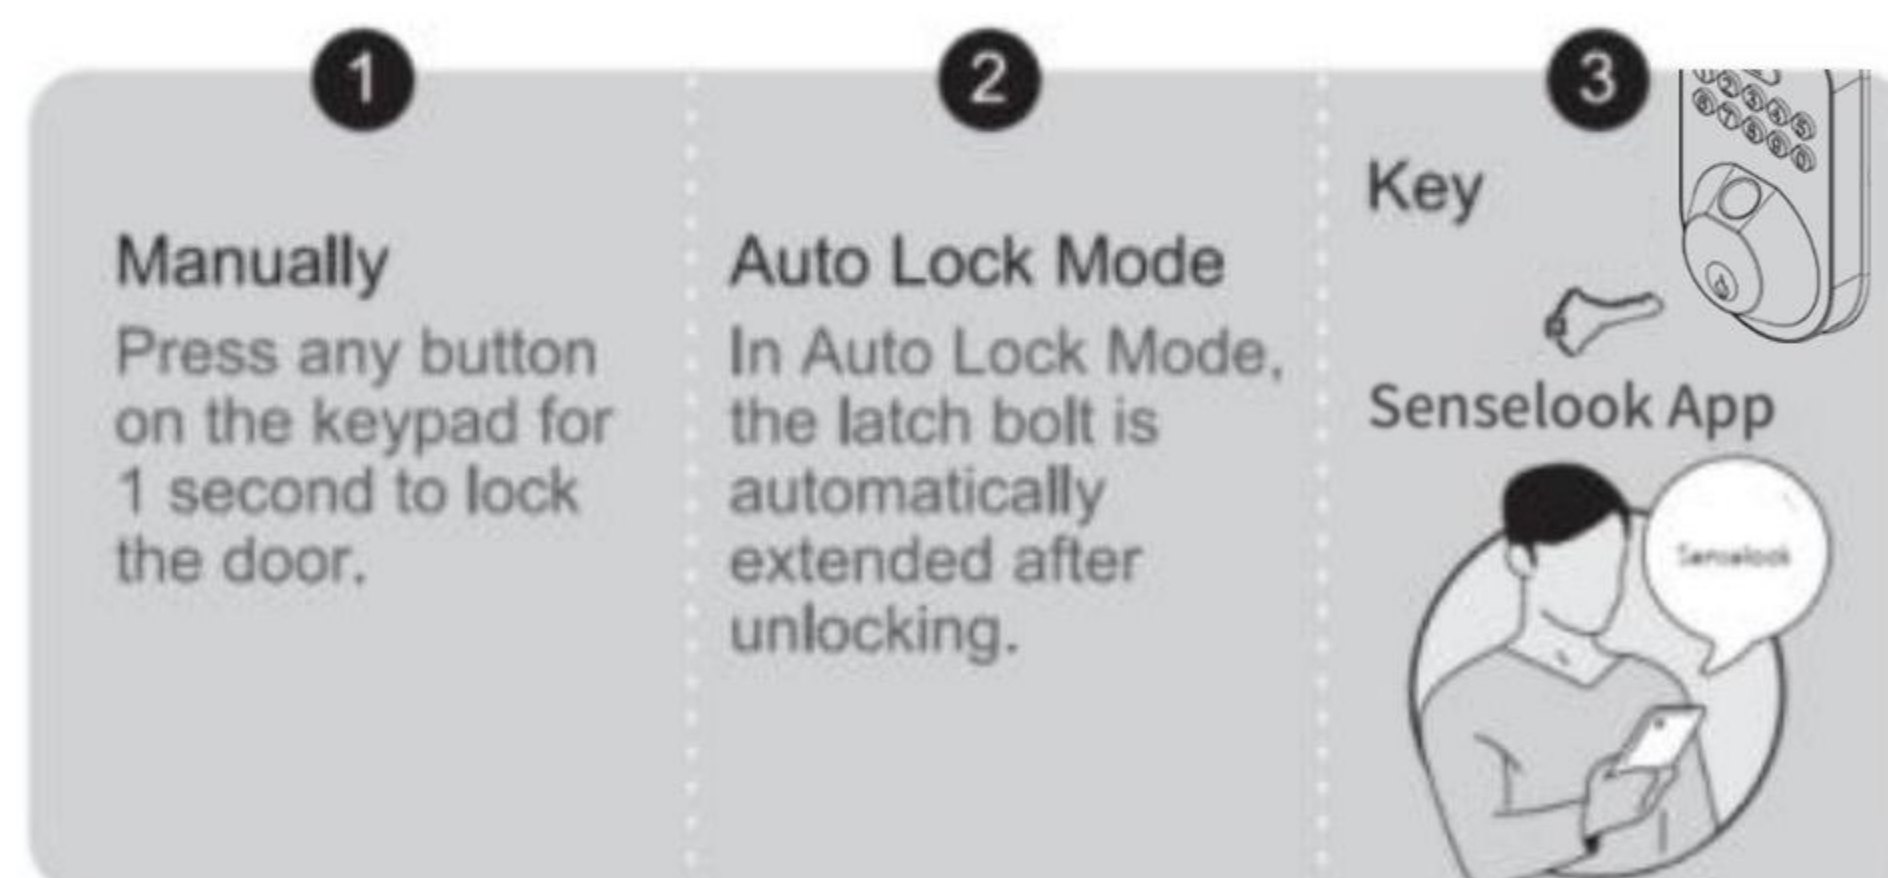 

Locking the door from inside

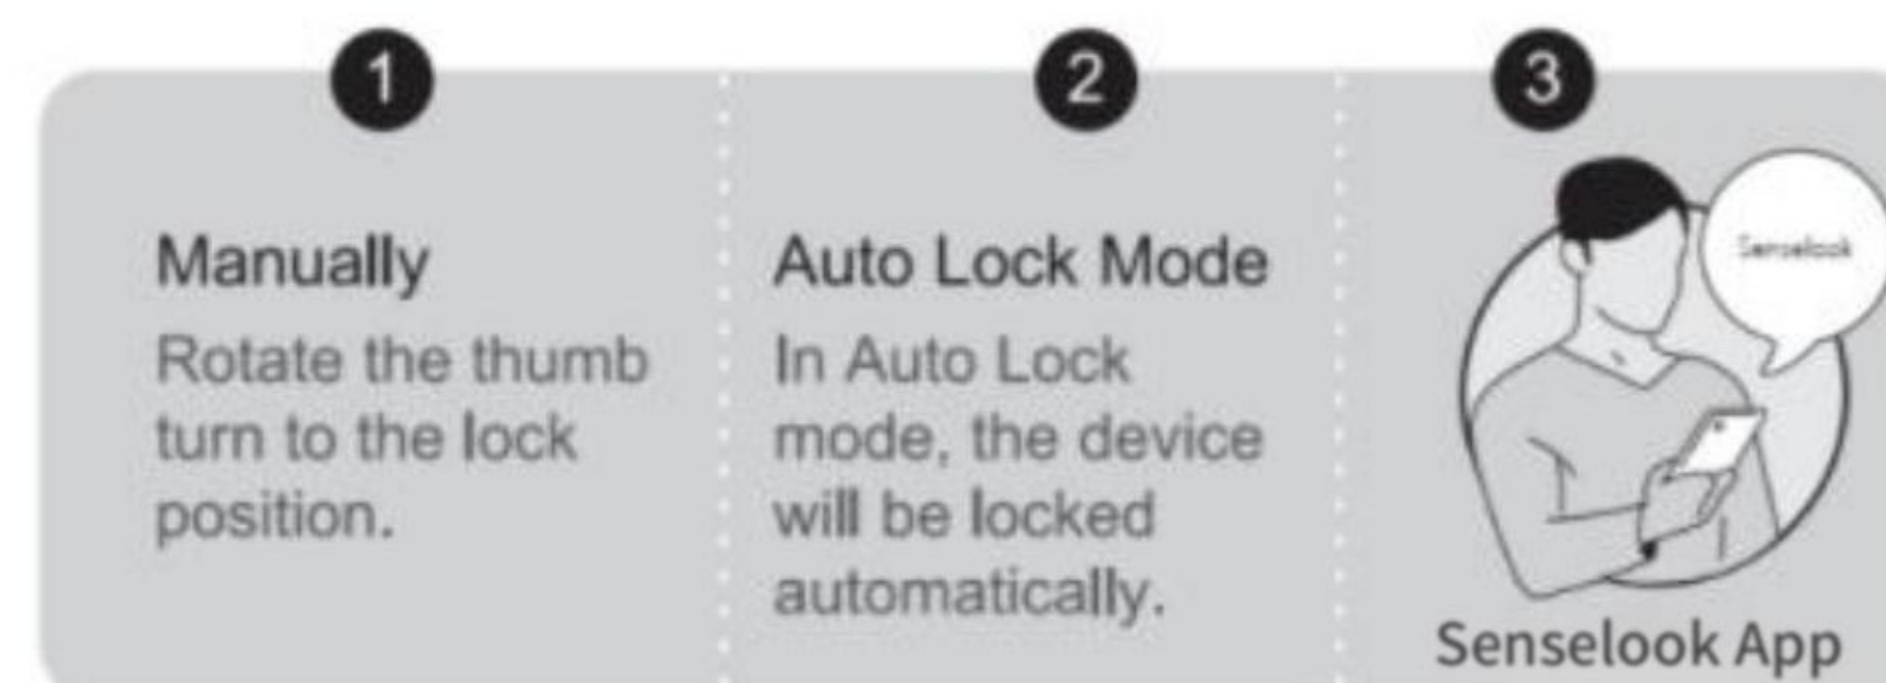 

Definitions

Auto Lock

If the Auto lock feature is enabled, the lock will lock the door 30 seconds after it has been unlocked. This feature is off by default. You can set the time delay for 30s, 60s, 120s and 180s in both Master Mode and the Senselook APP.

Wrong Entry PIN Code Limit

After 10 attempts of entering an invalid user PIN Code , the unit will shut down for 3 minutes.

Silent Mode

The keypad will beep when pushed; but can be muted. Low battery and wrong Entry user PIN Code Limit alarms will still sound in Silent Mode.

LOW Battery Alarm

If the battery indicator keeps flashing, the batteries are getting low. For the best performance replace with four new AA alkaline batteries.

Quick set Up

Notes

- 1 . Beeps only sound when the silent Mode is disabled .
- 2 . If the indicator light flashes red , your setting failed and you will need to redo the operation.

Factory Default Settings

How to Reset?

 
Resetting the device will delete all User PIN Codes and Master PIN Code stored in the lock.

Step 1: Remove the battery cover.

Step 2: Using the Reset Tool, press and hold the Reset Button for 5 seconds.

Step 3: You will hear a "BEEP" and the latch will rotate automatically.

Step 4: The lock is now restored to factory settings (all PINs and settings cleared).

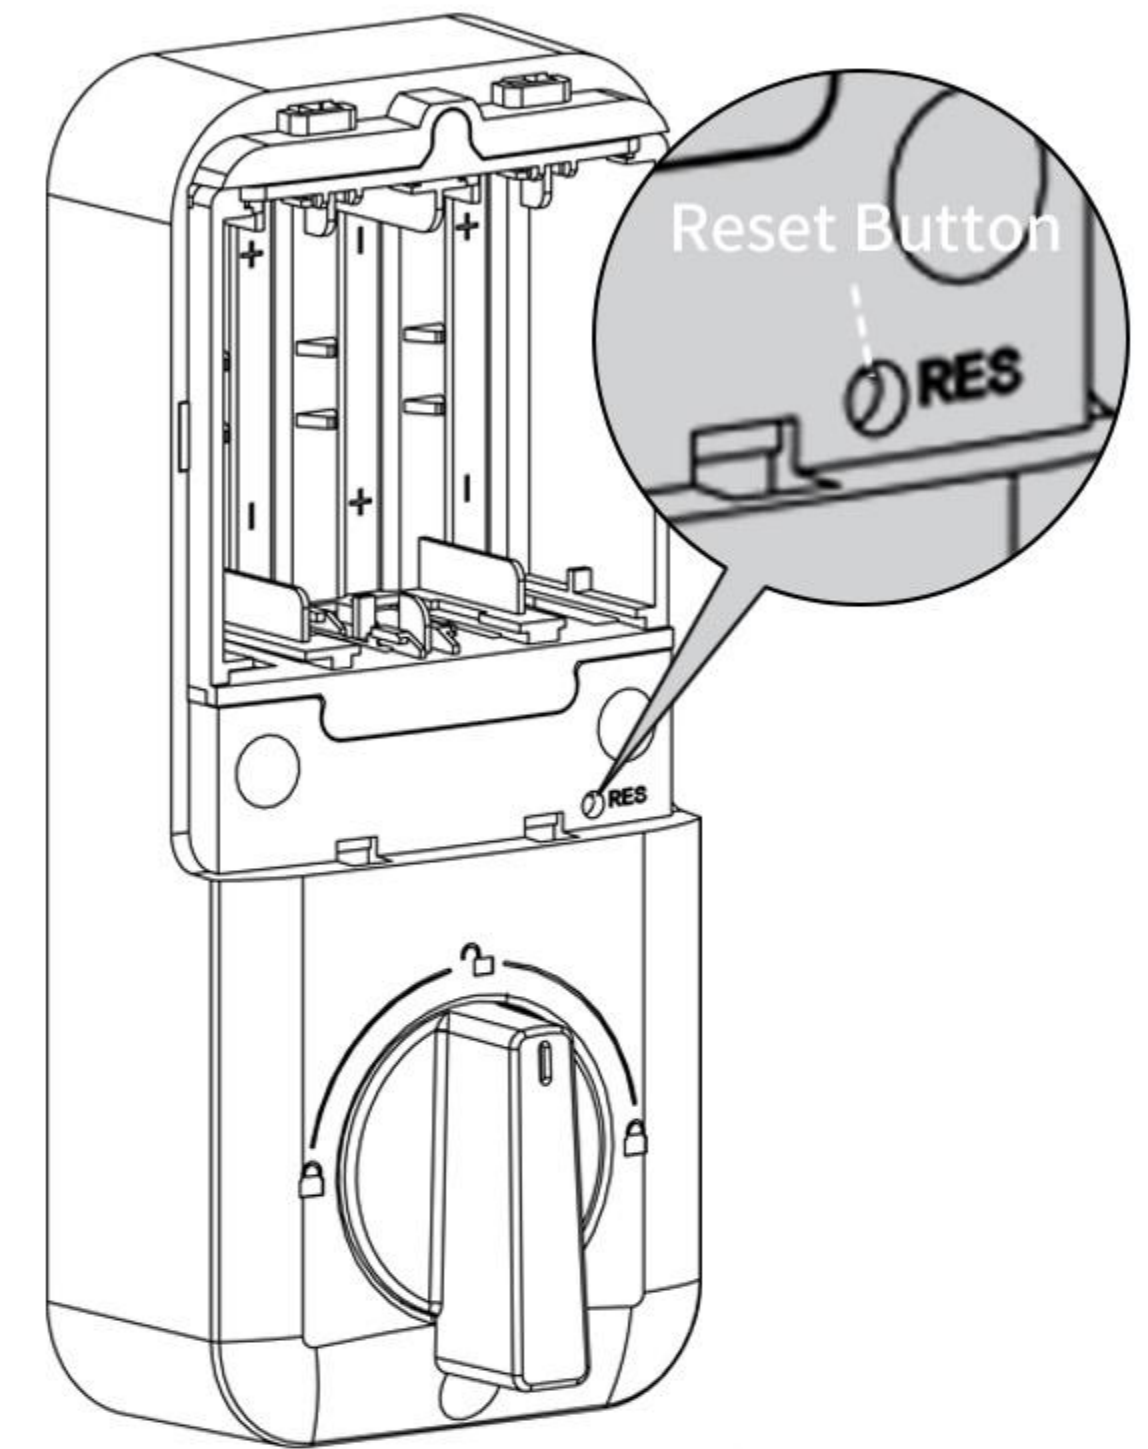

Settings	Factory Defaut
Auto Lock	Disabled
Silent Mode	Disabled
Wrong Code Entry Limit	10 times

Download Senselook APP

Download the Senselook APP from the Apple store or Google play store.



scan the QR Code to download
the Senselook APP.



Quick setup Tips

- create an account in the Senselook APP.
- scan the QR Code found on the inside panel of the Battery cover to add your 200k to the device list.

Important:

- . The Auto Lock is disabled by default, please complete the set up process and enable Auto Lock in the Senselook APP.
- The first account to add the lock to their account becomes the administrator of the lock by default. only the administrator account can manage users of the lock.
 - To reset the lock, press and hold the Reset Button for 5 seconds until you hear the "BEEP". Log in to the SenseLook APP With the administrator account. Go to settings and unbind the lock.

Troubleshooting

Issue	Possible Cause	Solution
Keypad not lighting up	Batteries dead or installed incorrectly.	Replace with fresh AA batteries. Check polarity.
Bolt sticks/jams	Misalignment or screws too tight.	Loosen mounting screws slightly. Re-align the lock.
Cannot connect to App	Bluetooth off or lock already paired.	Turn on Bluetooth. Reset the lock (see below) and re-pair.
Wrong PIN Code	PIN expired or incorrect.	Verify the code in the Senselook App. Check "Wrong EntryPIN Code Limit"
Low Battery Alarm	Battery voltage low.	Replace all batteries immediately with fresh ones.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- RF Exposure Information.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CANICES-3(B)/NMB-3(B). French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptes de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes: (1) Cet appareil ne doit pas provoquer d'interférences. (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil. L'appareil numérique du CIEM conforme canadien peut - 3(b)/ nmb -3(b). This device meets the exemption from the routine evaluation limits in section 2.5 of RSS102 and compliance with RSS102 RF exposure, users can obtain Canadian information on RF exposure and compliance. cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du CNR -102 et conforme avec RSS 102 de l'exposition aux RF, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs RF et la conformité.

cet appareil est conforme a l'exemption des limites d'evaluation courante dans la section 2.5 du cnr -102 et conforme avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des donnees canadiennes sur l'exposition aux champs rf et la conformite.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Warnings

Failure to follow the below instructions could result in damage to the product and void the factory warranty.

This manufacturer advises that no lock can provide complete security by itself.

This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property.

No lock can substitute for caution, awareness of your environment, and common sense

Product care:

- This lockset is designed to provide the highest standard of product

quality and performance. care should be taken to ensure a long-lasting finish. when cleaning is required, use a soft, damp cloth. using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing

Avoid exposure to direct sunlight. Long-term exposure to direct sunlight may damage the lock.

Do not install batteries until the lock is completely installed on door.

- User PIN Codes and can be set up in the Senselook APP.
- Auto handing calibration: To calibrate your lock, follow the instructions in the Senselook APP Step by step.

sharing Access: sharing access to your lock means that you are allowing other users to control and track usage of the device. please be aware of the potential risks it may cause

• FCC & REGULATORY COMPLIANCE

FCC Statement (USA)

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1, This device may not cause harmful interference.
- 2, This device must accept any interference received, including interference that may cause undesired operation.

ISED Statement (Canada)

· This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1: This device may not cause interference.

2: This device must accept any interference, including interference that may cause undesired operation of the device.

Déclaration de conformité (Français)

· Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1、 L'appareil ne doit pas produire de brouillage.

2、 L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Labeling: This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.