

Waterless Scent Diffuser



Model: A8


SPECIFICATIONS



SPECIFICATIONS

Model No.	A8
SIZE	6.85mm*H 276mm
Net weight	740g
Voltage	VV 2A
Power	80W
Light color	yellow
Style	1004d
Material	aluminum

IMPORTANT

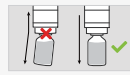

1 Make sure the bottle is screwed in tight until it is flush with the top of the diffuser.



2 After installation, please keep the machine vertical. Tilting or angling the device may cause oil overflow, which will contaminate the equipment circuit and affect normal use and cause unnecessary waste of oil.

REMOTE CONTROL FUNCTIONS



Touch Screen Control



2H: The diffuser runs for 2 hours.
6H: The diffuser runs for 6 hours.
12H: The diffuser runs for 12 hours.
If timing is not enabled, it will work continuously.

L: Diffuses for 15 seconds, pauses for 180 seconds.
M: Diffuses for 20 seconds, pauses for 120 seconds.
H: Diffuses for 25 seconds, pauses for 60 seconds.


Press once to turn the diffuser on or off.
Press and hold for two seconds to change the light modes.
Mode 1: Light on only when atomizing.
Mode 2: Always on.
Mode 3: Always off.

Auto Shut-protection
Improper placement of the diffuser when an essential oil is tilted at an angle larger than 45°. When the machine is tilted more than 45-degree angle, it will beep three times to alert you. The beeping will stop once the machine is upright.

SET UP



Step 1: Rotate the upper cover counterclockwise to open.

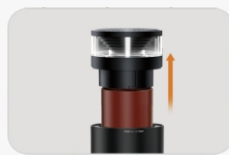

Step 2: Remove the oil bottle from the diffuser.



Step 3: Fill the bottle with fragrance oil, then tighten it back onto the diffuser.



Step 4: Rotate the upper cover clockwise until it aligns with the "Close" mark.



Step 5: Connect the power cable and enjoy your scent.

JOIN OUR VIP CLUB NOW!
SCAN ME WITH YOUR PHONE'S CAMERA APP
Contact us for a FREE Lifetime Warranty!
NOT HAPPY WITH YOUR PRODUCT?
WE'LL MAKE IT RIGHT!
JUST EMAIL US AT support@xeitn.com
www.xeitn.com



EQUIPMENT CLEANING

Clean your scent diffuser every 1-2 months or when switching fragrance to ensure optimal performance.

1. Fill the empty oil bottle with about 1/4 inch of rubbing alcohol.
2. Screw the alcohol-filled bottle into the diffuser.
3. Run the diffuser for 15 minutes to allow the alcohol to clean the internal components.
4. Unplug the device. Wipe the exterior with a damp cloth to remove oil stains and fingerprints. Avoid harsh or abrasive cleaners.
5. Remove the bottle. Fill with new fragrance oil, reassemble the diffuser, and plug it in. You are now ready to enjoy a new fragrance.

REPLACING THE NOZZLE

1. To change the nozzle, unplug the diffuser, remove the bottle of oil, and carefully pull out the inner tube. Gently pull out the nozzle by rubbing gently using a pair of tweezers.
2. Replace it with a new nozzle and ensure the nozzle is pressed very firmly into the top of the diffuser. The tube can be reinserted into the nozzle. It is very important to insert the tube into the empty opening of the nozzle. There is a small round tube holder into which the tube must be firmly secured.

SAFETY PRECAUTIONS

To ensure safe usage:

1. Do not tilt the diffuser, as spilled oil can damage the internal mechanisms.
2. Using the scent diffuser and fragrance oils requires adult supervision.
3. Do not wet the device or place it near any liquids, sinks, bathtubs, or outdoors.
4. Do not use the provided power cord. Before plugging in, ensure the adapter's voltage matches your power supply. Position the cord to avoid tripping.
5. Do not run the unit without oil or cleaning alcohol in the bottle.
6. Do not ingest fragrance oil or allow it to contact skin, eyes, or other body openings. If contact occurs, flush with water immediately until all oil is removed.

Troubleshooting

Breakdown	Solution
Oil leaking	•Bottle is loose. Screw it properly and straight. •Seal is broken or missing. Replace the supplied seal that came with the machine.
No diffuse	•Check if the power is ON or OFF. •The pump is damaged and needs replacing. •If there is no diffusion or it's weak, replace the oil with rubbing alcohol and run it through the machine for 15 minutes.
Little or no spray coming out	•Atomization head is blocked. Clean diffuser by running rubbing alcohol through it. Or replace diffuser core. •Diffuser core with atom is missing or damaged. Replace with a new one. •Pump is damaged and may need replacing.
Diffuser spraying liquid	•Diffuser core is damaged, replace diffuser core. •Machine is tilted or angled. Make sure it's upright at all times.
No display on screen	•Make sure the power is ON. •Display screen is damaged, try remote control.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.