

H06 User Manual

 
Sunrise Alarm Clock with Sound Machine



18-month Warranty
After-sales mailbox:
auroracalmshop@outlook.com

Please read these instructions carefully before use and retain for future reference.


FRONT VIEW

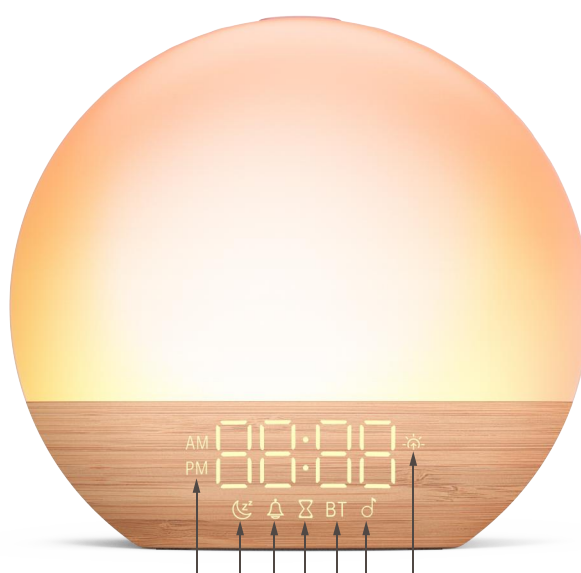

AM/PM Indicator
Snooze Indicator
Alarm Icon
Sleep Timer Indicator
Sunrise Indicator
Sound Machine Indicator
Bluetooth Indicator

When the "☀️" indicator appears on the display, the sunrise function is enabled.

 TOP VIEW

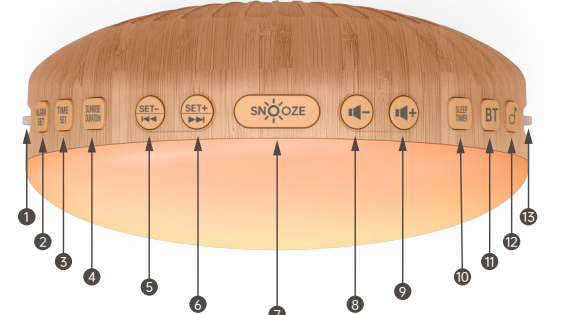


- Scroll to adjust the display brightness
1. Press to set alarm time/alarm sound/alarm volume
2. Hold 2 seconds to turn on/off alarm
- Press to set the time/switch the regular time and military time
- Repeatedly press to set sunrise duration or off
- Backward
- Forward
1. Press to start the 9 minutes snooze
2. Press to turn on and change the color of the nightlight
3. Hold 2 seconds to turn off the nightlight
- Press to decrease sound machine/Bluetooth volume
- Press to increase sound machine/Bluetooth volume
1. Repeatedly press to set the auto-off timer for sound machine/Bluetooth/nightlight
2. Hold 2 seconds to turn off timer
1. Press to turn on/pause Bluetooth
2. Hold 2 seconds to turn off Bluetooth when it's connected
- Press to turn on/off sound machine
- Scroll to adjust the nightlight brightness

BACK VIEW



Power connector

 BOTTOM VIEW

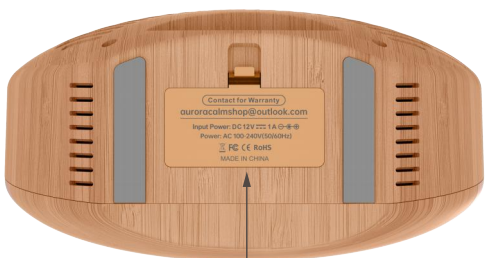

Battery compartment

GETTING STARTED

- Plug the adapter into a standard household outlet, you will see 12:00 AM on the display and the clock is ready to be set.
- Insert 2 "AAA" batteries(not included) on the bottom of the clock to preserve the clock settings in case of power interruption.

NOTICE:

- Please use the original power adapter only. Incorrect or over-voltage adapters may cause malfunction or reduce product life.
- If the display is blank after plugging in, please check whether the **DISPLAY DIMMER** on the left is at the HIGH position.
- This device is not battery-operated. Batteries are for memory backup only. In battery-only mode, the display will go blank and preset alarm will not go off.

TIME SETTING

The time setting steps as follow:

- Press "TIME SET" button once to enter hour setting, the hour digits will flash on the display. Press "←" or "→" buttons to advance to the correct hour(hold for rapid setting).
- Press "TIME SET" button again to confirm and enter minute setting, the minute digits will flash. Press "←" or "→" buttons to advance to the correct minute(hold for rapid setting).
- Press "TIME SET" button a third time to confirm and enter time format setting. "12H" will flash. Press "←" or "→" buttons to toggle between 12H and 24H formats.
- Press "TIME SET" button a fourth time to confirm and exit the time setting mode.

NOTICE:

- The clock will automatically exit the time setting mode if no action is taken within 12 seconds.
- When using the 12-hour time format, the AM icon will appear from 12:00 midnight to 11:59 AM, and the PM icon will appear from 12:00 noon to 11:59 PM.
- In regular time, AM or PM will be displayed. Otherwise, the clock is in 24-hour (military) time.

BRIGHTNESS CONTROL

There are 0-100% brightness levels for LED display. Slide the **DISPLAY DIMMER** knob on the left side of the clock to adjust the display brightness (HIGH: 100%, LOW: 0%).

TURNING ALARM ON/OFF

In non-setting mode, press and hold "ALARM SET" for 2 seconds to enable or disable the alarm.

ALARM ON

ALARM OFF

ALARM SETTING

The alarm setting steps as follow:




- Press "ALARM SET" button once to enter alarm hour setting, the hour digits will flash on the display. Press "←" or "→" buttons to advance to the correct hour(hold for rapid setting).
- Press "ALARM SET" button again to confirm and enter alarm minute setting, the minute digits will flash. Press "←" or "→" buttons to advance to the correct minute(hold for rapid setting).
- Press "ALARM SET" button a third time to confirm and enter alarm sound setting, the alarm sound options will flash and the alarm sound will ring. Press "←" or "→" buttons to choose one of seven built-in alarm sounds(01=Birds Chirping; 02=Piano; 03=Flute; 04=Forest; 05=Wave; 6=Beep; 07=Buzzer).

SUNRISE DURATION SETTING

- Press "SUNRISE" button repeatedly to select the sunrise duration: 5, 10, 15, 20, 30, 45, 60 minutes or OFF. The selected duration will be shown on the display.
- To turn off sunrise function, press the "SUNRISE" button repeatedly to select "OFF". The alarm will sound only (no light).

EXAMPLE:

The light gradually brightens before the alarm time, with the default sunrise duration set to 30 minutes. When the alarm time arrives, the light reaches its preset brightness level, and the alarm sound begins.

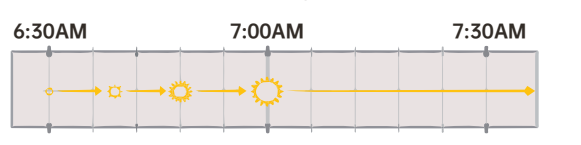

Base on 7:00am alarm time.

SNOOZE/TURN OFF ALARM DAILY

- When the alarm goes off, press "SNOOZE" button to activate snooze, the alarm will go off again after 9 minutes.
- To cancel the snooze at any time or to TURN OFF the alarm for the day while it is sounding, press "ALARM SET". The alarm will go off again at the same time the next day.
- If the alarm is not turned off or snoozed, it will automatically stop after 30 minutes.

NOTICE:

- When snooze is activated, the sunrise light will remain on until the alarm is turned off for the day.
- During the sunrise duration, pressing the "SNOOZE" or "ALARM SET" button will skip the light function. The alarm will sound again at the preset alarm time.

NIGHT LIGHT SETTING

- In normal time display mode, press "SNOOZE" to turn on the night light.
- Press "SNOOZE" repeatedly to choose among 12 different color options. 12 colors change in the following sequence: sunrise, red, orange, yellow, green, indigo, blue, purple, loop color, sunset, breath, RGB.
- Slide the **NIGHTLIGHT DIMMER** on the right of the clock to adjust night light brightness.(HIGH:100%, LOW:10%)
- Press and hold "SNOOZE" for 2 seconds (release it) to turn it off.

NOTICE:

The night light will default to the last color you choose when you reopen it.

SOUND MACHINE SETTING

- Press "🔊" to turn on/off sound machine.
- When the sound machine is on, press "←" or "→" to choose the sleep sounds(01-25).
- Press "←" or "→" to adjust the volume(01-32 levels adjustable).

Track List			
S01	Lullaby 1	S14	Yoga
S02	Birds Chirping	S15	Meditation
S03	Ocean Wave 1	S16	White Noise 1
S04	Shush	S17	White Noise 2
S05	Heartbeat	S18	Space White Noise
S06	Rain	S19	Pink Noise
S07	Thunderstorm	S20	Brown Noise
S08	Brook	S21	Blue Noise
S09	Cricket Chirping	S22	Fan 1
S10	Train	S23	Fan 2
S11	Forest	S24	Fan 3
S12	Wind	S25	Fan 4
S13	Lullaby 2		

SLEEP TIMER SETTING

Sleep timer lets you fall asleep with the sound machine, Bluetooth, or nightlight on for a set time, then turns them off automatically.

- Press the "SLEEP" button repeatedly to select a timer duration: 30, 60, 90, 120, 180, 240 minutes, or OFF. The selected time will be shown on the display.
- After selection, wait 5 seconds to exit setup. The sleep timer indicator appears on the display.
- To turn off the timer, press "SLEEP" button repeatedly to select "OFF" or press and hold "SLEEP" button for 2 seconds.
- When the sleep timer is ON, press the "SLEEP" button to view remaining time.

NOTICE:

- The sleep timer can be set only when at least one of the sound machine, Bluetooth, or nightlight is ON.
- If both the nightlight and the sound machine or Bluetooth are ON, the sleep timer will turn both off at the same time.

SPECIFICATIONS

Power Input: DC 12V/1.0A Power: AC, 100-240V (50/60Hz)
Speaker Output: 5 Watt RMS

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

TROUBLESHOOTING

Q 1. Display doesn't light up?

A - Check if the power connection is loose or not.

- Change another working outlet to try again.
- Slide the **DISPLAY DIMMER** knob to HIGH position in case the display is too dark to see.
- Get customer support for help.

Q 2. Alarm doesn't go off at the set time?

A - Check if the alarm is set to AM or PM time.

- Check if the alarm is turned on (alarm icon display on the screen).
- Get customer support for help.

Q 3. How to turn off alarm daily?

A - When the alarm goes off, pressing the "ALARM SET" will turn the alarm off until the next scheduled time.

- During the sunrise duration (when the sunrise indicator is flashing), pressing the "ALARM SET" will skip the light function. The alarm will sound again at the preset alarm time.
- Get customer support for help.

Q 4. How to turn off the alarm completely?

A - In the normal time display, press and hold the "ALARM SET" button to turn the alarm off completely. The alarm icon will disappear when the alarm is disabled.

- Get customer support for help.

WARRANTY & SUPPORT

• We offer a 45 day money-back guarantee and 18-month free replacement.

• Auroracalm customer support is committed to providing you with best-in-class service. For assistance, please keep the model number and order ID number of this product, then contact us by sending an email to the email address below:

auroracalmshop@outlook.com