 



Instruction manual

1. Use a screwdriver to remove the battery cover of the remote control
2. Install two 2X1.5V AA batteries cover the battery cover of the remote control and screw it.

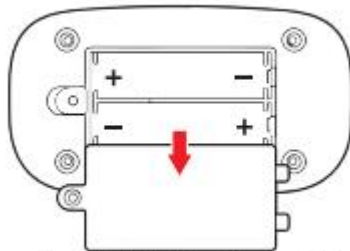

Use 2x1.5V "AA" batteries (not included)

 3. Use a screwdriver to unscrew the remote control snake battery cover, install the battery cover the remote control car battery cover and screw.

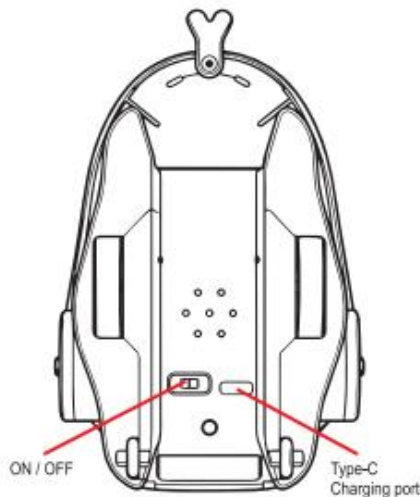

Accessories:

 
 
1. USB charging cable
2. Rechargeable Battery
3. 7V (included)

USB charging matters

1. Charge the battery string for the first time to ensure sufficient power. If the battery string is not used for a long time it will automatically discharge if it is overcharged the battery life will be shortened.
2. The user should check the wire plug shell and related parts regularly. If it is damaged, the user must stop using it until it is well repaired.
3. The toy cannot be connected to the power supply that is not recommended. Charging condition: Connect the USB smart charging cable to the original battery.
4. It is recommended to use a suitable adaptor for charging, not a fast charger for charging.
5. Charger description: The rechargeable battery is connected to the smart USB charger. The smart USB charging cable can charge the battery by connecting to the power medium with the USB jack, such as desktop computer, laptop, computer mobile power supply, USB power socket, or connecting to the power supply through the USB switching plug.

Battery storage mode

1. When storing batteries, please do not fully charge them to avoid passivation of battery activity and acceleration of self-discharge caused by long-term storage (Figure ①)
2. Store batteries in an indoor dry space with a temperature between 10°C and 30°C (Figure ②)
3. You need to do a charge-discharge cycle every three months to maintain its activity and restore its performance. (Figure ③)



Important Notes for Use:

1. Please fully charge the toy snake battery first and read these instructions carefully when you receive the product.
2. Do not operate the car in dangerous places (e.g., near stairs, roads) or in deep water to avoid accidents and damage. This will also help prolong the toy's life.
3. The toy snake uses rechargeable batteries (type: 14500, 3.7V). Use only batteries with the correct specifications.
4. The Remote Controller requires 2 AA (1.5V) alkaline batteries (not included). Use only the correct type of batteries. Do not use larger size batteries (e.g., C, D) or rechargeable NiMH/NiCd batteries (which are typically 1.2V). Using incorrect batteries may damage the controller.
5. Toy snakes can travel on smooth surfaces, and avoid operating it on soft sand, water puddles, or snow. This will help prevent damage and prolong the life of the toy.
6. If you have questions about our products, you can contact with us at any time.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restriction.