

Once the Moving Friend is opened, returns are not accepted.

Keep instructions for future use.

Battery Handling Instructions and Recycling

This product uses a rechargeable lithium-ion battery. Check batteries periodically for any damage or potential hazards.

Do not dispose of the battery in household trash, fire, or water. Batteries must be collected separately for recycling or proper disposal.

When the battery reaches the end of its useful life:

- 1. Remove the battery from the toy.
- 2. Do not crush, puncture, disassemble, modify, or incinerate the battery.
- 3. Cover the battery terminals with non-conductive tape to prevent short circuits.
- 4. Take the battery to an authorized battery recycling center or collection facility in accordance with local regulations.

WARNING: Improper use of the battery may result in fire, explosion, personal injury, or property damage.

For information about battery recycling and disposal options, contact your local waste management authority. Please reach out to Smol for any replacement battery inquiries. Email us at hello@playsmol.com.

Battery Handling Instructions and Recycling

- Use only the supplied rechargeable battery and charger.
- Do not use a damaged battery.
- Do not short-circuit the battery terminals.
- Do not expose the battery to heat, fire, direct sunlight, or temperatures above 60°C (140°F).
- Do not disassemble, crush, puncture, or modify the battery.
- Charge the battery only under adult supervision.
- Keep batteries out of reach of young children.
- Remove the battery from the toy before disposal or recycling.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC. Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

3+

Age limit

Indoor use only

Do not climb or jump on unit

Keep batteries out of reach of children

Adult supervision required at all times; do not leave children unattended

Have a blast!

What’s in your box?

- 1 Unicorn Moving Friend
- 1 Remote Control
- 2 Rechargeable 7.4v Batteries (1 pre-installed)
- 1 Small Screw Driver
- 1 USB Charging Cable



Questions about your Smol product?

Email us at hello@playsmol.com



User Manual

Moving Friend Unicorn



Warning

- Read all instructions before assembling.
 - Adult setup only.
 - Indoor use only.
- CAUTION:
- Electronically operated product.
 - Not for children under 3 years of age.
 - Rechargeable batteries must be installed and removed by adults only.
 - As with all electronic products, precautions should be taken during handling to prevent electrical shock.

WARNING

Read and follow all instructions before use. Inspect the product, battery, and charging cable before each use. Do not use if any part is damaged. Adult supervision is required during battery charging. Failure to follow these instructions and warnings may result in injury, fire, electric shock, or damage to the product.

A big welcome to the world of





Read all of the instructions before setting up or using your product.

Lithium Battery Installation and Charging Steps

- Remove the battery from the unit by unscrewing and opening the battery cover.
- Disconnect the battery from the connector inside the battery compartment.
- Connect the battery to the included USB charger.
- Fully charge the battery before use.
- After charging, remove the battery from the charger.
- Open the battery compartment and locate the battery connector.
- Connect the battery plug to the connector inside the compartment.
- Place the battery securely inside the battery compartment.
- Reinstall the battery cover and tighten the screw.

Important: Adult supervision is required during battery charging and connecting. Use only the supplied battery and charger. Ensure the battery connector is fully inserted before use.

1 Fully charge the lithium battery.

2 Unscrew & open the battery cover.

3 Remove the cover & locate the battery port.

4 Plug the battery into the connector.

5 Place the battery inside the compartment.

6 Reinstall & screw back the battery cover.

Remote Control Battery Installation

Battery Type: 2 × AAA Batteries (Not Included)

1. Push the controller unit out from the handle.
2. Hold the controller unit firmly.
3. Unscrew and open the battery cover.
4. Remove the battery cover completely.
5. Insert 2 AAA batteries, matching the polarity markings (+/-) inside the battery compartment.
6. Reattach the controller unit back into the handle.

WARNING: Dispose of used batteries immediately. Keep new and used batteries out of the reach of children. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries

Battery type: 2x AAA batteries (not included)

Dry cell battery installation steps demonstration:

1

Push the controller unit out from the handle.

2

Hold the controller unit firmly.

3

Unscrew and open the battery cover.

4

Remove the cover completely.

5

Insert 2 AAA batteries. Match the polarity.


6

Reattach the unit back to the handle.

WARNING: Dispose of used batteries immediately.

Remote Functions

- Use the directional buttons to control movement.
- Use the speed button to switch between low and high speed modes.
- Use the sound button to activate sound effects or music.
- Press the Fan On/Off button once to inflate the product and again to deflate it.
- Always operate the product on a flat, dry surface away from obstacles and stairs.
- Adult supervision is recommended during use.

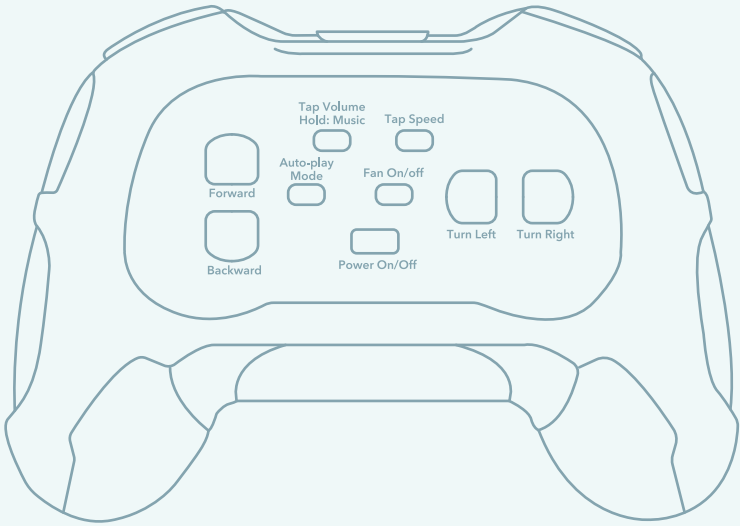

⚠ WARNING

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

