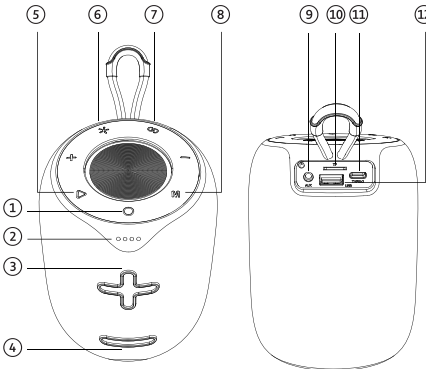
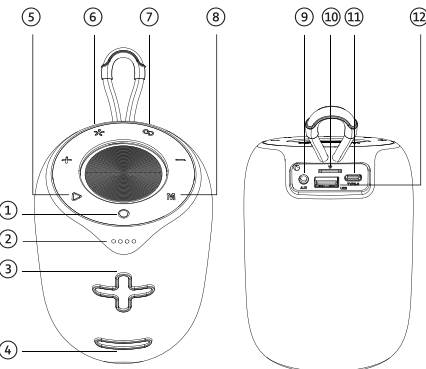


X60-TILEMU说明书-20260728

X60 Wireless SpeakerInstructions Portable Wireless Speaker 	Wireless Speaker -X60 Wireless Speaker 无线音箱 Technical Specifications: Wireless standard: Mountain View 5.3 Transmission distance: 10 meters Output power: 20W Play time: 2~10H(Playback volume dependent) Speaker: 57mm*2 4Ω 10W*2 Input Power: 5V== 1.5A Maximum current consum ption: 1.5A Product size: 105*105*138mm Battery type: 18650 Li-ion 3.7V 2400mAh Audio signalinput interface: standard Φ3.5mm headphonejack(stereo) Features: 1. Wireless connection; 2. Memory function; 3. Support U disk/ TF card/ AUX play mode; 4. Built-in lithium battery; 5. Use high-fidelity speakers, make the sound more natural and delicate; 6. 1+1 serial function; 7. Water resistance IPX6.	Wireless Speaker -X60 Wireless Speaker 无线音箱 	Wireless Speaker -X60 Wireless Speaker 无线音箱 Button instruction: 1. Long press for 3 seconds to switch off/on the phone 2. Bluetooth connection/charging indicator light 3. Short press: volume up; long press: next song 4. Short press: volume down; long press: previous song 5. Short press: pause/play; Long press: Disconnect Bluetooth for 3 seconds; Click to answer/hang up the call, double-click to reject the call 6. Short press: light switching 7. Short press: TWS connect/disconnect; long press: sound effect switching 8. Short press: Mode switching (T-card, U-disk, audio and Bluetooth mode) 9. AUX port 10. TF card 11. TYPE-C charging port 12. USB port Note: Press 1 and 8 at the same time to force power off.	Wireless Speaker -X60 Wireless Speaker 无线音箱 Directions for use: 1. Device to connect 1.1 Turn on the device to default wireless mode. 1.2 Turn on wireless device, search model X60 and connect, play music after connection successfully. 2. Suitable for all kinds of mobile phones equipped with wireless technology, wireless adapter, wireless players. 3. Voice prompt 3.1. there is a voice prompt when turn on/off. 3.2. Low-power voice prompt 3 times, shutdown after 15S. 3.3. there is voice prompt when the button to the maximum volume, no voice prompt at the minimum volume. 4. Mode switching 4.1. Boot into wireless mode by default, mode switching order: T-card-U-disk-audio-Bluetooth mode. 4.2. mode: post-insertion priority. 5. LED Lights Wireless search status: Blue light not flashing; Wireless pairing status: Color light changes. Power on status: blue light pause change; Charging status: The red circular indicator light on the front is always on, and the red light when fully charged is off. Playing status: Short press [light key] to switch the colour light effect, the colour light flashes slowly about 1.5 seconds/time.	Wireless Speaker -X60 Wireless Speaker 无线音箱 6. EQ Switching Long press to switch the EQ effect has and outdoor/bass/indoor three kinds of sound effects, power on the default outdoor sound effects. 7. volume the default volume of speaker is 50% when starting-up. 8. Charging to use The machine built overcharge protection circuit, can connected to a computer or charger for a long time, about four hours to fully charge. Every battery playback time will be different due to the use of different size of the volume. 9. No working status, automatic shutdown after 15 minutes. Troubleshooting: 1. Auto power off: the battery protection is automatically activated when the battery is low, please use it after charging for 5 hours. 2. Unable to play music: The storage path of the music file cannot be recognized by the player. Please store the music file in the root directory of the portable device. 3. Connect the computer no sound: computer interface connection error, please select the correct audio output port. 4. No function or function keys wrong; try again after shutcown.
---	---	--	--	--	---

X60 无线扬声器说明 便携式无线音箱 	无线扬声器 -X60 便携式无线音箱 无线音箱 技术规格： 无线标准：山景5.3 传输距离：10米 输出功率：20W 播放时间：2~10小时(播放音量大小而定) 扬声器：57mm*2 4Ω 10W*2 输入电源：5V== 1.5A 最大电流消耗：1.5A 产品尺寸：105*105*138mm 电池类型：18650锂电池 3.7V 2400mAh 音频信号输入接口：标准Φ3.5mm耳机插孔(立体声) 特点： 1. 无线连接； 2. 记忆功能，断点续播； 3. 支持U盘/TF卡/AUX播放模式； 4. 内置锂电池； 5. 使用高保真的扬声器，发出声音更自然和细腻； 6. 1+1设备串连功能； 7. 6级防水。	无线扬声器 -X60 便携式无线音箱 无线音箱 	无线扬声器 -X60 便携式无线音箱 无线音箱 按键说明： 1. 长按3秒关机/开机 2. 蓝牙连接/充电指示灯 3. 短按:音量加;长按:下一曲 4. 短按:音量减;长按:上一曲 5. 短按:暂停/播放;长按:3秒断开蓝牙;单击接听/挂断电话,双击拒绝来电 6. 短按:灯光切换 7. 短按:TWS连接/断开;长按:音效切换 8. 短按:模式切换 (T卡、U盘、音频和蓝牙模式) 9. AUX接口 10. TF卡 11. TYPE-C 充电口 12. USB端口 注:同时按1和8强制关机。	无线扬声器 -X60 便携式无线音箱 无线音箱 使用说明： 1. 无线配对 1.1. 使用无线配对前,首先打开音频电源,它已经是默认的无线模式。 1.2. 打开无线设备,搜索X60,连接配对,连接成功后,开始播放音乐体验。 2. 适用于各种手机配件无线技术,无线适配器,无线播放器。 3. 语音提示 3.1. 开/关机有语音提示音。 3.2. 低电语音提示3次,15S后关机。 3.3. 按键到最大音量有语音提示,最小音量无语音提示。 4. 模式切换 4.1. 开机默认进入无线模式,模式切换顺序:T卡-U盘-音频-蓝牙模式。 4.2 模式:后插优先。 5. LED灯 无线搜索状态 :蓝灯不闪;无线配对状态:彩灯变化。 开机状态:蓝灯暂停变化;充电状态:正面圆点指示灯红灯常亮,满电红灯灭。 播放状态:短按[灯光键]切换彩灯效果,彩灯慢闪约1.5秒/次。 6. EQ切换 长按切换EQ效果有和户外/低音/室内三种音效,开机默认户外音效。	无线扬声器 -X60 便携式无线音箱 无线音箱 7. 音量 开机默认音箱50%音量。 8. 充电使用: 本机内置过充保护电路,可长时间连接电脑或充电器,约四小时即可完全充电。每个电池的播放时间会因使用不同大小的音量而有所不同。 9. 无工作状态,15分钟后自动关机。 故障排除： 1. 自动关机:电池电量不足时会自动开启电池保护,请充电4小时后使用。 2. 无法播放乐:音乐文件存储路径不能被播放器识别,音乐文件请存储在可移动设备的根目录下。 3. 连接电脑无声:电脑界面连接错误,请选择正确的音频输出端口。 4. 按键无反应或功能错乱:关机后重试。
--	---	--	---	---	--

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.