

4-Channel 360°Built-in WiFi GPS Dash Cam

**ENJOY YOUR PRODUCT!
THANKS FOR CHOOSING US!**



USER MANUAL


Made in CHINA

Please read before using and keep it for future use
V1.3

CONTENTS:

What's in the box?	01
1. Product INFO	02
1.1 Camera Details	02~03
1.2 Screen Details	04~11
2.Power Tools.....	11
3.Installation	12
3.1 About Install Memory Card	12~13
3.2 Install Cam onto Car Windshield	13~14
3.3 Install Power Cord	14~16
4.Basic Operation	16
4.1 Power ON/OFF	16
4.2 Recording Interface	17~18
4.3 Menu Settings Interface.....	18~19
4.4 Playback Interface	19~22
4.5 App Installation and Wi-Fi Function ...	22~26
4.6 APP GPS Video Track	26~28
4.7 View Playback On Computer	28~29
5.Specifications	29~31
6.Customer Service Center	31
7.Note	31
7.1 About Precautions on using	31~32

What's in the box?



D9plus-128G-4CH
Dash Cam



Car Wire Trim Tools



3M Adhesive Stickers



Electrostatic Sticker



 
Rear Camera



Car Charger



128GB SD Card



User Manual



19.6ft Rear Camera Cable




Spare Bracket



Dry and Wet
Alcohol Wipes

1. Product INFO

1.1 Camera Details

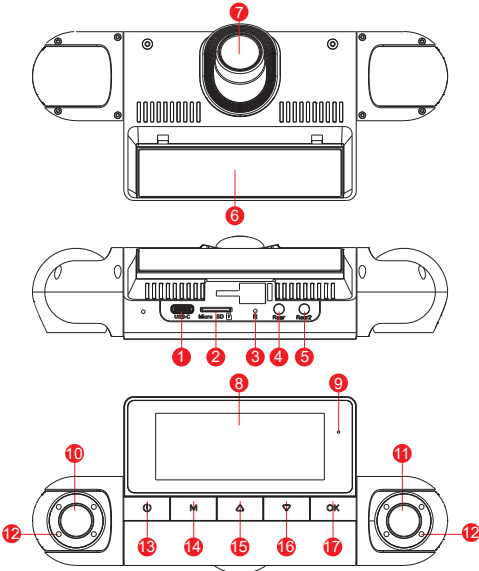


No.	Name	Description
1	 Type-C	Type-C USB port for power on
2	 Micro SD	For inserting TF Card (Micro SD Card)
3		Force reset and restart Dash Cam

No.	Name	Description
4		2.5m m Round hole interface for connect with Rear Cam
5		2.5mm Round hole is reserved for spare function
6	Brackets	Use to fixed recorder
7	Front cam	Front Facing Camera for video recording road events(Please tear off Cam Protective Flim when using)
8		3.18-inch IPS HD Screen
9		1.Blue light is always bright mean powered on (but not recording) 2.Blue light blinking means recording is in progress.
10	Cabin Cam	Camera for left in-car video recording(Please tear off Cam Protective Flim when using)
11	Cabin Cam	Camera for right in-car video recording(Please tear off Cam Protective Flim when using)
12		IR LED Light (8IR LED lights enhances the night vision in car)
13		Differ function, please see the '4.Basic Operation'.
14		Differ function, please see the '4.Basic Operation'.
15		Differ function, please see the '4.Basic Operation'.
16		Differ function, please see the '4.Basic Operation'.
17		Differ function, please see the '4.Basic Operation'.

1.2 Screen Details

1.2.1 Recording Interface

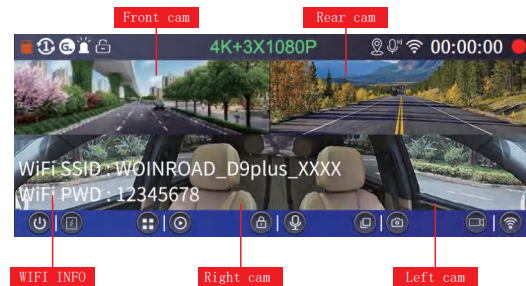

1.2.2 Icon Function Introduction



SN.	Icons	Functions	Definition
1			TF card status: TF inserted normally/TF card not inserted
2			Loop recording time: 1 min/2 mins/3 mins
3			G-Sensor sensitivity : low-medium-high-off
4			Infrared light setting: auto/on/off
5	4K+3X1080P	4K+3X1080P 2K+1080P(Left) 2K+1080P(Right) 2K+4K	Videos resolution
6			GPS status: GPS connected/GPS turned off/GPS located successful
7			Audio switch: on/off
8			WiFi status: Off/On/Phone connection successful
9			Current recording time in hours/minutes/seconds
10			Reminder in the center of the screen: Lock/Photo taking/Format failure/Format or factory reset successful/Format in progress
11	2026-01-20 20:09:49	Date & Time	The current Date and Time
12	120 km/h	0-180	Speed display: 0-200km/h(mph)
13			In recording or standby mode: long press to turn off/short press to turn off the screen
14			In recording or standby mode: Short press to enter menu/long press to enter replay
15			In recording or standby mode: Short press lock recording/long press audio switch


SN.	Icons	Functions	Definition
16			In recording or standby mode: Short press to switch screens/long press to take photos
17			In recording or standby mode: Short press to stop recording/long press WiFi switch

1.2.3 Menu Interface

Menu Function Introduction:

- 1.Video Playback:** playback video or picture mode;
- 2.Settings:** DVR settings and System settings;
- 3.WiFi:** WiFi SSID, PSD and QR code.
- 4.Format:** YES / NO (Including protected files);

Explanation: Format SD card mean erasing all files in SD card.
(After formatting is successful, the files cannot be recovered, please back up important files before operation.)

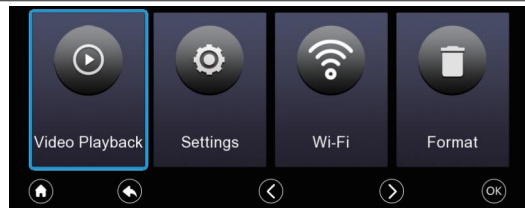


Setting Menu: DVR settings and System settings

DVR settings:

- Recording Mode:** 4K+3x1080P/5K+1080P/5K
Note: Changing the resolution will wait 2 seconds before rebooting to take effect.
A: 4K+3x1080P-4 channels recording mode.
B: 5K+1080P-Front Cam + Rear Cam recording mode.
C: 5K-Only Front Cam recording mode.

DVR settings:	
2	IR LED: OFF/ON/ Auto(default); The IR LED lights react to the light sensitivity of the lens in the interior environment of car Note: - Using 940 IR light, which is invisible to the naked eye, can be seen with a camera when the IR light is on. - Setting Auto mode-when the scene is dark, IR LED automatically works which the video is in black and white. when the scene is bright, IR light automatically turn off, the video is normally colorful.
3	Loop Recording: 1min/2mins/3mins (default); It refers to the recorder will cut to a single video according to the loop time duration setting when it has been recording. E.g: if you set the loop time to 3 mins, the recorder will cut and save a video clip after 3 mins of recording. And will continue to save new video clips from the time of 00:00:00.
4	Audio Recording: Off/On (default) It refers to the voice recording function. You can choose whether you have the voice recording function turned on or not.
5	G-Sensor Sensitivity: OFF / Low / Middle / High (default Low); Explanation: If recorder reaches a certain level of vibration, it will trigger the emergency locking function to lock the currently recorded video clip.
6	Video Watermarks: Date + Time/Latitude and longitude/License plate/Speed;You can tick whether these four watermarks are to be displayed in the recorded videos.
7	Anti-flicker: 50Hz / 60Hz(default) It means how many times per second the screen updates the image. 50Hz is the AC frequency standard used in Europe, China, Australia, etc. 60Hz is the AC frequency standard used in North America, Japan and other countries & regions.

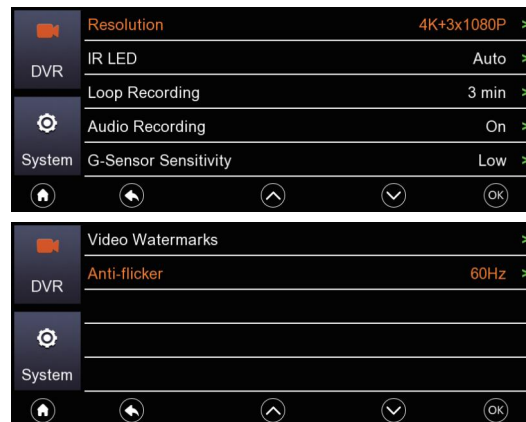

System settings:	
1	Wi-Fi: Off / 2.4G / 5.8G (default Off) The Wi-Fi function of the dash cam is a point-to-point technology, which it does not support remote connection or remote viewing of dash cam.
2	Screen Save: Off / 1 minute/ 3 minute (default off); Off: The screen is always On; 1min/3min: It will auto turn off the screen after 1min/3min.
3	Language: English / German / French / Spanish / Italian Other Multilingual; Explanation: Select your corresponding language, the recorder will switch to the corresponding language text display;
4	Sound: Key Tone/Voice Prompt/Power On/Off Sound You can tick whether these three voices will appear while the recorder is working. (Tick all by default)
5	Date & Time: Year/Month/Date/Hour/Mins/Secs; Clock Settings will be shown above recording page. You can set it according to your country's local time.

System settings:	
6	License Plate: Off/On (default off); If you choose On, you can enter your license plate number.
7	Parking Monitor: Off/ Time-lapse Recording/Gravity sensor/Radar monitoring (default Off) Explanation:(this function need to connect 3-core hardwire power cable): 1.Time-lapse Recording: the dash cam will automatically switch to the video status after the engine off 5s, then the dash cam will prompt the start of the video recording with 1FPS/sec until the car battery voltage is below the protection threshold. 2.Gravity sensor: After the engine of car is off, once the car is impacted, the dash cam will automatically power on and record for 15 seconds, after then the unit is automatically shutting down. 3.Radar monitoring:After the car engine of car is off, if the object is sensed to move within a 3-5 meter around the car, dash cam will start to record 90 seconds. and after 90 seconds no object moves, it will enter standby monitor.
8	GPS: Off/On (default on); Choose whether or not you want to use the GPS Tracking function. GPS does not support remote monitoring or remote positioning. Records the speed / latitude & longitude / trajectory of the car when dash cam is working.
9	GPS status: Display GPS signal status; The GPS status corresponds to 12 signal frames. Red/Orange icon means not connected or there is not positioned. Green icon means connected or positioned.
10	Speed Unit: mph, km/h (default km/h); Choose your applicable speed unit.
11	Speed Calibration: -10 km/h—10km/h (default 0km/h) Fine-tune the speed display according to your desire to prevent speeding.
12	Time Zone: "GMT +" is for East Zone time, "GMT -" is for West Zone time; Explanation: Choose a time zone based on your country. Time Zone setting is important for dash cam to display the correct time.
13	Daylight Saving Time: Off/On (default off); Turn it On or Off depending on whether or not daylight saving time is practiced in yourcountry.
14	Format: YES ✓ / NO × (Including protected files); Format Card mean erasing all files(including protected files) in Mirco SD card. When formatting, please make sure that the formatting is successful.

System settings:	
15	Factory Reset: YES ✓ / NO × (Restore factory settings?) Explanation: The Reset is to restore the recorder to the initial default State, and all the setting that have been set on the recorder will be restored. (Select YES: All your previous self-settings will be changed.)
16	Version: Display the version of FW.

DVR	Wi-Fi	Off >
	Screen Saver	Off >
	Language	English >
System	Sound	>
	Date & Time	>

DVR	License plate	Off >
	Parking Monitor	Off >
	GPS	On >
System	GPS Status	>
	Speed Unit	km/h >

DVR	Speed Calibration	0km/h >
	Time Zone	GMT-5:00 >
	Daylight Saving Time	Off >
System	Format	>
	Factory Reset	>



2.Power Tools



1.Car Charger


Note: It is best to use the power cord that comes with our products' or our professional hardware kit.



2.Hardwire Kit with radar
(Required for Parking Mode.
Prevents car battery drain)
(Not included, purchased
separately)

3.Installation

3.1 About Install Memory Card

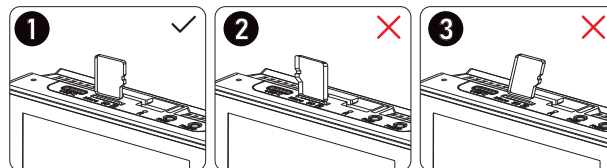

- ① Insert a new TF card into the card slot and then power on the dash cam.
- ② After the dash cam is turned on, please press **[M]** Key to enter the Menu Interface.
- ③ In the Menu Interface, press **[▽]** Key to switch to the option of 'Format Card', and press **[OK]** Key to enter.
- ④ Then select the 'YES' option and press **[OK]** Key to confirm formatting.
- ⑤ Then a orange frame will appear: **please wait**.
(At this step, please be patient while the memory card is formatted.)
- ⑥ When formatting the memory card is complete, a blue '✓' icon will be displayed. After formatting is done, you can press **[M]** button to return to recording interface, and dash cam will automatically start recording.

PS:

- 1.The dash cam will periodically remind you to format the memory card.
(If you see it, don't worry that the files will be deleted automatically. If the formatting operation is not performed. Then the files will not be deleted automatically.)
- 2.Please don't use low-speed memory cards on dash cam, as it is easy to stop or lose the recording due to the failure of a memory card. We recommend using genuine U3 high endurance Micro SD card.

3. Please do not take the card out when dash cam is recording in case that the important video files missing. When you insert a new card, please format it on the Dash Cam before you use it.
4. The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with new memory card.

3.2 Install Cam onto Car Windshield

3.2.1 Suggested Installation Location

Host: The best position to install on the car glass behind the rearview mirror.

Rear Cam: The best position to install in the middle of rear windshield in the car.

3.2.2 About Electrostatic Stickers


Introduce:

Please tear off this mask and stick it on the car front windshield.

Paste method:

- First choose the location where the recorder will be attached, and wipe it with Screen Cleaning Paper.
- Tear off the protective film and stick it on the selected position.
- Use scraper to remove the air bubbles between Sticker and the glass.

PS: Please stick it on a flat surface without air bubbles, otherwise it will not be firm !!!

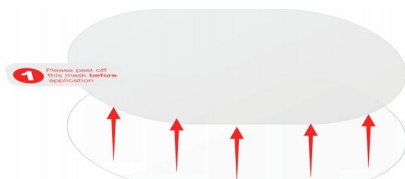

3.2.3 About Install the Bracket

- Push 3M Stick Bracket into the bracket slot of the holder rabbit of dash cam from right to left until it clicks;
- Tear off the red protective film on 3M Stick Bracket;
- Attach the bracket to Electrostatic Sticker, press for about 10-20 seconds, and let Electrostatic Sticker and the 3M stick fully fit firmly.


PS: Please be sure to press firmly. And look through outside glass of car to confirm whether it is fully fitted !!!

3.3 Install Power Cord

3.3.1 About Parking Monitoring Power Cord

- Connect the fuse wire to the corresponding connector in your car's fuse box.

PS: Please find out where your car's fuse box is located because of the difference in car models.

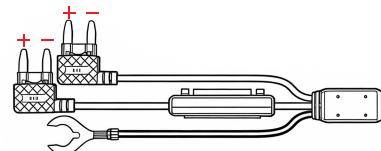


Need to be connected to a fuse slot under 15A

This is just an instruction about how to install the 3-core Hardwire Kit, which is not equipped in the package. If you need it, you pls buy Hardwire Kit or Radar Hardwire Kit separately.

3.3.2 About Car Charging Cable

- Plug the car charger into car's cigarette lighter port.
- Use Crowbar to carefully run the power cord along the slit on the edge of the windshield and hide it inside the car slit.
- Connect the TYPE-C USB port to the power port of the dash cam.
- Start your car, dash cam will auto power on and start recording.

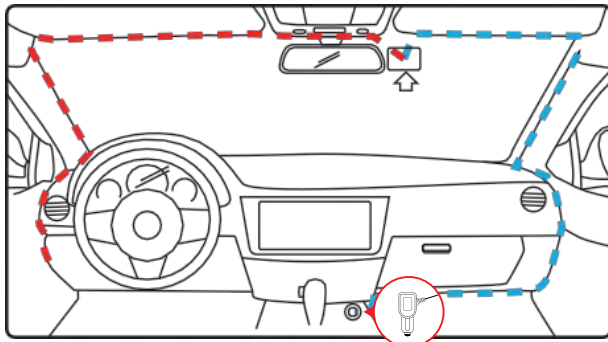


■ ■ ■ ■ ■ Hardwire Kit Wiring (3.3.1)

■ ■ ■ ■ ■ Car Charging Cable Wiring (3.3.2)

3.3.3 About Rear Lens Power Cable

- Please confirm whether the BMW 4/5-pin connector between Rear Lens Cable and Power Cable is fully connected.
- Insert the 2.5mm round hole interface of the rear lens into the Rear Lens interface of dash cam.
- Be carefully run the power cord along the gap in the roof and hide it up to rear windshield inside the car.
- Confirm the position of the rear lens to be installed, and tear off the protective film of rear lens 3M Stick Bracket and stick it on.

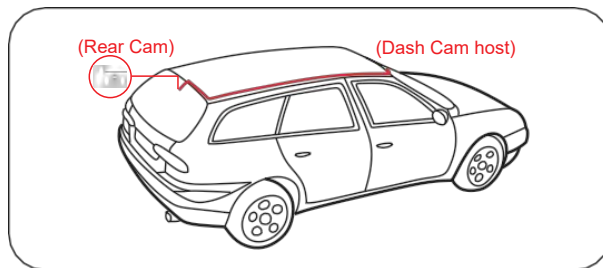

~~~About Rear Cam~~~

It is a non-waterproof rear cam,  
so it can't be mounted on the outside of the car.  
It must be mounted inside the car!!!

## 4. Basic Operation

### 4.1 Power ON/OFF

When car starts on, dash cam will auto power on and start recording.

#### A. Manually

Long press  Key to power it ON or OFF.

#### B. Automatically

Dash cam will power off if the car charger is disconnected or car is turned off.

## 4.2 Recording Interface

When Rear Cam is connected, the recording page displays:

[Upper Left side(Front Cam)+ Upper right Side (Rear Cam)+Lower Left

Side (Left Cam)+Lower Right Side(Right Cam)]

Short Press"Key to switch the lens screen:

**First:** Front Cam + Left Cam + Right Cam

**Second:** Front Cam+ Rear Cam

**Third:** Left Cam + Right Cam    **Forth:** Front Cam    **Fifth:** Rear Cam

**Sixth:** Front Cam+ Rear Cam + Left Cam + Right Cam

When Rear Cam isn't connected, the recording page displays:

[Left side(Front Cam)+ Upper right Side (Left Cam)+Lower Right Side (Right Cam)]

Short Press"Key to switch the lens screen:

**First:** Left Cam + Right Cam    **Second:** Front Cam

**Third:** Front Cam + Left Cam + Right Cam


| KEYS                                                                              | MODE                          | Screen Icon                                                                         | Short press           | Long press     |
|-----------------------------------------------------------------------------------|-------------------------------|-------------------------------------------------------------------------------------|-----------------------|----------------|
|  | Recording/<br>Standby Mode    |  | Lock the current file | Mic on/off     |
|                                                                                   | Menu/<br>File View Mode       |  | Left selection        | N/M            |
|                                                                                   | Play Video                    |                                                                                     | Previous video        | Fast forward   |
|                                                                                   | Recording/<br>System Settings |  | Up selection          | N/M            |
|  | Recording/<br>Standby Mode    |  | Switch Display Mode   | Take photo     |
|                                                                                   | Menu/<br>File View Mode       |  | Right selection       | N/M            |
|                                                                                   | Play Video                    |                                                                                     | Next Video            | Hold to rewind |
|                                                                                   | Recording/<br>System Settings |  | Downward selection    | N/M            |
|  | Recording/<br>Standby Mode    |  | Recording On/Off      | WiFi On/Off    |
|                                                                                   | Menu Setting/<br>Playback     |  | Confirm               | N/M            |

## Key Functions In Different Interfaces

| KEYS                                                                             | MODE                             | Screen Icon                                                                       | Short press                      | Long press      |
|----------------------------------------------------------------------------------|----------------------------------|-----------------------------------------------------------------------------------|----------------------------------|-----------------|
|  | Recording/<br>Standby Mode       |  | Screen ON/Off                    | Power On/Off    |
|                                                                                  | Menu settings/<br>Video Playback |  | Return to recording<br>interface | Power Off       |
|  | Recording/<br>Standby Mode       |  | Menu mode                        | Videos Playback |
|                                                                                  | Menu setting<br>Mode             |  | Back to previous menu            | N/M             |
|                                                                                  | File View Mode                   |  | Back to previous menu            | Playback menu   |


## 4.3 Menu Settings Interface

- After powering ON the camera, press  Key to enter the Menu interface.
- After entering the Menu interface, you can press  Key and  Key to switch to the function setting you want , and then press  Key to confirm the entry.
- Enter to each function setting, press  Key and  Key to switch options, and press  Key to confirm your selection.

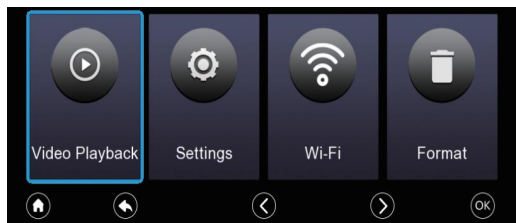


#### 4.4 Playback Interface


1. In recording mode, short press the “M” key to enter menu mode to select “ ” and press OK to enter the video playback interface. Another way is to long press the “M” key to enter video playback interface.

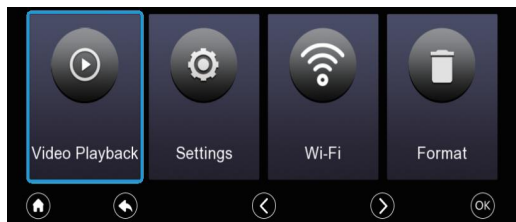

2. Channels switching: short press “ ” or “ ” key to select icon “ ” and press OK key, it will display front-rear-left-right video files. You can select the channels' videos that you want. The channel is displayed on the upper left corner.

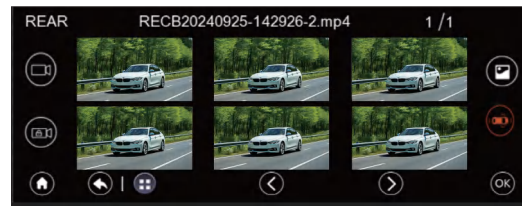


3. Selecting the videos: After selecting the channels' videos, short press “ ” or “ ” key to select the videos accordingly. Select icon “ ” is with normal videos file. Select icon “ ” is with lock videos file. Select icon “ ” is with photos file. Then short press OK to enter the files accordingly.

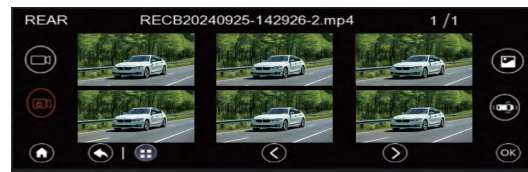



4. Videos or photos selection for playback: Press “ ” or “ ” in document selection mode to find the document you want to play. Press OK key to play the file that you want.



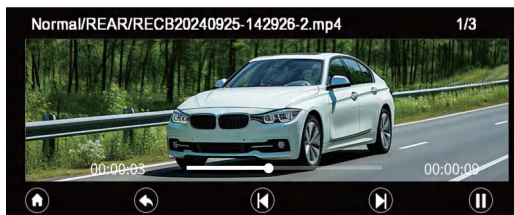

| ICONS | Description                                                                           |
|-------|---------------------------------------------------------------------------------------|
|       | One click return to camera mode                                                       |
|       | Return to the previous interface                                                      |
|       | Short press to previous file, long press to quickly return                            |
|       | Short press to next file, long press to fast forward                                  |
|       | Play/Pause                                                                            |
|       | Short press to return to the previous, long press to enter the playback menu settings |

5. Playback menu settings: In document selection mode, long press the “ ” key to replay the menu mode. Press “ ” or “ ” to select: “Delete the current file--delete all files--lock the current file--lock all files--unlock the current file--unlock all files”, Press OK key to confirm the operation that you want.

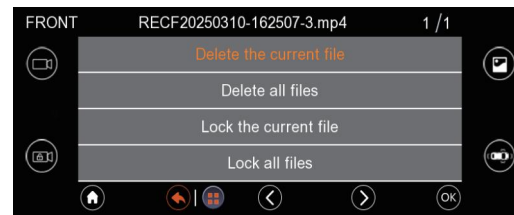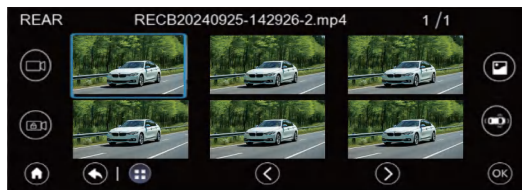

## 4.5 App Installation and Wi-Fi Function

### 4.5.1 Install App

#### 1. Install APP on phone:


Method 1- Enter the menu of Wi-Fi to scan QR code to install APP “Viidure” on the phone

Method 2-Scan the QR code on the user manual as below to download and install it.

Method 3- Search the name of “Viidure” APP in the Android google store or Apple Store to download it and install it.

#### 2. WIFI Name (SSID): WOINROAD\_D9plus\_\*\*\*\*(WIFI Serial Number)

#### 3. WIFI password (PWD): 12345678 (Initial Unified Password)

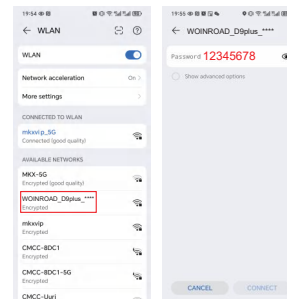


#### 4.5.2 WIFI Connection Steps

1. Turn on the WIFI function of the dash cam;  
A: Long press "OK" key with 3 seconds to turn on the WIFI of dash cam;  
B: Enter the Menu of "System settings" to turn on "Wi-Fi" 5.8G or 2.4G.
2. Enter the WLAN interface of the phone settings,  
WOINROAD\_D9plus\_\*\*\*\*;
3. Enter the password to connect the WIFI account of dash cam;
4. Turn on the APP "viidure" to connect the WIFI account.

PS:

- ♥ The WIFI function of the dash cam is a point-to-point technology that requires connection within a close range of the recorder inside the car;
- ♥ When you turn on WIFI, the SSID and password of WIFI will be displayed in the lower left corner of the screen. After connecting to the mobile WIFI, this information will be automatically hidden. When the phone is disconnected from WIFI, this message will remain displayed on the screen.
- ♥ If you don't connect to your phone after turning on WiFi, the dash cam will turn off WiFi after 10 minutes and return to the recording interface
- ♥ It's not recommended to modify the WIFI Name;
- ♥ If you need to modify the WIFI password, please connect to the APP to modify it on the settings.
- ♥ If the SSID of the dash cam can not be found in the "WLAN" list in your phone settings, please restart the WLAN and swipe the 'NETWORKS' list.

#### 4.5.3 WIFI APP Interface Introduction

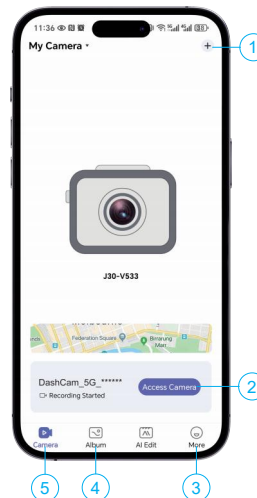


1. Installation location and WIFI connection instructions;
2. Pls confirm the Wifi account of the dash cam you connected, then press 'Connect' to enter the recording interface;
3. More: App Settings (Language/ Date Format/ Speed Unit/ Enter playback to automatically download photos/ Soft Decoder/ GPS Assistant/ Offline Map);
4. Album: to view downloaded videos or photos;
5. Camera: After entering "Local Album" or "More", click "Camera" to return to the APP homepage;


## 4.5.4 APP Preview and Playback

### 1. APP Videos Preview :

The APP has successfully connected to the dash cam. Click on "Access Camera" to enter real-time preview recording.

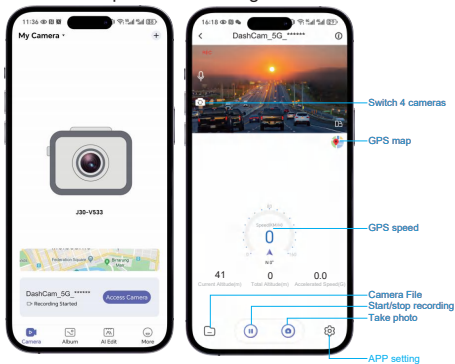

### 2. Playback & Download

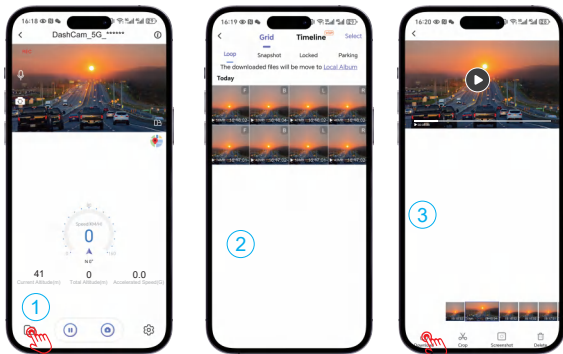

## How to View and Manage Files?

① Tap "Camera File" to enter the file folder.

② File Categories.

**Loop**-Regular videos recorded by from all four cameras (front, rear, left, and right)

**Snapshot**-Photos you have taken.

**Locked**-Emergency videos automatically saved and protected.

③ **Playback the video.** you can also download, screenshot or delete the single video.


The 5G wifi download speed is around 12MB/Sec, The 2.4G wifi download speed is around 4MB/Sec.

## 4.6 APP GPS Video Track

1. On the APP recording interface, you can view the real-time speed and altitude and longitude of the car running; (In the APP setting to download offline maps for a better experience!); experience on the Android phone.

2. In the APP Video preview interface you can view the map tracking for downloaded videos;

3. In the APP Album, when you play the downloaded videos, you can view the map tracking of the videos.

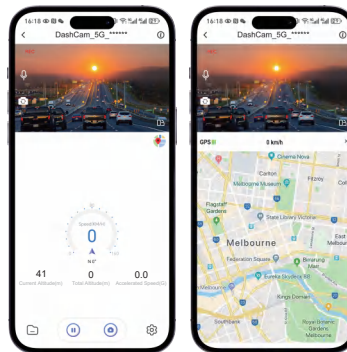

### 4.6.1 GPSPlayer function

1. Recording interface indicates the GPS is not positioned, the GPS icon is white. Once the GPS icon is green, indicates the GPS is positioned;
2. The system time will be synchronized after successful positioning (according to the time zone time set in the menu);
3. In the "GPS status" of the system settings, you can view the real-time GPS DB value.
4. When inserting or built-in GPS, the GPS related menu will only be displayed, otherwise it will not be displayed.

### 4.6.2 Install GPSPlayer

1. **MAC & Windows system computer:** There is an automatically generated "Gpsplayer.html" on the SD card. Click this file to download, and install GPSPlayer to view the GPS tracking of the videos.

2. **MAC system computer:**

Please select GPSPlayer for MAC 10.11 or above installation

**Windows system computer:** Please select GPSPlayer for Windows7~11 installation

Installing a GPS Player:  gpsplayer.html

Opening after the installation is complete:  GPSPlayer

### 4.6.3 To use GPSPlayer

1. Import the video file after GPS positioning show track of travel;
2. Show the position in the process of driving, the real-time speed;
3. General settings (in the upper left corner for relevant settings): to select Play 1, 2, 3 or 4 videos simultaneously, select the multiple languages and so on.



## 4.7 View Playback On Computer

### 4.7.1 Folders in the memory card

**Event**----Lock video file

**Normal**----Normal recorded video file

**Photo**----Photos captured by the dash cam

**gpsplayer.html**----GPS player installation file

**PS:**

1. The video files in the 'Event' folder are protected files. Please be careful when deleting them. If there are important videos, please back them up;
2. If the video recorded using the radar hardwire cable is saved in the Normal folder.

### 4.7.2 Computer View File Description

- 1.Pull out the used TF Card from dash cam and insert it into the Card Reader.
- 2.Connect the Card Reader to the USB port of the computer, open the removable disk.
- 3.When playing videos or browsing photos, the corresponding software needs to be installed on the computer.
- 4.Please select the equivalent folder to view the video you want.
- 5.After viewing, please insert memory card directly back into the card slot of recorder.(Recommended not to format it on the computer.)
- 6.About Backup Files
  - a.If you want to store important and wonderful video or photos for a long time,it is recommended to copy the files in memory card to a computer for storage.
  - b.Do not create a new folder storage on the memory card, which will reduce the effective use of memory card space.

## 5.Specifications

| Category                | Description                                              |
|-------------------------|----------------------------------------------------------|
| Image Sensor            | Chip: MSTAR 88Series<br>Sensor:Galaxy Core GC4653+GC2053 |
| Random Access Memory    | 2GB                                                      |
| Rear Cam                | Optional (S20—Non-Waterproof)                            |
| Rear Camera Power Cable | 2.5mm Round hole interface & 5.5 meters length           |

|                            |                                                                                          |
|----------------------------|------------------------------------------------------------------------------------------|
| Channels & Recording Range | 3 CH (Record Front/Left/Right)<br>4 CH (Record Front/Left/Right/Rear)                    |
| Lens Parameters            | Front: F1.6 aperture & 140°wide angle<br>Left/Right/Rear: F1.8 aperture & 140°wide angle |
| Video Format               | MP4(H2.65)                                                                               |
| Photo Format               | JPG                                                                                      |
| Screen                     | IPS HD Screen                                                                            |
| Lens screen display        | Display separately or simultaneously                                                     |
| Languages                  | Simplified Chinese / English / Multi-lingual                                             |
| Audio                      | Built-in microphone and speaker                                                          |
| Internal memory            | None                                                                                     |
| External Memory            | Support 64-256GB                                                                         |
| Power Port                 | Type-C                                                                                   |
| Supported Car voltage      | 12V-24V                                                                                  |
| Work current&voltage       | 5V 2.5A                                                                                  |
| Operating Temperature      | -20°C~65°C                                                                               |
| Built-in lithium battery   | None                                                                                     |

#### Button Battery

Built-in RCT button battery

#### 24H Parking Monitor

Optional

## 6. Customer Service Center

We offer lifetime technical support for this product. In addition, this product comes with a 12-month warranty. If you encounter any problems, please feel free to contact us and we will provide assistance.

Please contact us via email: **support@woinroad.com**

Your feedback is invaluable. We are always committed to continuously improving our products and services. Please feel free to offer any constructive suggestions or comments for improvement.

## 7. Note

### 7.1 About Precautions on using

- ♦ The screen in host is just a preview, not the original views. It looks best when the memory card is plugged into computer.
- ♦ This product is an auxiliary device for recording external images of the vehicle. Due to the different driving environment and car environment, some functions will not be supported, so the driving images of this product recorder are for reference only. The status of TF card will also cause the situation that recording cannot be performed.

- ♦ Do not install or operate this product when the car is running. Please operate in the safety environment.
- ♦ Do not connect the uninterruptible power supply without authorization, otherwise it may cause the failure of the car or product. Please consult a professional for installation matters.
- ♦ Do not allow this product to receive strong impact or shock, so as not to damage the product, resulting in malfunction or unusability.
- ♦ When cleaning or repairing the car, please stop using or remove our machine.
- ♦ Please use it within the scope permitted by law.

**Warning:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user ' s authority to operate the equipment.

**NOTE:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.