



SPECIFICATIONS

1. Bluetooth Name: AGH Speaker
2. Functions: Bluetooth, Lyric Display, Clock, Ambient Temperature, Marquee Dynamic Images
3. Bluetooth Version: 6.0
4. Maximum Reception Distance: 30 m (in unobstructed environment)
5. Rated Input Voltage: DC 5V-1A
6. Output Power: 5W (RMS)
7. Battery: 3.7V / 1200mAh
8. Material: ABS Plastic + Silicone + Iron Mesh
9. Product Dimensions: W80 × H70 × D80mm
10. Waterproof Rating: IP5
11. Charging Time: 160 minutes
12. Playback Time: Max volume: 160 minutes; 2/3 volume: 430minutes

OPERATION GUIDE

Control Buttons: "▶ || P/P" (Power/Play/Pause), "+" (Volume Up/Next), "-" (Volume Down/Previous), "M" (Function Menu)

1. Power / Play/Pause Button (P/P)

- Long press (2 seconds): Turn on/off (with prompt sound)
- Bluetooth indicator: Flashes during pairing, stays on when connected
- Default settings: 50% volume, Bluetooth mode (when powered on)
- Screen display (no music playing): Clock
- Mode switching: Short press "M" to cycle through Time → Temperature → Cartoon Images → Words → Marquee

2. Low Battery & Charging

- Low battery alert: Prompt sound
- Charging indicator: 3-level gradually filling battery icon
- Power-off charging: Blue indicator + dynamic charging icon on screen
- Time synchronization: After Bluetooth pairing, tap "Allow" on the "SMS permission request" pop-up to sync phone time automatically

3. Music Playback Control

- Default display: Scrolling lyrics (auto-matched Chinese/English)
- Display modes (short press "M"): Spectrum → Time → Temperature → Text → Battery → Marquee
- Display selection: Press "+"/"-" to choose (Temperature/Images/Words/Marquee)
- Volume control: Only in music mode (press "+"/"-")
- Play/Pause: Short press "P/P"
- TWS Mode: Double press "P/P" (prompt sound; additional prompt when pairing succeeds)
- Call handling: Short press "P/P" (answer/hang up); Long press (reject call)

4. Volume Up / Next Track Button (+)

- Music mode: Short press (volume up); Long press (2s, next track)
- Image/Word mode: Short press (select next option)

5. Volume Down / Previous Track Button (-)

- Music mode: Short press (volume down); Long press (2s, previous track)
- Image/Word mode: Short press (select previous option)

6. Function Menu Button (M)

- Short press: Cycle through function menus
- Long press (2s): Enter clock adjustment mode
- Double press: Enter timer adjustment mode

7. Clock Adjustment

1. Long press "M" (2s) to enter adjustment mode
2. Press "+" / "-" to adjust hour
3. Short press "M" to switch to minute adjustment
4. Press "+" / "-" to adjust minute
5. Exit: Short press "M" again or wait 5 seconds (auto-save)

8. Timer Adjustment

1. Double press "M" to enter timer mode
2. Press "+" / "-" to adjust minute
3. Short press "M" to switch to second adjustment
4. Press "+" / "-" to adjust second
5. Start/Pause: Short press "P/P"
6. Cancel: Short press "M" during timing (returns to clock mode)



speaker with screen
HC01

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.