

说明书展开尺寸：200*140mm，对折后尺寸:100*140mm，单色双面印刷，80G书写纸

AUX-IN

Connect an audio cable to the AUX-IN jack, press MODE to switch to AUX in mode. Track selection must be controlled from the connected device while in AUX mode.

CHARGING

Connect the included USB charging cable to the speaker's charging port and a suitable power source.
The red LED indicator will light while the speaker is charging.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CLEAR
SERIES

SPEAKER MANUAL
MODEL NO.: MAXX-80



FEATURES

Wireless Connectivity
True Wireless Stereo (TWS) Function
Supports USB and TF Cards
AUX Input Function
ACCESSORIESithium Battery

ACCESSORIES


USB charging cable ×1
User manual ×1
Wireless microphone ×1

SPECIFICATIONS

Driver unit size	: 3" x 2 + Tweeter x 2
Impedance	: 40hm
S/N ratio	: ≥80dB
Separation	: ≥45dB
Distortion	: ≤1.0%
Frequency response	: 100Hz-20KHz
Wireless version	: V5.3
Wireless range	: up to 10 meters
Wireless pairing name	: CLEAR MAXX 80
Wireless profiles supported	: A2DP
Supported USB/TF Card Capacity	: 32 GB Max
Battery capacity	: Built-in 3600mAh (11.1V)
Battery type	: Li-ion
Playback time	: up to 3hrs at 75% volume*
Charging indicator	: Yes
Input	: DC 5V

HOW TO CONNECT THE UNIT

Turn on the speaker and enable BT wireless on your mobile phone or other device. Search for the wireless device pairing name "CLEAR MAXX 80" and select it to pair. Once paired, the speaker will automatically reconnect to the last connected device when powered on.

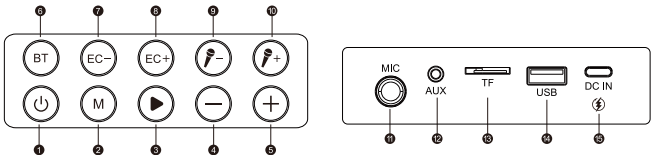

- 1.Power ON/OFF
- 2.MODE button
- 3.Play/Pause
- 4.Previous track/Volume-
- 5.Next track/Volume+
- 6.BT mode
- 7.Echo-
- 8.Echo+
- 9.Microphone volume-
- 10.Microphone volume+
- 11.MIC slot
- 12.AUX IN
- 13.TF slot
- 14.USB slot
- 15.C Type charging port

WIRELESS

Turn on the speaker. It will automatically enter wireless mode. After pairing the device, it can play the music. Press "▶|l" button to Play/Pause. Short press "◀|-" or "▶|/" button to select previous or next track.

USB/TF CARD

Insert a USB or TF card into the corresponding slot. The speaker will automatically play supported MP3 files. Press ▶|l to Play/Pause, short time press ◀| and ▶| to Prev. and Next.

FM

Press the MODE button to switch to FM mode, then press ▶|l to search channels automatically, short press ◀| and ▶| will be previous channel or next channel.