


User Manual

Wall Climbing Remote Control Car

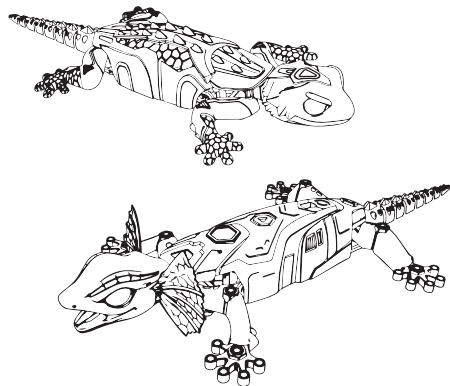

EU REP Company: E-CrossStu GmbH
Address: Mainzer Landstr. 69, 60329
Frankfurt am Main
Email: E-CrossStu@web.de

This toy is only to be connected to equipment bearing either of the following symbols:

 


The instruction must be retained since it contains important information.
This toy contains batteries that are non-replaceable.


Frequency bands: 2405-2475MHz, Max. Output Power: 0dBm (For EU Compliance)

No.W15
No.W16

<RC TOY'S DETAILS>




<REMOTE CONTROL FUNCTIONS>

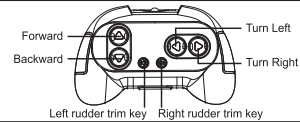


< CHARGE INSTRUCTION >

1. Make sure the "OFF / FLOOR / WALL" switch is in the "OFF" position. Charging can only be done when in the "OFF" position.
2. Plug the USB cable into a 5V power source (e.g. PC, phone charger, power bank) with maximum 2A output.
3. Plug the charging cable into the bottom port.
4. When charging, the indicator light is always on.
5. Charging should take depending on how much charge is left in the battery.

 NOTE: Do not charge the battery immediately after use. Let the battery cool for at least 10 minutes.



<BATTERY INSTALLATION>

 


1. Open the battery cover.
2. Install 2x1.5V AAA batteries (not included) in the correct positive (+) and negative (-) polarities direction.
3. Close the battery cover.

Notice: If the remote control will not be used for a long time, please make sure to take out the batteries.


-1-

<DRIVING ON THE GROUND>

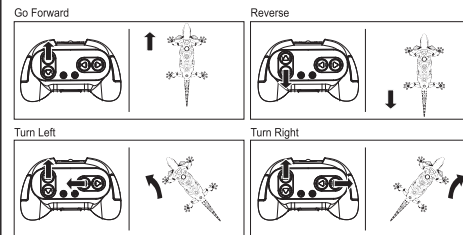


When the car's battery is low, the lights on the eyes will flash.

<DRIVING ON WALL>

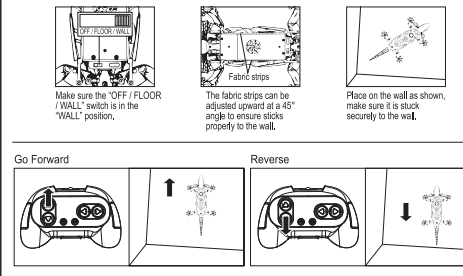

-2-

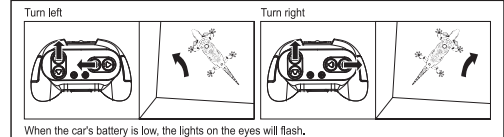

When the car's battery is low, the lights on the eyes will flash.

<HOW TO REMOVE OR PLACE THE BATTERY>

- Non-rechargeable batteries cannot be charged.
- The battery is charged by children 8 years of age and older.
- Different types of batteries or new and old ones should not be mixed.
- The battery should be inserted with the correct polarity.
- Used-up batteries should be removed from the toys.
- The power terminals must not be short-circuited.

<TROUBLE SHOOTING>

PROBLEM	SOLUTION
Vehicle will not start.	1. Power switch is off, please turn on. 2. Battery exhausted, please charge.
Vehicle does not climb.	Over current protection is engaged, Turn vehicle off for 30 seconds then restart.
Vehicle does not drive straight.	1. Make sure surface is clean of dirt/dust. 2. Make sure surface is neither too rough or too smooth. 3. Make sure surface is flat.
Vehicle slips climbing the wall.	1. Clean the tires with a damp rag. 2. Fold up the fabric skirts for a better seal prior to use.
Vehicle falls off the wall.	1. Make sure to discharge and then charge again for 30 to 40 minutes. 2. Clean tires and make sure your wall and floor are also clean. 3. Check the fabric skirts for damage. If they have been pulled loose, tape them back on with flexible tape. 4. Make sure surface is flat.
Vehicle will not climb wall.	Suction jammed.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

-3-