

start

7

end

9

NUBI

NK68 PRO WIRELESS

User Manual



nu31.gg/drivers

FR Manuel d'utilisation DE Benutzerhandbuch ESP Manual de usuario BG Ръководство за потребителя FI Käyttöopas NO Brukerhåndbok TR Kullanım Kılavuzu SE Användarhandbok DK Brugervejledning SK Uživatelská příručka PL Instrukcja obsługi CZ Uživatelská příručka LV Lietotāja rokasgrāmata UA Посібник користувача RS Кориснички унутstvo HR Korisnički priručnik RO Manual de utilizare

In this manual, you will find everything you need to know about NK68 Pro keyboard functions and settings. Please read this information carefully before using the keyboard.

You can set up your keyboard however you like using our web software at web.nu31.gg

If you have questions or your problem is not covered here, please contact our technical support. We will do everything we can to help!



help@nu31.gg



web.nu31.gg

Here are a few points that will help keep your keyboard in top condition:

1. DO NOT connect the keyboard to an electrical outlet or other high-voltage power source. This may damage the device's board and render the keyboard inoperable. We recommend connecting/charging the keyboard only from the USB port of your computer/laptop.

2. DO NOT spill liquid on the keyboard. If any liquid gets on the keyboard, immediately turn it and contact your local service center.

3. We strongly recommend using the included cable to connect the keyboard.

4. Keep your keyboard clean and give it regular care. Your keyboard will thank you with years of reliable performance.

5. If you decide to customize or modify your keyboard, please do so carefully. Yes, we designed the keyboard to allow for it BUT please be aware that opening, altering, or customizing the keyboard will void your warranty. Mechanical damage includes but is not limited to disassembly, immersion, impact, wire breakage, excessive pressure, and similar actions.

6. The warranty period is 12 months from the date of purchase. If you have any questions or issues after the warranty has expired, contact our support team—we'll be happy to help you resolve any problem, even beyond the warranty period.

7. Handle your keyboard with love and care. We've spent countless hours and a lot of heart making the NK68 Pro Series the best it can be—just like we would for ourselves <3

KEYBOARD MODE INDICATORS



LED stripes indicate main keyboard modes separated into three blocks (2 lights each):

First Block: Caps Lock

Second Block: Snap Tap

Third Block: Win/Cmd Lock

Want to change the LED light bar indicator mode? Just press FN + K, and keep pressing it to cycle through the three modes.

► First Mode: Overlay

Indicators are displayed on the LED strip in overlay mode. White indicators appear on top of the lighting animations.

► Second Mode: Indicators Only

LED strip only displays white indicators, animations are completely disabled.

 
► Third Mode: Animations Only

In this mode, the indicators are shown right on the keys themselves—no indicator lights on the LED strip, just animations. The indicator functions are moved to the keys (CAPS — Caps Lock, Win/Cmd — Win/Cmd Lock, X — Snap Tap) and will only be visible while you're holding the FN key.

 — Caps Lock  — Win/Cmd Lock  — Snap Tap

KEYBOARD MODE INDICATOR KEYS

 **Windows / macOS** — if you see the M key flashing  when pressing (and holding) the FN key, you are using the macOS mode. If the M key is flashing , you are using the Windows mode.

 **Scroll Lock** — if you see the Backspace key flashing  when pressing(and holding) the FN key, Scroll Lock is turned on. If the Backspace key is not flashing, Scroll Lock is turned off.

TOGGLES ON BACKSIDE



Left Toggle

Right Toggle

BT Mode

Wired Mode

2.4G Mode

Snap Tap Off

Snap Tap On

VOLUME CONTROL USING ROLLER

For easy volume control, we've added a hot-swappable roller. If you want, you can remove it or move it to the ESC key position.

By default, the roller is installed in place of the INS key. Pressing it will perform the same function as the key it replaces.

Note! The roller can only be placed in the INS or ESC key positions—other placements are not supported.

DISPOSAL INFORMATION

The crossed-out wheeie bin symbol means that you must not dispose of this product together with unsorted household D waste. As electrical devices can contain harmful substances which may cause environmental damage or harm to your health if not disposed of correctly, please dispose of these products separately. As the end user, you are required by law to dispose of used electrical equipment at an official recycling point. For information about local recycling points, contact your local authority, civic amenity site or the business where you purchased this product. By disposing of electrical products at an official recycling point, you are doing your part to ensure equipment is recycled correctly and professionally, and the environment is protected. Wherever possible, remove any batteries before disposing of the device. Under law, as the end user you face risk of penalties if you dispose of devices and batteries illegally.

Correct Disposal of This Product (Waste Electrical & Electronic Equipment, Applicable in the European Union and other European countries with separate collection systems). This marking shown on the product or its documentation indicates that it shouldn't be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote sustainable reuse of material resources. Household users should contact either the retailer from whom they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

HOW DO I CONNECT MY KEYBOARD WIRELESSLY?

2.4G

To connect the keyboard in 2.4G mode, switch the left three-way toggle to the far-left position. Next, insert the USB receiver (2.4G dongle, located under the keyboard's foot on the bottom) into your computer or laptop. The keyboard will automatically pair with the USB receiver.

If it doesn't connect automatically, remove the 2.4G receiver from your device. Then, press and hold FN + F on the keyboard until the LED strip starts showing the pairing effect. After that, plug the receiver back into your device's USB port.

BT

To pair the keyboard in BT mode, switch the left three-way toggle to the far-right position. Then, press and hold FN + A (or FN + S, or FN + D) for 3 seconds to enter pairing mode. The keyboard's LED indicator will show a pairing effect. On your device, open the BT settings—the keyboard will appear in the list as NK68 Pro. Select it to connect. The keyboard supports pairing with up to 3 BT devices at once. You can quickly switch between them using:

FN + A (Device 1) / FN + S (Device 2) / FN + D (Device 3).

 
FUNCTION LAYER AND KEYBOARD SETTINGS

For more detailed customization and access to the full range of features, we recommend using the function layer. This layer is activated by pressing the FN key together with other keys, as shown below:


When using any of the following combinations, first press and hold FN 

Example: pressing FN + PGUP works as the Home key which is not available in the regular layout.

Windows Hotkeys

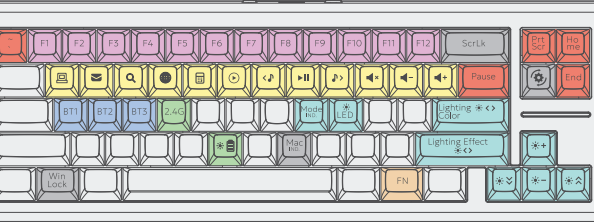

macOS Hotkeys

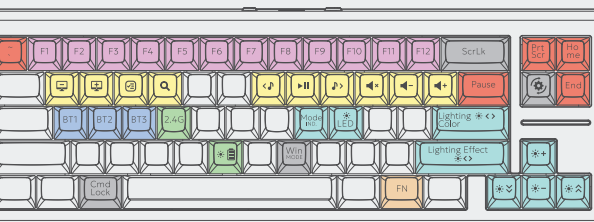 

Windows

macOS

FN+!1	F1	F1
FN+2@	F2	F2
FN+3#	F3	F3
FN+4\$	F4	F4
FN+5%	F5	F5
FN+6^	F6	F6
FN+7&	F7	F7
FN+8*	F8	F8
FN+9(	F9	F9
FN+0)	F10	F10
FN+ _	F11	F11
FN+ =+	F12	F12

Windows

macOS

Fn+Q	My Computer	Brightness Down
Fn+W	E-mail	Brightness Up
Fn+E	Windows Search	Mission Control
Fn+R	Browser Home Page	Spotlight Search
Fn+T	Calculator	
Fn+Y	Media Player	
Fn+U	Previous Track	Previous Track
Fn+I	Play/Pause	Play/Pause
Fn+O	Next Track	Next Track
Fn+P	Mute	Mute
Fn+[	Volume Down	Volume Down
Fn+]	Volume Up	Volume Up
Fn+PGUP	Home	Home
Fn+PGDN	End	End

Windows

macOS

FN+[	Pause	Pause
FN+ESC		
FN+INS	Print Screen	Print Screen
FN+↑	Brightness Up	Brightness Up
FN+↓	Brightness Down	Brightness Down
FN+←	Backlight Speed Down	Backlight Speed Down
FN+→	Backlight Speed Up	Backlight Speed Up
FN+Shift (right)	Backlight Effect Switch	Backlight Effect Switch

Windows

macOS

FN+Enter	Backlight Switch Color	Backlight Switch Color
FN+L	Switching RGB LED strip backlight modes	Switching RGB LED strip backlight modes
FN+K	Switching indicator modes	Switching indicator modes
FN+B	Enable battery charge display mode on RGB LED strip	Enable battery charge display mode on RGB LED strip
FN + F (hold)	Pairing with the receiver	Pairing with the receiver
FN+M	macOS Layout	Windows Layout
FN+DEL (hold for 3 seconds)	Reset all settings to factory defaults	Reset all settings to factory defaults
FN+Win/Cmd	Win Lock	Cmd Lock

RESET SETTINGS

Want to reset your keyboard to factory settings? Hold FN + DEL for 3 seconds—the light bar will flash three times as confirmation.

IMPORT INFORMATION

Purpose of product: computer accessory

Connection: 1 x USB

Product material: plastic/metal/rubber

Used for: entering information into a personal computer

Please check with your local authorities for shipping regulations before shipping.

Manufacturer: Nubi LTD, Office 3906, 39th, The Center, 99 Queen's Road, Central, Hong Kong

Importer: EU Importer: FS-Holding Ltd. Profitli Ilias 4, Germasogeia, Limassol, Cyprus, 4046.

E-mail: care@fragstore.com. Tel: +35-725-26-01-66

UA Importer: ТОВ "ФС Дистрибушн" вул. Чавдар Єлизавети, будинок 13, Н/П 394А, 02072, Київ, Україна. E-mail: distribution@fs-d.com.ua. Tel: +38-044-592-4990

The importer is responsible for processing claims from buyers.

Made in China

Date of manufacture: indicated on the package

Serial number: indicated on the package

U.S. Responsible Party (FCC): MIRAMONT SOLUTIONS LLC, 19 GEORGETOWN, IRVINE, CA 92612, USA. FRN:0036313369. Phone: +1 (951) 401-3633, Contact Person: Wenyi Wang



FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.