

黑色Pantone Black C

蓝色Pantone 300C

 
单页尺寸:125*140mm, (八折页)展开尺寸1000*140mm

材质:128G双铜, 双面彩色印刷

Intelligent feeding and water purification machine

Instruction Manual

Video Version

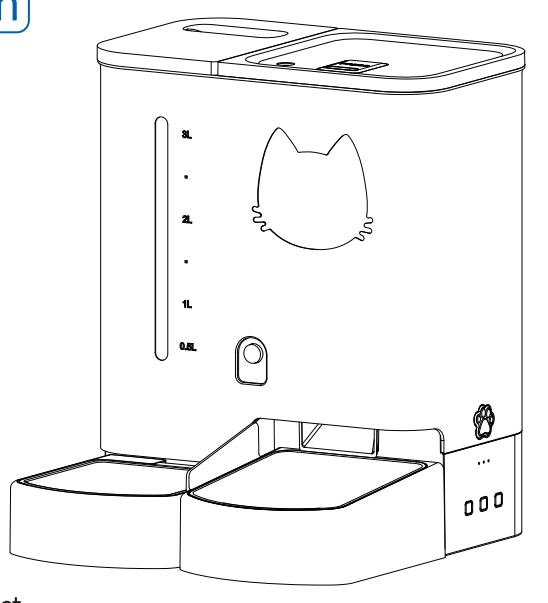

Before using the product, please read the user guide carefully.

Safety Instructions

- When children use this product, please use it under parental supervision.
- Do not place the product where pets cannot reach the food bowl or for pets with physical disabilities.
- Do not immerse the base part in water, as it may damage the control panel and other electronic components.
- Do not place any foreign objects in the product, as this may cause device malfunctions or pose a risk of pets ingesting them.
- Do not use wet food or pet food that has already spoiled inside the product.
- Do not disassemble or modify the product by yourself.
- If the product malfunctions or if there are damaged parts, do not attempt to repair the feeder yourself; please contact the dealer or customer service for assistance.
- Always unplug the power cord when not using the product or before cleaning it.
- If the power plug of this product is wet, please turn off the power to the outlet and do not attempt to unplug the power plug.


Precautions

- Do not allow pets to chew or swallow any accessories. If you are concerned about the power cord, please purchase a wire conduit (hard plastic protector) at a hardware store to protect the power cord.
- The normal operating ambient temperature for this device is 0°C-40°C; do not place the feeder in direct sunlight or in an environment with unsuitable temperatures.
- Please use alkaline batteries for power. Do not use rechargeable batteries.
- Please check the battery regularly. If you are traveling or on a business trip for an extended period, be sure to replace it with a new battery.
- Do not lift the feeder directly by the lid, grain bin, or food bowl. Use both hands to support the base while lifting and transporting, and keep the device in an upright position.
- Please use dry food with a size range of 3-16 millimeters. Avoid using food that is too large to prevent clogging or blockage at the food outlet.
- Please read and follow all important instructions listed on the feeder and packaging carefully.

Packing List

After opening the product packaging, please check if the pet feeder is intact and confirm that all accessories are complete against the list.

Main Unit

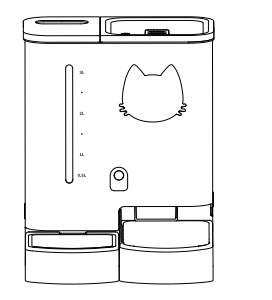

Accessories

1 Water bowl tray

2 Water bowl

3 Grain bin base

4 Grain bowl

5 Water Purifier Bucket

6 Sense light

7 Power Cord


8 Power Adapter

9 User guide


*To provide better products, we regularly improve them. If there are slight differences between the product images and actual items, please refer to the actual items.

Product Image

Exploded View

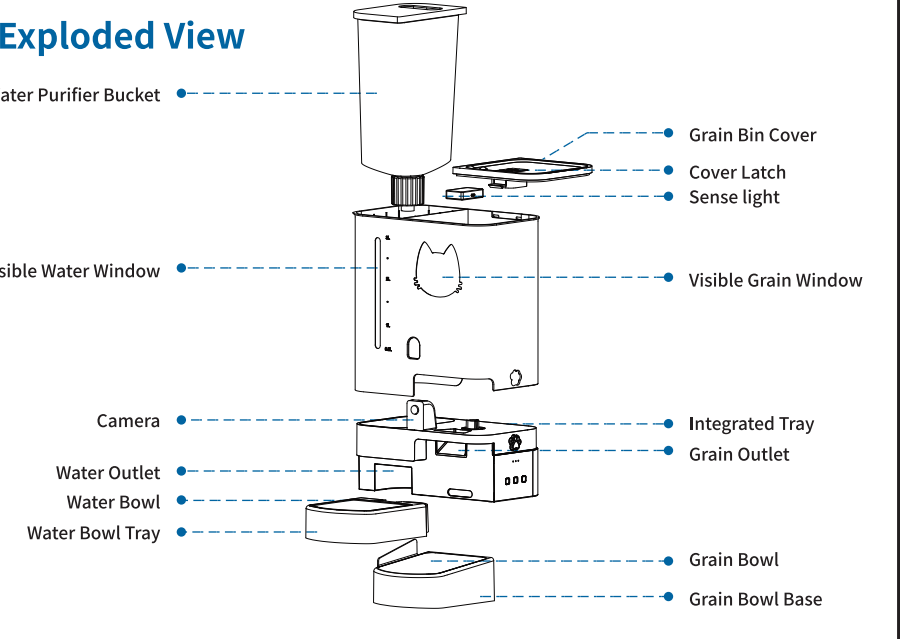

Bottom View

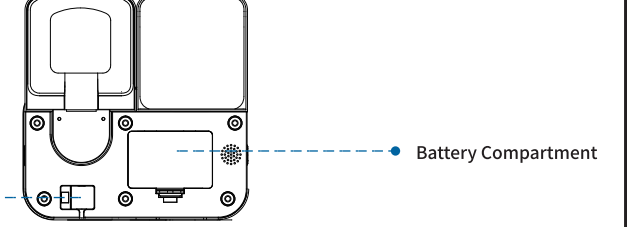 

Button description

15

35

65

15 Recording key: Press and hold for 1 second a "beep" sound indicates recording has started. Release the button, two "beep-beep" sounds indicate recording has ended. Short press again to play the recording. Maximum recording duration is 10 seconds.

35 Feeding key: Press it to dispense one serving of food, and it will play once when there is recording. Press the button for 30 seconds without operation, the button will be locked with a "deep" sound, press and hold the button again for 3 seconds and the button will be unlocked with two "deep" sound.

65 Reset key: Press and hold for 6 seconds a "deep" sound indicates the device has been reset. All network configuration, feeding records, and recording data will be cleared. Press and hold the **65** button in the unlocked state to restore factory settings. No buttons are operable when locked.

Notes:

- The key is automatically locked without operation for 30 seconds.
- Key use needs to be in key unlocked state to be effective.

Indicator light color	Indicator light signal	Device status
White	Flashing	In the process of network configuration
	Steady on	Network connection successful
Red	Flashing	Feeding Motor stall/Outlet blockage
	Steady on	Steady on Battery powered

Note: When the device malfunctions (low battery, motor jam, feed outlet blockage), the app will push abnormal alerts.

Installation sequence

- Take the food tray (including bowl) out of the grain bucket.
- The color box contains the water bowl tray (including bowl with holes).
- Place the feeder base on a level surface, and sequentially take out the water bowl and food tray to secure the base.

Notes:

- Please remove the camera protection cover before using the product.
- The protective cover can also be used as a privacy cover for the product. Please keep it properly after removal.

Installation of induction lights

- Take out the human body sensor light from the colored box.
- Remove the lid of the grain storage and locate the reserved hole position.
- Align the sensing head of the sensor light with the hole position and press it for assembly.

Note: When assembling, please pay attention to distinguishing the direction of the sensor head and the reserved hole to avoid assembly failure.

Specifications


Water bucket capacity: 4L
Food container capacity: 5L
Power: Type-C 5V/1A power adapter; 3 alkaline 1 batteries (batteries need to be purchased) (Power supply adapted to AC 110-240V input, 5V output)
Product weight: 2.88kg
Packaging dimensions: 32*20*45cm

Manufacturer: Yike Plastics & Mould Technology (Jiashan) Co., Ltd.
Factory Address: No. 208 Zhen guo Road, Jiashan County, Jiaxing City, Zhejiang Province
Service Phone: +86 573 84111683

Disassembly of the induction lamp

The sensor light can last for about 6 days when fully charged. When the light becomes dim, you need to remove the sensor light for charging.

When disassembling, be sure to use your fingers to press against one side and squeeze towards the opposite side while pulling it out upwards.

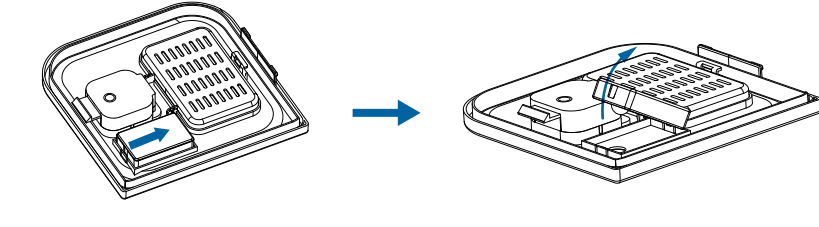


The side of the induction lamp has a Type-C charging port. It can be fully charged in approximately 40 minutes.

Maintenance Instructions

- To ensure the health of your pet, it is recommended to regularly clean the feeder.
- When there is scale in the water tank, the food container starts to get dirty, and there are many loose food particles in the food bowl, you can clean the product, the food cover, food container, water bucket, and food bowl can be directly disassembled and rinsed with clean water.
- The bottom electronic mainboard is not removable; please wipe it clean with a cloth or wet wipe.
- Please do not place the product in the dishwasher, as it will cause permanent damage!

Cleaning instructions

- Remove the clean water bucket.
- Open the lid and empty the grain bucket.
- Lift the bucket body while keeping the base still.
- Rinse in clean water or wash with food-grade cleaning agent, and air dry.
- The product base can be wiped with a damp cloth; do not rinse with water.

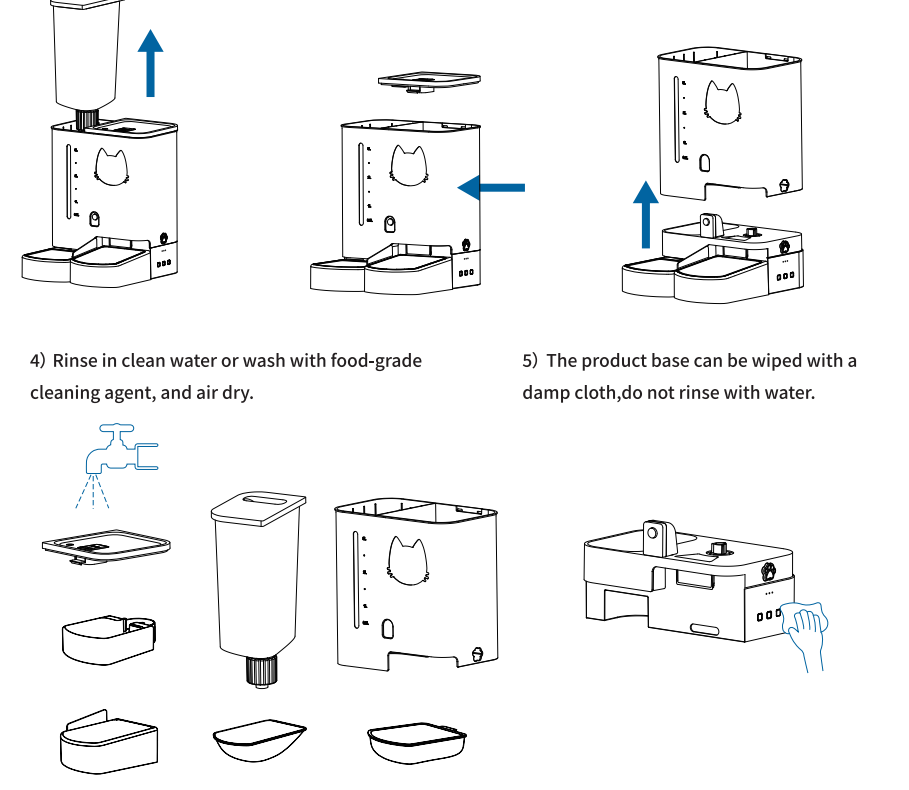

Instructions for Use

01 Assembly


Assembled according to the installation sequence.

02 Connect the power supply

- Insert the 5V/1A power adapter into the socket and connect the device properly.
- Open the battery compartment at the bottom of the device and install three AA alkaline batteries (optional) to prevent power loss.
- The LED lights up, indicating that the feeder is powered on.

Notes:

- The battery needs to be purchased separately.
- Before connecting the power supply, please ensure that all components are clean and completely dry.

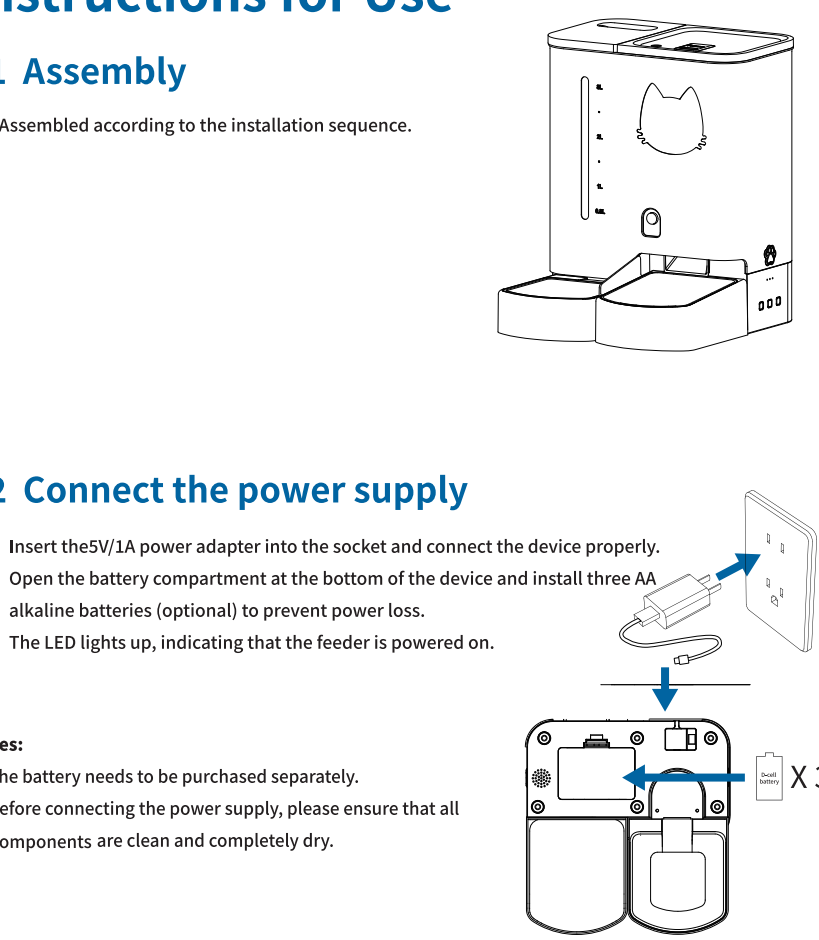


03 Adding Water and Pet Food

First, unscrew the food outlet cover, add clean water to the water storage tank on the left side, fill the food container with dry pet food, place the machine on a stable surface, and then cover the water storage tank.

Notes:

- Do not use canned, wet, or damp pet food.
- Please observe the water level window according to the number of pets and timely replenish sufficient clean water.

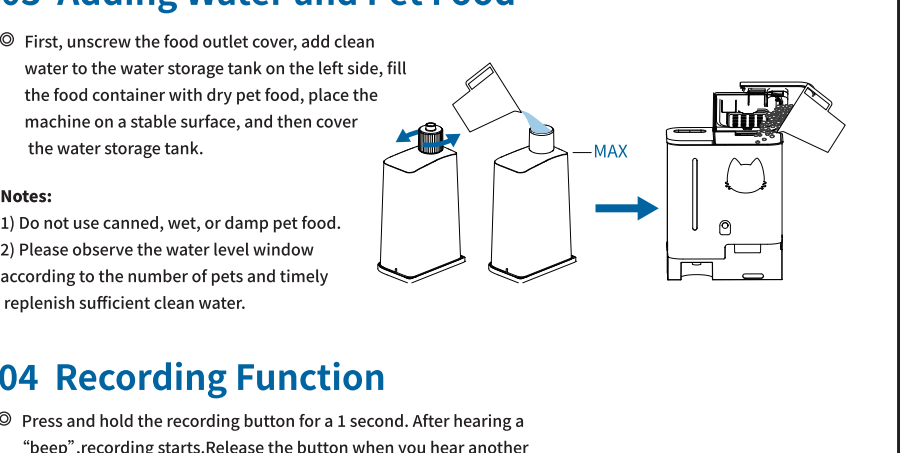


04 Recording Function

Press and hold the recording button for a 1 second. After hearing a "beep" recording starts. Release the button when you hear another "beep" to end the recording. The maximum recording duration is 10 seconds.

Notes:

- If a recording already exists, a short press of this button will play the recording once.
- After food is dispensed, a recording will be played to remind the pet to eat.

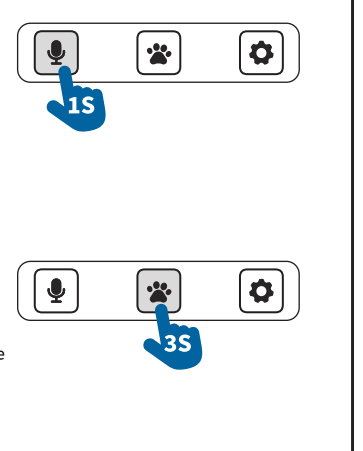


05 Lock/Unlock

If no button is operated for 30 seconds, the device will emit a "beep" and lock automatically. To unlock, press and hold this button again for 3 seconds until a long "beep" is heard.

Notes:


- In the locked state, all physical buttons are disabled. Unlock the device first to use it normally.
- The locked state does not affect normal operation via the APP.

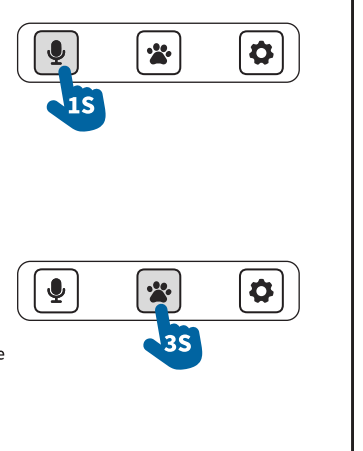

06 Feeding


Manual feeding: Short press once to dispense one portion of food. If a recording exists, it will play once after food is dispensed.

The feeding schedule will not be affected.

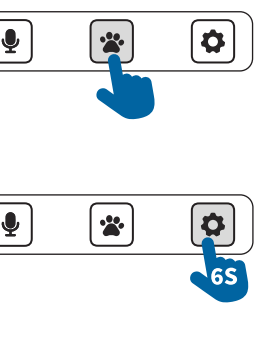

07 Reset

Press and hold for 6 seconds until a long "beep" is heard. The device will restore to factory settings, and all network configuration information, feeding schedules, and recording data will be cleared.

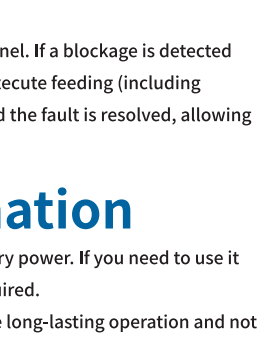

08 Fault Alarm

Blockage detection: Before feeding, the feeder will check the grain channel. If a blockage is detected in the grain channel, to avoid worsening the issue, the device will not execute feeding (including manual feeding and scheduled feeding) until the blockage is cleared and the fault is resolved, allowing the device to operate normally.


Low power mode explanation

- When the feeder is not connected to a power source, it defaults to battery power. If you need to use it without plugging it in, please ensure that the batteries are installed as required.
- When the feeder is powered by batteries, the power is limited. To ensure long-lasting operation and not affect feeding, the feeder will enter low power mode, which will not support remote operation via the app, but the scheduled feeding plans will continue to execute normally.
- If you need to use the app features, please connect the power cable and use it after successful network configuration.

Note: In low power mode, the scheduled feeding plans that have been set will continue to execute.

Downloading and operating the APP

- Scan the QR code to download the exclusive APP account and log in.
- Enter the homepage of the APP and add the device.
- Wait for automatic discovery and search for the corresponding device.
- Select the number of feedings, and click "Feed".
- Click on the video to watch the pets.
- Feeding plan up to 10 plans can be created.
- Select Wi-Fi and enter the password.
- Click "Test" and please wait patiently while the connection is being established.
- Click on the connected machine and enter the homepage.
- Feeding record.
- Product information.
- Shared devices.

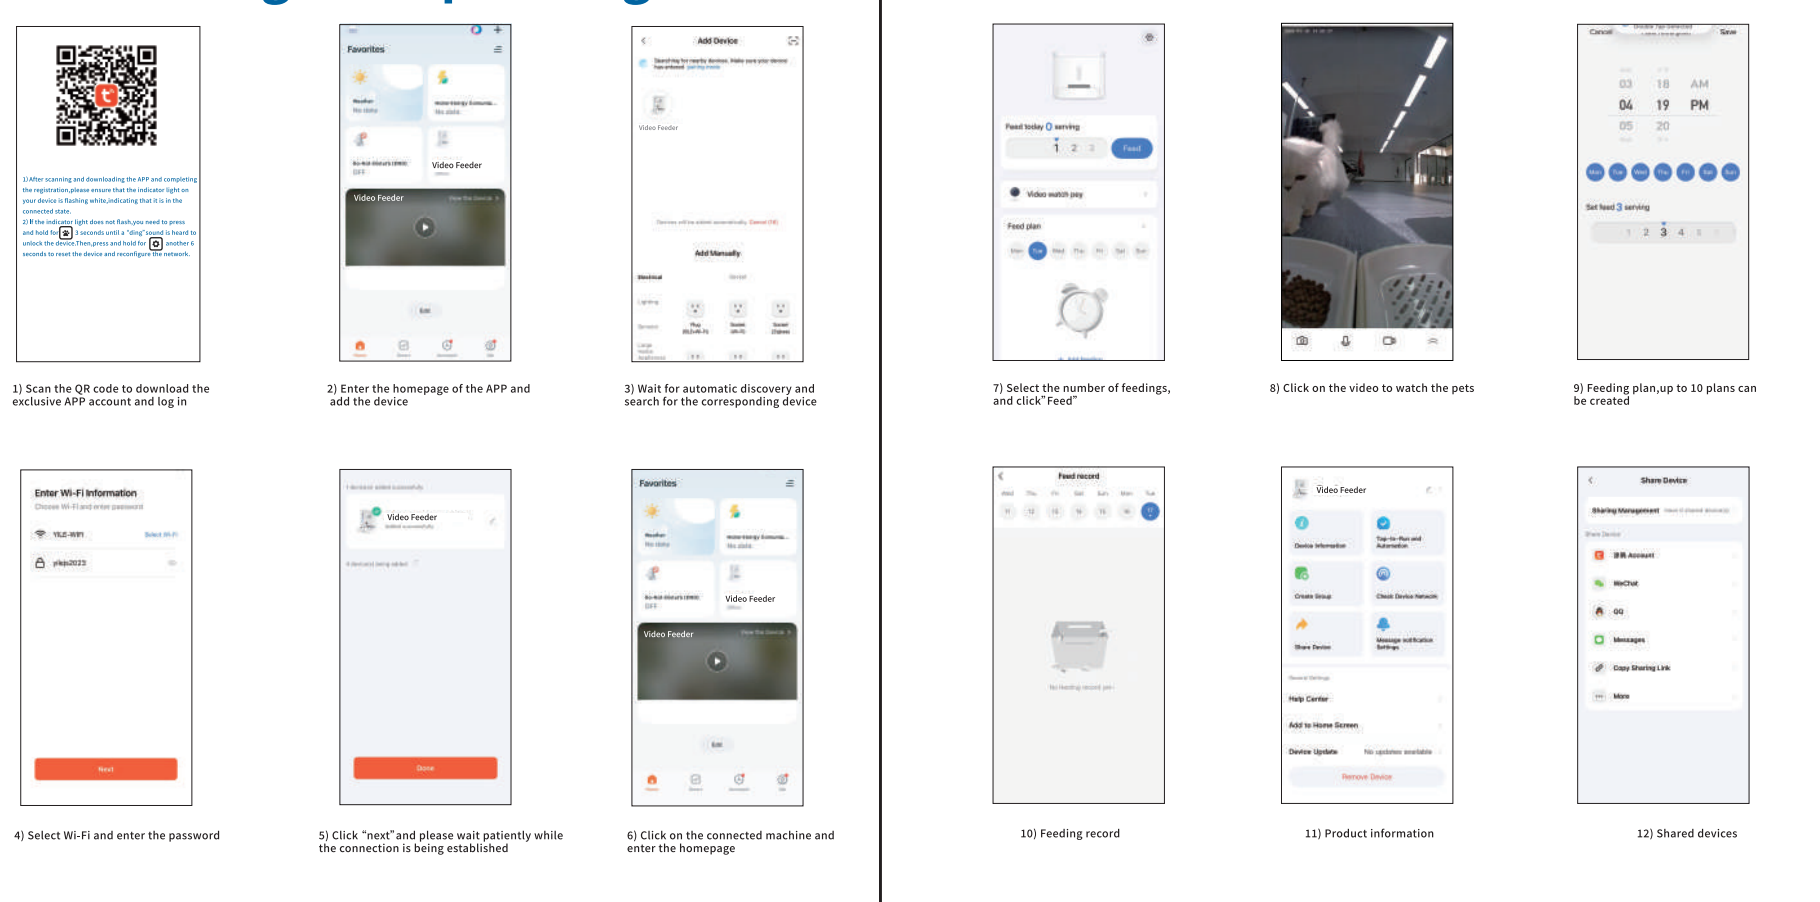

Simple Troubleshooting

Problem Solutions

Q: I press any button and there is no response.
A: The buttons will automatically lock after being inactive for a few seconds. Please press and hold for a few seconds to unlock the buttons.

Q: The app cannot connect to the feeder.
A: Please check if the Wi-Fi name and password contain Chinese characters or exceed the length limit. Please restart your phone, close any non-system software that starts automatically on boot, turn on Bluetooth and location services, and try reconnecting.

Q: The feeder is not dispensing food accurately or not dispensing food at all.
A: Please check if there is too much food in the bowl or if the food passage is blocked. If so, please clean the food passage and the dispensing outlet in a timely manner; if powered by batteries, please check if the batteries are dead or leaking.

Q: The feeder shows offline.
A: Please check if the feeder is more than 30 meters away from the home router (effective distance is 50 meters); try to avoid walls in between, as Wi-Fi signals can drop sharply when obstructed by walls, leading to unstable connections and causing the device to go offline.

Q: No response when powered on.
A: Please ensure the power is properly connected. If everything checks out and the device still does not power on, please contact the dealer or customer service promptly.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.