 


Drum Kit

Trendy • Cool • Somatosensory

 
 
 
NO.K100
General User Guide for Basic Edition, Full-featured Edition
and Professional Edition

Packing List

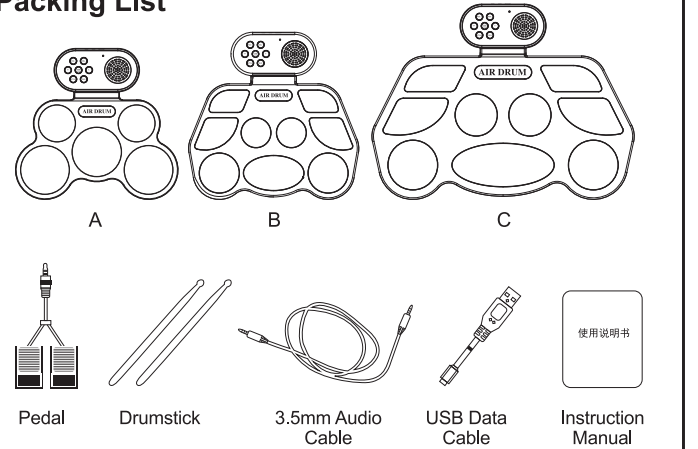


Product Introduction

Product Main
Body Diagram:

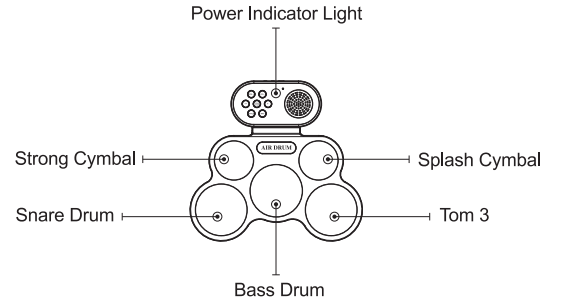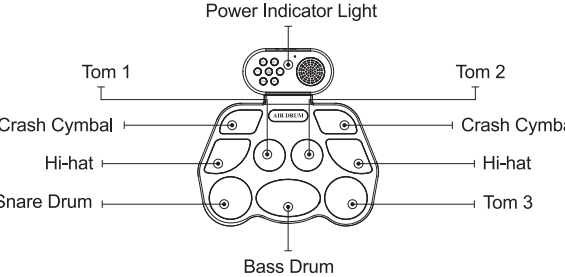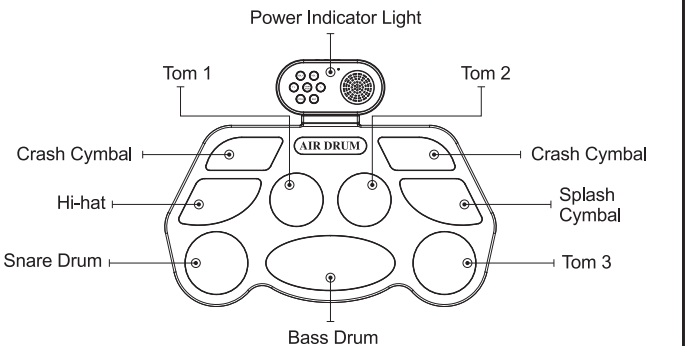


Product Introduction

 Key Instruction Diagram:

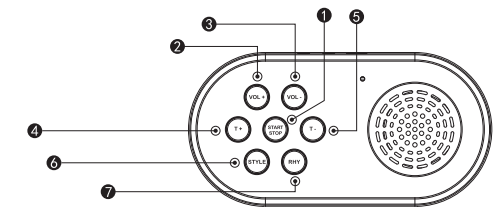

Interface Description Diagram:

 

No. / SN	Name	Function Description
1	ON/OFF	Press and hold for 3 seconds, A prompt tone "Power on" indicates the device is turned on. Press and hold for 3 seconds, A prompt tone "Power off" indicates the device is turned off. When the accompaniment is playing, a short press starts/pauses the accompaniment.
2	VOL+	Control Volume +
3	VOL-	Control Volume -
4	T+	Control the fast tempo of the accompaniment
5	T-	Control the tempo of the accompaniment
6	STYLE	A short press allows cyclic switching between drum kits.
7	RHY	A short press enables cycle playback of the accompaniment.
8	DC5V	Charging port, compatible with power adapters and portable chargers for charging.
9		Connect Headphones or Speakers
10		Pedal Interface (Bass Drum & Hi-Hat)

Note: This product is equipped with a sleep mode. If no operation is performed within 15 minutes, it will automatically enter sleep mode. To use the product again, press the power button to activate it.

Basic Parameters

Model: K100
External pedal: Supported
Battery life: Approximately 2.5 hours
Weight: 680 g
Standards:GB 6675.1-2014 GB 6675.2-2014 GB 6675.3-2014 GB 6675.4-2014 GB 19865-2005


Specification: 5 drums, 4 cymbals
Connection: Bluetooth
Dimensions: 310×420×39 mm
Suitable age: Above 6 years old

Function Description

This section contains relevant information about product usage methods and performance preparation. Please read this section carefully before starting to use the product.

Power Supply

In addition to battery power supply, you can also use a power adapter for direct power supply, or use the power adapter to charge the lithium battery.

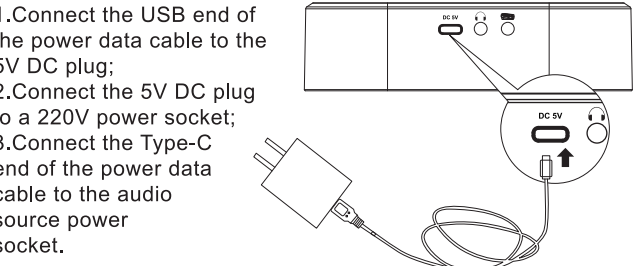

External Connection

• Connect the Pedal
This product supports one hi-hat pedal and one bass drum pedal. Connect the pedals to upgrade your drumming experience.

Note: When the pedal is not connected, the hi-hat pad defaults to the closed-hat sound. When the pedal is connected, the hi-hat pad defaults to the open-hat sound; pressing the pedal while striking the hi-hat pad will produce the closed-hat sound.

• Connect Headphones
When headphones are plugged into the jack, the speaker will be automatically cut off, and the drum sound can only be heard through the headphones.

APP Download & Usage

Here is the accurate, natural English translation:For other systems such as Huawei, use the browser to search www.dtxlite.com to download the software for Android and iPhone.Computers and tablets can download the software via WeChat QR code. Connect the device via your phone's Bluetooth, open the APP game interface, select your favorite music, and you can start playing.Let playing bring you endless fun and fully enjoy the joy of music.

• Bluetooth Connection



Troubleshooting

Fault Phenomena	Fault Causes	Solutions
The power indicator does not light up	Low battery	Please plug in the power adapter for charging
The audio system produces no sound	The audio system is muted or has low battery power	Increase volume or charge the device
Bluetooth connection failed	The mobile phone is out of range or has low battery power	Approach the electronic drum or charge the device
The foot pedal has no response	The plug is not fully inserted Connected to the wrong jack	Push it fully into place and then give it a twist. Check if the plug is inserted into the correct jack.
The earphones produce no sound	The plug is not fully inserted Connected to the wrong jack	Push it fully into position and then give it a twist. Check that the plug is inserted into the correct jack.

Caution:

- If the battery pack overheats, do not charge it. Wait until it cools down before recharging.
- If the battery pack shows signs of leakage or corrosion, do not attempt to use it or charge it.
- Do not squeeze or disassemble the battery pack.
- Handle overheated battery packs with caution.
- If the battery pack or charger is wet, ensure it is completely dry before charging.
- Do not dispose of the battery pack in fire.

Attention for Adults:

- Rechargeable battery packs should only be charged by adults.
- Periodically inspect the product's plug, housing, or other components for damage that may cause fire, electric shock, or injury hazards. If the product is damaged, do not use it.
- Periodically inspect the charging cable, housing, or other components for damage that may cause fire, electric shock, or injury hazards. If the charging cable is damaged, do not use it.
- The charging cable is not a toy.

Battery Disposal:

Unlike NiCd (nickel-cadmium) rechargeable batteries, your ultra-fast charging (lithium-ion) battery pack does not require special disposal procedures or precautions. However, like all products, you should dispose of the battery pack in an environmentally friendly and appropriate manner.
Note: This product contains a lithium-ion battery that requires charging and use within an environment of 0-40°C. Do not use it in high-temperature or extremely cold environments.

About Water Resistance

This product is not water-resistant. During use and storage, please protect it from water and moisture.

Performance Malfunction List

Product	Performance Malfunction
Main Unit with Electronic Components	The functions listed in the manual are disabled
	Cannot power on and fails to connect normally
	Abnormal Shutdown
	Key Failure
Data Cable	The indicator light does not illuminate
	Cannot work normally

After-sales Guarantee

Service Rights and Interests:

•Return Service
Within 7 days from the date of purchase, if the product develops non-human-induced performance malfunctions that comply with the Performance Malfunction List, customers may opt for repair, replacement with a brand-new full set of the same model and specification, or return of the product, subject to the inspection and confirmation by the Hershey After-sales Service Center. To process a return, customers shall bring the complete product set to the seller's location. A full refund of the purchase price will be made in one lump sum, and the seller shall be responsible for all specific refund-related matters.
•Replacement Service
Within 15 days from the date of purchase, if the product develops non-human-induced performance malfunctions that comply with the Performance Malfunction List, the customer may opt for repair or replacement with a brand-new unit of the same model and specification, upon inspection and confirmation by the Hershey After-sales Service Center. The replacement can be processed either at the seller's location or by sending the product to the Hershey After-sales Service Center.
•Warranty Service
Within one year from the date of purchase, if the product develops non-human-induced performance malfunctions that comply with the Performance Malfunction List, the Hershey After-sales Service Center will provide customers with free warranty service upon inspection and confirmation. Important Reminder: For product return or replacement, please be sure to provide the complete product set, including the full packaging box, main unit, all its spare parts and accessories, as well as free gifts (if any).

FCC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.