 


120*170mm

Portable CD Player User Manual

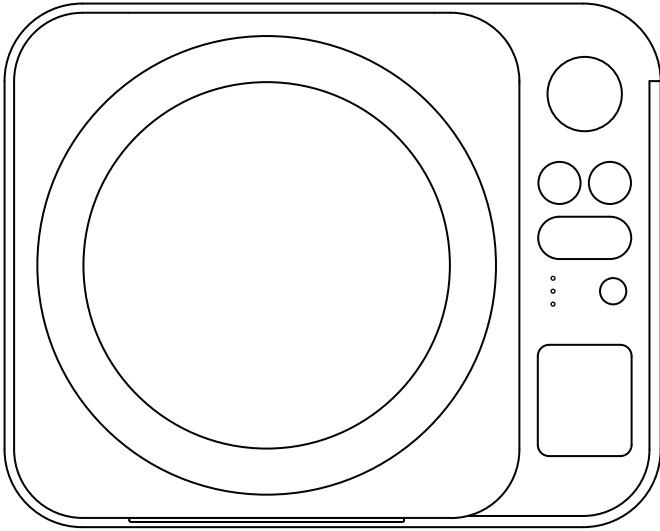

English
Mode No.: X3-B

100% Customer satisfaction guarantee

Customer experiences may vary, But We are dedicated to ensuring your satisfaction. If you experience any issues, please contact us at the email provided, and we'll promptly resolve them to your satisfaction.

1. Received a Used Product

If Amazon mistakenly delivers a used product, please provide your order number and shipping address. We will ship a new replacement immediately.

2.Defective or Missing Accessories

If your product arrives defective or with missing accessories, we'll send a replacement within 24 hours at no additional cost.

3.Damage within one Year

If your device is damaged during use within one year of purchase, we'll send a free replacement within 24 hours.

4.Satisfaction Guaranteed

If you're dissatisfied for any reason, such as style, a description mismatch, or a change of mind, you can request a quicker refund directly from us than through Amazon.

5.Dedicated customer support

For any concerns or issues, let us know, We resolve most problems within 24 hours.

Reach out to us, it's easy!
support@nasvvox.com

5.Playback Mode Instructions

5.1 CD Mode

* Note: CD format support: CD-R,CD-RM,MP3,WMA.
Press the "Mode" button on the CD player or the remote to switch to CD mode, The CD indicator will stay lit in white. The CD will start spinning. After approximately 10-15s of reading, music playback will begin automatically.

5.2 USB Mode

Plug in U-disk to the CD Player USB port, Press the "Mode" button the CD player or the remote control to switch to USB mode. The USB indicator will stay on in orange. The device would automatically read files from USB flash drive.

5.3 Bluetooth Mode

How to activate: Press the "Mode" button on the device or on the remote control to switch to the Bluetooth Mode. The Bluetooth indicator will flash in blue.

5.3.1 .BT Receive Mode

Pairing steps:

1. Turn on Bluetooth in your phone/tablet settings.
2. Search for and select "[CD Player]" to pair.
3. Successful pairing is confirmed when the Bluetooth indicator stays lit in Blue (You will hear a 'ding').

5.3.2 .BT Transmit Mode (ONLY WORKS with CD Mode!)

How to activate:

In the CD Mode, press and hold the "Play/Pause" button for 3 seconds, and the CD indicator will stay lit, and the Bluetooth indicator flashes, and it enters pairing mode. Successful

Table of Contents



1. Before Use	03
2.Product Preview	03
3.Remote Control Panel	05
4.Controls & Functions	06
4.1 How to Power ON	06
4.2 How to Power OFF	06
4.3 How to Play CD	06
4.4 How to Skip to Preview Song	06
4.5 How to Skip to Next Song	06
4.6 How to Rewind	07
4.7 How to Fast Forward	07
4.8 How to Adjust Volume	07
4.9 How to Pause / Resume Playback	07
5.Playback Mode Instructions	08
5.1 CD Mode	08
5.2 USB Mode	08
5.3 Bluetooth Mode	08
5.3.1 .BT Receive Mode	08
5.3.2 .BT Transmit Mode (ONLY WORKS with CD Mode!)	08
5.4 AUX Mode	09
5.5 Direct Track Access	09
5.6 Single Cycle	09
6.Maintenance	10
7.Quick Troubleshooting	10
8.Specifications	11
9.Packing List	12

1. Before Use

Thank you for purchasing the Portable CD Player. This manual contains important instructions for the safe and proper operation of your device. Please read this manual carefully before use and keep it for future reference.


This portable CD player is engineered to deliver high-quality audio playback across various CD formats, combining excellent sound performance with convenient portability for your everyday listening enjoyment.

  2.Product Preview

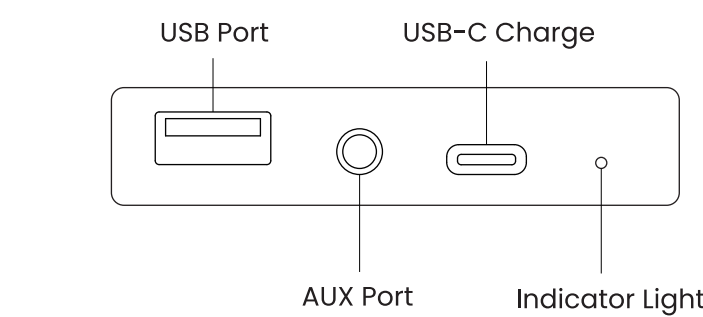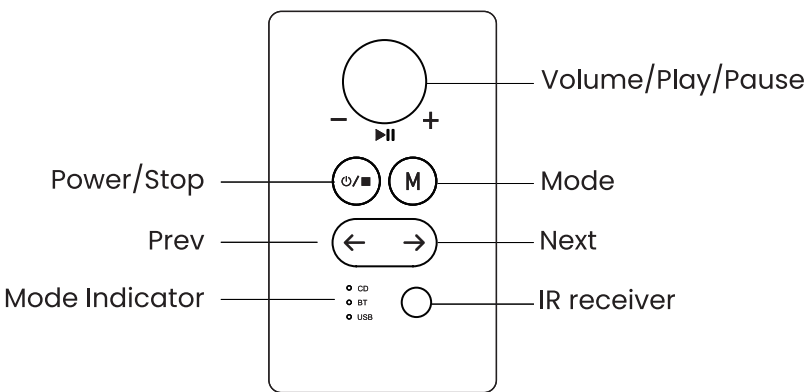

Power/Stop	Power ON/Power OFF; Stop playback
Prev	Press to skip to the previous track.
Next	Press to skip to the next track.
Mode	Select playback mode(e.g., CD Mode , BT Mode, USB Mode)
Mode Indicator	Shows the current mode
Volume/Play/Pause	Rotate left/right to adjust volume, Press to play or pause playback
IR Receiver	Receives infrared signals from the remote control.
USB-C Charge	For power supply and charging the device
Indicator Light	Shows power, charging and working status
AUX Port	3.5mm auxiliary audio input / output port
USB Port	Supports USB flash drive playback

 3.Remote Control Panel

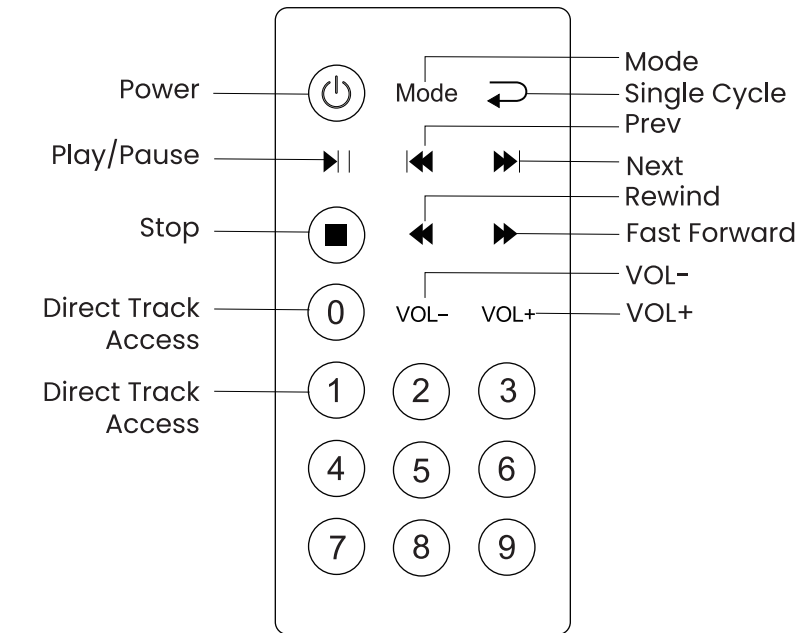

Power	Press to power the device on or off
Play/Pause	Play music/ Pause music
Stop	Stops playback
Mode	To switch playback mode
Single Cycle	Play the current track repeatedly
Prev	Press to skip to the previous track
Next	Press to skip to the next track
Rewind	Rewind playback / Go back to the previous part of the track
Fast Forward	Fast forward playback / Skip ahead to the later part of the track
VOL+	Press to increase volume

VOL-	Press to decrease volume
Direct Track Access	Select a specific track directly using the number buttons

4.Controls & Functions

4.1 How to Power ON

Press and hold the "Power" button on the CD player for 3 seconds to turn on.

4.2 How to Power OFF

While the unit is on, press and hold the "Power" button on the CD player or the remote control for 3 seconds to turn off.

4.3 How to Play CD

Prepare a CD and place it on the CD tray. Press and hold the "Power" button for 3s to power on the unit, and press the "Mode" button to select the CD mode with CD indicator. The CD will start spinning. After approximately 10-15s of reading, music playback will begin automatically.

4.4 How to Skip to Preview Song

In playback mode, press the "Prev" button on the CD player or the remote control once to skip to the previous track.

4.5 How to Skip to Next Song

In playback mode, press the "Next" button on the CD player or the remote control once to skip to the next track.

4.6 How to Rewind

In playback mode, hold down the "Rewind" button on the remote control to rewind.

4.7 How to Fast Forward

In playback mode, hold down the "Fast Forward" button the remote control to fast forward.

4.8 How to Adjust Volume

Turn the "Volume +/Volume -/Play/Pause" button to the left to decrease the volume, or to the right to increase the volume. Or adjust volume via the or the "VOL+/VOL-" on the remote control.

4.9 How to Pause / Resume Playback

Pause: During playback, press the "Volume+/ Volume-/ Play/Pause" on the CD player or the "Play/Pause" on the remote control once to pause playback.
Resume Playback: While paused, press the "Volume+/ Volume-/ Play/Pause" on the CD player or the "Play/Pause" on the remote control once to resume playback.

6.Maintenance

1. Please remove the protect paper from the Player before turning it on, otherwise, it will damage device!
2. Do not place stickers or write anything on the disc.
3. Never touch the laser of the device. Always use the dust cover to prevent dust from collecting on the laser.
4. If the device is unable to scan discs properly, use a standard cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.

7.Quick Troubleshooting

Malfunction	Possible reason	Solution
Device not work	Device is out of power	Please charge it
Can not play	Disk not properly placed	Place the disk again
	Incompatibility issue	Replace to other compatible disk
No sound	Device battery is low	Please charge or connect to power
	Low volume	Volume up
Sound stuttering	Disk or laser lenses get dirty	Clean disk or laser
	Disk got scratched or curved	Replace the disk
Remote not work	The remote is out of power	Check the remote battery
	Angle too large	Make sure remote is facing CD player
	Distance too far	Make sure remote is within 5 meters

8.Specifications

Name	Portable CD Player
Model	X3-B
Speaker	4Ω-3W
Rated Power	8W
Bluetooth	BT 5.1
Input Voltage	5V-2A
Interface	USB,3.5MM,USB-C
CD Format Support	CD-R,CD-RW,MP3,WMA

9.Packing List

CD Player x 1	Remote Control x 1
Quick Manual x1	User Manual x 1
USB-C Charge Cable x 1	

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).