


Warranty Card

Customer Name		Phone	
Address			
User ID		Order Number	
Product Model		Purchase Store	
Purchase Date		Service Center	
Service Records			
Date	Fault Reason	Resolution	

Product installation and use problems, please contact us

After-sales
e-mail: janonneng@outlook.com

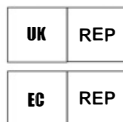

SEASAA LIMITED
5 South Charlotte Street, EH2 4AN
United Kingdom

EC REP SERVICES SL
C/GRAN VIA 49, 7 DCH , 28013 MADRID (SPAIN)



RoHS



Shenzhen Jianeng Electronic Equipment Co., Ltd.
Address: 1 # B401, Xincanghai, Shatian Community, Kengzi
Street, Shenzhen, Guangdong, China
Hotline: 0086-0755-27187811

Aoeeki

Retail Anti-Theft System

Product User Manual




RF-003B

0086-0755-27187811

If there are any issues with the product,
please contact us immediately.

Installation Steps

1. Situate the security door at the predetermined installation spot. Take off the bottom cover panel of the security door.

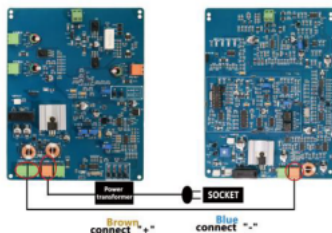

2. Insert one end of the connection cable into the main unit's port and the other end into the secondary unit's port, then connect the power cable at the rear of the main unit to a power outlet.



Product installation and use problems, please contact us

test if they are working properly.

4. After testing, secure the gates with screws or adhesive, then cover and tighten the base cover.

Warranty

Dear Customer,

Thank you for purchasing our product. To better serve you, please read, fill out, and keep this warranty card carefully after purchasing the product.

Warranty Terms

1. Please keep this warranty card safe as proof for repairs
2. The product is covered by a warranty for 1 years from the date of purchase.
3. During the warranty period, under normal use and maintenance conditions, if the motherboard encounters a problem or a fault is confirmed upon inspection, we will provide free repairs and replacement of parts.
4. The company reserves the right to refuse service or charge material and service fees in the following cases during the warranty period:
 - ① Failure to provide this warranty card and valid proof of purchase.
 - ② Malfunctions or damages caused by improper use
 - ③ Damage caused by abnormal external force.
 - ④ Damage caused by unauthorized repair or disassembly by non-authorized personnel.
 - ⑤ Malfunctions or damages caused by natural disasters or other force majeure events.
 - ⑥ Other deliberate damages caused by human actions.
5. The company reserves the right to amend and interpret all content in this warranty.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.