

ASSEMBLY INSTRUCTIONS

Pre-Lighted Artificial Christmas Tree



Model : DC2ATCRF

- Flame-retardant, natural looking tree
- Please read all instruction before assembly
- Please save this instructions

INSTRUCTION MANUAL

FOR UL LIGHTING STRINGS

IMPORTANT SAFETY INSTRUCTIONS

If you intend to use electrical Bulbs, basic precautions should always be followed including the following.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- A) Do not power up if you place the tree outdoor.
- B) This seasonal use product is not intended for permanent installation or use.
- C) Do not mount or place near gas or electric heaters, fireplaceS. candles or other similar sources of heat.
- D)Do not secure the wiring of the product with staples or nails or place on sharp hooks or nails.
- E) Do not let lamps rest on the supply cord or on any wire.
- F) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- G) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electricshock, make sure that small children can not reach their plug.
- H) Do not hang ornaments or other objects from cord, wire, or light string
- 1) Read and follow all instructions that are on the product or provided with the product.
- J) When not in use, store neatly in a cool,dry location protecteed from sunlight.

THIS PRODUCT MAY CONTAIN FLOCKING POWDER

For flocked trees, assemble this product outside or on a disposable surface for easy cleanup. Keep out of reach of children and pets if possible. Avoid contact with the face eyes, and mouth. Wash affected areas thoroughly in case of accidental exposure.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.




This instruction applies to the 4.5-foot, 6&6.5-foot, 7&7.5-foot, or 9&10-foot variation of the tree





HARDWARE

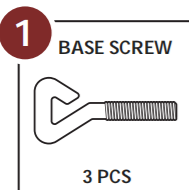

PACKAGE CONTENTS

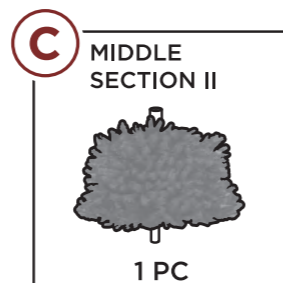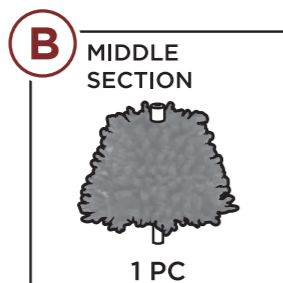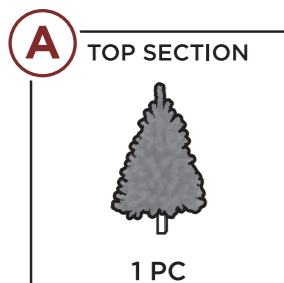

FOR 9FT/10FT TREE

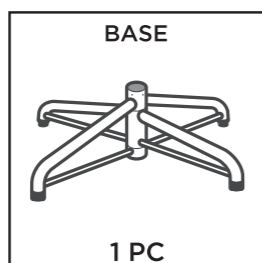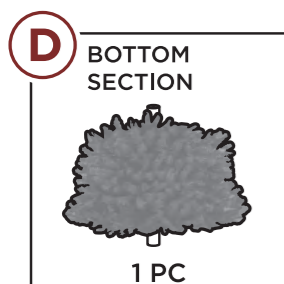

NOTE: Wires may come wrapped around frame pieces. Locate and unwrap wires before assembly.



TYPE A



TYPE B


This manual includes two assemblies for two tree types A & B. TYPE A uses an internal power plug system, while TYPE B uses an internal plug system. Identify your tree type before proceeding to assembly.

FLUFFING INSTRUCTIONS


For an optimum appearance and satisfaction, this product **MUST** be fluffed according to the following directions.

NOTE: Start from the interior and work outward.


- 1** Find the innermost branch tips and open them in a "V" shape.

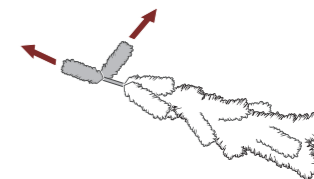


- 2** Open the next set of (3) branch tips with pointing outward, and one pointing up.

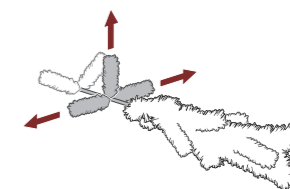

- 3** Open the next set of (4) branch tips with two pointing outward, and two in a wide "V" shape.

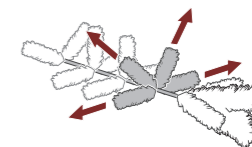

- 4** Open the next set of (5) branch tips in a five-pointed "Star" shape.

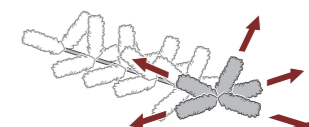

CLEANING & STORAGE

- Store this tree in a cool and dry place away from heat and moisture.
- Before putting this tree in storage, do the following:
 - Completely remove all decorations.
 - Clean the tree with a slightly damp cloth and let it dry naturally.
 - Raise all branches to original upright position; make sure not to damage any branches in the process.

TYPE B PRODUCT ASSEMBLY

2 INSERT PLUG INTO A WALL OUTLET. PRESS THE PEDAL SWITCH TO TOGGLE LIGHTS ON/OFF.

NOTE: Branches come spread out and maintain their shape. Lights are powered through connectors in the pole; make sure they are properly joined.



4.5FT TREE


 
6FT & 6.5FT & 7.5FT TREE

9FT & 10FT TREE

TYPE A PRODUCT ASSEMBLY

1 ASSEMBLE THE TREE.

NOTE: Bottom section is wider than the middle section. Make sure sections are arranged in the correct order.

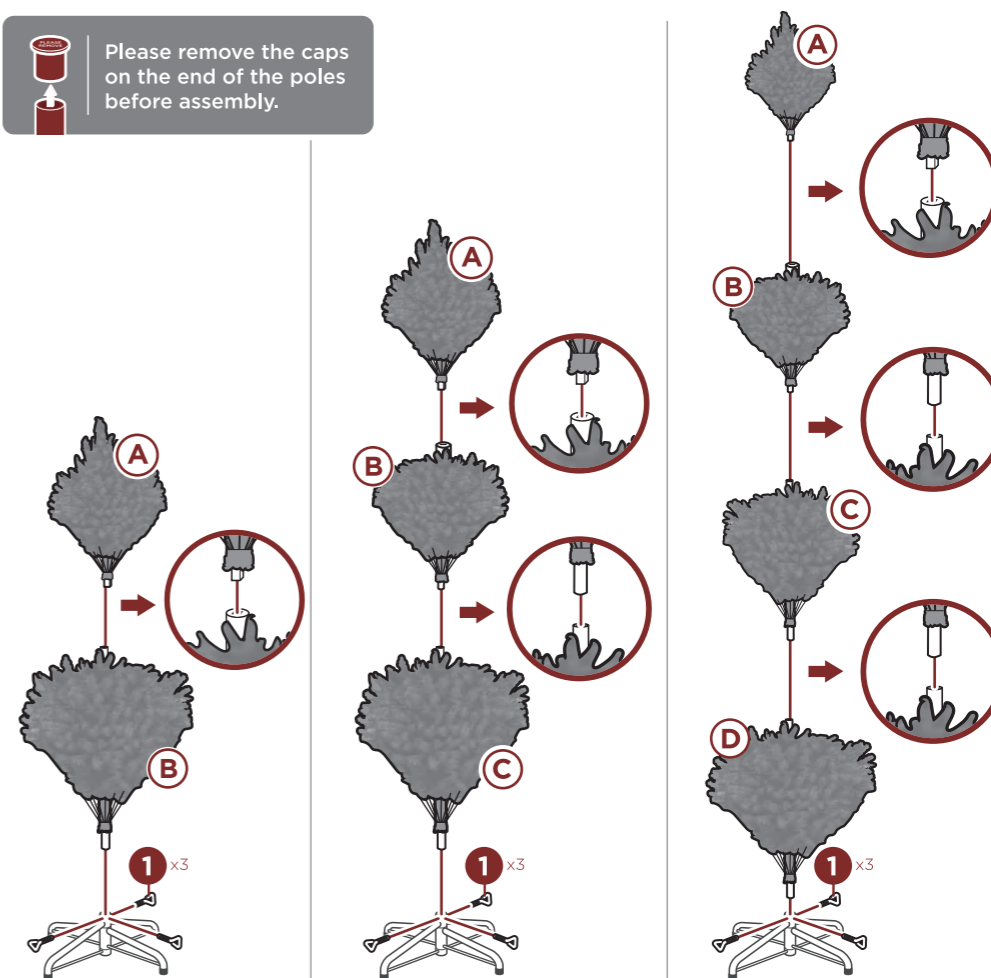

4.5FT TREE

6FT & 6.5FT & 7.5FT TREE

9FT & 10FT TREE

TYPE A PRODUCT ASSEMBLY

2 CONNECT ALL THE CORRESPONDING PLUGS.

Spread out the branches and arrange them to your preference.

Insert the bottom plug into a wall outlet to turn the lights on.

NOTE: Spare bulbs may be included and are attached to the plugs.



4.5FT TREE

6FT & 6.5FT & 7.5FT TREE

9FT & 10FT TREE

TYPE B PRODUCT ASSEMBLY

1 ASSEMBLE THE TREE BY INSERTING THE CORRESPONDING CONNECTORS ON EACH SECTIONS.

NOTE: Bottom section is wider than the middle section.

Make sure sections are arranged in the correct order.



4.5FT TREE

6FT & 6.5FT & 7.5FT TREE

9FT & 10FT TREE

User Manual for Remote Control

Button	Function List
ON	Switch the light ON
TIMER OFF	Turn off the timer function.
OFF	Switch the light OFF
6H	6 Hours ON / 18 Hours OFF
8H	8 Hours ON / 16 Hours OFF
6639H	6H ON/ 6H OFF /3H ON /9H OFF
1	COMB-Auto Cycle
2	C1 Steady ON —Warm White Static Light
3	C2 Steady ON —RGB Static Light
4	C1 Mixture —Warm White & RGB Mixed Light
5	C2 Mixture —RGB & Warm White Mixed Light
6	SLO-GLO —Mixed Color Gradient
7	Breathing —Breathing Flash
8	C1 SLO-GLO —Warm White Slow Flash
9	C2 SLO-GLO —RGB Slow Flash
10	FLASH —Alternating Flash of RGB & Warm White
11	In Wave —Forward Wave Effect
DIM (-)	Reduce brightness
DIM (+)	Increase brightness
	Four adjustable brightness levels: 100% / 75% / 50% / 25%



Operation Guide

- 1.Press ON to turn on the light; press OFF to turn off the light.
 - 2.Press number keys 1– 11 to select your preferred lighting effect directly.
 - 3.Adjust brightness by pressing DIM " -" or " +".
 - 4.Press 6H / 8H / 6639H to activate the automatic cycle timing function.
- Timing starts counting immediately after the timer button is pressed.

Notice

- 1.Please point the remote transmitter to the receiver of the light to ensure stable signal reception.
- 2.Avoid strong direct sunlight aiming at the light receiver, which may interfere with remote signal.
- 3.Remove the battery if the remote will not be used for a long time.
- 4.Keep button batteries out of reach of children.

ASSEMBLY INSTRUCTIONS

Pre-Lighted Artificial Christmas Tree



Model :DC2ATCRF

- Flame-retardant, natural looking tree
- Please read all instruction before assembly
- Please save this instructions