

User Manual

Safety Instructions

- Do not switch on or operate the unit before you have read the instruction manual.
- Do not look into the lens directly——this can cause eye damage.
- Do not let children get close to the projector as they may look into the lens directly.
- Do not turn on the projector before connecting with other components.
- Do not attempt to disassemble the machine, if the disassembly of the safety risks, will not be responsible.
- Do not cover the surroundings of the projector with soft materials such as blankets, and it is recommended to place the device on a table for use.
- Do not use the projector in a wet environment, do not place liquids on or close to the projector. Please pull out the power plug from the wall plug if the projector overheats and smoke appears.
- Do not block the air inlet and ensure the projector is placed in a well-ventilated location.

Interface Description

- **RESET:** The Reset key is used to reset to default settings or factory settings to fix device or system issues.
- **USB:** Open and access files from the connected USB Device in the file manager and media center.
- **HDMI IN:** Display the picture of laptop or TVBOX through HDMI-IN.
- **TF:** The hardware interface used to read and write the TF.
- **AUX:** Connect the 3.5mm audio device for audio output.

Remote Control

 
	Home
	Settings
	Menu
	HDMI

Contents


Navigation	4	Bluetooth.....	8
Language	4	Projector	9
Calibration page.....	4	Background	11
Time	5	Language.....	11
Wi-Fi	5	Time.....	11
Background.....	5	About.....	12
Android Desk.....	6	More.....	12
Menu bar.....	6	Screen Mirroring & Casting	13
My Apps	6	AirPin.....	13
App list.....	6	ApowerMirror	13
Uninstalling apps	7	DLNA.....	13
File Manager.....	7	MiracastReceiver.....	14
Screen Mirroring	7	Common Troubleshooting Methods.....	15
Projection Settings	7	Disclaimers	15
System Settings	8		
Network.....	8		

Navigation


Language: Select the language you need.

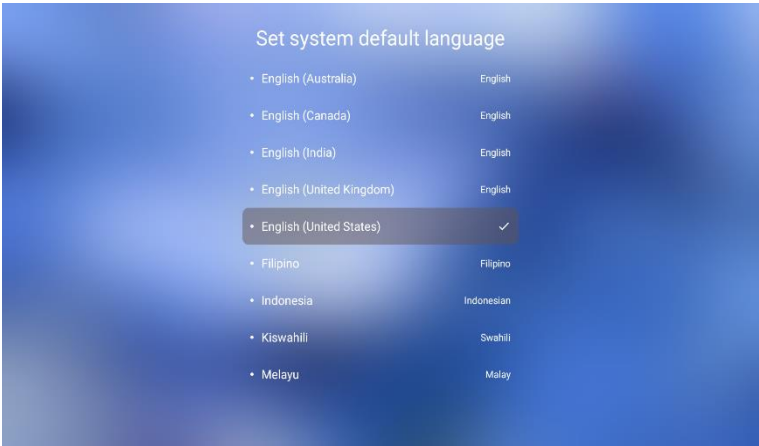

 
Manual Correction: Use the remote's UP / DOWN buttons to tilt the image, press OK to adjust the four corners, press MENU to reset.

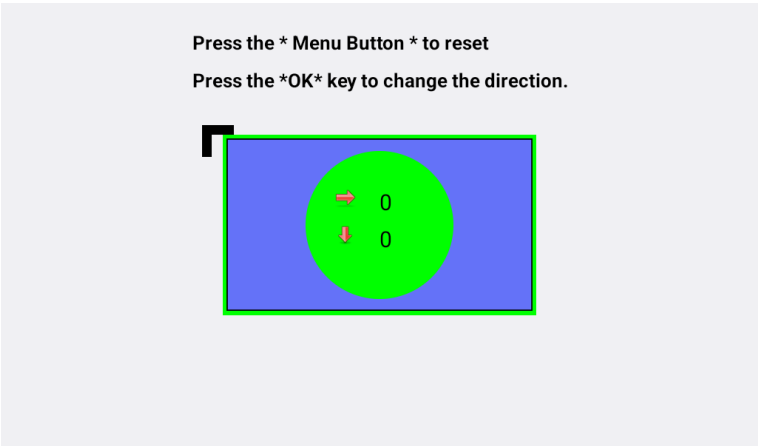

 
Calibration Screen: Manual correction is optional.

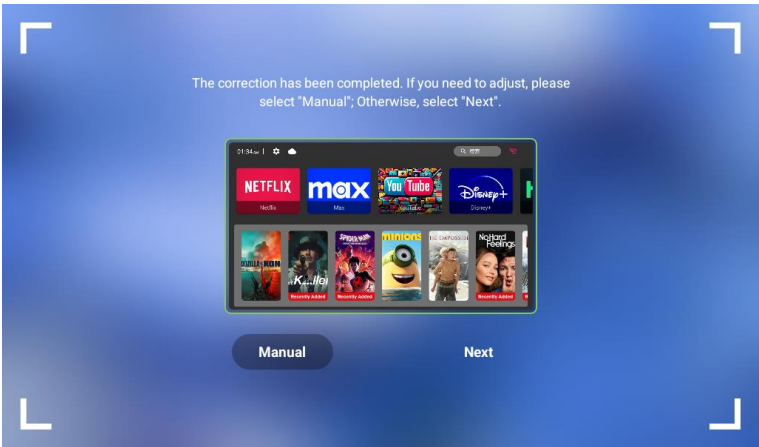

You may skip this step if desired.

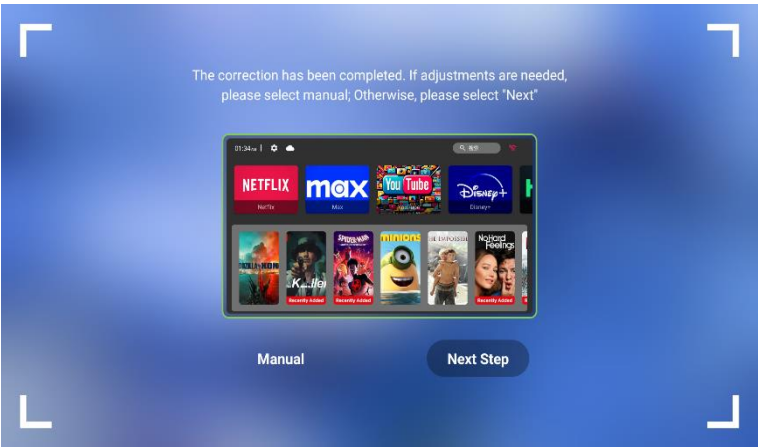 

Time: Set the current date and time.

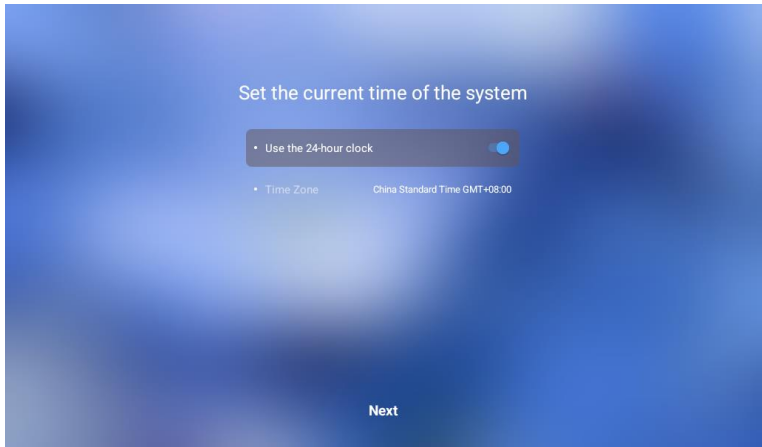 

Background: Choose a wallpaper you like.

 


Wi-Fi: Connect to an available wireless network.




Android Desk

Tap any icon to enter the corresponding application.

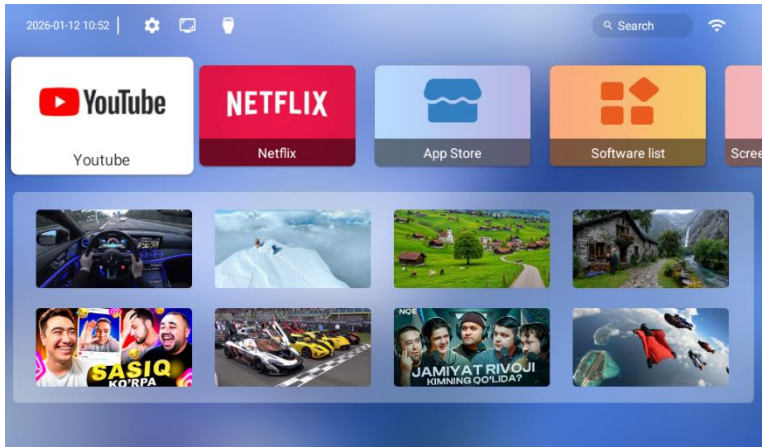

 
My Apps: Opens the application drawer on the home screen.

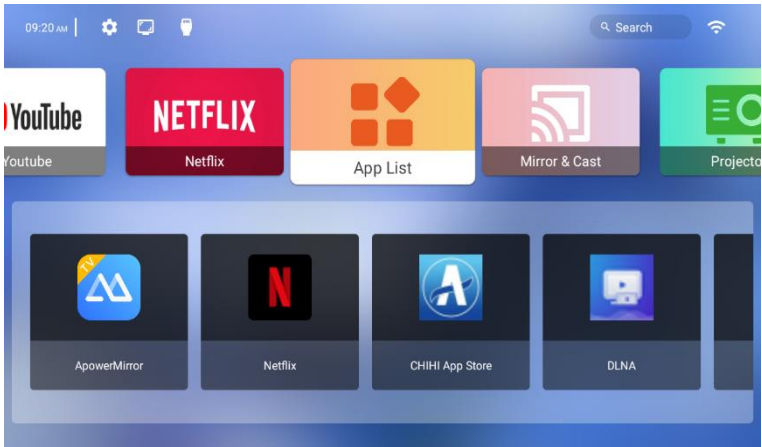


Menu Bar: Left to right: Time, Settings, Keystone, HDMI, Search, Wi-Fi.



 
App List: Select the app you want to launch.

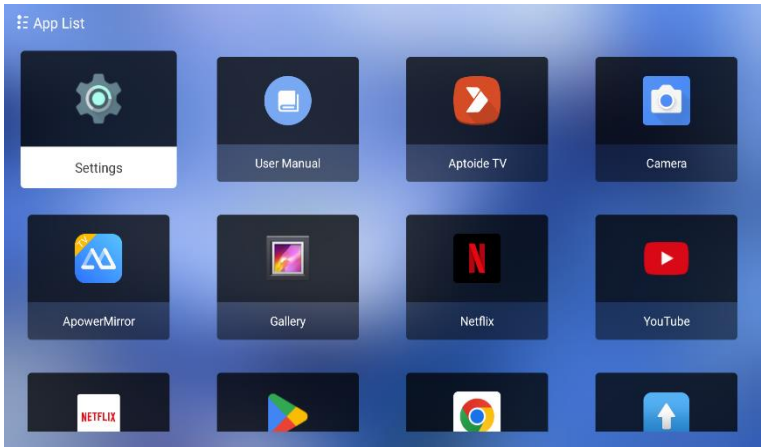

 
Uninstalling Apps: Select the app, press MENU on the remote, choose “Uninstall” and follow the on-screen prompts.

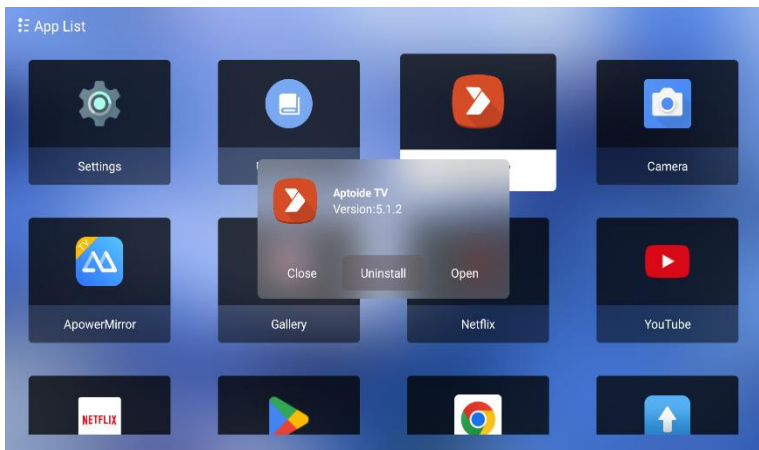

 
Screen Mirroring: Four casting apps are provided for Android & iOS mirroring ,refer to the operation steps on Page 9.

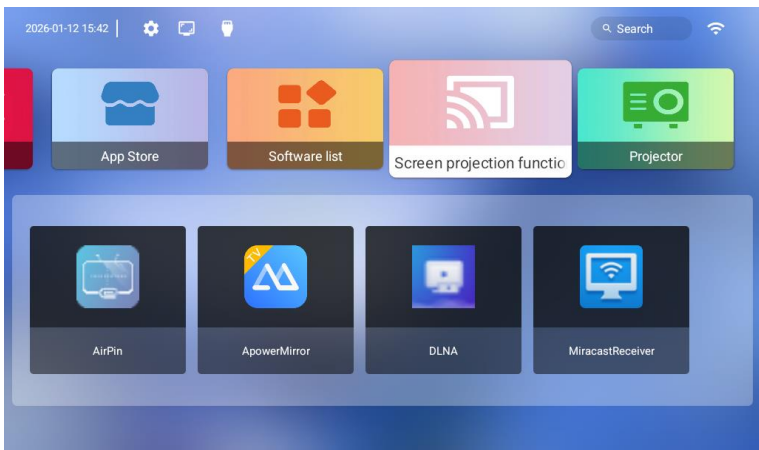

 File Manager: Browse external storage such as USB flash drives.

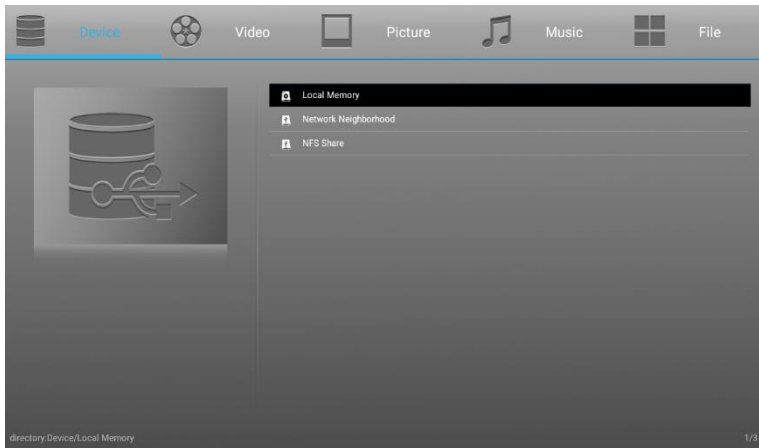


 Projector: Adjust the size and position of the projected image.

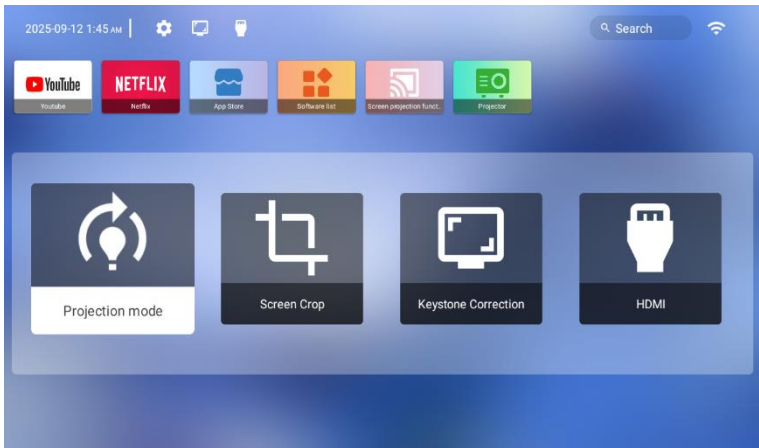


System Settings

 
Network: Scan for and connect to Wi-Fi hotspots.

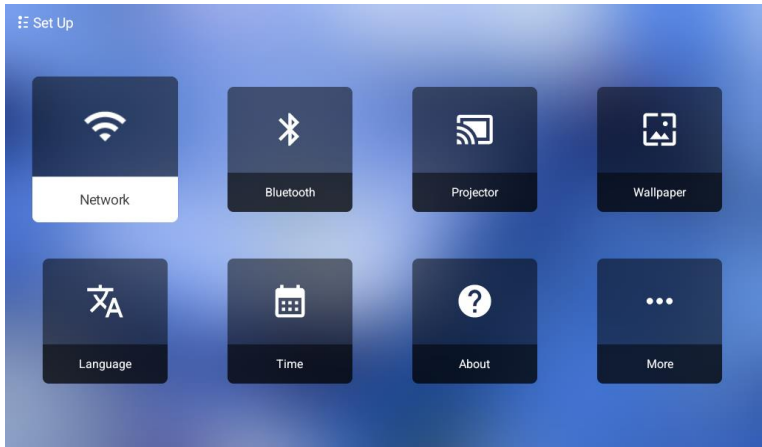

 
Bluetooth: When opened, it can connect to the corresponding Bluetooth device.

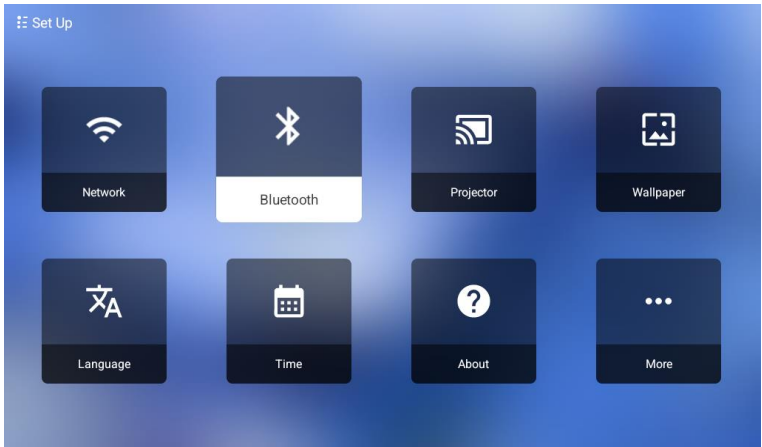

 
Select your network and enter the password.

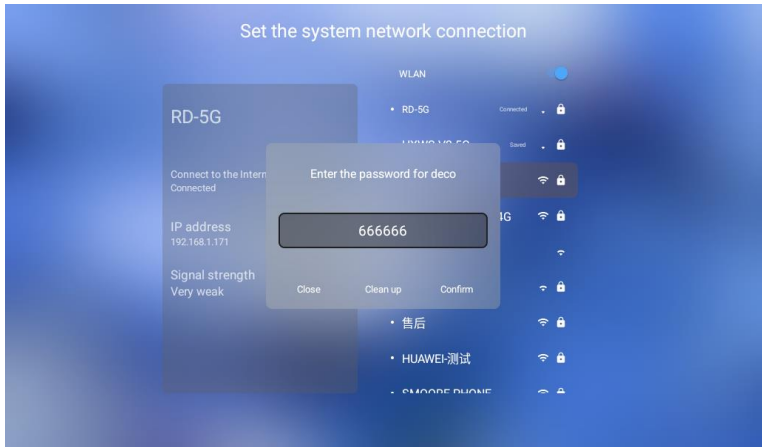

 
a) Tap to pair a new device

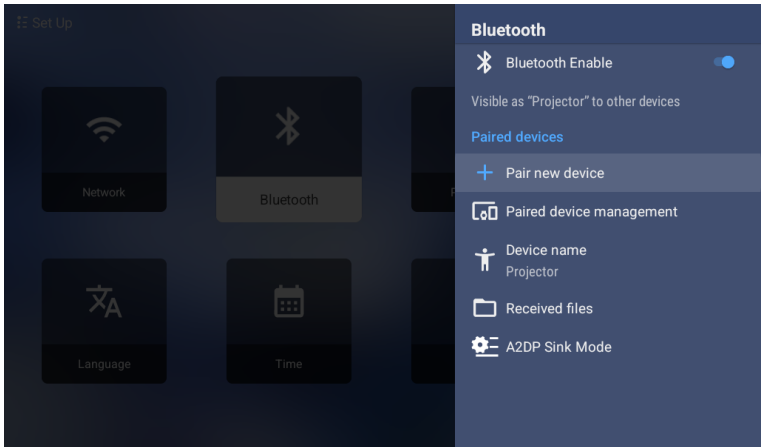

 b) Click on the target device to initiate the pairing process.

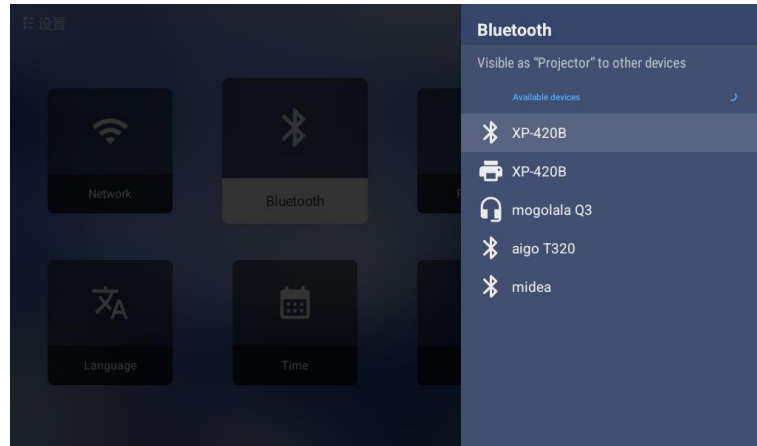


 c) Tap to manage already-paired devices

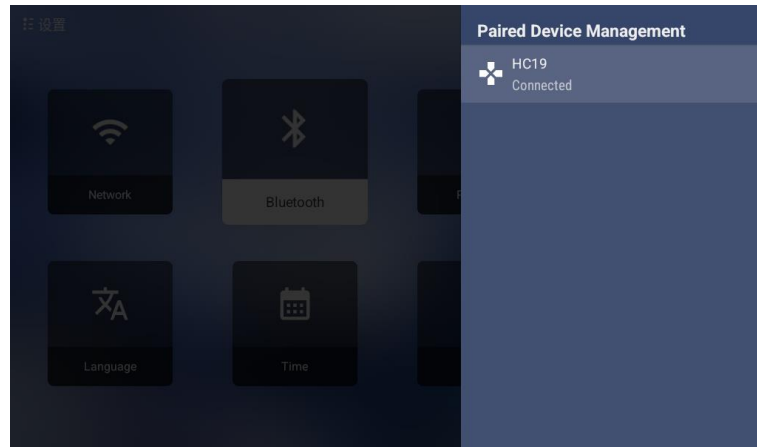


Projector:

 - Projection Mode: Front Table, Rear Table, Front Ceiling, Rear Ceiling.

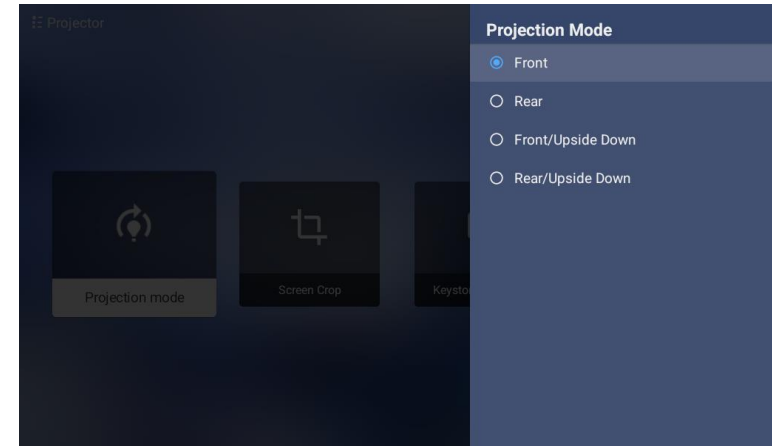


 - Screen Crop: Use arrow keys to zoom the image.

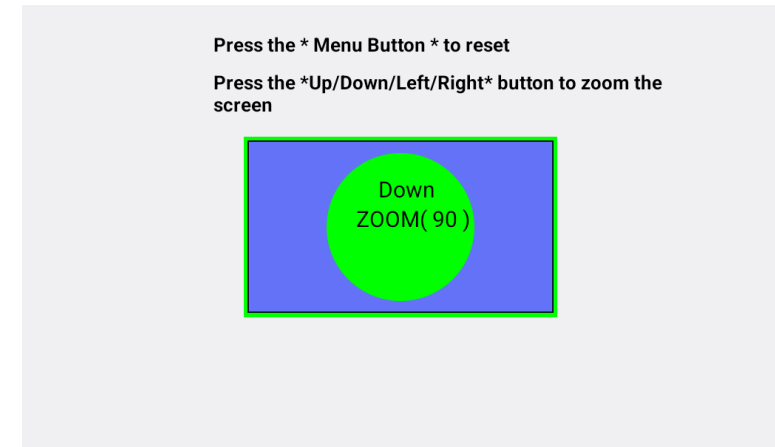

● Keystone Correction: Horizontal calibration\Manual calibration.

 
a) Horizontal Calibration, Restores the factory reference data when the projector is level.

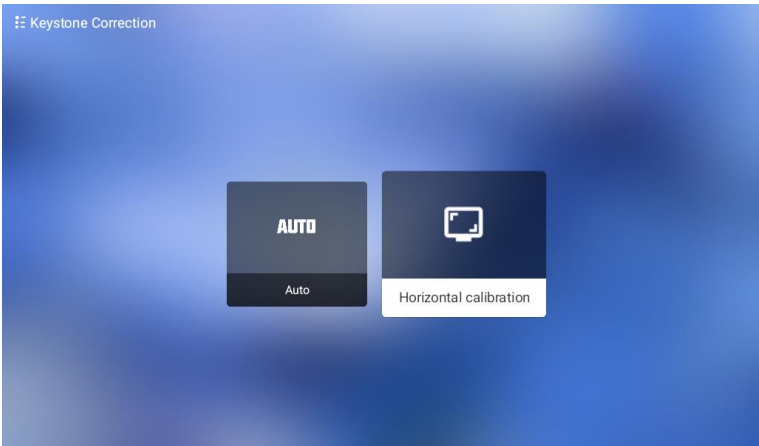


Level the projector and press OK to auto-calibrate.



 
b) Manual Correction, Allows fine-tuning of the projected image for optimal geometry.

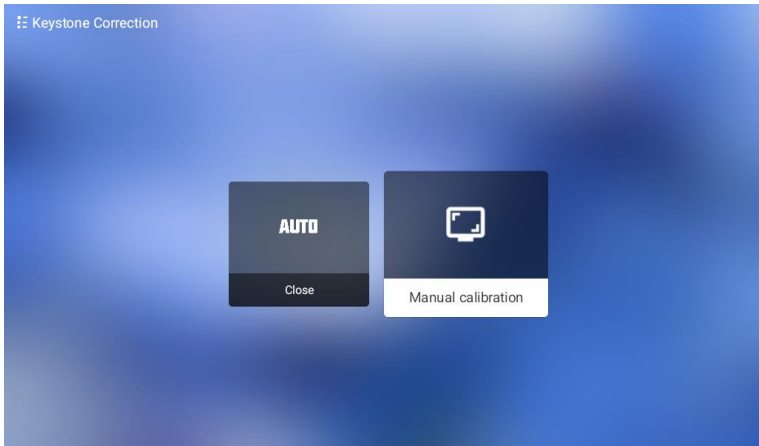

 
Press "MENU" to reset, "OK" to flip, "DIRECTION" to adjust.

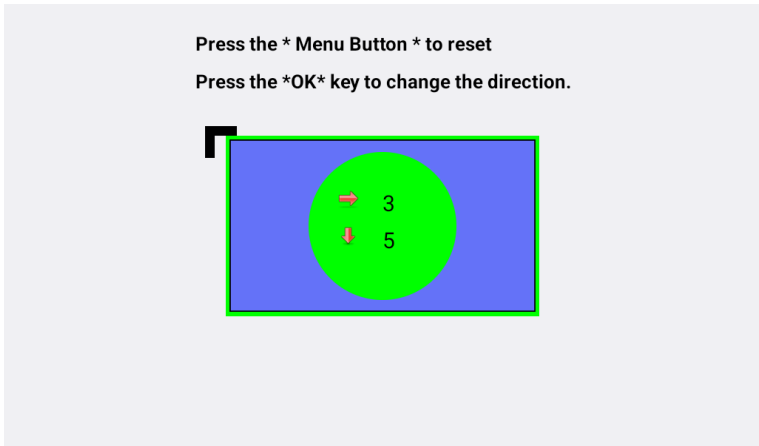

- HDMI: Display the HDMI input signal.

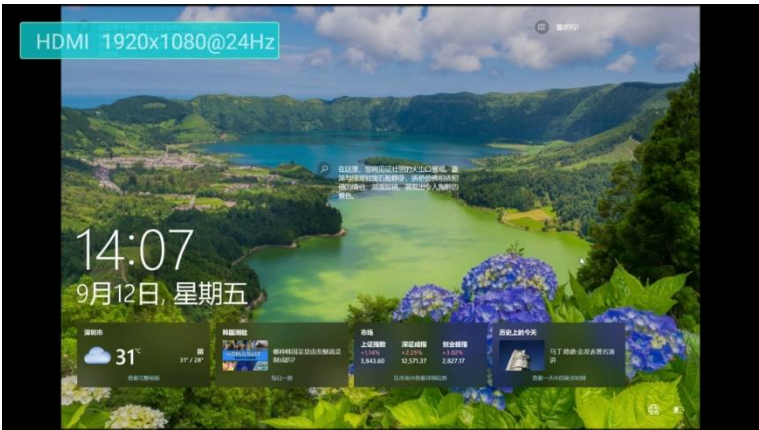 

 
Language: Set the system default language.

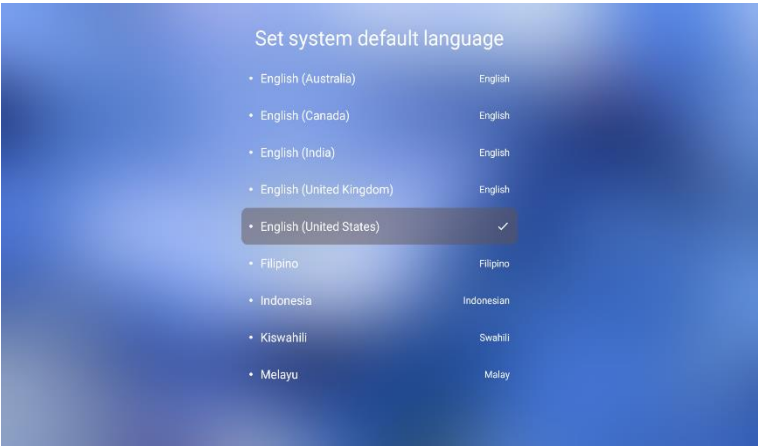


Background: Choose a wallpaper you like.



 
Time: Set the system clock and time-zone.

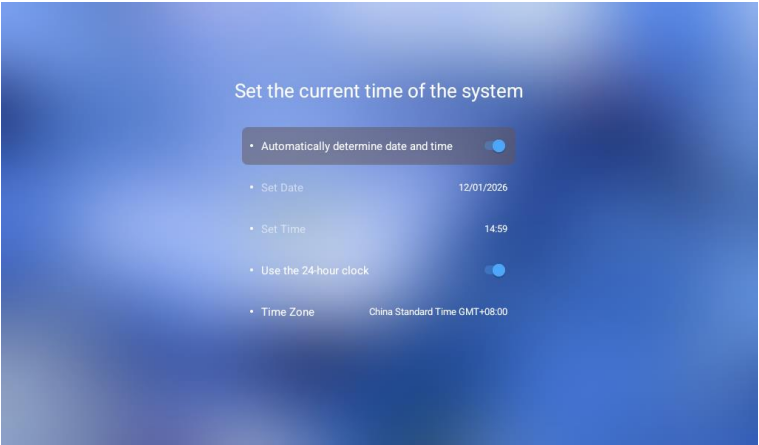


Select the appropriate time zone.

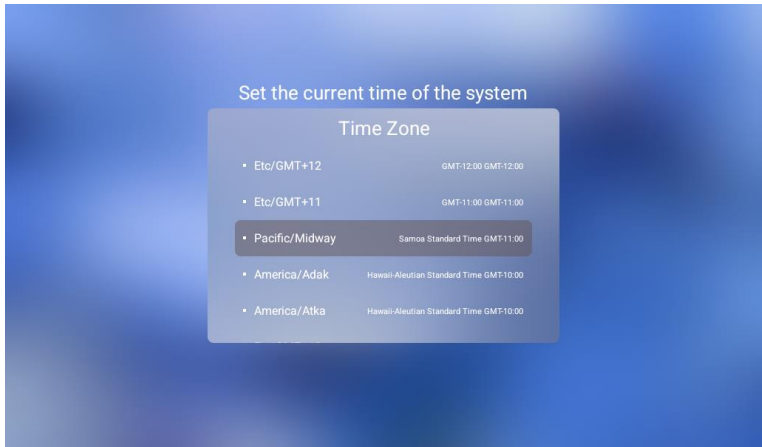 


Factory Reset

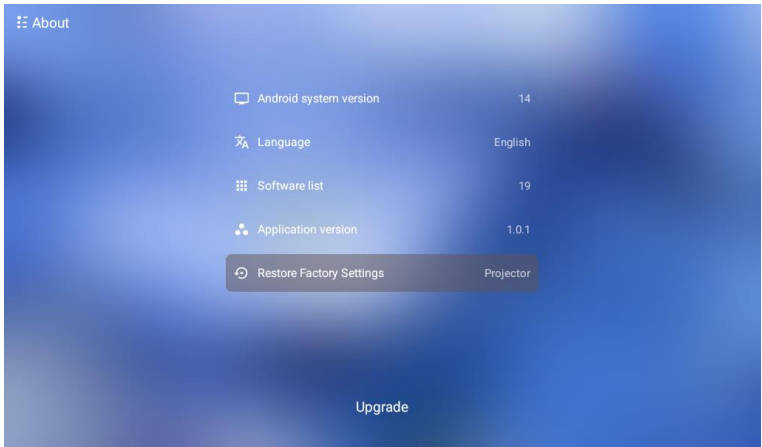 

 About: Shows model name, firmware version, etc.

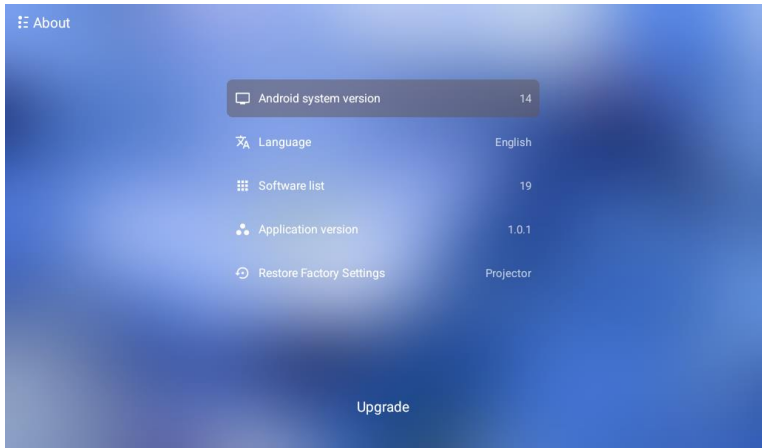


 More: Opens the stock Android Settings page.

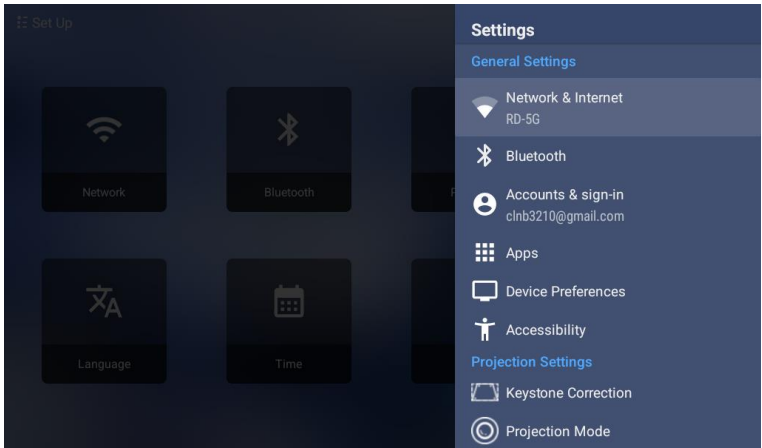

Screen Mirroring & Casting

 Make sure the projector and your phone / tablet / laptop are on the same Wi-Fi hotspot.

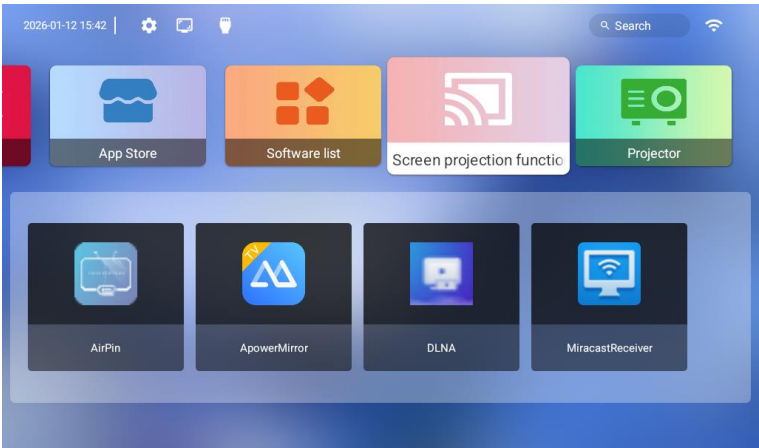


AirPin

- a) Launch AirPin on the projector and wait for the connection prompt.
- b) Select the projector from your device's mirroring list to start.




ApowerMirror

 
- a) Install “ApowerMirror” on your mobile device.
- b) Open the app on both devices.
- c) Follow the in-app instructions to connect and mirror.

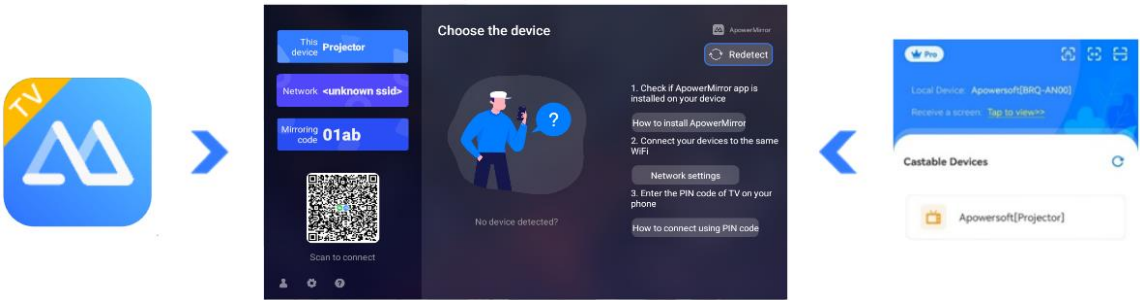

DLNA

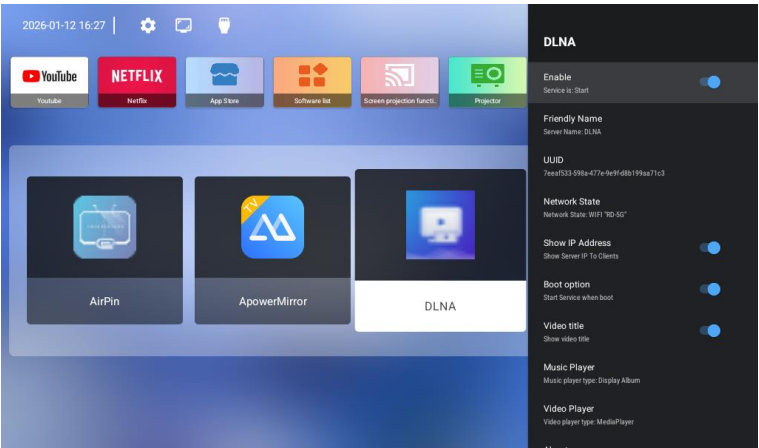 

 a) Choose a music player to cast audio.

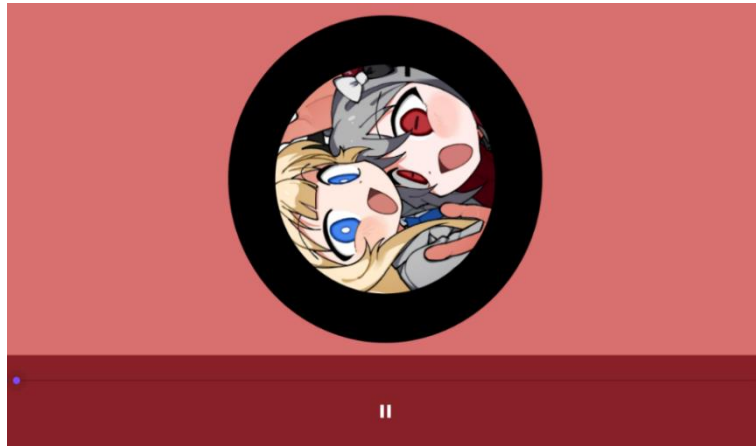


b) Choose a video player to cast video.



MiracastReceiver

 - a) Enable Miracast on the projector, wait for the connection prompt.
- b) Select the projector from your device's wireless display list to begin mirroring.

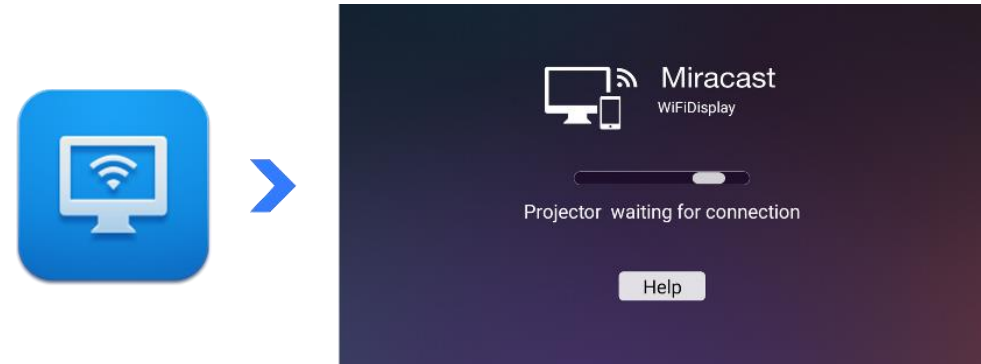

Common Troubleshooting Methods

- If the product fails to connect to the internet, check the network connection and ensure the wireless network settings are correct.
- If you encounter audio output issues or anomalies, check the audio connection and adjust the volume settings.
- If you experience unresponsive operation after restoring the device to its factory settings, you need to power it on, wait for 15 minutes, and then restart it. After that, it can be used normally—ensure sufficient loading time for system initialization.
- If there is no display or display abnormalities, ensure the HDMI connection is secure and try replacing the HDMI cable.
- When calibrating the projector, only the vertical direction is calibrated, When performing manual calibration, the device must be placed on a horizontal surface.
- If the product fails to power on, check the power connection and

ensure the power outlet is functioning properly.

- Blue spots are a characteristic of the LCD screen technology used in this single-LCD product. While they can occasionally be more visible due to external pressure, they are a known physical trait of the display and cannot be eliminated.
- For other issues, please refer to the user manual or contact the relevant personnel for assistance.

Disclaimers

Our company reserve the right to make changes about the contents of this instruction manual without any advance notice. Please kindly understand.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.