 



Excavator Manual

Remote control instructions

Operating Instructions

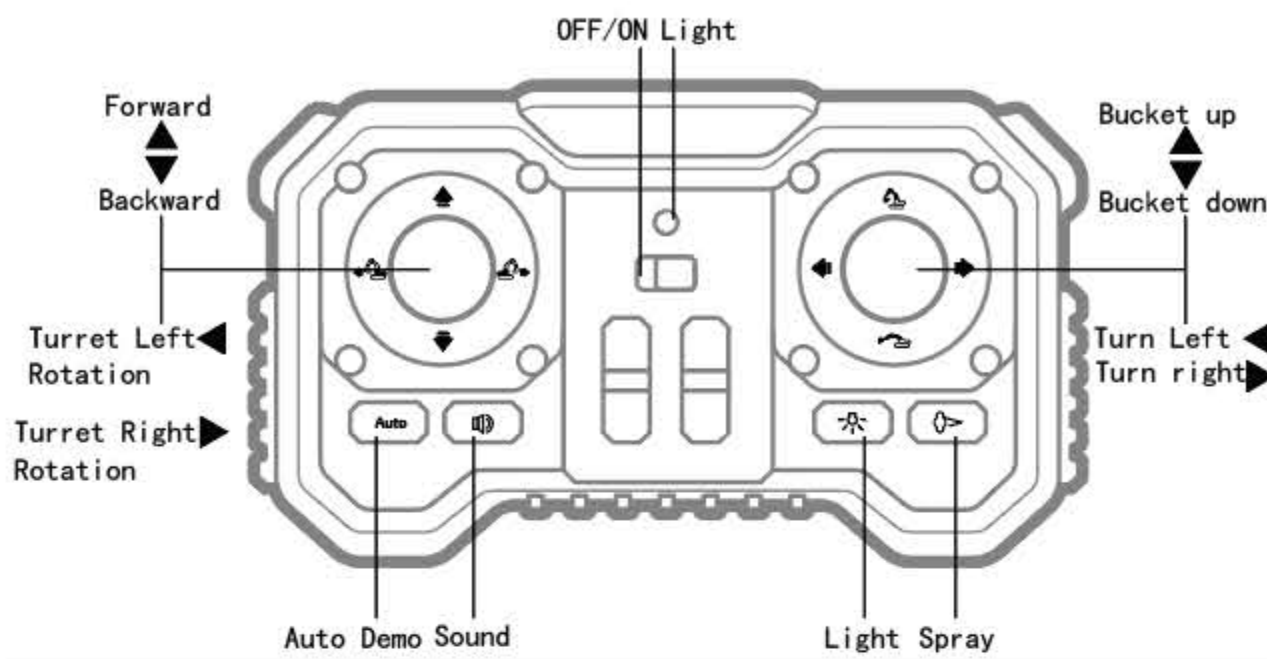

 Battery description

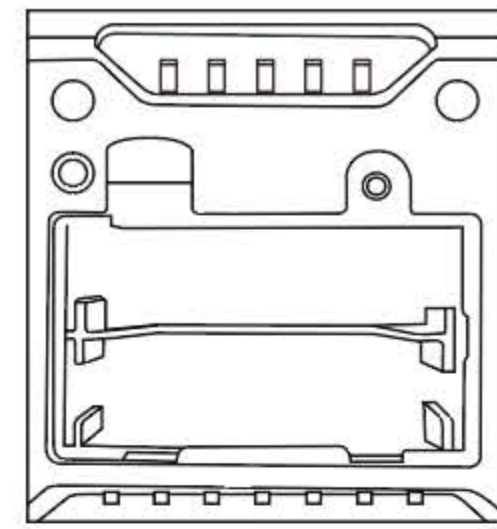



The remote control uses two 1.5V "AA" Non-rechargeable battery (batteries need to be purchased separately)



Description of vehicle body functions


Water injection instructions

  - 1.First, open the water tank cover on the top of the vehicle body.
- 2.Finally use the provided container to fill a proper quantity of water into the water tank.

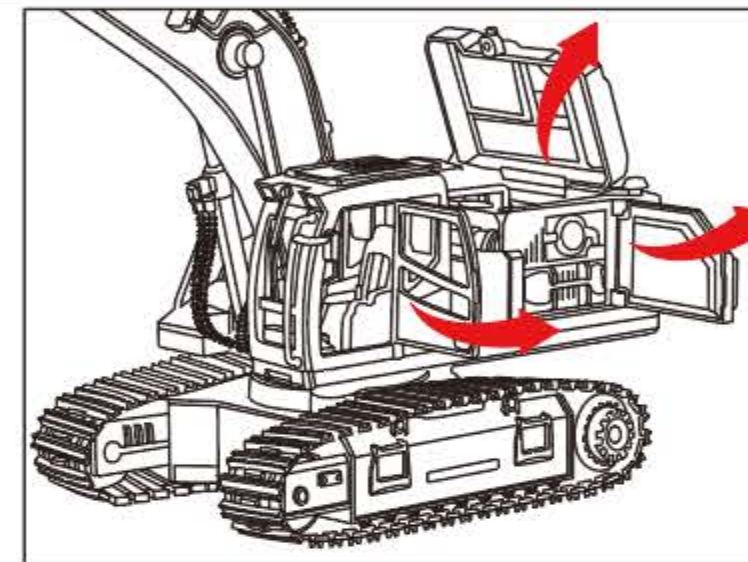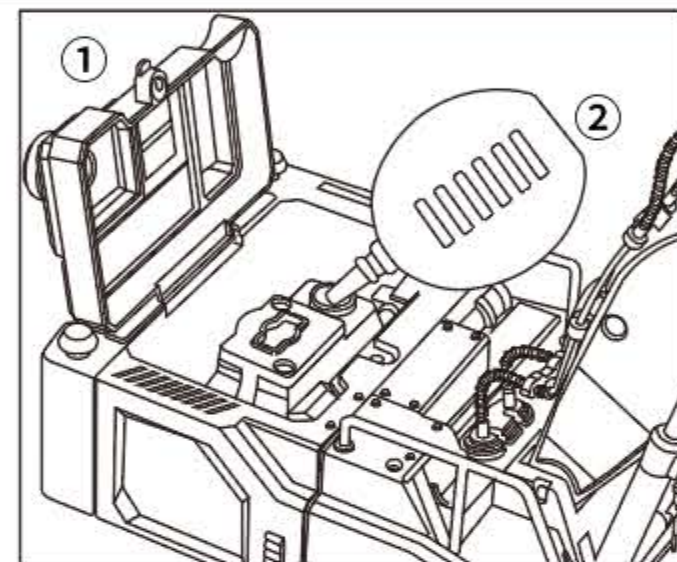

The car door can be opened.

 Lithium battery description

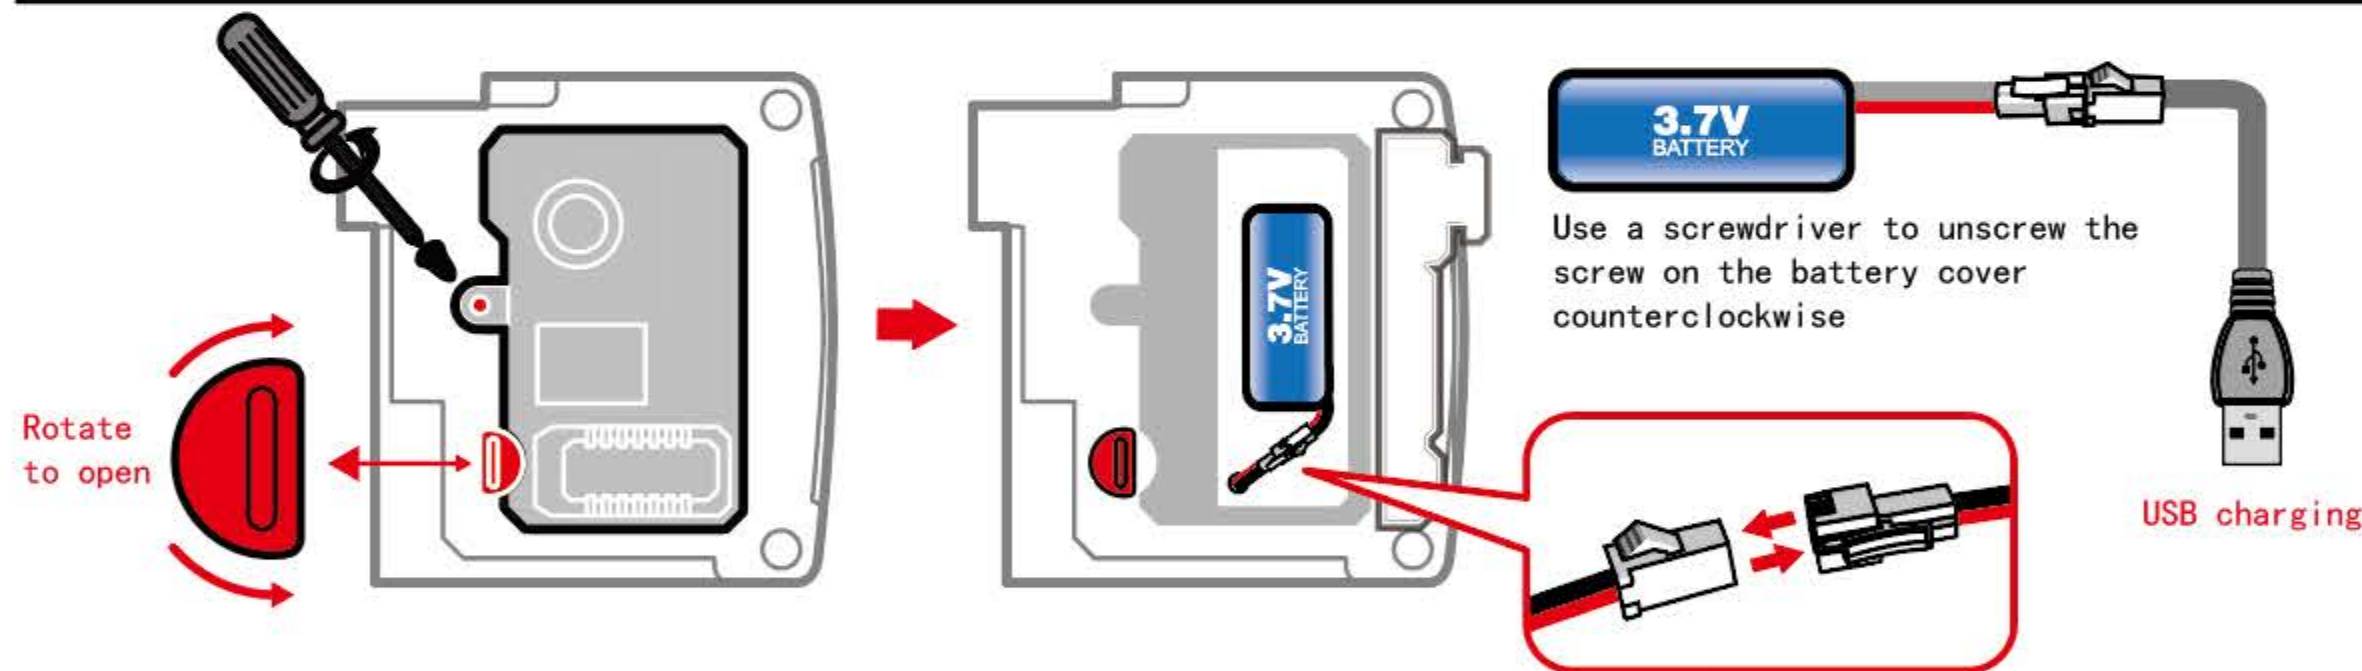

Charging instructions

How to charge

- 1.This is a new 3.7V battery. It needs to be charged before use and the remote control distance is 25 meters.
2. First, connect the battery's wire plug correctly to the positive and negative poles and insert it into the plug of the charging cable. Then, plug the charging cable plug into the socket.
(Note: Do not use a fast charger to charge to avoid burning out the USB charging cable.)"
- 3.It takes about 2 to 3 hours to fully charge the battery. The charging plug is equipped with a charging indicator light. During charging, the "red light" remains on constantly and indicates when fully charged
4. Regularly inspect the toys, batteries, charging wires, plugs and other accessories. If any of them are damaged, stop using them immediately. Do not use them until they are repaired or replaced.

How to install the battery

1. Remote control
 - (1) Open the battery cover of the remote control and install 1.5V "AA" batteries according to the positive and negative terminals in the battery compartment of the remote control.
 - (2) Close the battery cover and tighten the screws.
2. Excavator
 - (1) Open the battery cover on the top of the excavator, connect the rechargeable battery to the power socket and install it in the battery compartment inside the vehicle.
 - (2) Close the battery cover and tighten the screws.

Precautions for Use

- 1.The excavator uses one 3.7V rechargeable lithium battery, and the remote control uses two 1.5V "AA" non-rechargeable batteries.
- 2.The removal and installation of batteries should be carried out correctly in accordance with the polarity and voltage inside the toy battery box.
- 3.Non-rechargeable batteries cannot be recharged.
- 4.Rechargeable batteries must be charged under adult supervision.
- 5.The rechargeable battery should be removed from the toy before charging.
- 6.Batteries of different types or new and old batteries must not be mixed.
- 7.The battery of the excavator must be the one provided by the original factory, and the battery on the excavator should be charged using the USB cable provided by the original factory.
- 8.The exhausted battery should be removed from the toy. If the toy is not used for a long time, please remove the battery from it.
- 9.The power terminals must not be short-circuited.
- 10.Maintenance and Repair: This product is composed of plastic, hardware and electronic components. Regularly check whether the wires, plugs, casing and other parts are in good condition. If any defect is found, the use should be stopped immediately until it is fully repaired..

Warning!

1. When playing with an excavator indoors, please be careful not to cause damage to furniture or glass.
2. Please play in a safe outdoor place. Do not play with the excavator on the road or in crowds to avoid danger.
3. When playing with an excavator outdoors and hearing thunder, you should stop playing immediately. When the wheel is rotating, do not stretch your hand close to it to avoid injury. Do not get your hair, clothes, etc. caught in it either.
5. Do not drive the excavator towards people.
6. Do not throw or collide the excavator randomly.
7. When placing the excavator, please keep it away from fire sources and high-temperature areas.
8. This excavator adopts complex electronic circuits and a large number of components. Please do not disassemble, assemble or modify the circuit board at will.
9. When the excavator is covered with dirt and dust after use, it should be gently wiped with a damp cloth.
10. Don't put toys in water, as this can damage electronic components.

⚠ It contains small components that pose a choking hazard. It is not suitable for children aged 3 and under to play with. An adult must be present when using it for supervision and guidance.

The instruction manual contains important information and should not be discarded for future reference.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.