

IM size: 245 x 180mm

VISTATECH

PORTABLE WIRELESS
KARAOKE

User Manual

CONTROLS & PORTS

Volume Down
Previous Track

Volume Up
Next Track

On-Off
Play-Pause

Change lighting Effects

Change input Mode

Indicator light

DC/SV

TF

AUX input

USB-C charging port

Micro SD card slot

SET INCLUDES

• 1x Karaoke Speaker with 2x Wirless Microphones

• USB-A to USB-C charging cable

• User manual

WIRELESS MICROPHONE

ON-OFF / Mute Mic

Mic Volume Up / Increase Reverb

Mic Volume Down / Decrease Reverb

Change Voice Effects

Indicator light

USB-C charging Port

SPEAKER

USB TYPE-C CHARGING CABLE

OPERATIONS - SPEAKER	
FUNCTION	OPERATION
Charging	- Connect the USB-C cable to a 5V USB-A power source (wall charger, car charger, laptop/PC, powerbank, etc.). - Red light: Charging. - Light off: Fully charged. Fully charge before first use.
Turning ON/OFF	Press and hold the [⏻] button.
Changing Lighting Effects	- Press the [💡] button to change light effects. - Press and hold the [💡] button to turn the lights on and off.
Switching Input Modes	Press the [M] button (works only when TF/AUX is connected).
Playing Music via Bluetooth	- Turn on the speaker. - Open Bluetooth settings on your device (smartphone, tablet, laptop, etc.) - Select SP-05717 from the list. - Start playback on your device. - Flashing blue light: Not paired. - Blue light: Paired. - To disconnect, turn off your device or the speaker.
Controlling Playback	- Press the [⏮] button to play or pause. - In Bluetooth and AUX modes, you can also control playback on your device.
Adjusting Volume	- Press the [+] button to increase the volume. - Press the [-] button to decrease the volume. - In Bluetooth mode, you can also adjust the volume on your device.
Skipping Tracks	- Press and hold [+] button to skip to the next track. - Press and hold [-] button to go back to the previous track. - In Bluetooth mode, device controls also work for skipping tracks. - In AUX mode, only device controls will work for skipping tracks.
Playing from a Micro SD Card	- Turn off the speaker. - Insert a Micro SD card (not included) into the slot with the metal contacts facing up. - Turn the speaker back on. It will automatically switch to the correct mode.
Wired connection	Connect an AUX cable (not included) to the speaker and your device (laptop/PC, MP3 player, radio, etc.). The speaker switches to AUX mode automatically. Start playing audio on your device.

OPERATIONS - MICROPHONE	
FUNCTION	OPERATION
Charging	- Connect the USB-C cable to a 5V USB-A power source (wall charger, car charger, laptop/PC, powerbank, etc.). - Red light: Charging. - Light off: Fully charged. Fully charge before first use.
Turning On/Off	- Turn on the speaker. - Press and hold the [⏻] button on the microphone. - Flashing blue light: Not paired with speaker. - Steady blue light: Paired.
Adjusting Mic Volume	- Press the [+] button to increase the volume. - Press the [-] button to decrease the volume.
Muting/Unmuting Mic	Press the mic's [⏻] button.
Adjusting Reverb	- Double-press [+] to increase reverb. - Double-press [-] to decrease reverb.
Suppressing Vocals in Music Playback	Press the [🎤] button. Press it again for normal playback.
Changing Voice Enhancement Effects	Press and hold the [🎤] button.

SAFETY PRECAUTIONS

• Remove all packaging materials to prevent choking hazards.

• Fully charge before first use.

• Use the supplied charging cable only with this product.

• For children aged 16 years or younger, charging should be done by an adult or under adult supervision.

• Use a suitable 5V charging source only, such as a laptop or PC USB port, or a certified wall charger, car charger or powerbank that carries the RCM compliance symbol. Using an unsuitable charging source, such as 9V or 12V, may cause damage or safety risks.

• Charge on a flat, dry surface, away from flammable materials.

• If the battery overheats, smokes, or emits fumes, unplug it immediately.

• Do not overcharge the batteries. Overcharging can reduce battery life and cause overheating.

• Do not disassemble the battery or dispose of it in fire.

• An adult should assist with Bluetooth pairing to avoid unknown connections.

• Store in a cool, dry place.

• Keep the unit away from direct sunlight and heat sources.

• Do not drop the unit. Keep it away from water and moisture.

• Turn off the speaker and microphones before cleaning. Wipe with a soft, slightly damp cloth.

• Follow local laws for proper disposal and battery recycling; avoid putting it in kerbside bins.

BLUETOOTH CONNECTION ISSUES

• Ensure the speaker isn't already paired with another device.

• Make sure your device and the speaker are close to each other.

If your device is not reconnecting via Bluetooth:

1. Check that the speaker is not already paired with another device.

2. Delete SP-05717 from your device's list of paired Bluetooth devices.

3. If available, select Forget for the speaker's pairing code.

4. Turn the speaker off, then on again to restart the pairing process.

5. Reconnect the speaker by selecting SP-05717 from the list of available Bluetooth devices.

FCC WARNING

Labeling requirements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) the device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to the user

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and the receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 5mm between the radiator and your body.

SPECIFICATIONS

Input sources: Bluetooth, Micro SD, AUX

Bluetooth pairing name: SP-05717

Bluetooth version: 5.4

Bluetooth range: 10m (unobstructed)

Speaker and microphone range: 10m (unobstructed)

Micro SD:

Supported music format: MP3

Maximum capacity: 32GB

File system: FAT32

Speaker rating: 4Ω 52mm, power: 5W

Frequency range: 80Hz - 18kHz

Battery type & capacity:

Speaker: 1200mAh

Microphone: 400mAh

Battery charging input: 3.7V

Working time: 3 hours

Charging time: 3 hours

Printed in China

FRONT

BACK