

⚠ ADVERTENCIA:

RIESGO DE ASFIXIA - Partes pequeñas.
No apto para menores de 3 años.

⚠ WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.

ⓘ SI FUESE NECESARIO ARMAR EL JUGUETE, SE SUGIERE LA AYUDA DE UN ADULTO PARA ARMARLO - LAS ESPECIFICACIONES Y LOS COLORES DEL CONTENIDO PUEDEN VARIAR AL DE LA ILUSTRACION - TODOS LOS ENVOLTORIOS, AMARRAS, BOLSAS Y OTROS ANEXOS AL JUGUETE DEBEN SER ELIMINADOS A FIN DE EVITAR ASFIXIAS, DAÑOS, CORTES, ETC. - GUARDE EL EMPAQUE PARA FUTURAS REFERENCIAS - NO EXPONER EL PRODUCTO AL FUEGO - HECHO EN CHINA

ⓘ IF TOY NEED TO BE ASSEMBLED, ADULT ASSISTANCE IS REQUIRED - SPECIFICATIONS COLORS AND CONTENTS MAY VARY FROM ILLUSTRATION - REMOVE ALL ELEMENTS DESIGNED TO FASTEN AND PROTECT THE PRODUCT BEFORE GIVING IT TO A CHILD (PLASTIC WIRES, LABELS, BAGS, AND OTHER ATTACHMENTS) - KEEP THE PACKAGING FOR FUTURE REFERENCE AS IT CONTAINS IMPORTANT INFORMATION - DO NOT EXPOSE TO FIRE - MADE IN CHINA



ITEM N° 130179

DISEÑADO POR HAPPY LINE
DESIGNED BY HAPPY LINE

Happy Line Limited, Unit 201 & 213, Tower 2, South Seas Centre,
75 Mody Road, 1st East, Kowloon, Hong Kong



ⓘ **PRECAUCIÓN:** BATERÍAS. Sólo adultos pueden reemplazar las baterías. - Para mejores resultados, siempre utilice pilas nuevas alcalinas. - No mezcle pilas usadas con nuevas. - Siempre retire las pilas agotadas. - Retire las pilas cuando guarde el juguete por un tiempo. - No mezcle pilas alcalinas, standard (carbono-zinc) con pilas recargables (níquel-cadmio). - Las baterías no recargables no deben ser recargadas. - Las pilas deben colocarse con la polaridad correcta (+ y -) y los terminales de alimentación no deben cortocircuitarse. - Las pilas recargables deben extraerse del juguete antes de cargarlas. - En el caso de los juguetes eléctricos que utilizan pilas recargables, éstas deben cargarse bajo la supervisión de un adulto. - Siempre siga las instrucciones del fabricante respecto al uso y disposición de la cantidad de pilas. - No exponga las pilas al calor. - Si este producto incluye pilas, estas son solo para demostración en tiendas.

ⓘ **CAUTION:** BATTERIES. Only adults should replace batteries. - For best results, always use new alkaline batteries. - Do not mix old and new batteries. - Always remove exhausted batteries. - Remove batteries when storing the toy for a while. - Do not mix alkaline, standard (carbon-zinc) batteries with rechargeable (nickel-cadmium) batteries. - Non-rechargeable batteries are not to be recharged. - Batteries are to be inserted with correct polarity (+ and -); and the supply terminals are not to be short-circuited. - Rechargeable battery are to be removed from the toy before being charged. - For electric toys using rechargeable batteries, the batteries should be charged under adult supervision. - Always follow the manufacturer's instructions regarding the use and disposal of batteries. - Do not expose batteries to heat. - If this product contains batteries, they are for demonstration purpose only.



ⓘ **INSTRUCCIONES DE USO:** 1. Coloque el botón en "on" (encendido) en el vehículo 2. Presione el botón "adelante" en el control para avanzar, presione el botón "atrás" para retroceder 3. Presione los botones izquierda y derecha para ir hacia los lados 4. Presione el botón "off" (apagado) para apagar el vehículo cuando termine de jugar.

FRECUENCIA: A veces, puede ser interferido por otra frecuencia de radio y el control puede quedar fuera de servicio, en este caso, por favor, cambie el lugar de juego.
ADVERTENCIA! No fruncir la antena, si esta se rompe, la parte afilada puede provocar daño. - Cuando las ruedas estén en marcha, evite el contacto con el pelo, ropa y otros artículos de uso diario, evite resaltar herido y no introduzca las manos en ellas. - No haga ningún corto circuito, no rompa la batería ni la tire al fuego. - Para evitar un mal funcionamiento del circuito eléctrico, no debe jugar en estanques ni sobre la arena. - El vehículo tiene un circuito electrónico complicado y gran cantidad de componentes, por favor, no romper ni reformar. - Detenga el uso del vehículo si este entra en contacto con el agua. - Si el vehículo tiene ruedas lisas, este puede resquebrajarse en superficies muy lisas, prefiera superficies de concreto.

ⓘ **INSTRUCCIONES:** 1. Set the button to "on" in the vehicle 2. Press the forward button on the remote to move forward, press the back button to go back 3. Press the left and right to go sideways 4. Press the "off" button to turn off the vehicle when finished playing.

FREQUENCY: Sometimes you could be interfered by other radio frequency and control can be out of service, in this case, please change the location.

WARNING! Do not crinkle the antenna, if it breaks, the sharp part may cause damage. - When the wheels are in motion, avoid the contact with hair, clothing and other daily use items, avoid getting hurt and not put your hands into them. - Do not make any short circuit, do not mutilate the battery or throw it into fire. - To prevent malfunction of the electrical circuit, you should not play in ponds or on the sand. - The vehicle has a complicated electronic circuit and large number of components, please do not break or convert them. - Stop using the car if it comes in contact with water. - If the vehicle has smooth wheels, it can drift in smooth surfaces, prefer concrete surfaces.

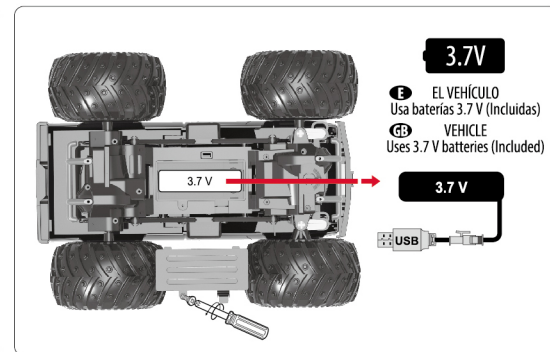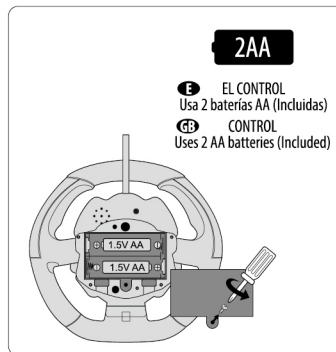

The statements should be displayed in the user manual:
changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Item NO: 130179
Product Name: RC