

LiberLive™ C2 Stringless Guitar

LiberLive

User Manual

Contents

A Product Introduction

- A-1 In the Box
 - A-2 Must Know
 - A-3 Controls & Indicators
-

B Getting Started

- B-1 Basic Operations
 - B-2 Core Features
-


C Product Specifications

- C-1 Technical Parameters
 - C-2 Hazardous Substances Declaration
-


D Safety & Warranty

A-1 In the Box

- ① LiberLive™ C2
- ② Travel Case
- ③ User Manual
- ④ Chord Stickers
- ⑤ Quick Start
- ⑥ USB Type-C Cable

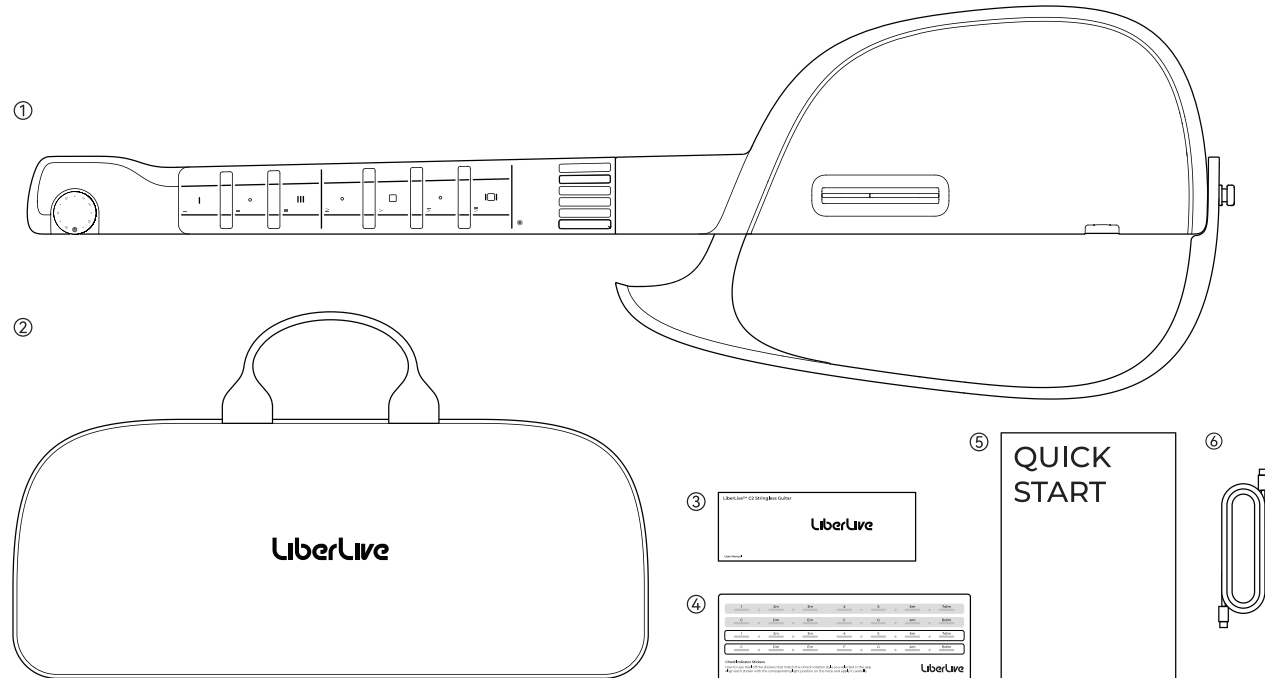

A-2 Must Know

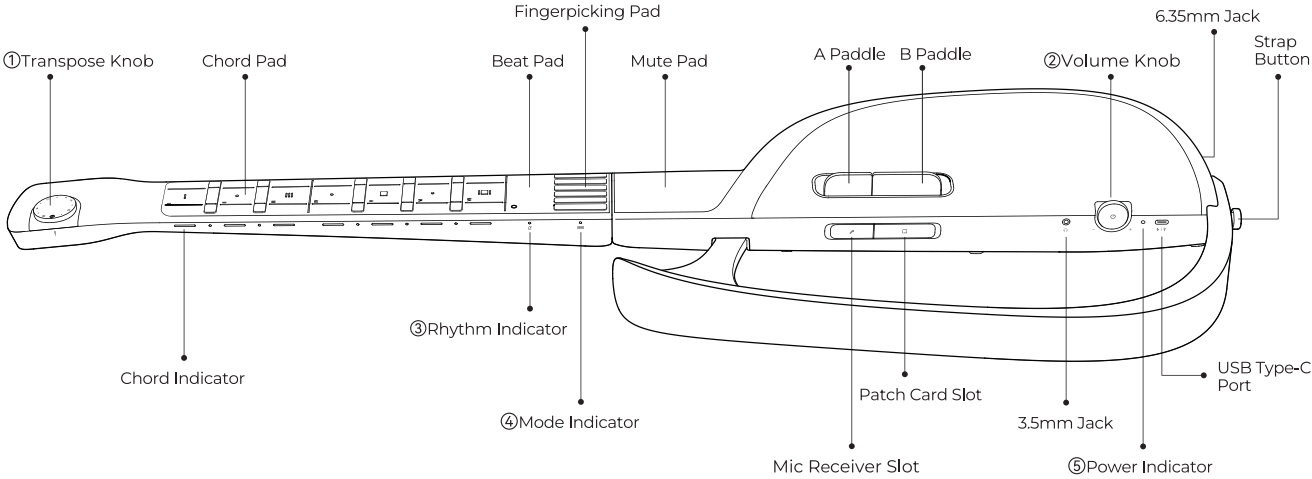


A-3 Controls & Indicators

Control	Action	Function	
①Transpose Knob	Rotate	Select a key	
②Volume Knob	Press and hold for 3 seconds	Power On/Off	
	Click	Check battery level	
	Rotate	Adjust volume	
③Rhythm Indicator	Flashes at current BPM		
④Mode Indicators	Cyan	Melody Guide	
	Orange	Solo Mode	
⑤Power Indicator	In Use	White	Disconnected
		Blue	Connected
		Red	Battery below 20%
	Charging	Green	Charging completed
		Breathing white	Charging (>20%)
		Breathing red	Charging (≤20%)
	Flashing blue		Firmware update


B-1 Basic Operations

1. Unfold the guitar

 1.1 Unfold the neck as indicated.




1.2 Unfold the body frame from the back.

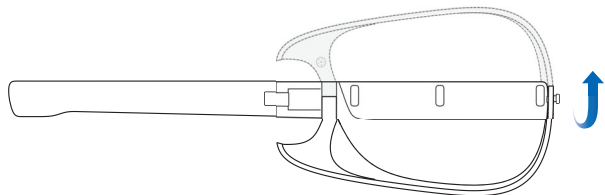


WARNING! Before folding the neck, make sure to fold the body frame first to avoid damaging the neck-locking mechanism.

2. Proper Playing Position


2.1 Position the LiberLive C2 comfortably against your body.

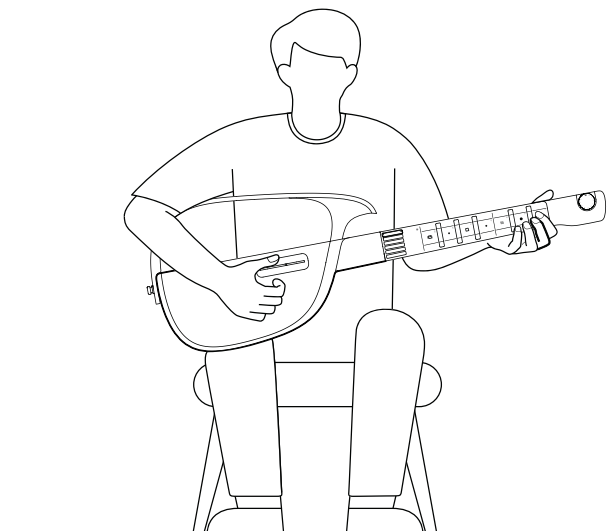

2.2 Hold the neck with your left hand.

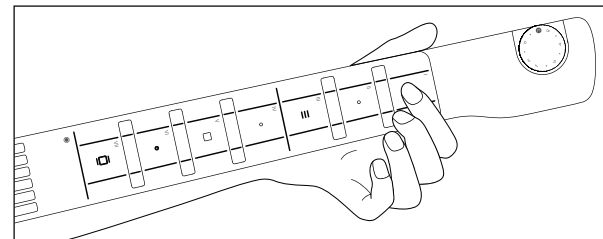


2.3 Gently place your right hand on one of the A/B paddle.

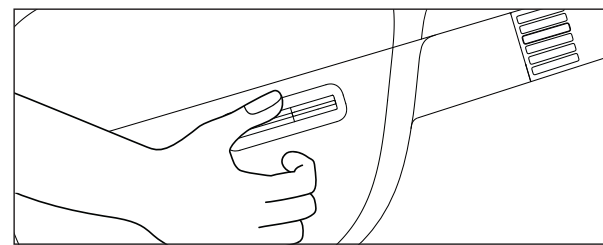


3. Power on your LiberLive C2

3.1 Press and hold the volume knob for 3 seconds to power on the device.

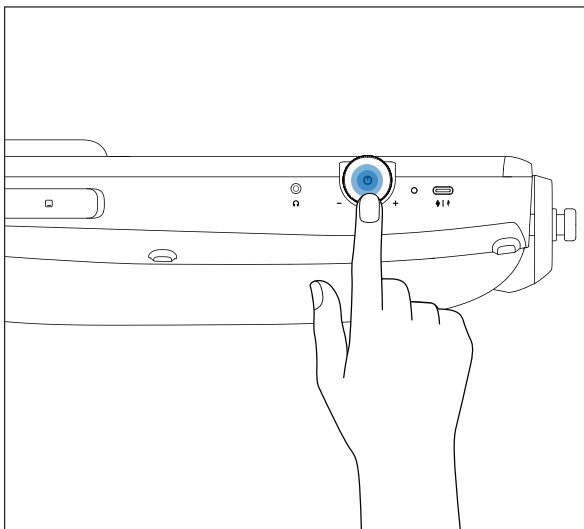


4. Start Playing


4.1 With your left hand, press and hold any Chord Pad on the neck.

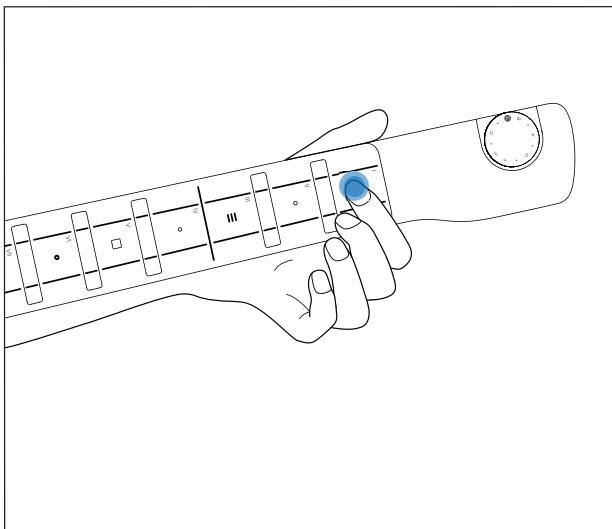

4.2 With your right hand, flick the large paddle(B Paddle) once to play the 1st half of the chord.

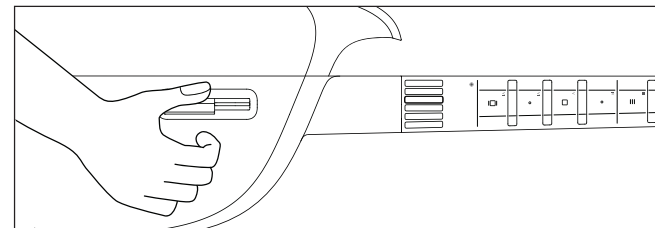

4.3 Flick again to play the 2nd half, completing the full chord.

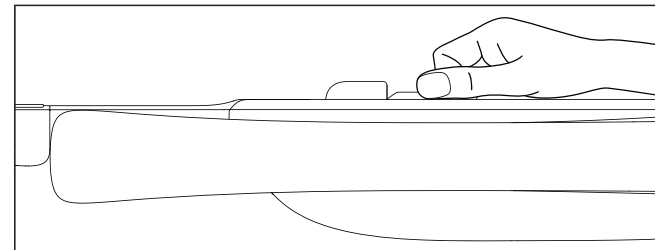

5. Installing the LiberLive App

5.1 Scan QR code or search "LiberLive" in App Store or Google Play.




6. Bluetooth Connectivity


6.1 Turn on Bluetooth on your phone.

On the app's Home page, tap "+ Connect" in the top-right corner and choose your LiberLive C2 to pair.

Note: Do not connect the LiberLive C2 through the system Bluetooth menu.

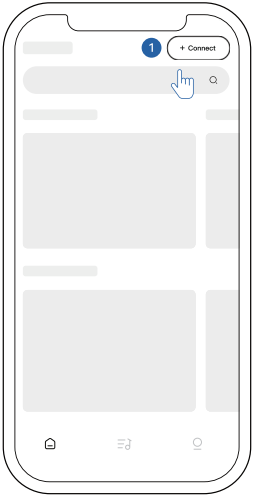

6.2 Once connected, explore tutorials, features, and all your settings right inside the app.

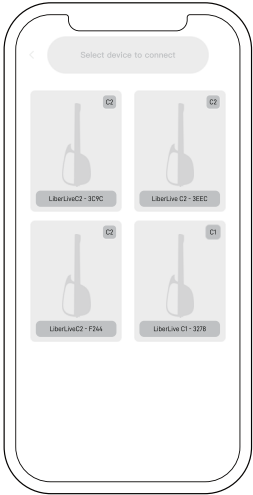

7. Connecting External Devices


7.1 Connect audio devices via 3.5mm/6.35mm jacks (speakers, mixers, headphones, etc.)

7.2 Power sequence: Turn on this instrument before any external devices.

When powering off, turn off external devices first.

8. Charging


8.1 Charge via Type-C port using a compliant power adapter.

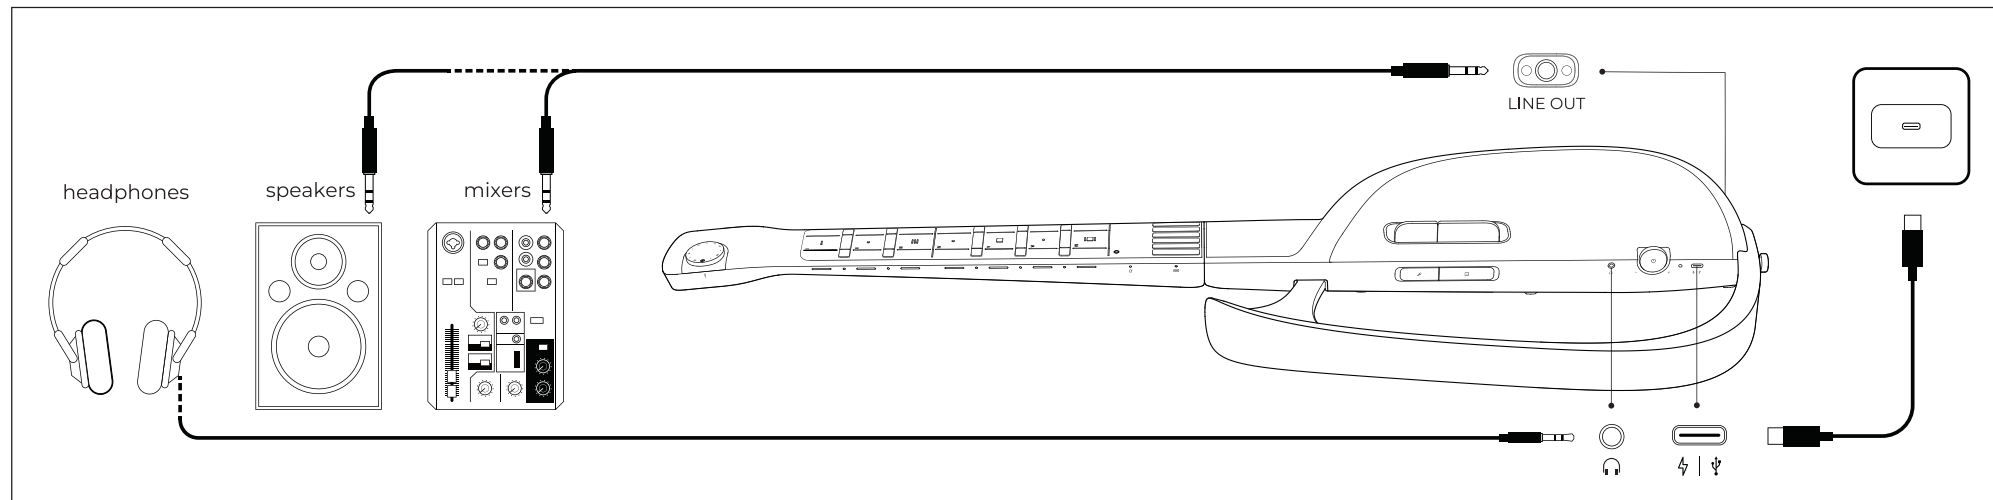

B-2 Core Features


1. Sing Mode

1.1 Follow the app guidance and chord indicator lights. Press the chord pad with your left hand and strum the paddle with your right hand to play chords.

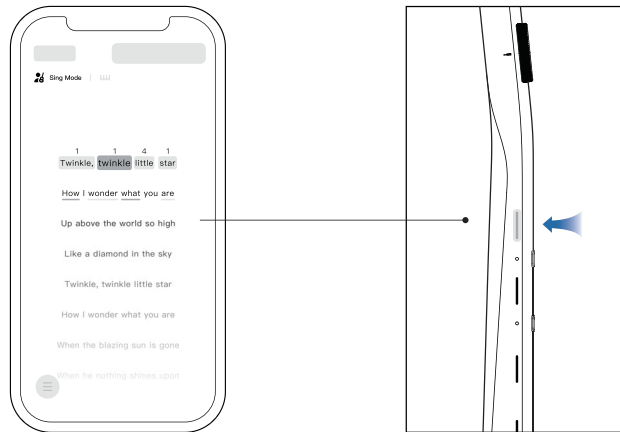


1.2 Melody Guide

1.21 How to Enable: Press and hold the fingerpicking pad (anyone) with your left hand, then flick any paddle with your right hand to toggle Melody Guide on or off. In Sing Mode, tap the Melody Guide icon in the top left corner of the app to activate the feature.

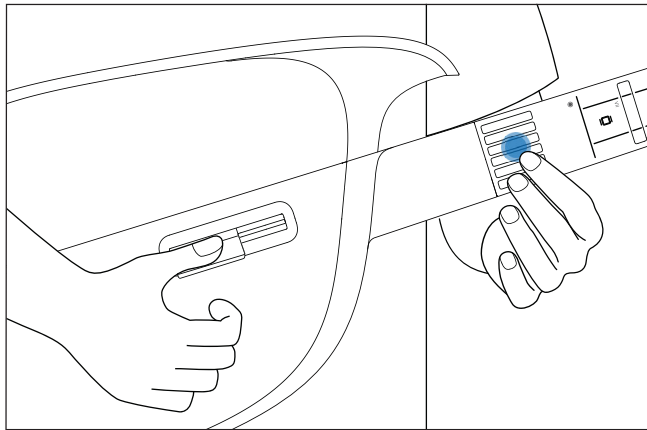

1.22 Turned On Effect: Automatically matches the chords you're playing and generates a real-time melody line for you to sing along with.

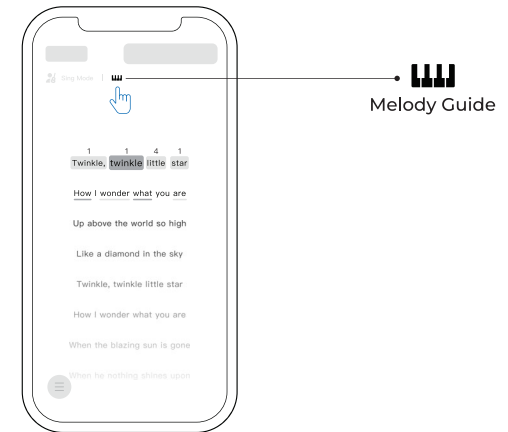


2. Solo Mode


2.1 How to Enable: Tap the mode switch button in the top left corner of the app to switch to Solo Mode.



2.2 Flick the paddle with your right hand - one stroke for each note - to control the melody.

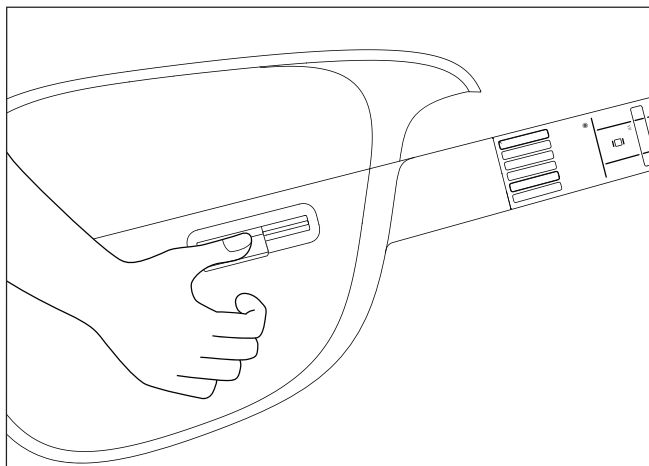


2.3 Press a chord pad with your left hand to trigger the chord backing - no extra paddle stroke needed. Use both hands together to play the full solo.

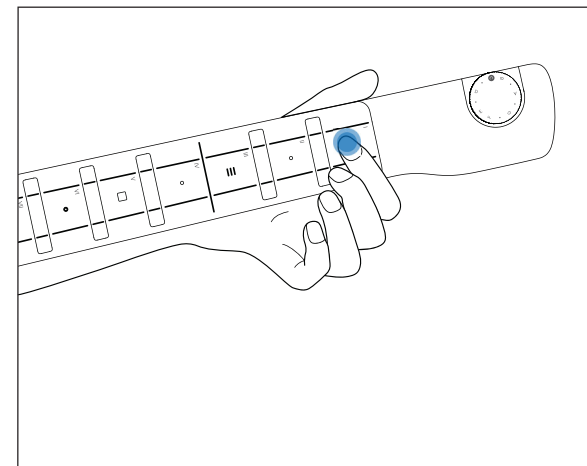


3. Drum Feature

3.1 Classic Drum: Press and hold the Beat Pad with your left hand, then strum downward to start the drum groove with a two-beat count-in. It also adds a synced bass line - letting one player sound like a full band.

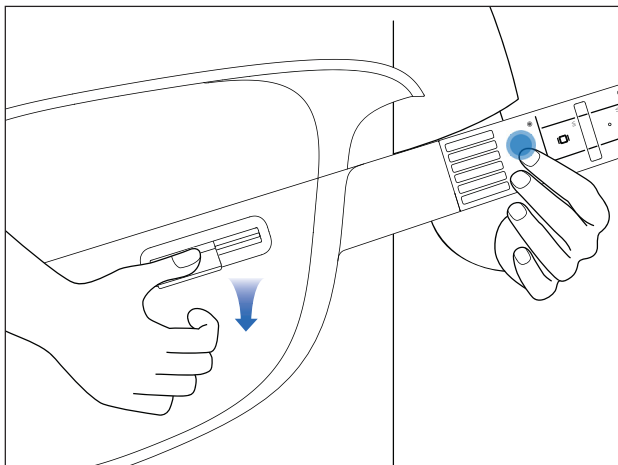


3.2 Armed Drum: Before the drum entry, press and hold the Beat Pad with your left hand, then strum upward to arm the drums.

The groove will activate with no count-in, automatically firing on your next chord and starting exactly together with it.

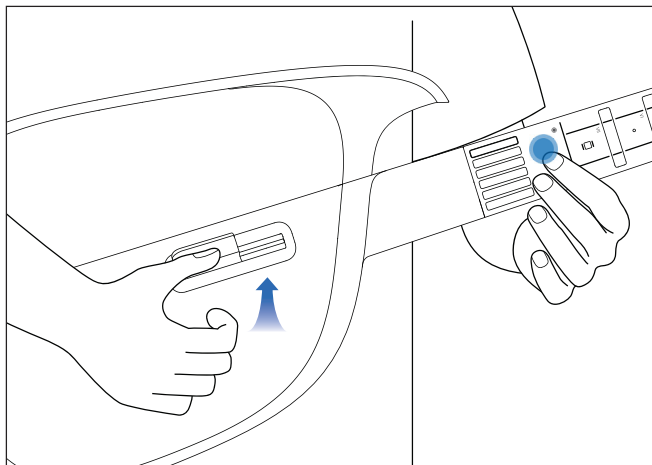

3.3 Auto Drum: Enable Auto Drum in the app to enjoy a full drum groove without any manual triggering.

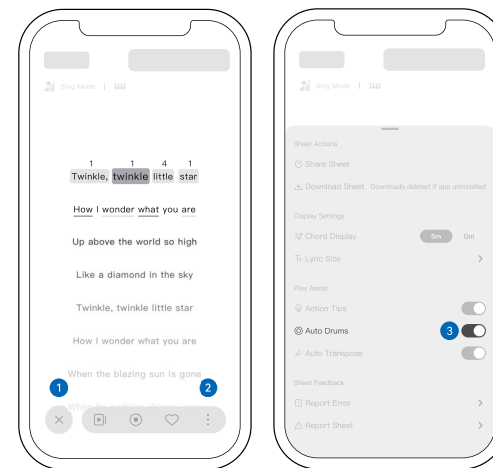

C-1 Product Specifications

Weight		≈ 2.7kg
Dimensions	Unfolded	894 x 291 x 89 mm (L x H x D)
	Folded	459 x 179 x 89 mm (L x H x D)
Operating Temp		0-45°C (32-113°F)
Input		3.5mm Jack, USB Type-C
Input Ports		3.5mm Jack, 6.35mm Jack, USB Type-C
Output Ports		2500mAh Lithium Polymer Battery
Charging	Slow charge	DC $\overline{\overline{=}}$ 5V/3A (approx. 4 hours)
	Fast charge	DC $\overline{\overline{=}}$ 20V/2A (approx. 2.5 hours)
Playback Time	Built-in Speaker	approx. 8 hours
	External Devices	approx. 12 hours
Speaker Power	Bass	30W
	Mid-High	15W

C-2 Hazardous Substances Declaration

Component Name	Hazardous Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Metal Parts	○	○	○	○	○	○
Plastic Parts	○	○	○	○	○	○
Silicone Parts	○	○	○	○	○	○
PCB Module	○	○	○	○	○	○
Adhesives	○	○	○	○	○	○

⚠ SAFETY WARNING

It is recommended that you read the following warnings and information before any use of this product, and follow all product safety and operating instructions. Failure to follow these guidelines could result in a physical injury, including electric shock, fire, and other injury, property damage, or even death. If you permit others to use this product, you are responsible for ensuring that each user knows and follows all product safety and operating instructions.

WARNING! Operating Environment

- Do not expose the instrument to rain, use it near water, or operate it in damp or humid environments. Do not place containers filled with liquid (such as vases, bottles, or glasses) on or near the instrument, as liquid may spill into its openings. If any liquid, such as water, enters the instrument, immediately power it off and unplug it from the electrical outlet. Then, contact a qualified LiberLive service technician for inspection and repairment.
- Never plug or unplug the power cord with wet hands.
- Do not place burning objects, such as candles, on the instrument. They may tip over and cause a fire.
- Do not place the instrument in excessively dusty areas, unstable environments, or locations with extreme temperatures (such as prolonged exposure to direct sunlight or near heater), as this may cause panel deformation and damage internal components or affect performance stability. (Confirmed operating temperature range: 0°–45°C / 32°–113°F)
- Do not place vinyl, plastic, or rubber objects on the instrument, as they may cause discoloration of the panel or chord pad.
- Do not use harsh chemicals, cleaners, or strong detergents to clean the instrument or its accessories, as they may cause material degradation. Follow the care and maintenance instructions for proper handling.
- Keep children and pets from biting or swallowing the instrument or its accessories to avoid injury or potential damage or explosion.

WARNING! Children's Health

- The deformation and operation of this device are difficult and dangerous. It is recommended that you keep the device and its accessories out of the reach of children.
- This device contains small parts that may fall off, and children may inadvertently damage the device and its accessories, or swallow small parts that may cause choking or other hazards.

WARNING! Device Placement

- When not in use, always turn off the instrument and charge it once every 6 months.
- When not using the instrument for an extended period, always unplug the charging cable from the power adapter.
- Do not place the instrument on an unstable surface, as it may cause it to tip over suddenly.
- Before moving the instrument, always unplug all connection cables to prevent cable damage or tripping hazards that could cause injury.
- When setting up this instrument, ensure the power outlet is within reach. If any issues or malfunctions occur, immediately turn off the power switch and unplug the instrument from the outlet.

WARNING! Operating Safety

- Do not insert fingers or hands into the gaps of moving parts on the instrument.
- Do not insert or drop paper, metal, or other objects into the gaps of the Chord Pad or Paddles. This could cause personal injury to you or others, damage to the device or other property, or operational failure.
- Do not rest your weight on the instrument or place heavy objects on it, and avoid using excessive force when operating the pads, knobs, switches or jacks.
- When using a strap, make sure the strap is securely attached to the instrument.
- Do not lift the instrument by the strap. This could cause serious injury or damage to the instrument.
- Do not treat the instrument roughly, such as swinging or shaking it. The strap may detach, causing accidents like the instrument falling or injuring nearby individuals.
- Slight heating during use or charging is a normal phenomenon.

NOTE: LiberLive is not responsible for any damage, data loss, or destruction caused by improper use or unauthorized modifications of this instrument.

WARNING! Disposal and Recycling Information

- The symbol on the right indicates that this instrument and/or its battery should not be disposed of with household waste. When you decide to dispose of this instrument and/or its battery, please follow local environmental laws and guidelines for disposal.



WARNING! Hearing Protection

- Before connecting this instrument to other electronic devices, make sure to turn off the power of all devices. Always set the volume to the minimum before turning on or off any of the devices.
- Make sure to set the volume of all components to the minimum, and gradually increase the volume while playing the instrument to achieve the desired listening experience.
- Do not use the instrument or connected devices/headphones at excessively high or uncomfortable volume levels for extended periods, as this may cause permanent hearing damage. If you experience any hearing loss or tinnitus, please consult a doctor.

WARNING! Charging Safety

- Do not place the charging cable near heaters or radiators. Additionally, avoid bending, damaging, or applying pressure to the charging cable.
- It is recommended to use a phone charger with a power rating of 65W or higher to charge the instrument. Using an inappropriate adapter may damage the instrument or cause it to overheat.
- Check electrical plugs regularly to remove any dirt or dust that has built up on them.
- During thunderstorms, unplug the power plug from the socket.
- Even when the power switch is turned off, a small amount of current may still flow to the instrument. If you plan not to use the instrument for an extended period, make sure to unplug the charging cable from the power socket

WARNING! Device Safety

If any of the following issues occur, please immediately turn off the power switch and unplug the power cord from the socket. Then, contact a qualified LiberLive technician for inspection and repairment.

- The charging cable or connector shows signs of wear or damage.
- Unusual smells or smoke are emitted from the instrument.
- Objects have fallen into the instrument.
- The sound suddenly stops during use.

NOTE : This instrument does not contain any user-serviceable parts. Please do not open the instrument or attempt to disassemble its internal components or make any modifications.

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 115 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Product Care

- Please use a soft dry cloth or a regular wet wipe. Do not use paint thinners, solvents, alcohol, cleaning liquids, or cloths soaked in chemicals.

NOTE: When cleaning, be careful to avoid getting water into the main body of the device!

Warranty instructions

- Products within the warranty period that are confirmed by our company' s service personnel to be damaged due to manufacturing defects or components under normal use will be eligible for free repair services.
- The LiberLive C2 Stringless Smart Guitar (accessories not included) comes with a 12-month warranty.

Type	Warranty Content	Warranty Period
Main Body	C2 Stringless Guitar	1 Year
Accessories	Travel Case	3 Months

The warranty does not cover the following items:

- Damages caused by improper use, maintenance, or storage that do not follow the product's manual.
- Use, corrosion, or oxidation caused by direct exposure to sunlight, contact with liquids, placement in damp or extremely high-temperature environments, or use in environments with drastic changes in conditions.
- Wear and tear on the product or accessories due to normal usage.
- Damage caused by disassembly, modification, or repair not authorized by LiberLive or LiberLive authorized service providers.
- Damage caused by force majeure events such as fire, flood, lightning, etc.
- Damage occurring after the limited warranty period has expired.

How to get warranty service

You can contact the retailer where you purchased the product or accessory, or the LiberLive customer service center for further information and assistance. When contacting LiberLive, please make sure to provide the following information:

- The model and serial number of the product or accessory;
- Your complete address and contact information;
- The original invoice, receipt, or sales slip for the purchased product. When making any claims under this limited warranty statement, you must provide valid proof of purchase. If valid proof of purchase cannot be provided, LiberLive is not obligated to provide support services under this limited warranty statement.
- If your device is found to have defects or malfunctions by LiberLive or an authorized LiberLive service provider, we will repair or replace the product to restore its guaranteed functionality.
- If the product does not meet the warranty conditions and requires a fee, LiberLive will charge you for the repairment and provide a repair report.

The product images in this manual are for illustration purposes only. Please refer to the actual product.

- **Official website:** <https://liberlive.com/>
- **Warranty service:** support_global@liberlive.com

Follow Us on Social Media



@liberlive.official



LiberLive



@liberlive.official



Join Facebook Group
Official LiberLive Community

Certificate of Conformity

Brand	LiberLive
Product Name	LiberLive C2 Stringless Smart Guitar
Input	Slow Charge DC $\equiv$ 5V/3A
	Fast Charge DC $\equiv$ 20V/2A
Battery Capacity	3.7V*4 2500mAh Lithium Polymer Battery
Speaker Specifications	Bass 30W, Mid-High 15W
Manufacturer	UNKNOWN PLANET TECHNOLOGY LIMITED Designed by LiberLive® / Made in China

The product images in this manual are for illustration purposes only.
Please refer to the actual product.

Official website: <https://liberlive.com/>

Warranty service: support_global@liberlive.com