

Remote Control Instructions

Note: Please read the following content carefully before use



Remote Control Pairing:

If the remote control does not respond when used for the first time, you need to pair it with the toilet. First, make sure the toilet is powered on and no one is seated on the toilet seat. Press and hold the "rear wash" button on the left side of the toilet for 3 seconds. When you hear a long beep (di--), immediately press any button on the remote. When you hear a single beep (di), the toilet and remote have been successfully paired.

HIP CLEANING

This function requires you to sit on the toilet seat, press the (HIP CLEANING) button, the (Cleaning Nozzle) will move out to clean the buttocks. Press the (HIP CLEANING) button again, and the (Cleaning Nozzle) to start moving and cleaning. After 90 seconds, rear cleaning will automatically stop, or press the (Stop) button.

FEMALE CLEANING

This function requires you to sit on the toilet seat, press the (FEMALE CLEANING) button, (Cleaning Nozzle) will move out to start female cleaning, press the (FEMALE CLEANING) button again, (Cleaning Nozzle) will move to clean, and then automatically stop female cleaning after 90 seconds or press the (Stop) button.

AMBIENT LIGHT

Press the (AMBIENT LIGHT) button to turn the lid ambient light on or off.

CHILD CLEANING

This function requires the child to be seated on the toilet seat. Press the (CHILD CLEANING) button, then press the (HIP CLEANING) button to start a 90-second wash, or press the (FEMALE CLEANING) button to start a 90-second wash. After cleaning is finished, the toilet will automatically flush and then start the drying function for 240 seconds.

Note: Within 5 minutes after using child mode, only hip cleaning, female cleaning, or drying functions can be used. To use other functions, press the (CHILD CLEANING) button again or press the (STOP) button to exit child mode.

STOP

1. Press the (STOP) button to stop the hip cleaning, female cleaning, or drying function currently in use.
2. Press and hold the (STOP) button for more than 3 seconds to turn the toilet power off or on.

DRY

This function requires you to sit on the toilet seat, press the (DRY) button, and the toilet will automatically flush once, and then start the drying function. After 240 seconds, drying will automatically stop, or press the (STOP) button.

< NOZZLE POSITION

During the buttocks or female cleaning process, press this button to adjust the position of the (Cleaning Nozzle) forward. (repeatedly press the button to move the nozzle forward)

> NOZZLE POSITION

During the buttocks or female cleaning process, press this button to adjust the position of the (Cleaning Nozzle) backward. (repeatedly press the button to move the nozzle backward)

+ WATER PRESSURE

During the cleaning process of buttocks or female, press the (+) button to increase the water pressure of (Cleaning Nozzle), and it can be adjusted to weak, medium, strong, and strongest.

— WATER PRESSURE

During the cleaning process of buttocks or female, press the (-) button to reduce the water pressure of (Cleaning Nozzle), and it can be adjusted to strongest, strong, medium and weak.

SEAT TEMP

Press the (SEAT TEMP) button to adjust the temperature of the toilet seat. There are four settings in total. The first one is for normal temperature, the second for 93°F, the third for 99°F, and the fourth for 104°F.

WATER TEMP

During the cleaning process of buttocks and female, press the (WATER TEMP) button to adjust the water temperature of (Cleaning Nozzle). There are 4 levels of water temperature adjustment, the first level is normal temperature, the second level is 93°F, the third level is 99°F, and the fourth level is 104°F.

DRYER TEMP

During the process of using the drying function, press the (DRYER TEMP) button to adjust the drying temperature, which can be adjusted to first gear, second gear, third gear, and fourth gear.

FOUR SEASON TEMP

When the four-season temperature mode is activated, the water temperature, air-drying temperature, and seat temperature will automatically adjust according to the ambient temperature. Note: After entering four-season temperature mode, you cannot manually adjust the temperatures. To adjust them manually, you must first exit four-season temperature mode.

Press and hold the (FOUR SEASON TEMP) button for more than 3 seconds. When you hear one (di) beep, four-season temperature mode is turned on. Press and hold the (FOUR SEASON TEMP) button again for more than 3 seconds. When you hear two beeps (di, di), four-season temperature mode is turned off.

LID

Press this button and the toilet lid will open automatically. Press it again and the toilet lid will close automatically.

SEAT

Press this button and the toilet seat will open automatically. Press it again and the toilet seat will close automatically.

FLUSH

Press the (FLUSH) button to flush the toilet.

LIGHT

Press the (LIGHT) button to turn the toilet's night light on or off.


Common fault diagnosis

Note: If similar fault is found, please read the following solution or contact after sales

Fault phenomenon	Fault analysis	Fault handling
Product unavailable	Check to see if the power/socket is loose	Please check the circuit
	Whether there is leakage (the display light of leakage protection plug is not on)	Remove the power plug from the socket and replug it later. Press the reset switch of the leakage protection plug. If the toilet still cannot be operated, please unplug the power plug and entrust the repair.
No water with spray	Check if water is cut off	Pending resumption of water supply
	Check that the angle valve is closed	Open the angle valve
	Check if the inlet filter is blocked	Clean or replace the filter
	Check the inlet pipe for bends	Exclude the intake bend
Cleaning insufficient rigidity	Check whether the cleaning pressure is at the lowest level	Refer to the instruction manual for regulating the water pressure
	Check if the inlet filter is blocked	Clean or replace the filter
Spray water disorderly	Abnormal operation	Unplug the plug for one minute and then switch it back on
Water temperature is not enough	Check whether the water temperature is set low	Adjust the water temperature according to the instructions
The washer often drips water	Solenoid valve failure	Please get professional maintenance technicians
Misoperation of remote control	Check whether the battery level of the remote control is too low	Please replace the battery
Drying/seat temperature too low/no heating	Check whether the temperature is set at low or normal temperature	Adjust the temperature according to the instruction
	Check if the power saving mode is enabled	Refer to the manual to choose to turn off the power saving function
Seat/cover falling too fast	Failure of damping drop function	Please get professional maintenance technicians
The cleaning function can not be used normally	Whether the area under the seat is clear of any objects	Remove the hard objects
	Whether the body's sensing area is covered	Adjust the body sensing area of the seat cover
	Whether the power supply is restored during the power failure	Unplug the plug for one minute and then switch it back on
	Whether your skin is in full contact with the seat's sensor area	Sensor failure, please get professional maintenance technicians

Seat/cover cannot be opened or closed *Only for automatic flip machines	Failure of automatic damping function	1. Disconnect the plug for one minute and switch it back on 2. The above treatment is invalid, please ask professional personnel for maintenance
Low water pressure does not flush clean	Filter mist blocking	Clean the filter according to the instruction
	Pipe bending	Observe whether the connection line bends and keep the water supply line smooth
No siphon flushing is not clean when water pressure is normal	Air escapes from the sewage outlet	Please get professional maintenance technicians
	The S-bend is blocked	Please buy water pipe dredger in the market for dredging
Poor flush performance with normal water pressure	Flush valve failure	Ask professionals for maintenance

Installation steps for smart toilet

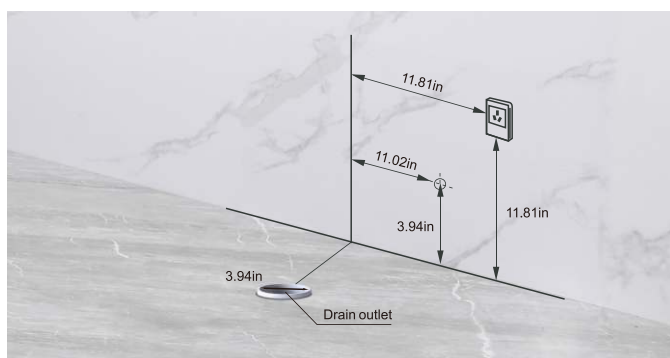

The confirmation of the installation environment.



1. The confirmation of the installation environment:
The measurement distance is 11.81 in or greater.



2. Place the fixed disk into the drain outlet and mark the screw hole positions.



3. Take off the fixed disk and drill four holes for screws.



4. Put the screws into the holes.

Corresponding to the following accessories/quantities:



5. Place the fixed disk into the drain outlet and tighten the screws to secure it.

Corresponding to the following accessories/quantities:



6. Install two long screws as shown in the picture below.

Corresponding to the following accessories/quantities:



7. Install the white snap onto the positioning screw.

Corresponding to the following accessories/quantities:



8. Lock the gasket screws.

Corresponding to the following accessories/quantities:



9. Gently turn the toilet over to access the base and install the flange ring.



10. Apply a layer of silicone sealant to the base of the toilet. (The silicone sealant adhesive in the picture needs to be purchased by oneself.)



11. Move the toilet to the location where it will be installed.



12. Fix the white screws into the screw holes on both sides of the ceramic.
Corresponding to the following accessories/quantities: 



13. Lock the silver fixing screws on both sides.
Corresponding to the following accessories/quantities: 



14. After the screws are tightened, install the white decorative cover.

Corresponding to the following accessories/quantities:



15. Install the black expansion rods on the toilet;

Corresponding to the following accessories/quantities:



16. As shown in the picture, install the toilet seat, place all the wires and hoses inside the toilet, and insert the white PVC pipe.

Connect the two black power wires together, then twist on the included wire nut to secure them.

Important: When connecting the PVC pipe, make sure it is securely snapped into place. If it is not fully secured, water leakage may occur.

Corresponding to the following accessories/quantities:



17. Adjust the gap between the cover plate and the toilet to align them.



18. Open the toilet seat, open the white decorative cover as shown, and remove the two screws shown on the right.




Corresponding to the following accessories/quantities:





19. Secure the toilet with silicone sealant to prevent external dirt from entering.

(The silicone sealant in the figure needs to be purchased separately)

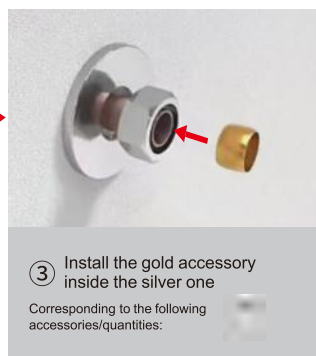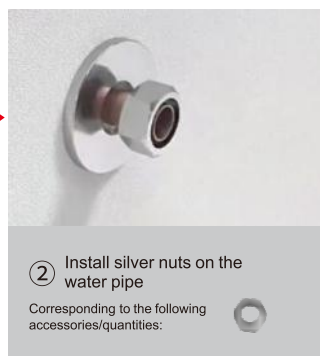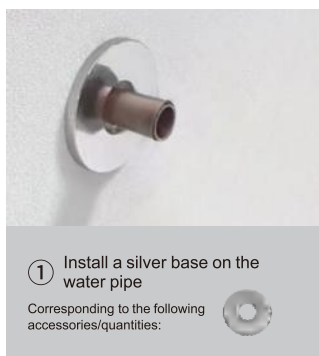

Our angle valve is a standard American-controlled angle valve. If the valve is incompatible with your plumbing setup, please contact us in time. Email: customerservice@hkfoam.com, we will solve your problem as soon as possible.



21. Connect the 2-point PE pipe to the adapter, connect the adapter and water inlet pipe to the angle valve, and tighten the nut.



22. Finally connecting the flexible tube to the inlet angle valve and turn on the angle valve switch.

Note: If the water pressure is too high and water splashes over the toilet seat when flushing, slightly close the angle valve to reduce the water flow.



23. Plug in the power supply, press the (RESET) button forcefully. Release the button when you hear a (di) sound. If the toilet display remains constantly on, it indicates that the power has been successfully turned on. Press the (TEST) button to turn off the power.

Battery replacement and installation

If the equipment is powered off, you can install a spare battery and discharge it. Note: If the spare battery runs out, you can purchase a 16-volt battery and replace it by following the installation steps below. (When installing the toilet for the first time, a spare battery needs to be installed.)



Step 1. Cut off the power supply and find the power outage flushing wire interface behind the toilet.



Step 2. Connect the 16V spare battery to the toilet's connection cable and place the battery in a dry area behind the toilet.

Note: When there is a power outage, please install the battery of the device for flushing. Press and hold the knob on the side of the toilet for 3 seconds to flush.



1. Gently open the lids on both sides of the battery compartment;



2. There are positive and negative pole markings in the battery compartment. Insert the batteries according to the corresponding markings; install 10 AA batteries in total;



3. After installing the batteries, align the position and gently close the lid.

Note: During a power outage, install the device battery for flushing. Press and hold the button on the side of the toilet for 3 seconds to flush.

Installation method for toilet cleaner and fragrance tablets



1. To open the lid: push it gently backward, then lift it.



2. Tear open the toilet cleaner package, then insert it.

Corresponding to the following accessories/quantities:



3. Peel off the sticker, insert the fragrance tablet, then stick the sticker back on.

Corresponding to the following accessories/quantities:



Notes:

Toilet Cleaner Usage and Precautions:

1. Keep the blue outer protective film; do not tear it off when using (the film dissolves directly in the water tank) to avoid affecting the product's dissolution effect and performance.
2. Let it dissolve in the water tank: Place the toilet cleaner in the box and let it dissolve fully for at least 20 minutes (until the water turns blue) before flushing.
3. Replace the toilet cleaner in time: When the blue toilet cleaner is fully dissolved, the blue color will fade. At this point, put a new toilet tank cleaner into the tank to ensure the cleaning effect.
4. Not a substitute for a toilet brush: This product cannot fully replace a toilet brush. Its main function is to help keep the toilet glaze clean and reduce dirt buildup; stubborn stains still need to be cleaned with a toilet brush.

Fragrance Tablet Usage and Precautions:

1. Lift the sticker on the fragrance box (do not tear it off);
2. Tear open the fragrance tablet package, put it into the box, then stick the sticker back on.
3. Replace the fragrance tablet in time when the scent fades, Or add a few drops of essential oil to the original fragrance pad.

Product standard

Dimensions	26.77*15.35*17.91in		
Rated voltage	Alternating voltage 110V±10%, 60HZ		
Rated power	Water inlet temperature: 59°F Outlet water temperature: 104°F Water discharge: 750ml/min Power: 1250W		
Cleaning	Water outlet	Hip cleaning	About 700 ml/min
		Female cleaning	About 700 ml/min
	Outlet water temperature		Normal temperature, and 93°F/99°F/104°F(4 levels)
	Water heating		Instant water heater
	Heater power		Water inlet temperature: 59°F Outlet water temperature: 104°F Water discharge: 750ml/min Power: 1400W
Seat heating	Seat temperature		Normal temperature, and 93°F/99°F/104°F(4 levels)
	Heater power		45W
Warm drying	Wind temperature		Normal temperature, and 113°F/122°F/131°F(4 levels)
Spray position			Adjustable fore and aft
Water temperature			41~104°F
Water pressure (without water tank)			There is no water pressure requirement.

For any questions or support, please email: [customerservice@hkfoam.com]

Due to different printing time of the materials, the product specifications may be slightly changed.
Please refer to the material object.

FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.