

time frame

User Manual

E-Ink Bible Verses & Themed Quotes Clock



Table of Contents

Table of Contents	2
1. What's in the Box	3
2. Getting to Know Your TimeFrame	4
2.1 Front of the Device	4
2.2 Back / Side of the Device	4
2.3 Power	4
3. Setting Up Your TimeFrame	5
3.1 Power On	5
3.2 Connect Your Phone or Computer to the Clock	5
3.3 Connect to Your Home Wi-Fi	5
3.4 Create Your Account	6
3.5 Configure Your Clock	6
Bible Version	6
Display Preferences	6
Update Interval	6
3.6 Setup Complete	7
4. Using Your TimeFrame	8
4.1 What the Display Shows	8
4.2 Navigating On-Device Settings	8
5. Managing Your Clock Online	9
5.1 Logging In	9
5.2 Your Account Dashboard	9
5.3 Changing Clock Settings	9
6. Adding Additional Clocks	10
7. Using TimeFrame Offline	11
7.1 What Works Offline	11
7.2 When It Reconnects	11
8. Resetting Your TimeFrame	12
8.1 Soft Reset (Minor Issues / Freeze)	12
8.2 Factory Reset	12
How to Factory Reset	12
9. Warranty	13
9.1 What Is Covered	13
9.2 What Is Not Covered	13
9.3 Viewing Your Warranty	13
9.4 Making a Claim	13
10. Troubleshooting	14
11. Safety & Care	15
12. Contact & Support	16

1. What's in the Box

Your TimeFrame package includes:

- TimeFrame E-Ink Clock device
- Power adapter and cable
- Quick-Start card
- TimeFrame User Manual

 
WARNING

WARNING: This product can expose you to chemicals including **Cobalt lithium nickel oxide (or Lithium Cobalt Oxide), Metallic Nickel, and Carbon Black**, which are known to the State of California to cause cancer, and **Cobalt lithium nickel oxide (or Lithium Cobalt Oxide), Lead, and Phthalates (DEHP, DBP, BBP)**, which are known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Note: Keep the original packaging in case you need to return or ship the device.


2. Getting to Know Your TimeFrame

2.1 Front of the Device

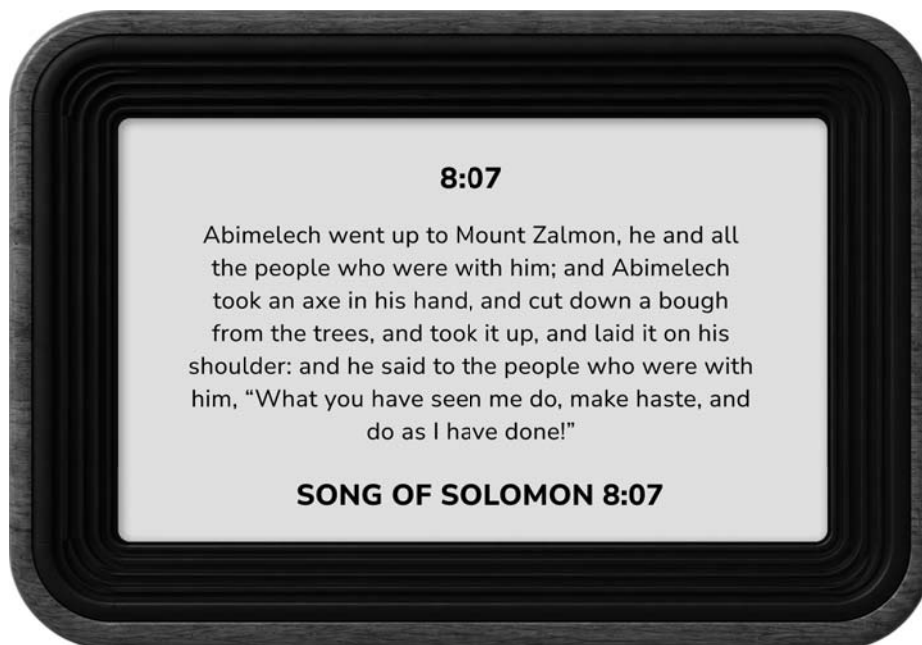

The front of your TimeFrame features a glare-free E-Ink display — similar to a Kindle — that shows the current time and a matching Bible verse or other themed quote.

 2.2 Back / Side of the Device

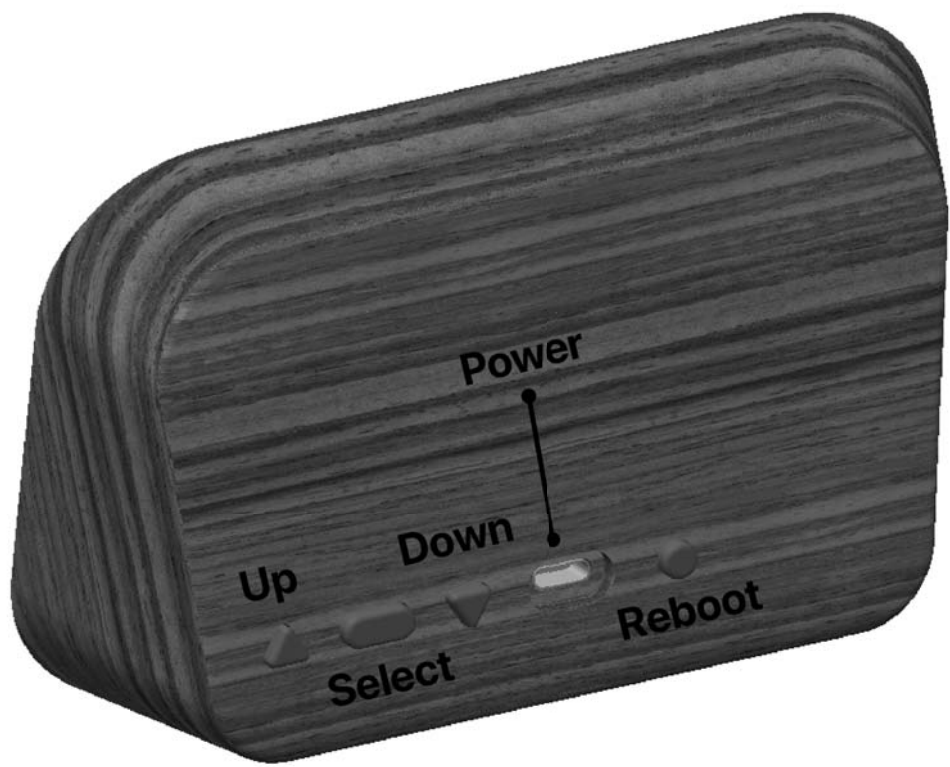

Your TimeFrame has four physical controls:

Control	Function
Arrows (Up & Down)	Tap up or down to navigate the device menus and display options.
Selection Button	Short press (< 2 seconds): Select option (menu choice or configuration) Long press (> 5 seconds): Go back to previous screen
Reboot Button	Press the button for >5 seconds to manually reboot the device. No settings will be lost.

2.3 Power



Connect the included power cable to the port on the device. No power adapter is included. Use a USB-C adapter to connect the power cable to a power source.

| 3. Setting Up Your TimeFrame

Setup takes about 5–10 minutes. You will need a smartphone or computer with Wi-Fi, and access to your home Wi-Fi network password.

3.1 Power On

1. Connect the power cable to your TimeFrame.
2. The E-Ink screen will display a welcome message and instructions for connecting to your local WiFi and creating an account.



3.2 Connect Your Phone or Computer to the Clock

The TimeFrame temporarily acts as a Wi-Fi hotspot during setup.

3. On your phone or computer, open Wi-Fi settings.
4. Look for a network named "TimeFrame-XXXX" (where XXXX is your device's unique ID — shown on the clock screen).
5. Connect to that network. The password is also shown on the clock screen.
6. Once connected, a setup webpage will open automatically. If it does not open, type the address shown on the clock screen into your browser.



3.3 Connect to Your Home Wi-Fi

7. The setup page will display a list of available Wi-Fi networks.
8. Select your home Wi-Fi network.
9. Enter your Wi-Fi password and tap Connect.
10. The clock will connect to your home network. A confirmation message will appear on both the clock screen and the webpage.

 
Connection failed?

Double-check your Wi-Fi password and try again. Make sure you are connecting to a 2.4 GHz network — some 5 GHz networks are not supported. If you only see one network option available it will usually have both 2.4 GHz and 5 GHz and will automatically default to 2.4 GHz for your TimeFrame device.

3.4 Create Your Account

11. After connecting, you will be prompted to create a TimeFrame account or log in.
12. Enter your email address and full name. Phone number is optional.
13. Check the box to accept the Terms of Service and Privacy Policy.
14. A 6-digit code will be sent to your email. Enter it on screen to verify your account.
15. There is no need to create a password. TimeFrame will send you a unique code each time to log in to your online account. This code acts as your password.

Note: Your account lets you manage settings, add more content, view warranty information, and manage multiple devices from any browser at gettimeframe.com.

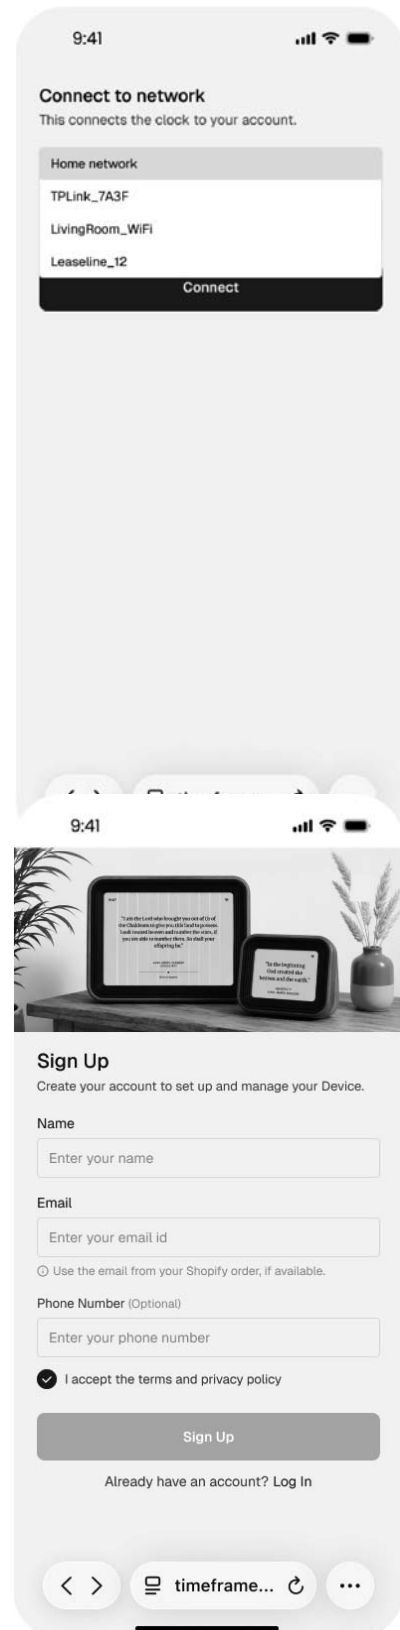

3.5 Configure Your Clock

Now personalize how your TimeFrame displays content:

Device Name

Choose a nickname for your device. This will help you know which device you are configuring if you have more than one TimeFrame clock.

Bible Version

Choose the Bible translation you prefer. Available versions include:

- King James Version (KJV)
- World English Bible (WEB)
- Berean Standard Bible
- American Standard Version
- Douay-Rheims
- And more — see the full list at <https://app.gettimeframe.com/content>

Display Preferences

 
- Show/hide the current time on screen
- Select between 12 and 24 hour mode
- Font type: Select your preferred font
- Font size: Small, Medium, Large, Extra Large
- Dynamic font sizing: automatically adjusts text to fit the screen

Update Interval

Choose how often the verse changes:


- Every 1 minute (default)
- Every 5 minutes
- Every 15 minutes
- Random mode (changes every 1–15 minutes)

Note: A live preview on the setup page shows exactly how your clock display will look before you save.

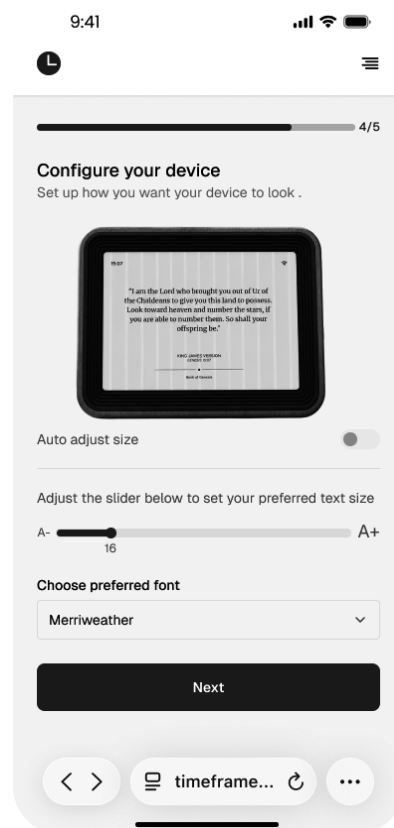

3.6 Setup Complete

 
Once you save your settings, your TimeFrame will begin displaying Bible verses. You will see a confirmation screen.

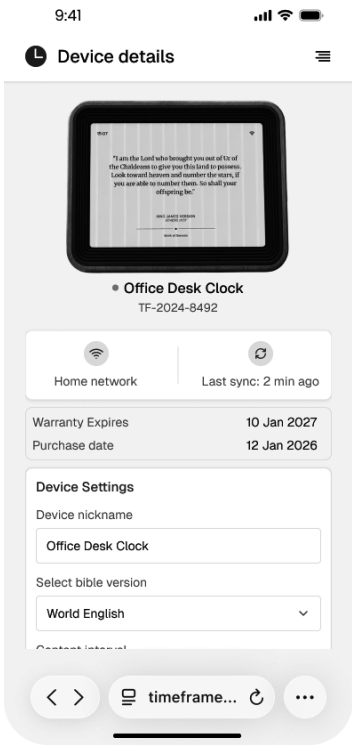

Your device is now ready. Place it wherever you would like — a nightstand, desk, kitchen counter — and enjoy daily inspiration.

| 4. Using Your TimeFrame

 4.1 What the Display Shows

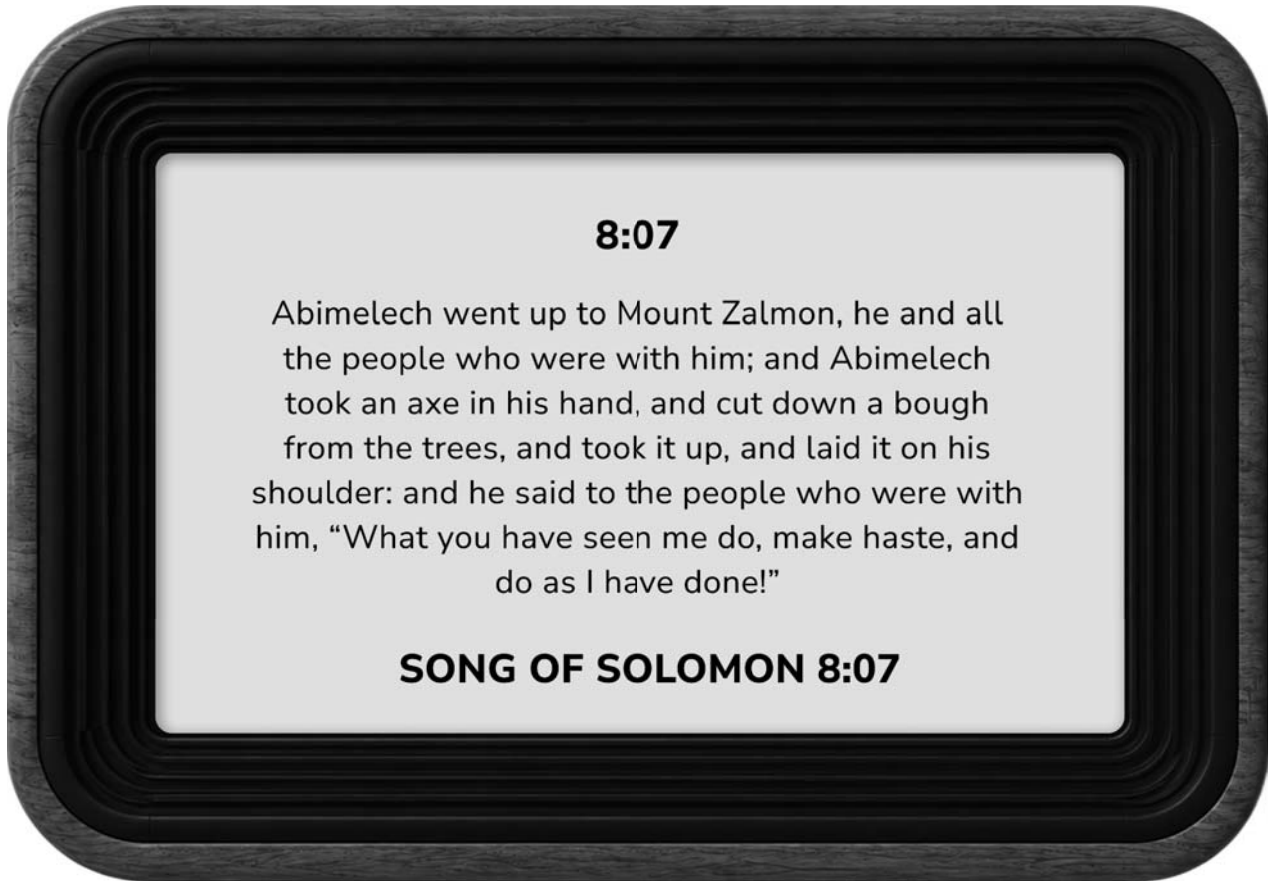

Your TimeFrame displays:

- The current time (if enabled)
- A Bible verse reference or other themed content that matches the time — for example, John 3:16 at 3:16
- The full verse or quote text

The verse automatically changes at the interval you selected during setup.

4.2 Navigating On-Device Settings

You can adjust settings directly on your clock using the buttons on the back of the device.

16. Press the selection button to access the device settings.
17. Use the up and down arrows to navigate the menu.

18. Press the selection button to access the configuration screen for the menu option you want to view or adjust.
19. To go to a configuration setting, use the up and down arrows.
20. Tap the selection button to activate the setting, and use the arrow buttons to adjust the setting.
21. Tap the selection button again to confirm the new setting and exit the current setting so you can navigate to the other device settings.
22. Press the selection button for 5 seconds to exit the current screen and go back to the previous screen.



The on-device menu includes:

- Content → Bible Version or other themed content
- Typography: Font and font size
- Time: Update interval, time format, hide/display time
- Wi-Fi Settings
- About: Device information, warranty, certification
- Reset: Device reset and factory reset

Note: Settings changed directly on the clock will be updated on the website to reflect the same changes.

5. Managing Your Clock Online

Visit gettimeframe.com and log in at any time to manage your clock from any browser on your phone or computer.

5.1 Logging In

 
23. Go to gettimeframe.com and tap My Account.
24. Enter your email address and tap Send Login Code.
25. Check your email for the 6-digit code and enter it on the site.

Note: There is no password — a fresh login code is sent to your email each time. Codes expire after 10 minutes.

5.2 Your Account Dashboard

Your dashboard shows:

- All registered TimeFrame devices
- Connection status (online / offline)
- Warranty information for each device
- Quick links to settings, FAQ, and support

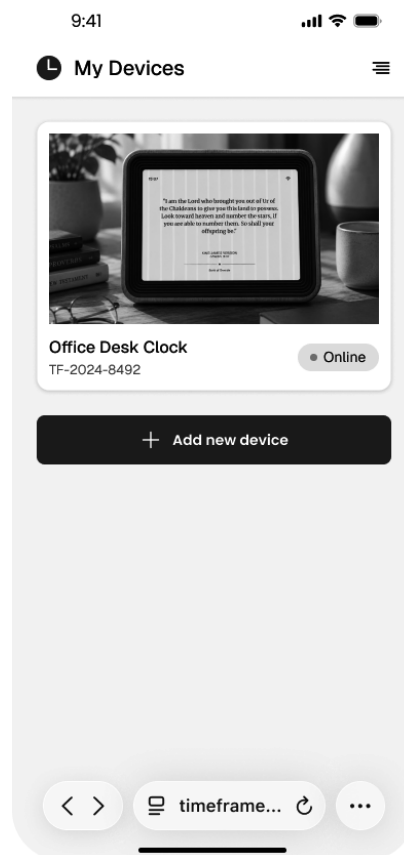

5.3 Changing Clock Settings

 
26. From the dashboard, tap on a device.
27. Adjust content version or other themed content, font, display preferences, or update interval.
28. Use the live preview to see your changes before saving.
29. Tap Save Changes. Settings will sync to your clock within 30 seconds when it is online.

6. Adding Additional Clocks

You can add multiple TimeFrame devices to a single account and manage them all from one place.

30. Power on your new TimeFrame clock.
31. Follow the Wi-Fi connection steps in Section 3.2 and 3.3.
32. When prompted, log in to your existing account instead of creating a new one.
33. The new device will appear on your dashboard alongside your other clocks.

Note: Each device can have its own nickname (e.g., "Kitchen", "Bedroom") and independent settings.

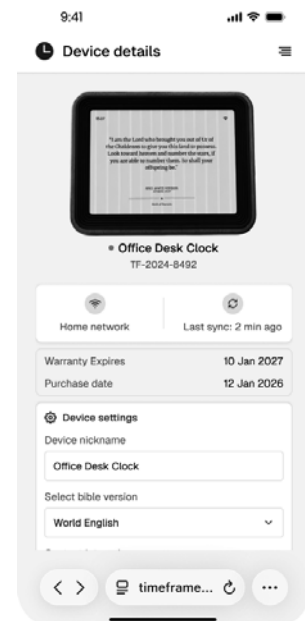

| 7. Using TimeFrame Offline

Your TimeFrame works fully offline after initial setup. All Bible verses and other purchased content are stored on the device — no internet connection is required for daily use.

7.1 What Works Offline

- Bible verse and themed content display continues at your chosen interval
- Timekeeping (the internal clock maintains accurate time)
- On-device menu and settings

7.2 When It Reconnects

- Time syncs automatically to the internet (correcting any drift)
- Settings changes you made on the website are applied
- Firmware updates are checked and installed if available

 
Note: *The device can maintain accurate time for up to 7 days offline. If you need to adjust the time manually, go to the on-device menu: Wi-Fi Settings → Adjust Time.*

8. Resetting Your TimeFrame

8.1 Minor Issues / Freeze

If the device is frozen for more than 2-3 minutes, it will automatically perform a reboot. You can also manually reboot the device by pressing the reset button on the back for 5 seconds.

34. The device will restart. All settings and your Wi-Fi connection are preserved.
35. No re-pairing is required.

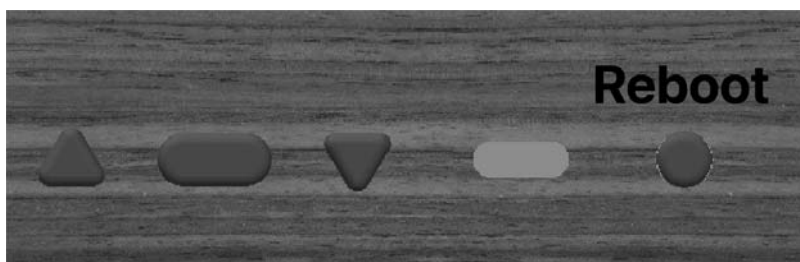

8.2 Resetting Your TimeFrame

There are two ways to reset your TimeFrame: Device Reset and Factory Reset. A factory reset wipes all settings and Wi-Fi credentials. Use this when transferring the device to someone else, or to resolve a persistent issue.

How to Reset Your TimeFrame

36. Go to your Settings on your device or in the web application (<https://app.gettimeframe.com/login>) for the same device.
37. Use the arrow buttons to choose one of two options:
 - Device Reset — Wipes settings and Wi-Fi credentials, but the device stays linked to your account. You will need to reconnect to Wi-Fi.
 - Factory Reset — Wipes everything and removes the device from your account. A new user can register it. Use this option when gifting or selling the device.
38. Confirm your selection by pressing the Selection Button.

Factory Reset is Permanent

A factory reset cannot be undone. Make sure you have selected the correct option before confirming.

Note: Your warranty stays with the device and does not reset — even if ownership changes.

| 9. Warranty

Your TimeFrame is covered by a 1-year limited warranty from the date you register the device.

9.1 What Is Covered

- Manufacturing defects
- Normal use hardware failures

9.2 What Is Not Covered

- Damage from drops, water, or misuse
- Unauthorized modifications
- Normal wear and tear

9.3 Viewing Your Warranty

Go to the About section on the device and choose Warranty, or log in to your account at gettimeframe.com to view your warranty activation date, expiration date, and status for each device. You can also print or download your warranty information as a PDF.

9.4 Making a Claim

If you believe your device has a covered defect, contact our support team:

Email: support@gettimeframe.com

Website: gettimeframe.com/support

10. Troubleshooting

Problem	What to Try
Device won't turn on	1. Check that the power cable is firmly connected. 2. Try a different power outlet. 3. Wait 30 seconds and try again. Contact support if the issue persists.
Won't connect to Wi-Fi during setup	1. Double-check the Wi-Fi password. 2. Make sure you are using a 2.4 GHz network. 3. Move the clock closer to your router and retry.
Display not updating / verse not changing	1. Check your update interval setting — it may be set to 15 minutes. 2. Perform a soft reset (short press the reset button).
Device is frozen / unresponsive	1. Wait 2–3 minutes — the device will auto-restart. 2. Or press the reset button briefly (soft reset).
Time shows incorrectly	1. Reconnect to Wi-Fi — the clock will sync the time automatically. 2. To adjust manually: go to the on-device menu → Wi-Fi Settings → Adjust Time.

For additional help, visit gettimeframe.com/support or email support@gettimeframe.com.

11. Safety & Care

- Keep the device away from water and moisture.
- Do not expose to extreme heat, cold, or direct sunlight for extended periods.
- Use only the included power adapter.
- Do not attempt to open or repair the device yourself.
- Clean the screen gently with a soft, dry cloth.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

12. Contact & Support

Website	gettimeframe.com
Support Email	support@gettimeframe.com
FAQ	gettimeframe.com/faq
Warranty	gettimeframe.com/warranty

Thank you for choosing TimeFrame.

May every minute be an inspiration.

FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.