 
 
 


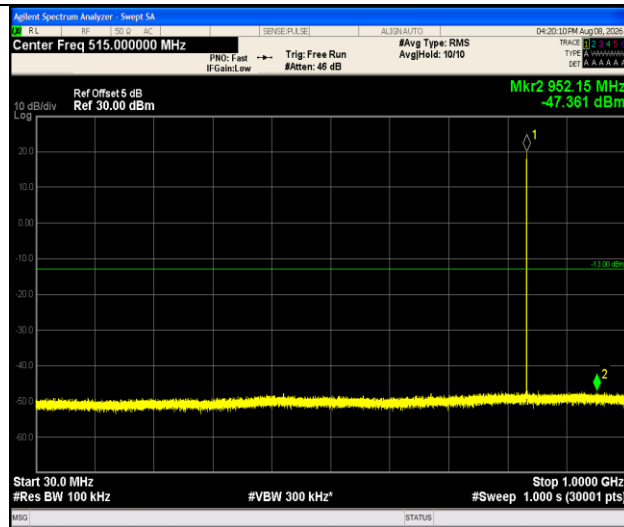


GPRS850-190-5-30~1000MHz-PASS

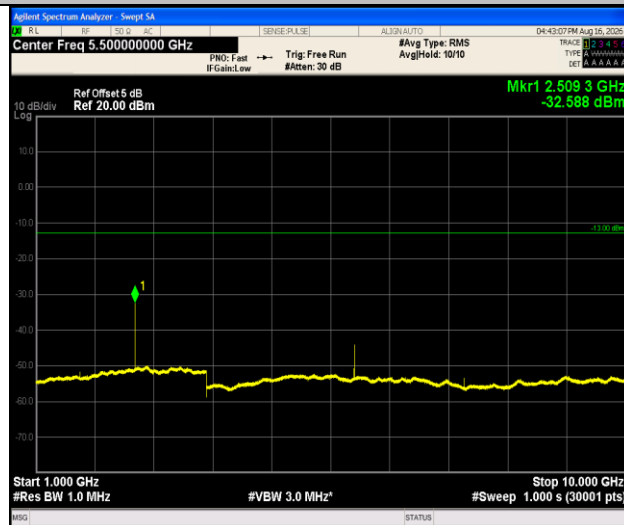


GPRS850-190-5-1000~1000MHz-PASS

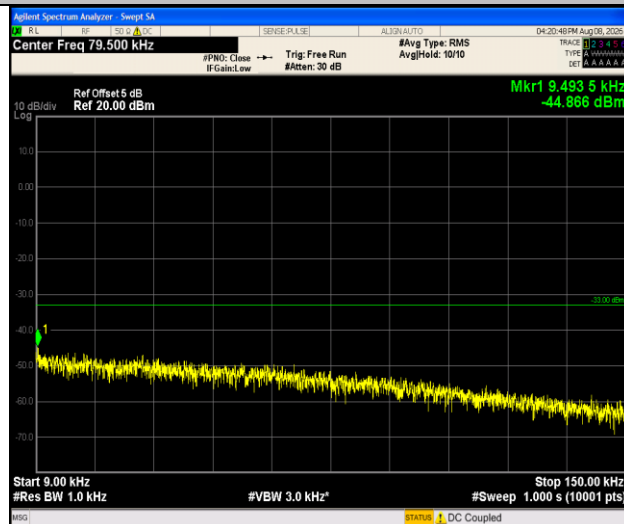

 
GPRS850-251-5-0.009~0.15MHz-PASS

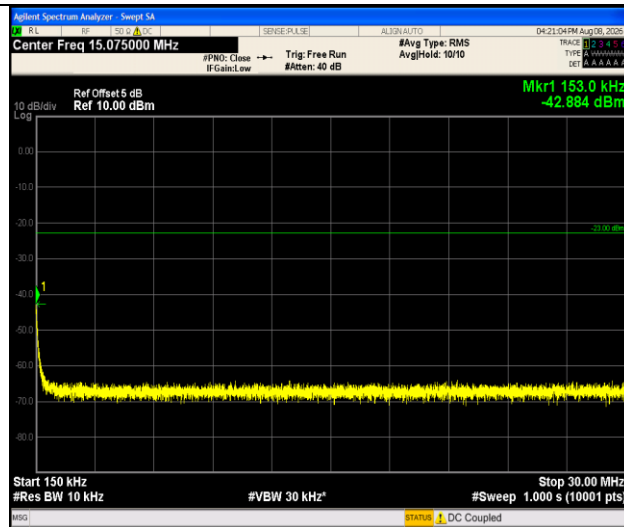


GPRS850-251-5-0.15~30MHz-PASS

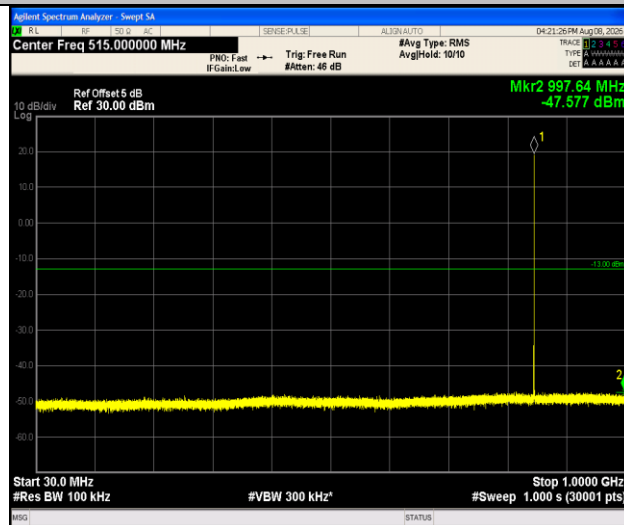 


GPRS850-251-5-30~1000MHz-PASS

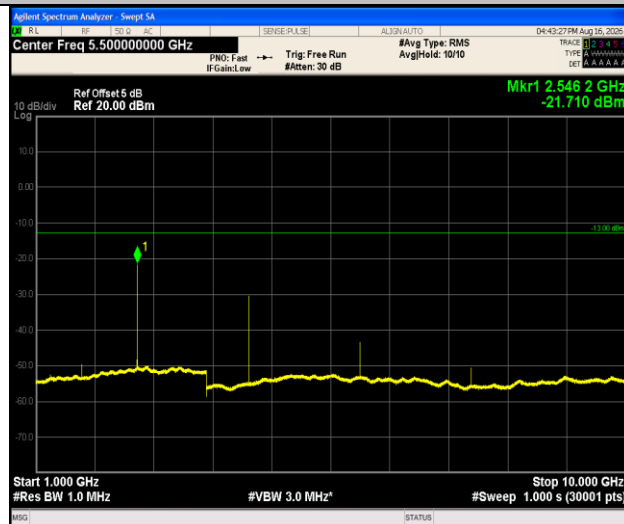 


GPRS850-251-5-1000~10000MHz-PASS

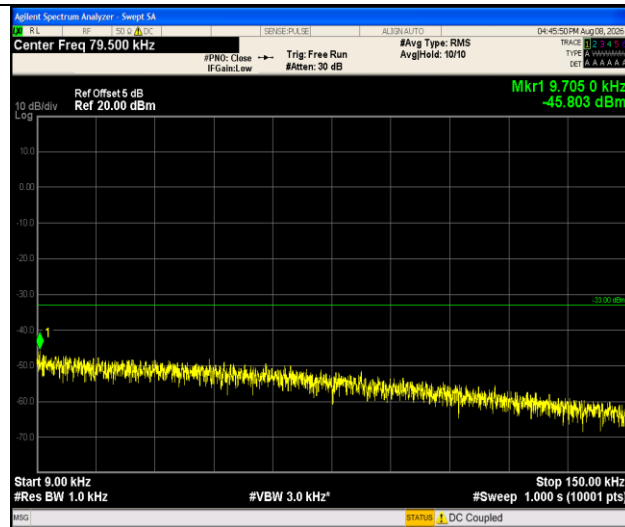 


EGPRS850-128-8-0.009~0.15MHz-PASS

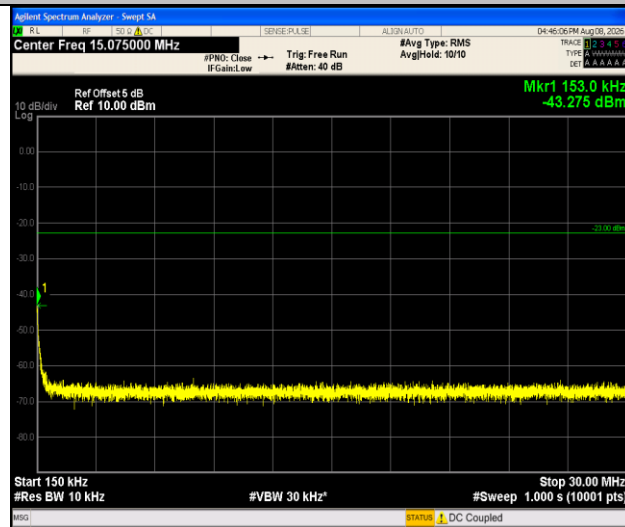 


EGPRS850-128-8-0.15~30MHz-PASS

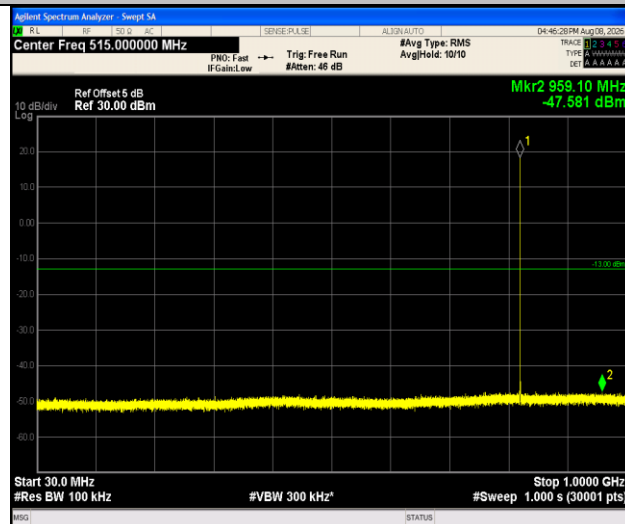 


EGPRS850-128-8-30~1000MHz-PASS

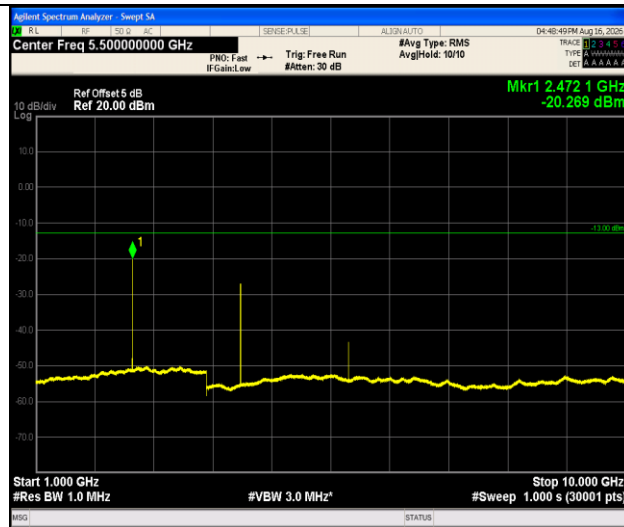 


EGPRS850-128-8-1000~10000MHz-PASS

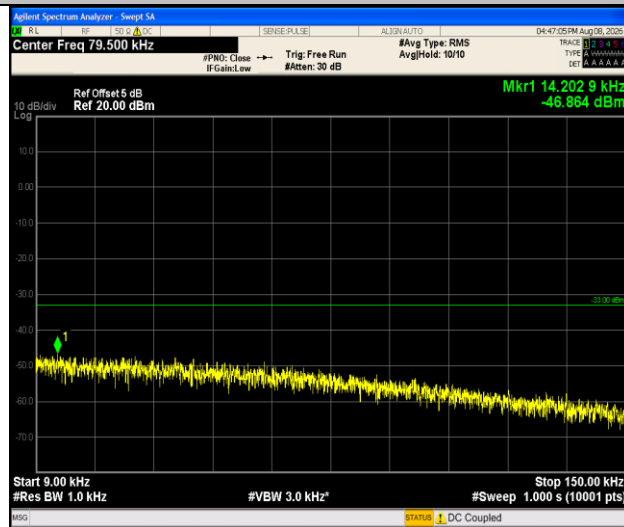 


EGPRS850-190-8-0.009~0.15MHz-PASS

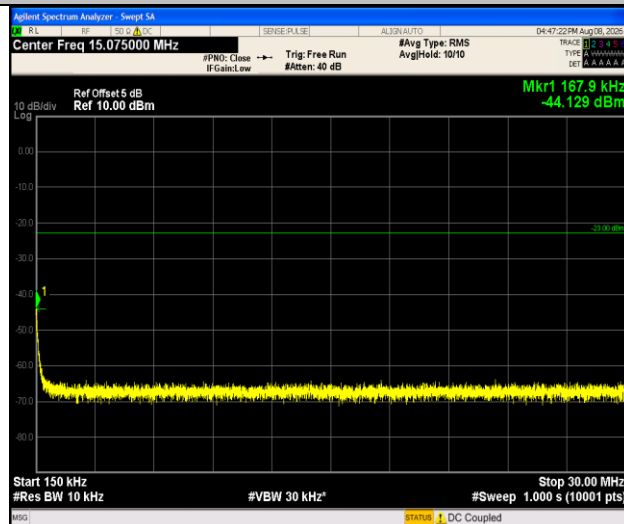 


EGPRS850-190-8-0.15~30MHz-PASS

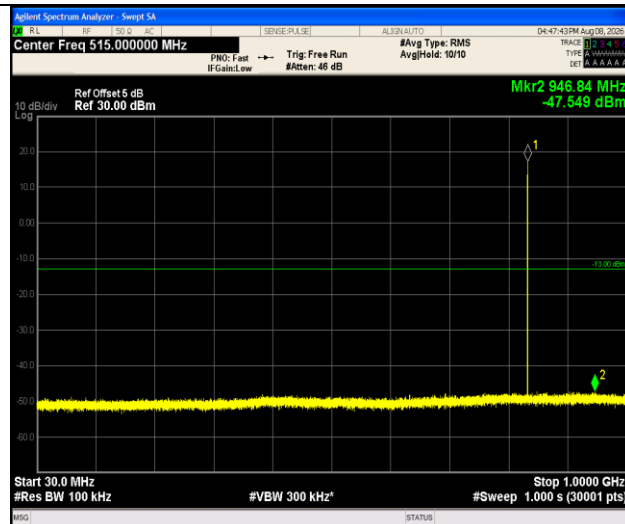 


EGPRS850-190-8-30~1000MHz-PASS

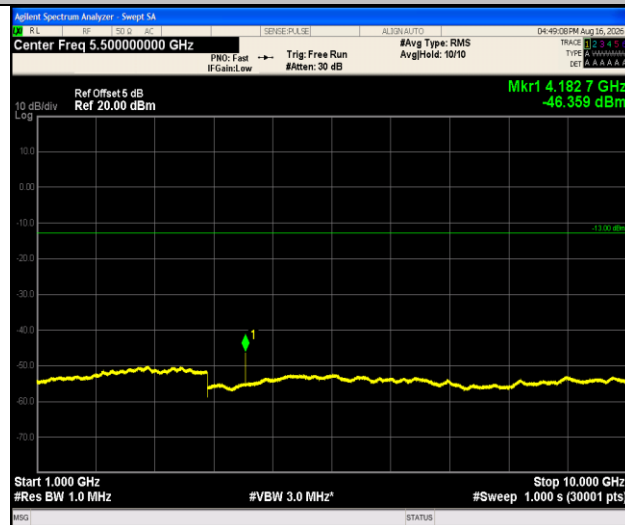 


EGPRS850-190-8-1000~10000MHz-PASS

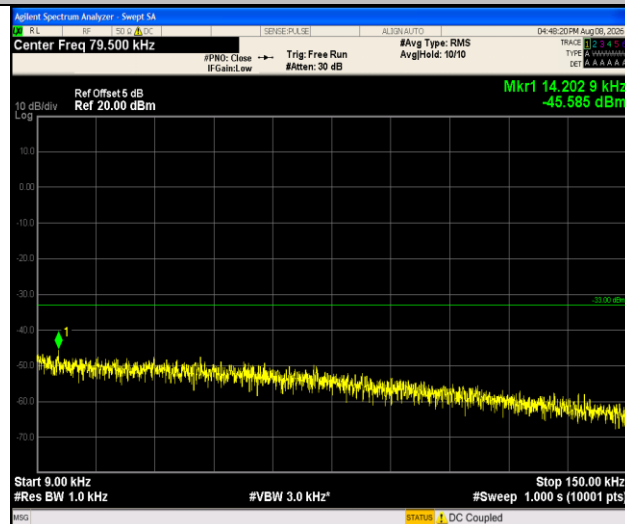 


EGPRS850-251-8-0.009~0.15MHz-PASS

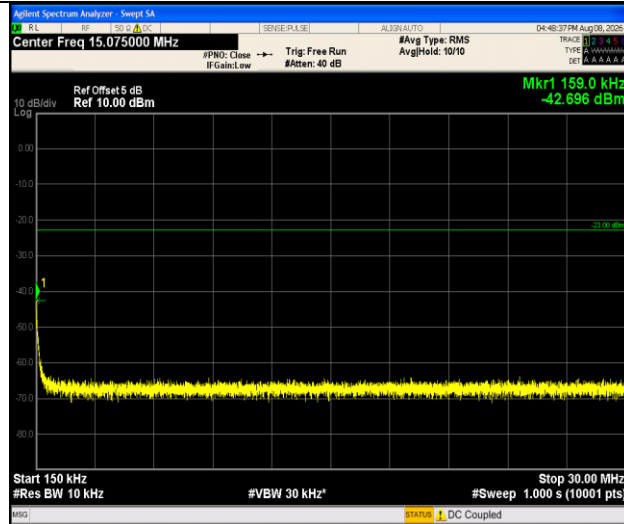 


EGPRS850-251-8-0.15~30MHz-PASS

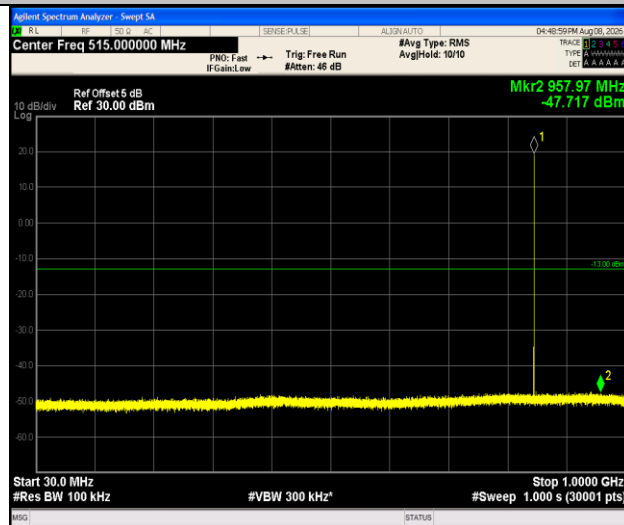 


EGPRS850-251-8-30~1000MHz-PASS

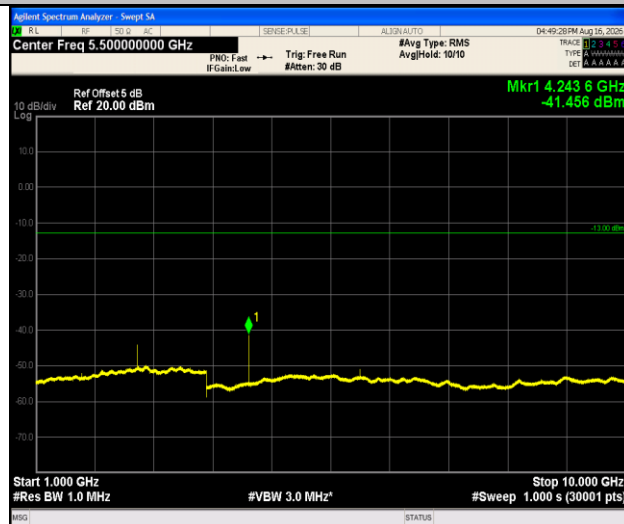 


EGPRS850-251-8-1000~10000MHz-PASS

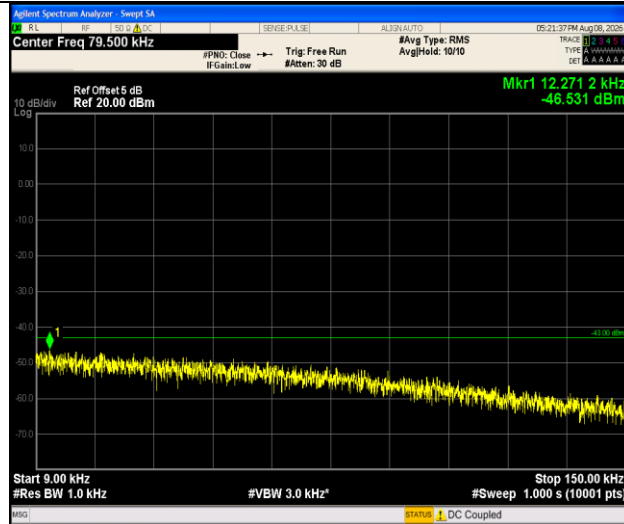 


GSM1900-512-0-0.009~0.15MHz-PASS

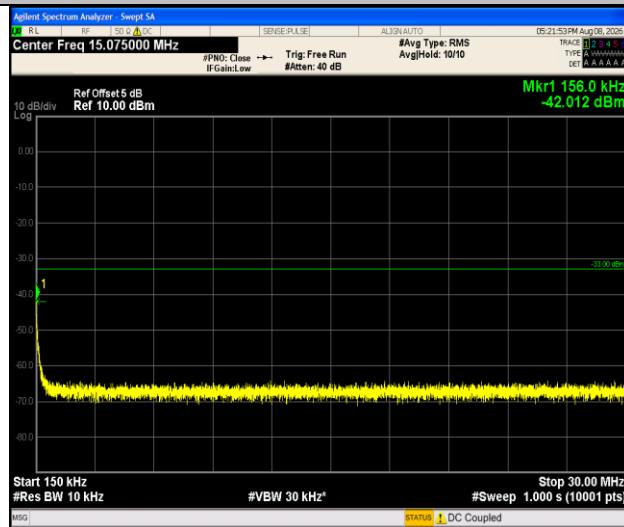 


GSM1900-512-0-0.15~30MHz-PASS

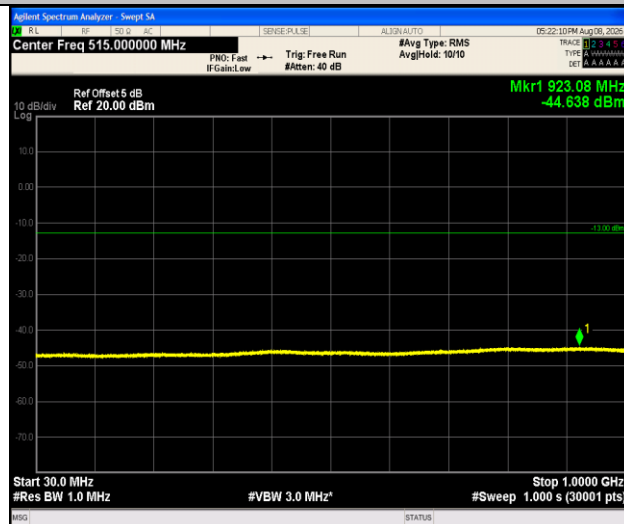 


GSM1900-512-0-30~1000MHz-PASS

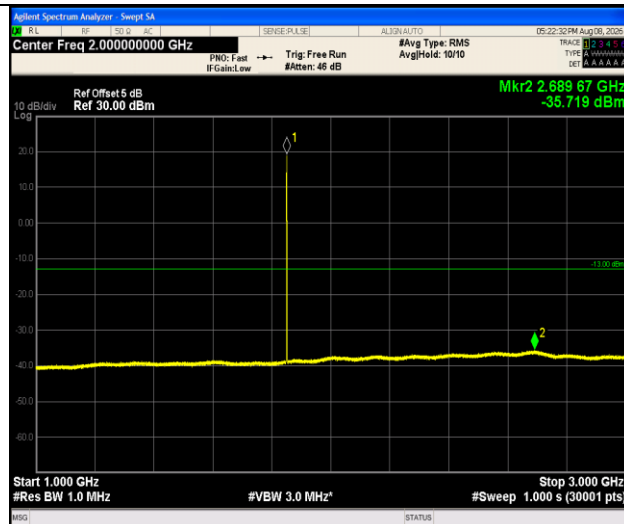 


GSM1900-512-0-1000~3000MHz-PASS

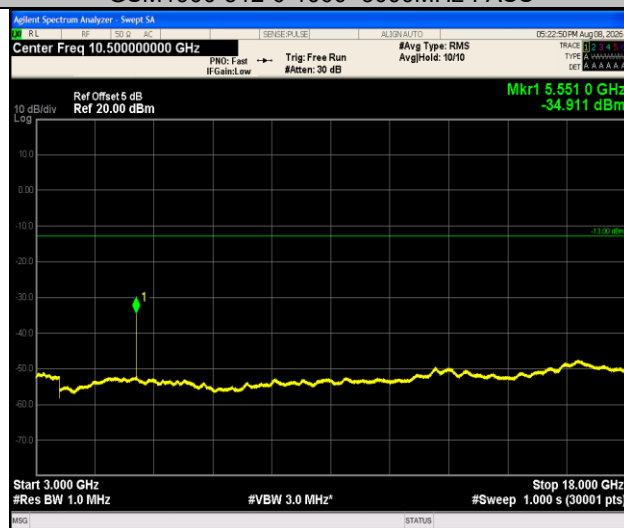 


GSM1900-512-0-3000~18000MHz-PASS

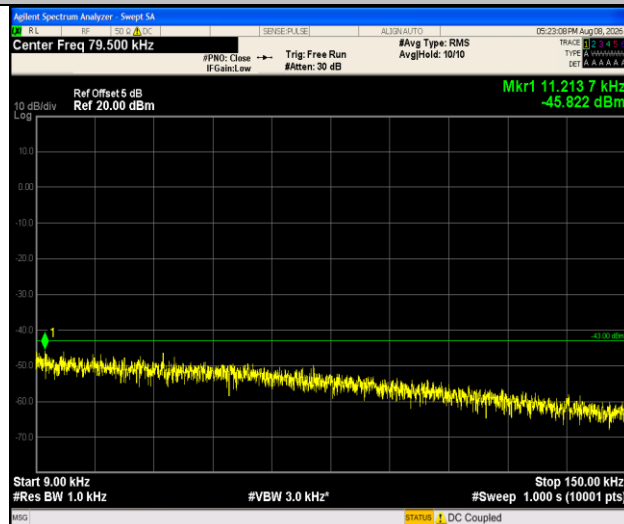 


GSM1900-661-0-0.009~0.15MHz-PASS

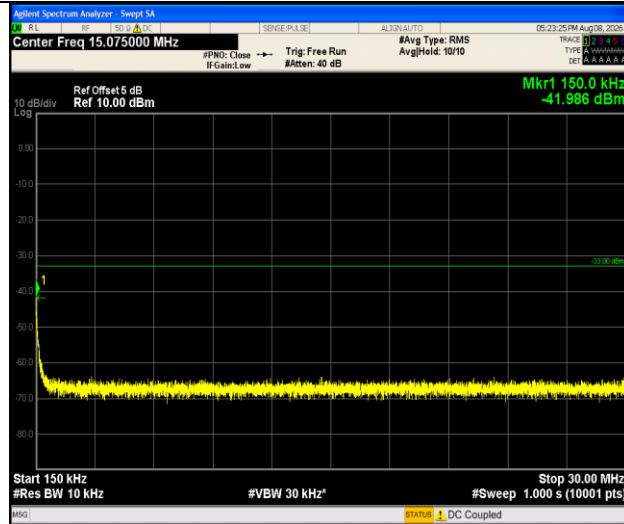 


GSM1900-661-0-0.15~30MHz-PASS

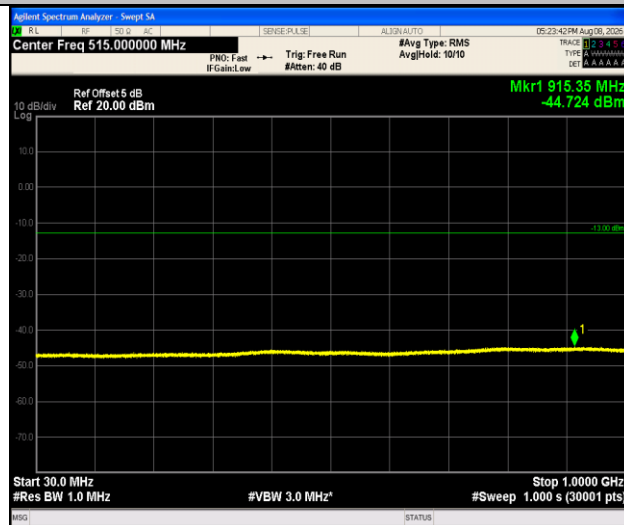 


GSM1900-661-0-30~1000MHz-PASS

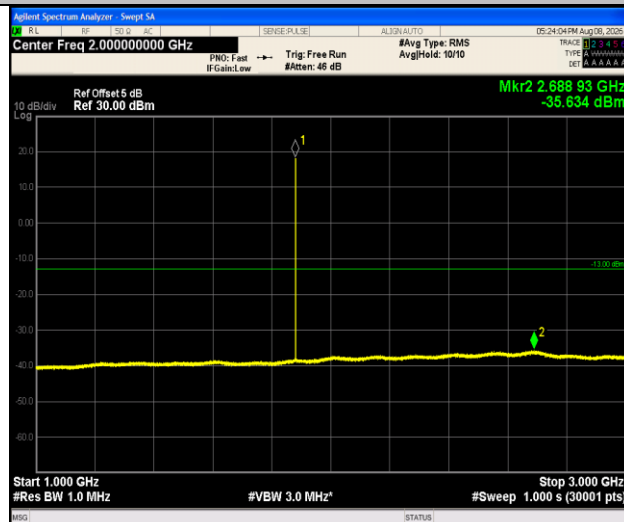 


GSM1900-661-0-1000~3000MHz-PASS

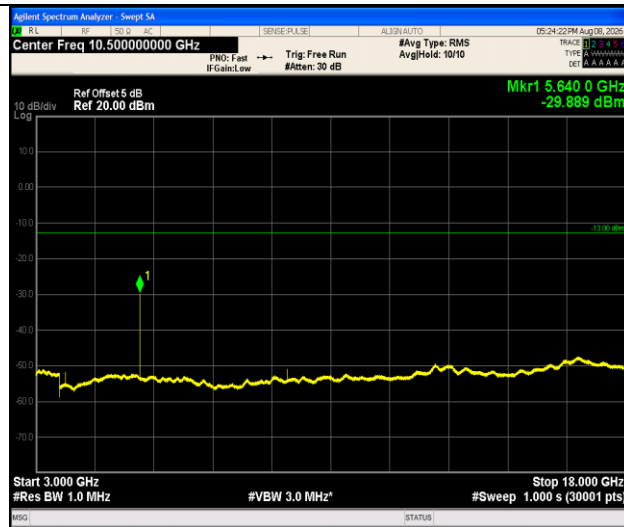 


GSM1900-661-0-3000~18000MHz-PASS

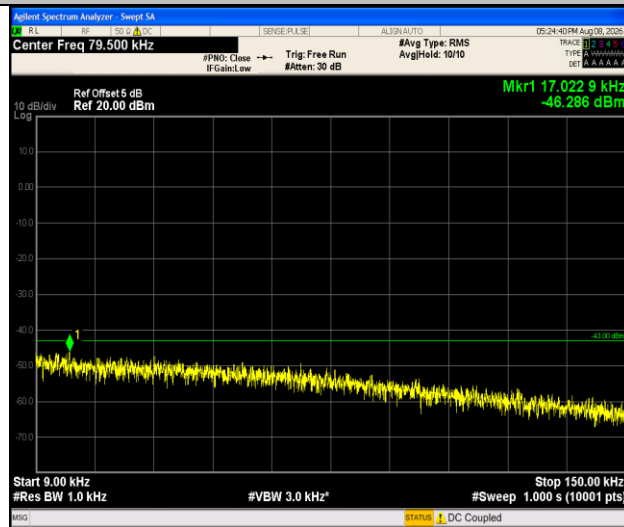 


GSM1900-810-0-0.009~0.15MHz-PASS

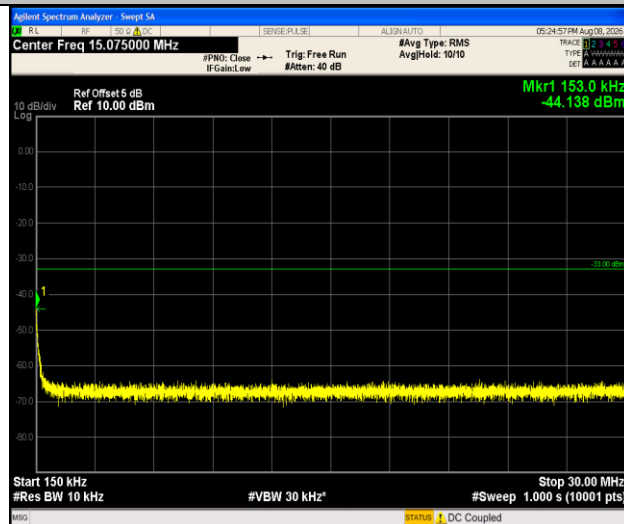 


GSM1900-810-0-0.15~30MHz-PASS

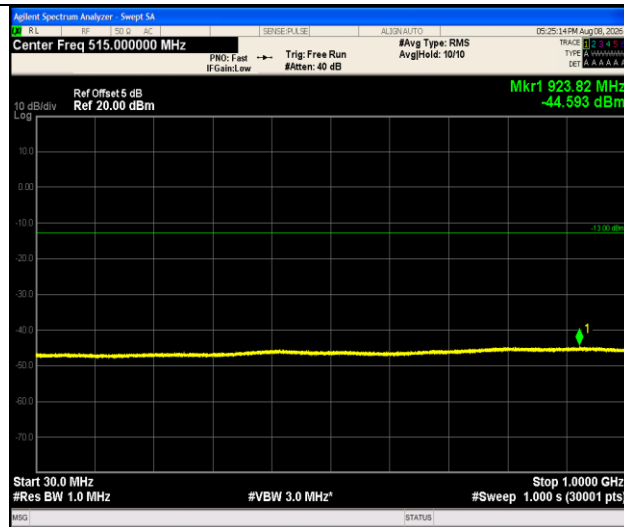 


GSM1900-810-0-30~1000MHz-PASS

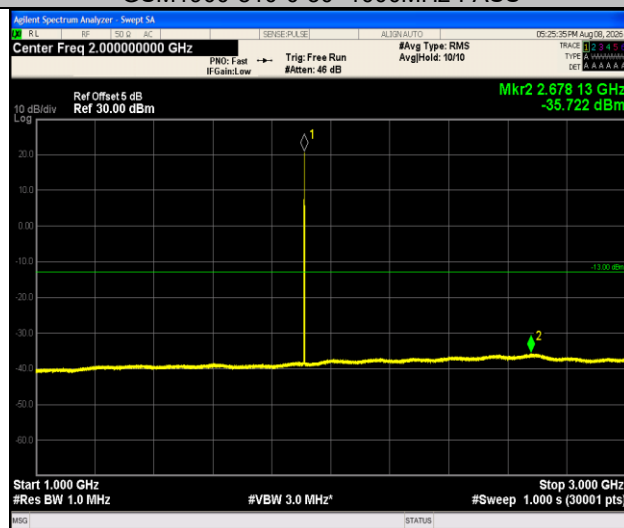 


GSM1900-810-0-1000~3000MHz-PASS

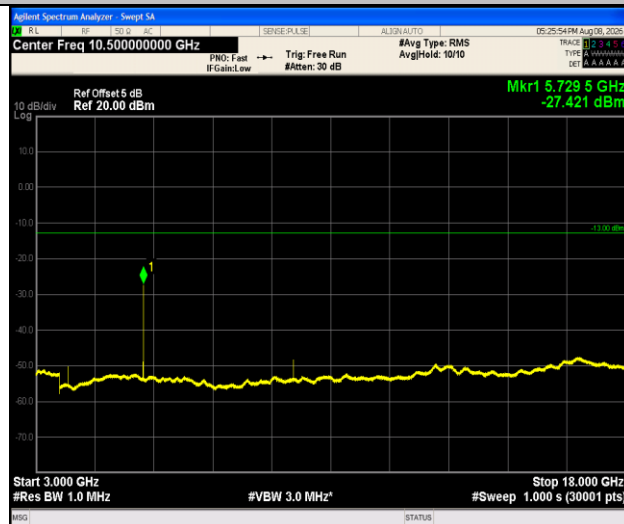 


GSM1900-810-0-3000~18000MHz-PASS

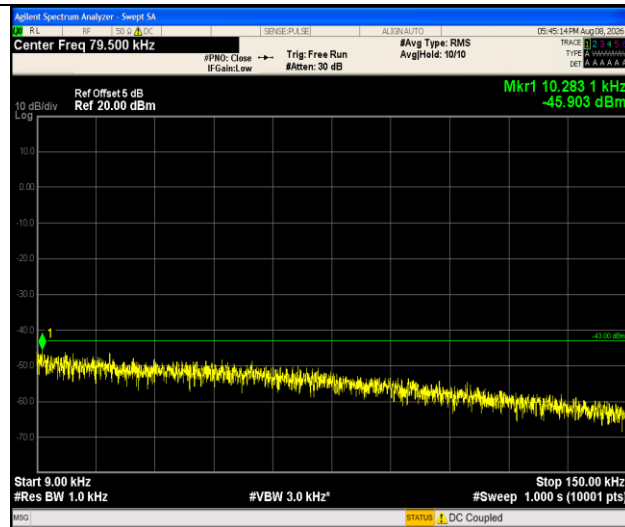 


GPRS1900-512-0-0.009~0.15MHz-PASS

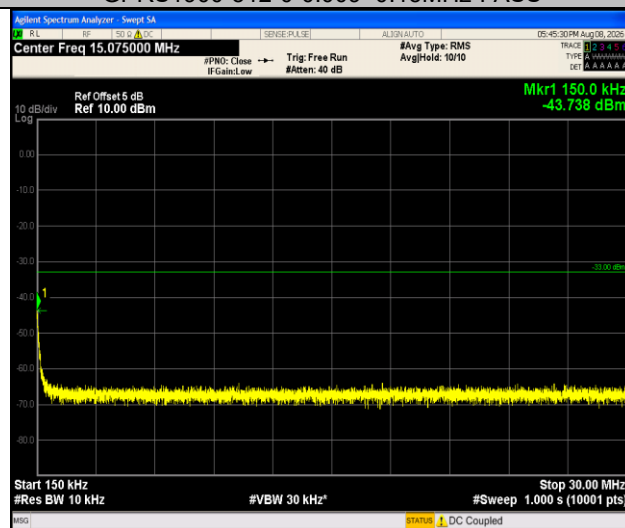 


GPRS1900-512-0-0.15~30MHz-PASS

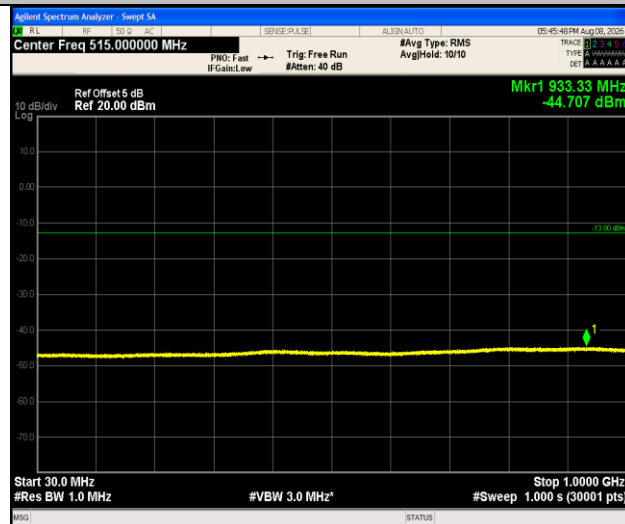 


GPRS1900-512-0-30~1000MHz-PASS

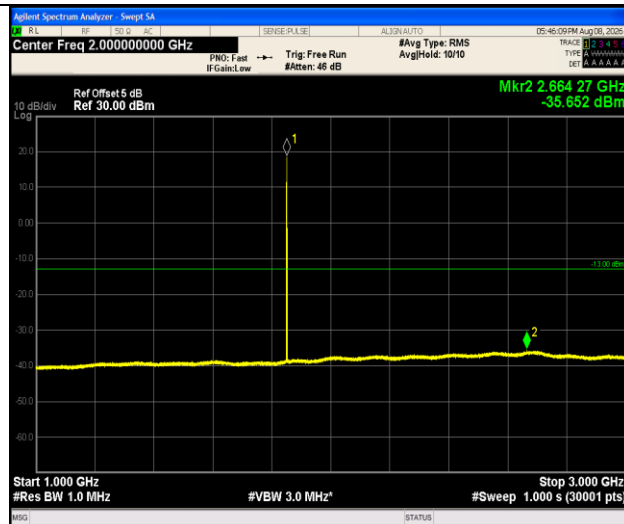 


GPRS1900-512-0-1000~3000MHz-PASS

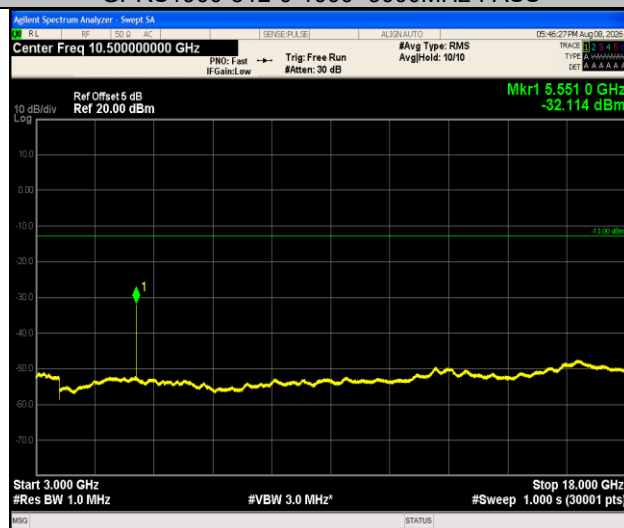 


GPRS1900-512-0-3000~18000MHz-PASS

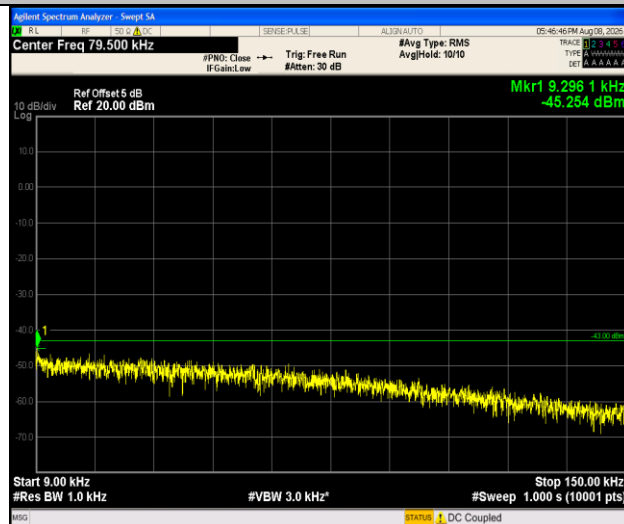 


GPRS1900-661-0-0.009~0.15MHz-PASS

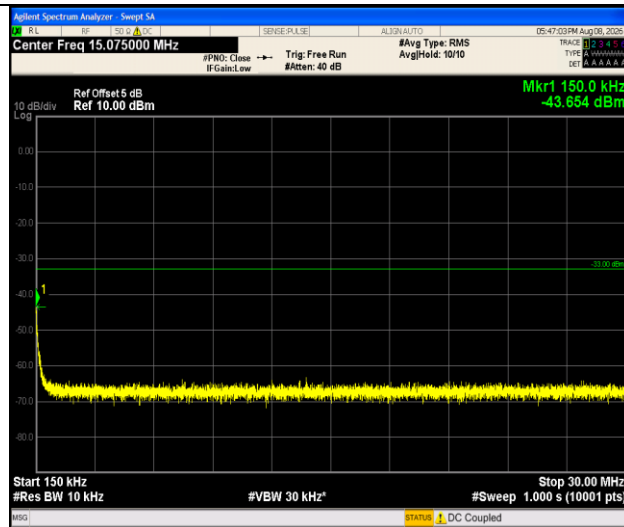 


GPRS1900-661-0-0.15~30MHz-PASS

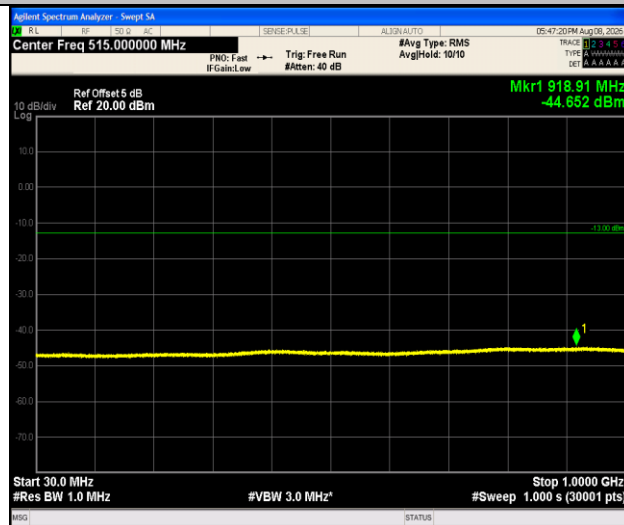 


GPRS1900-661-0-30~1000MHz-PASS

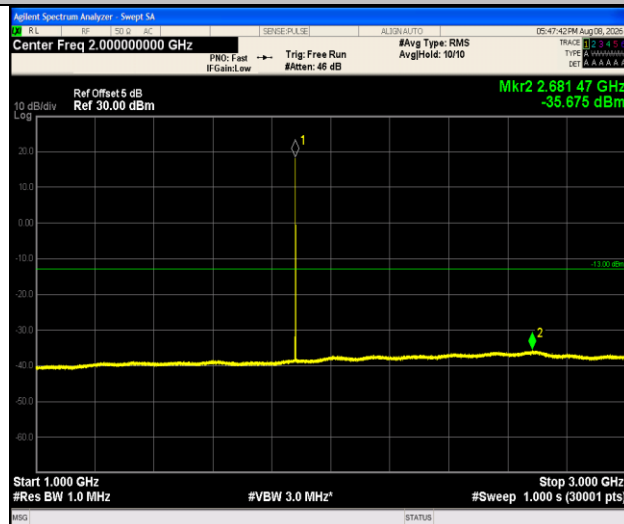 


GPRS1900-661-0-1000~3000MHz-PASS

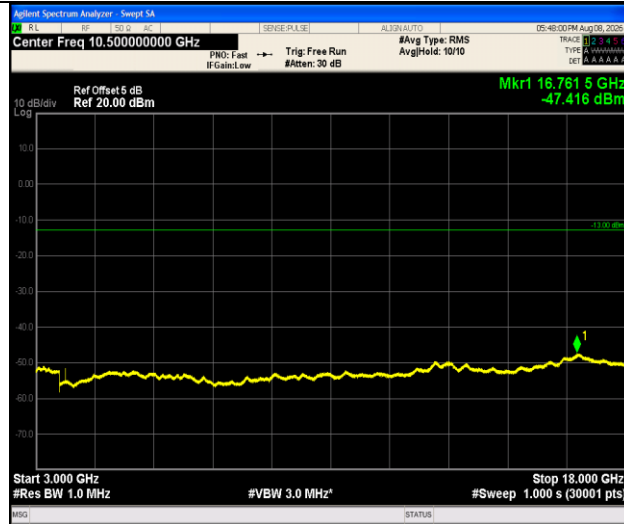 


GPRS1900-661-0-3000~18000MHz-PASS

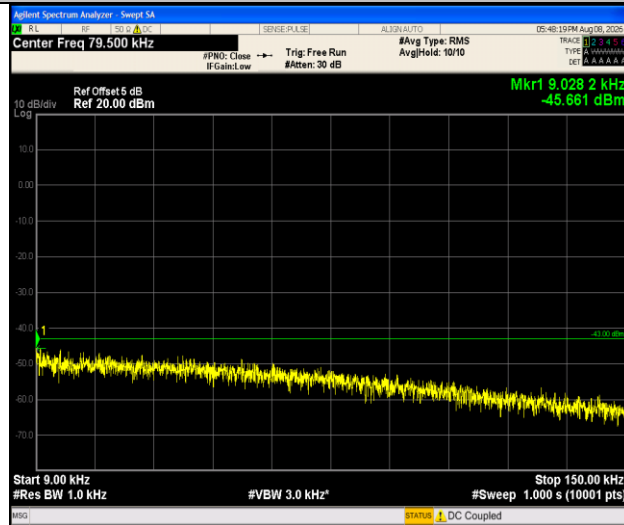 


GPRS1900-810-0-0.009~0.15MHz-PASS

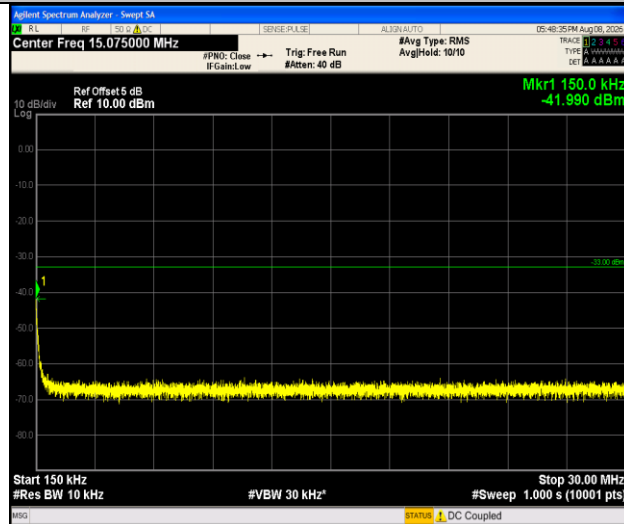 


GPRS1900-810-0-0.15~30MHz-PASS

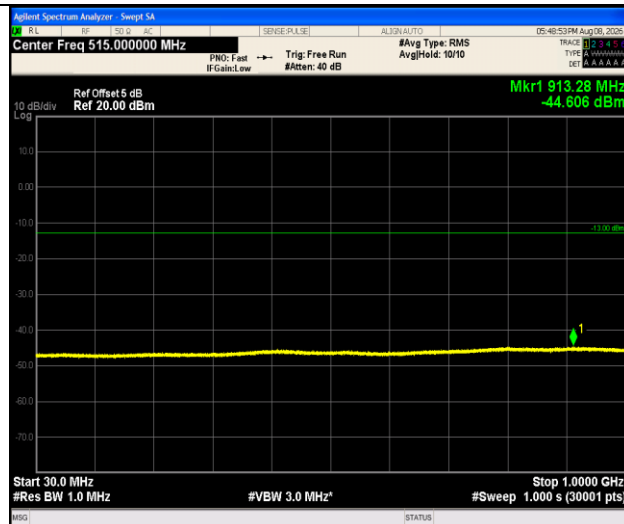 


GPRS1900-810-0-30~1000MHz-PASS

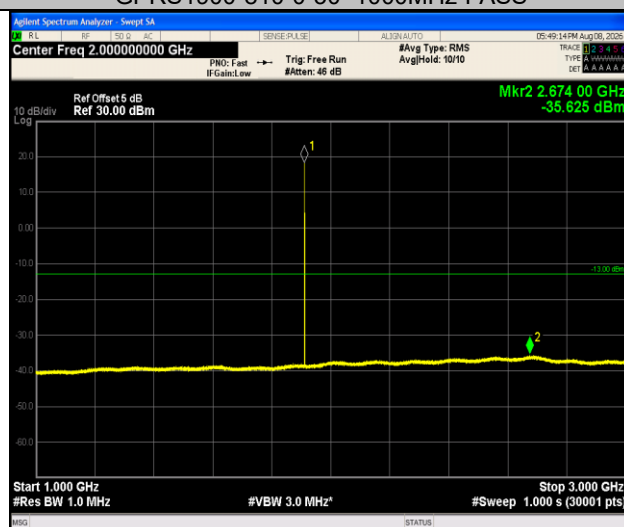 


GPRS1900-810-0-1000~3000MHz-PASS

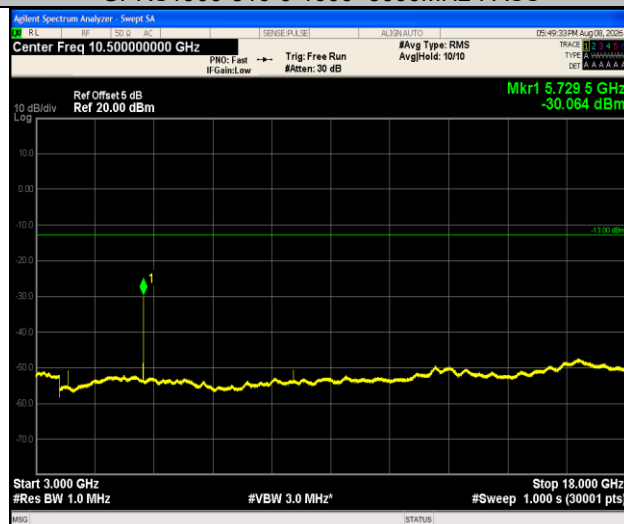 


GPRS1900-810-0-3000~18000MHz-PASS

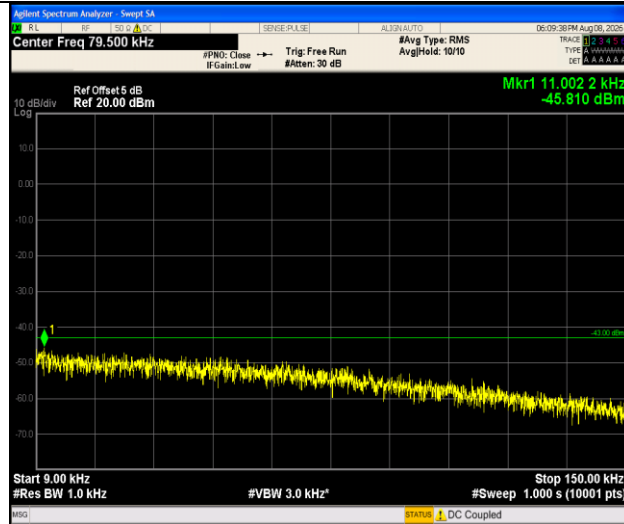 


EGPRS1900-512-2-0.009~0.15MHz-PASS

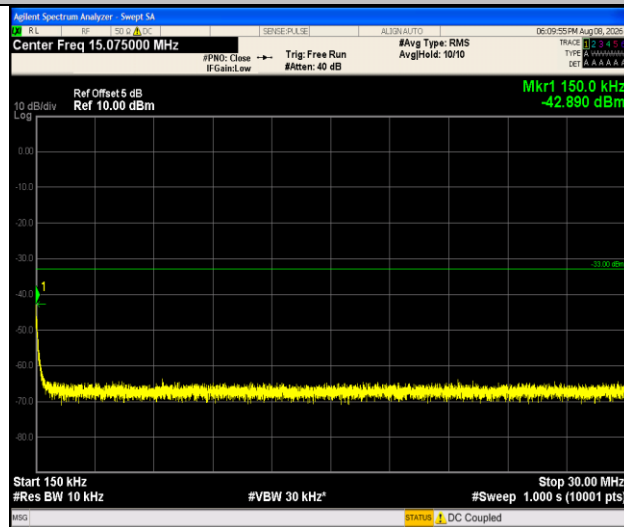 


EGPRS1900-512-2-0.15~30MHz-PASS

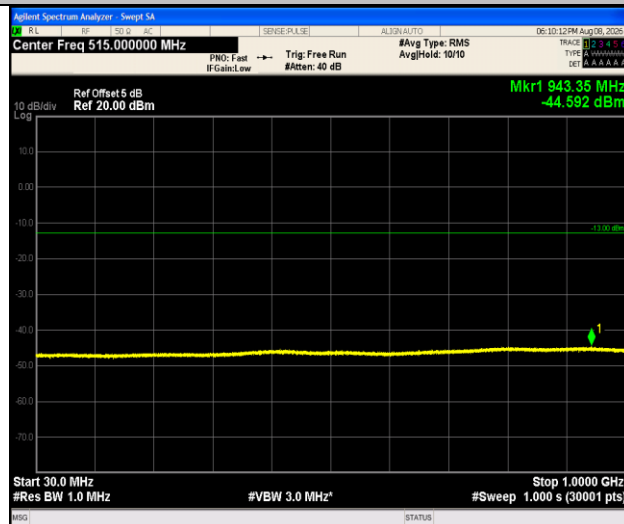 


EGPRS1900-512-2-30~1000MHz-PASS

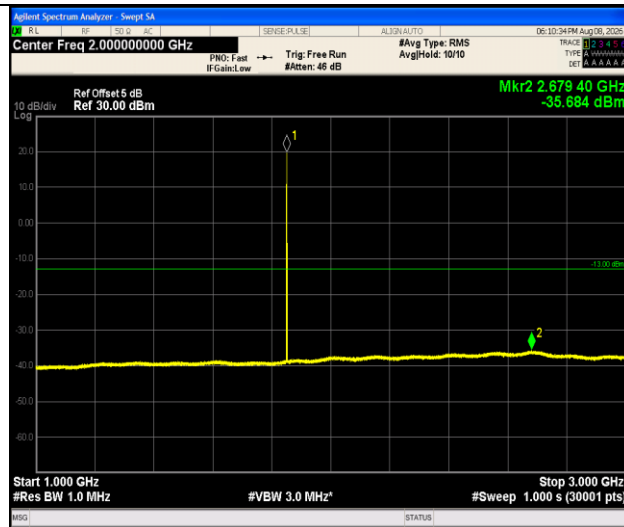 


EGPRS1900-512-2-1000~3000MHz-PASS

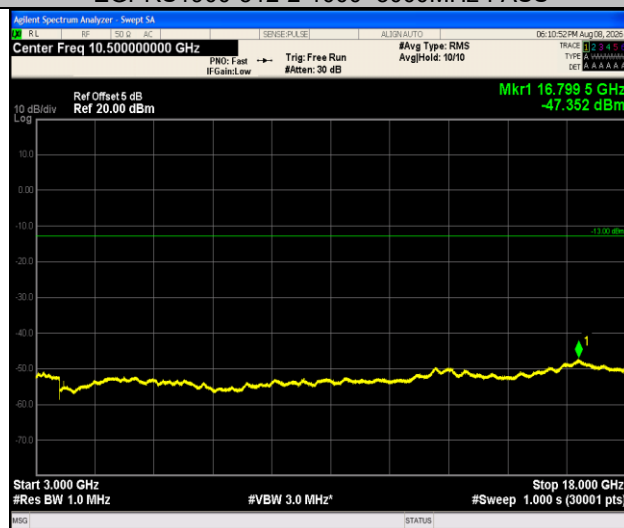 


EGPRS1900-512-2-3000~18000MHz-PASS

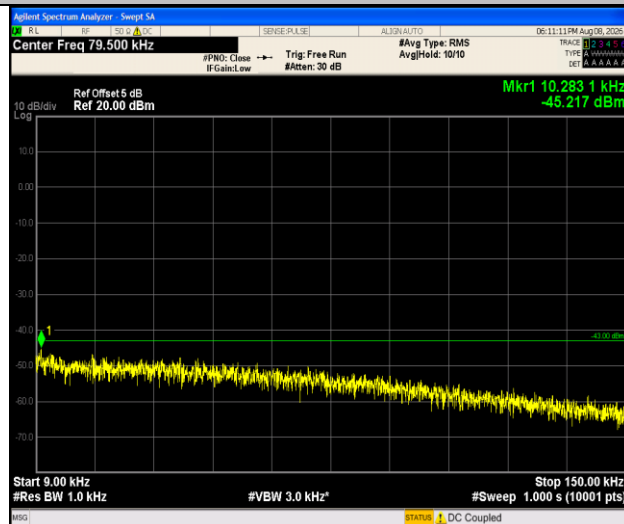 


EGPRS1900-661-2-0.009~0.15MHz-PASS

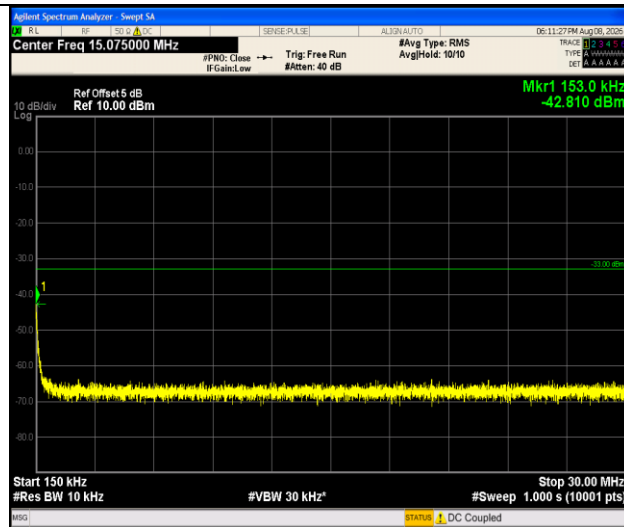 


EGPRS1900-661-2-0.15~30MHz-PASS

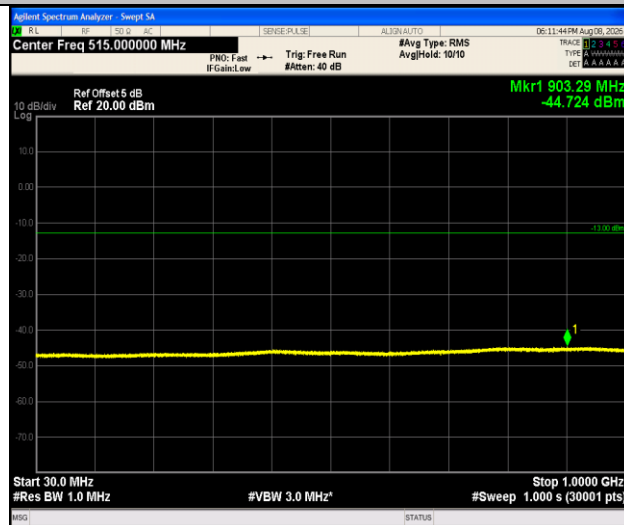 


EGPRS1900-661-2-30~1000MHz-PASS

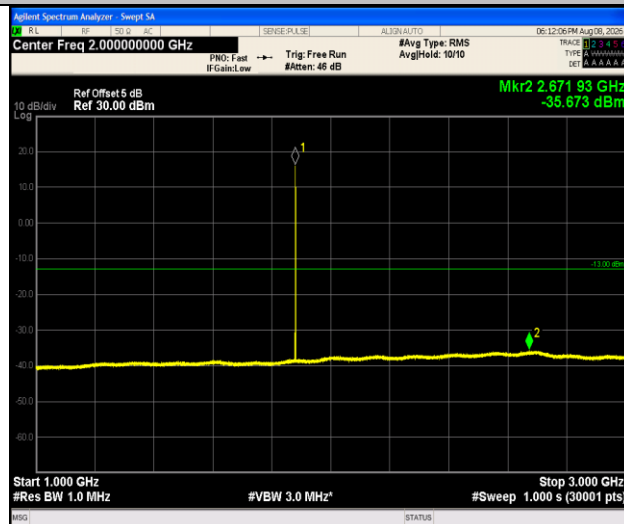 


EGPRS1900-661-2-1000~3000MHz-PASS

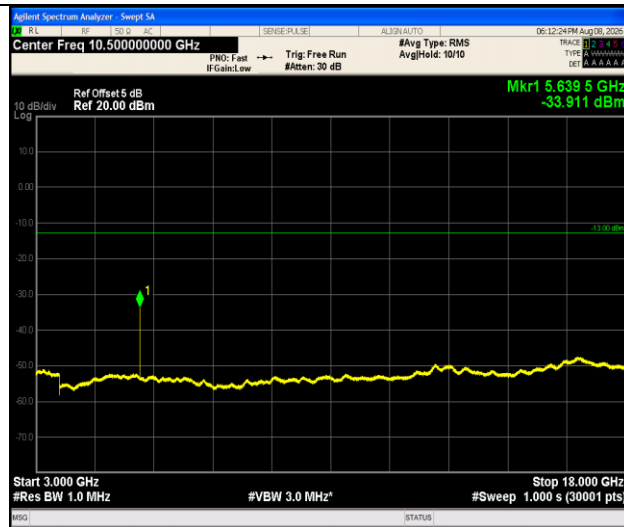 


EGPRS1900-661-2-3000~18000MHz-PASS

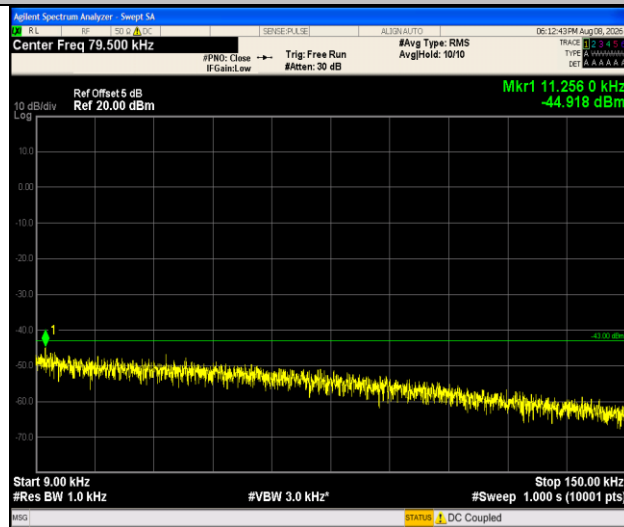 


EGPRS1900-810-2-0.009~0.15MHz-PASS

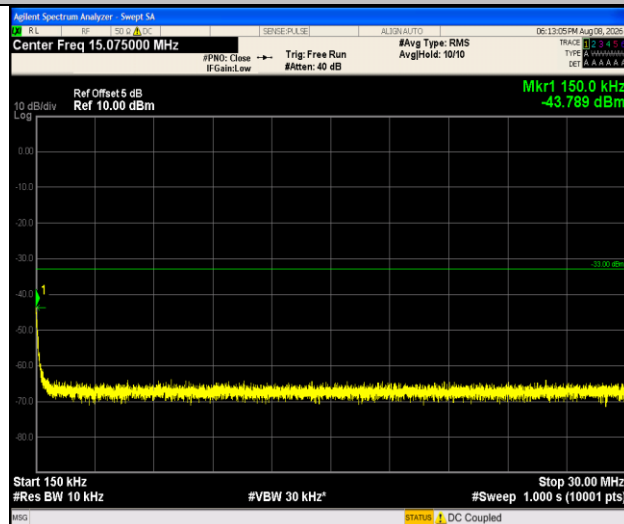 


EGPRS1900-810-2-0.15~30MHz-PASS

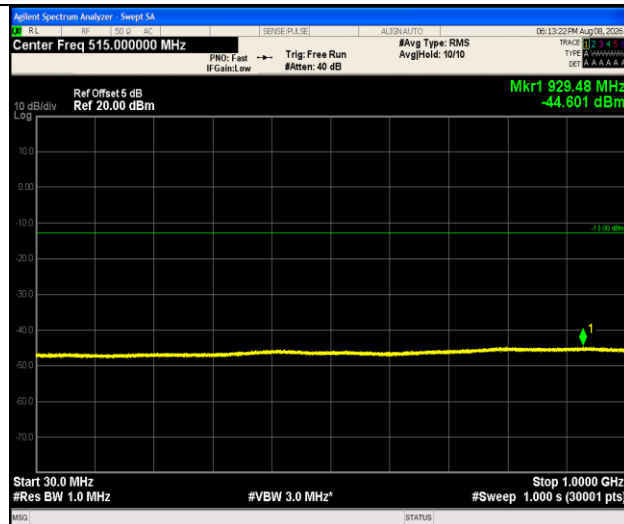 


EGPRS1900-810-2-30~1000MHz-PASS

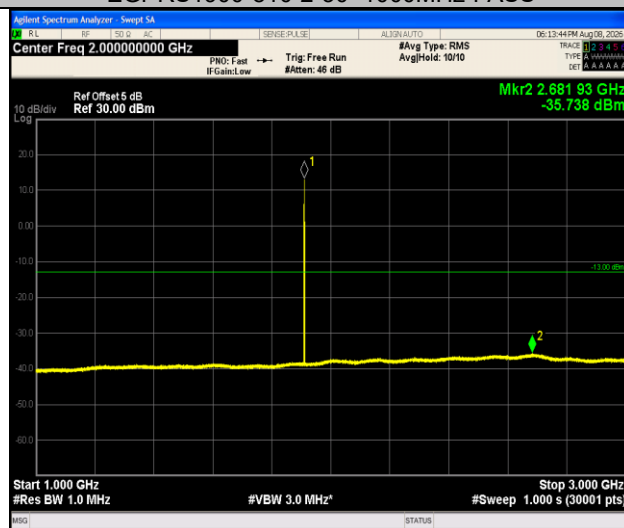 


EGPRS1900-810-2-1000~3000MHz-PASS

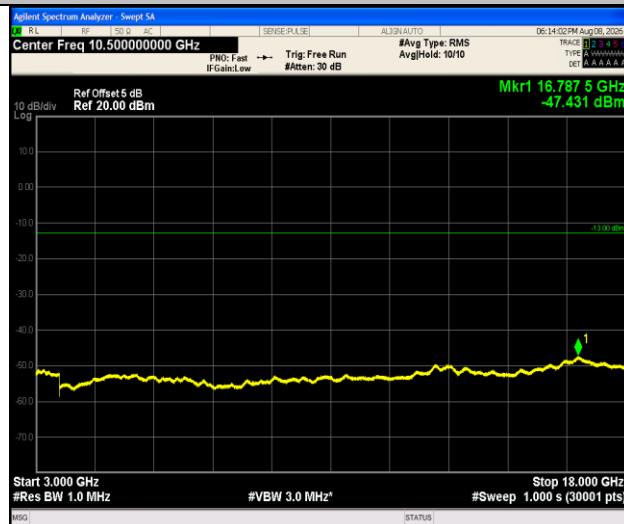 

EGPRS1900-810-2-3000~18000MHz-PASS

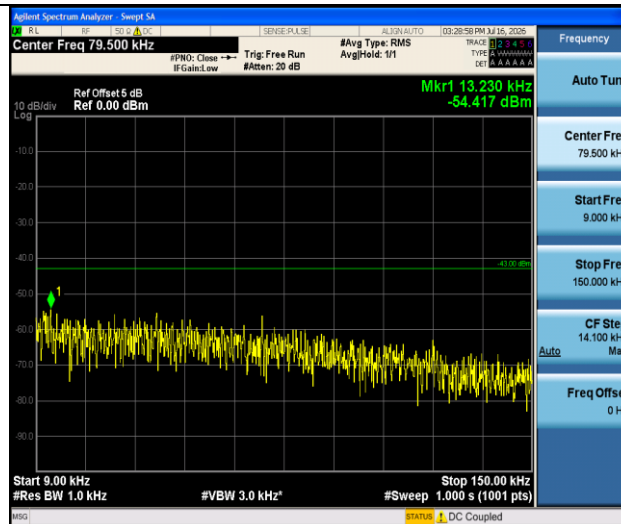 


Band2-9262-0.009~0.15MHz-PASS

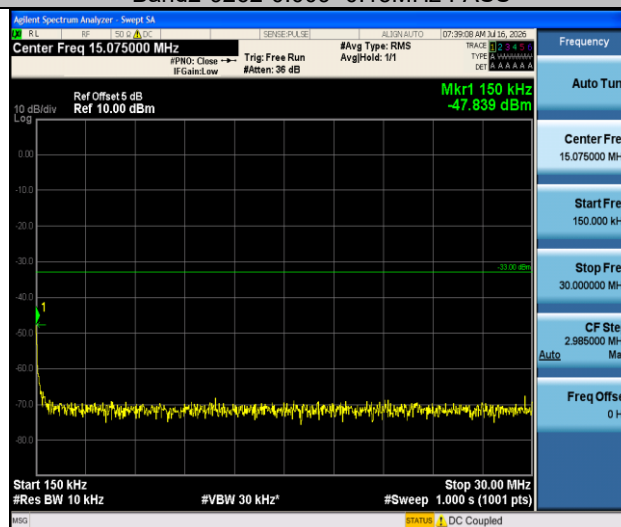 


Band2-9262-0.15~30MHz-PASS



 
Band2-9262-30~1000MHz-PASS

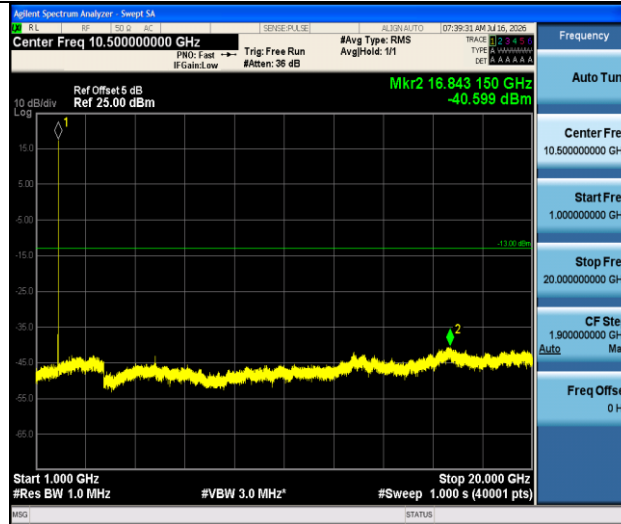

Band2-9262-1000~20000MHz-PASS

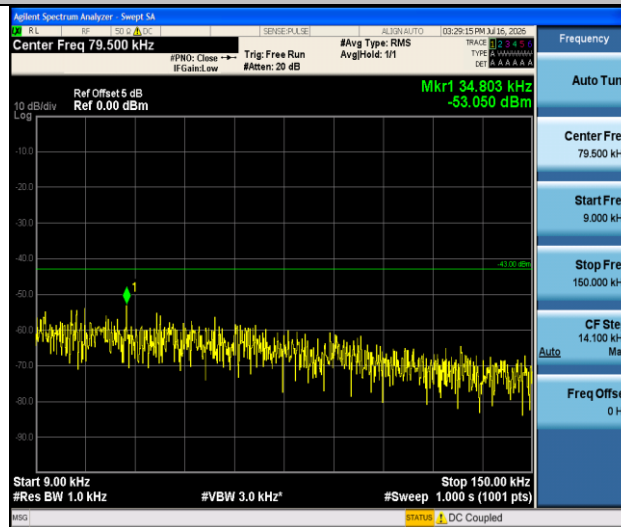 

Band2-9400-0.009~0.15MHz-PASS

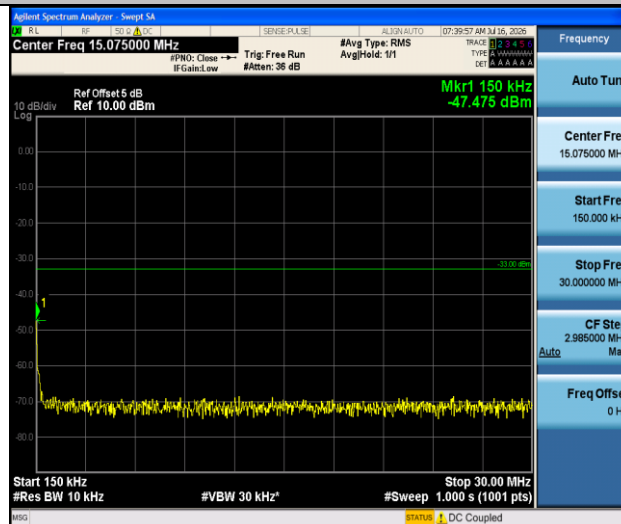 


Band2-9400-0.15~30MHz-PASS




Band2-9400-30~1000MHz-PASS



 Band2-9400-1000~20000MHz-PASS

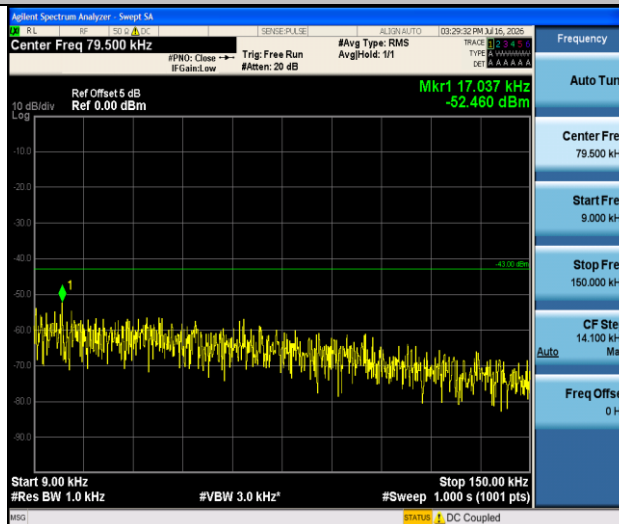


Band2-9538-0.009~0.15MHz-PASS

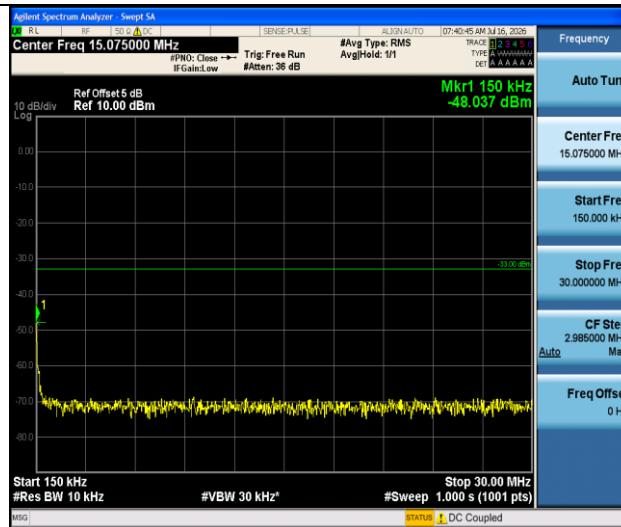 

Band2-9538-0.15~30MHz-PASS



 Band2-9538-30~1000MHz-PASS

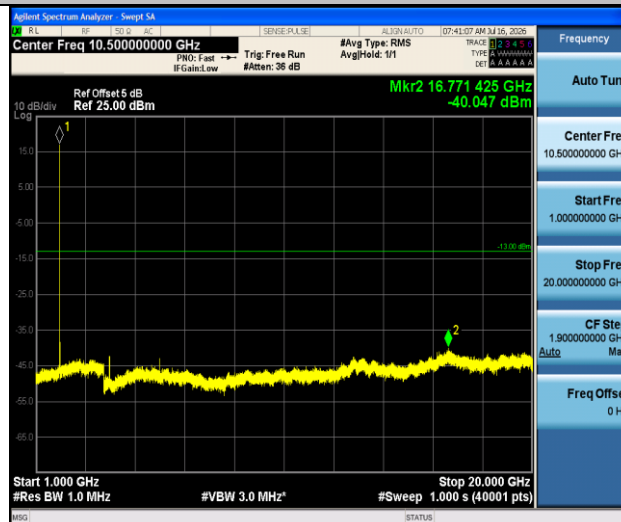

Band2-9538-1000~20000MHz-PASS