

105G铜版纸四急双面印刷,过亚胶
240X110MM (折成两折)

ALPHA DIGITAL

MODEL: ZL114

3-in-1 Magnetic Powerbank
USER MANUAL



 
Please read the instructions carefully before using

Overview



- 1. Magnetic wireless charging
- 2. Lanyard hole
- 3. Power button
- 4. USB-C input/output
- 5. Foldable stand
- 6. LED Digital display


LED Digital Display

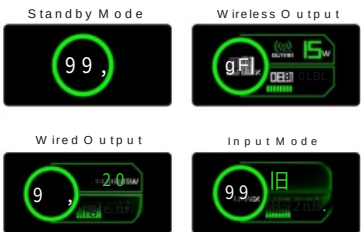

Using Your Power Bank

1. Wireless Charging

 
- Place your device on the magnetic charging area the power bank will begin charging automatically. If charging doesn't start rightaway, simply press the power button.

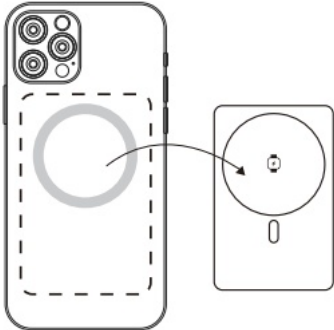

Note: Please make sure your phone has wireless charging function.

2. Wired Charging

 - Use included charging cable to connect the power banks USB/Type-C port to your mobile device.

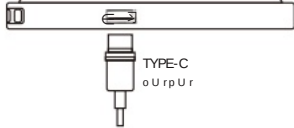

- Charging speed depends on your device's battery capacity.
- The digital display will flash the percentage while charging and show a solid 100% when fully charged.

Using Your Power Bank

 
3. Checking Battery Level

- Press the power button to check the remaining power on the digital display.



Charging Your Power Bank

- Connect your regular phone charging cable to the Type-C port of the power bank.

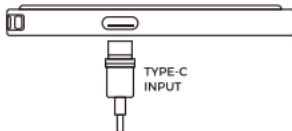

- Use a charging adapter (not included) and plug the USB end of the cable into it.
- Plug the adapter into a power outlet to begin charging.
- The digital display will show the charging progress.
- Once the power bank reaches 100% disconnect the charging cable promptly to prevent overcharging.

About the Temperature

When using the power bank, if the power of the phone (or other device) is low (less than 70%), then its normal for the power bank to heat up a little. Cause when the device is in low power it requires relatively high power output to charge it hence the temperature goes up a little.

Safety & Maintenance Instructions

- Read the instructions carefully before using the power bank.
- Disconnect all cables after use to prevent unnecessary power consumption.
- Avoid exposure to extreme conditions:
 - Do not heat burn, or dispose of the power bank in fire, water, or any liquid.
 - Keep away from heat sources, as high temperatures may cause an explosion.
 - Recommended storage temperature: -13°F to +95°F (-25°C to +35°C).
- Do not store the power bank for extended periods without recharging.
- Handle with care:
 - Do not drop, open, crush, or disassemble the power bank.
- Use within the rated output:
 - Overloading may cause fire, damage, or injury.

Support

For any support or comments concerning our products, please send an email to: service@sungale.com or toll free number in the USA: 800-473-5156

*All products brands and trademarks are property of their respective owners.

Product specifications are subject to change without notice.

FCC and Safety Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.



WARRANTY

The limited warranty set forth below is given by the manufacturer with respect to ALPHA DIGITAL brand DPF players and other consumer electronics products purchased and used in the United States of America. The manufacturer warrants this product against defects in material or workmanship as follows:

LABOR: For a period of ninety (90) days from the date of purchase, if this Product is defective, the manufacturer will repair or replace the Product at its option, at no charge. After this ninety (90) days period up to one year, a labor charge of US\$30.00 will be charged for each service.

PARTS: For a period of one year from the date of purchase, the manufacturer will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts. After this one year period, the manufacturer will charge the new or replacement parts.

This warranty does not cover:

- (1) Customer instruction, installation or set up;
- (2) Cosmetic damage or damage due to accident misuse, abuse, or negligence;
- (3) Commercial use of the Product;
- (4) Modification of any part of the Product;
- (5) Damage due to improper operation, improper maintenance, or connection to an improper voltage supply;
- (6) Damage due to an attempted repair of the Product by anyone other than a facility authorized by the manufacturer to service the Product;
- (7) Consumables such as fuses and batteries.

This warranty is valid only in the United States.

The product must be accompanied by a copy of the original retail purchase receipt. If no proof of purchase is attached, the warranty will not be honored and repair cost will be charged.

This warranty is valid with attached written documentation detailing the complaint to the outside or inside of the carton.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

The manufacturer reserves the right to modify any design of this product without prior notice.

To obtain warranty service, you must deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, plus proof of purchase, to:

Service Center

13941 Central Ave. Chino, CA 91710

Tel: 800-473-5156

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THE SERVICE CENTER SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.