 


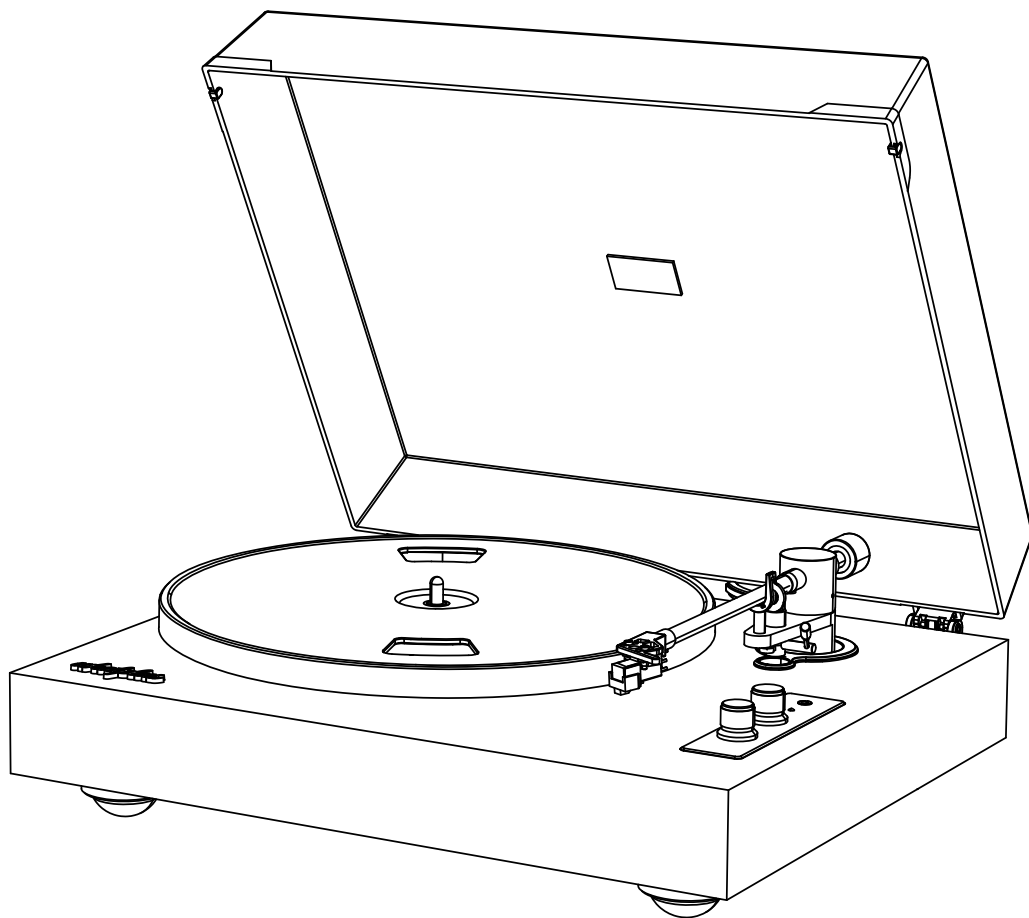

1916 Pro Vinyl record player

User Manual

 
说明书

使用説明


사용 지침

1.Product Overview

1.Top View

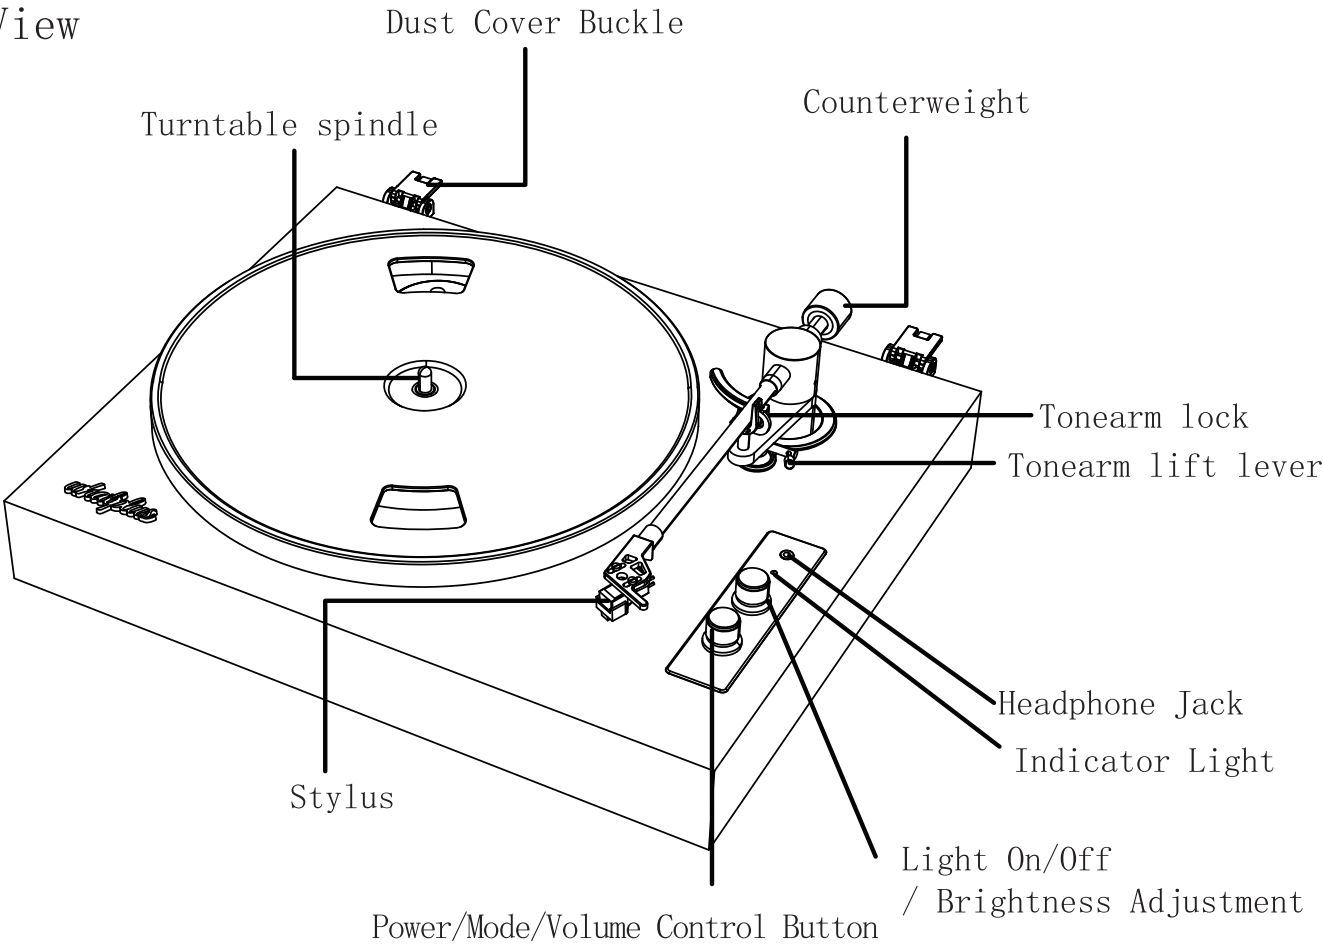

 2.Back View

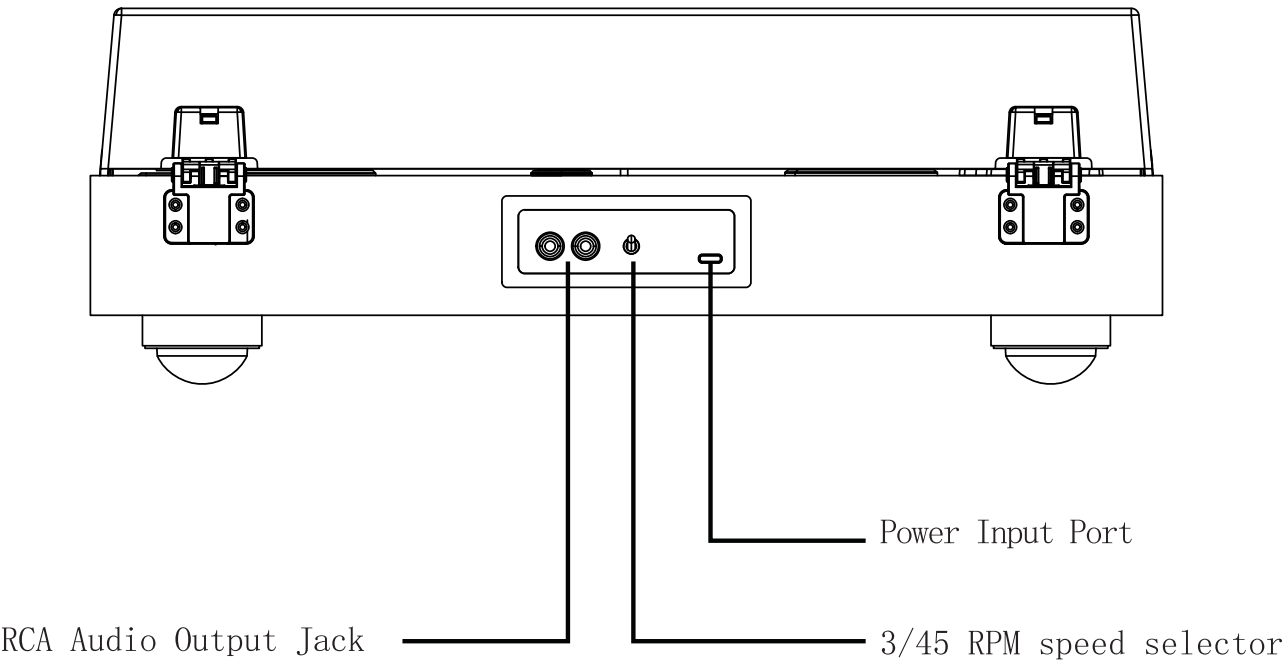


2. Installing the Turntable

2.1 You need to perform a simple setup: remove all accessories from the packaging and verify that the quantities correspond correctly.

	Accessories	Quantity
1	Transparent Cover	1
2	Frosted Plastic Platter	1
3	Counterweight	1
4	45 RPM Adapter	1
5	Power Adapter	1
6	User Manual	1
7	Anti-Shock Lock Clip	1

2.2 Installing the Turntable

 
1.

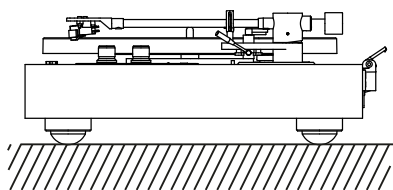


Place the turntable on a level surface.

2.

 Unscrew the anti-vibration lock.

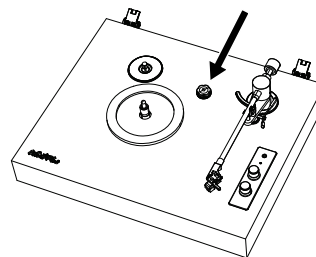


 3.

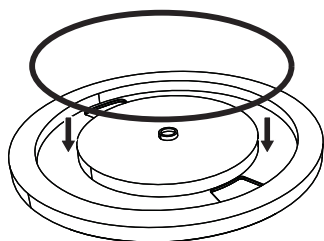


Smoothly fit the belt around the inner ring on the underside of the platter.

 4.


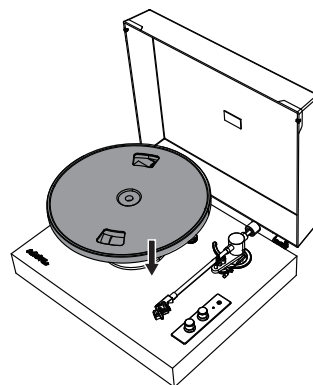


Place the platter onto the spindle, aligning it properly.

 
5.

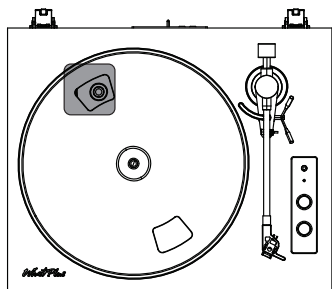

  
Hook the belt through the platter hole and loop it around the motor pulley.
Installation is now complete.

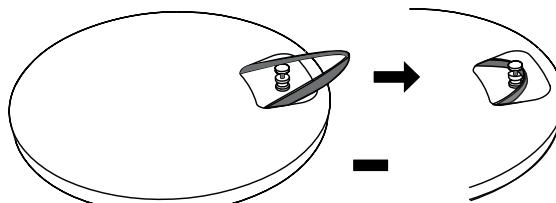

Flat

 


Twisted

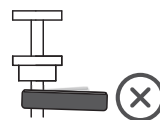 


Wrong position

 6.

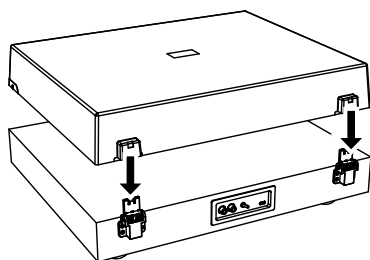

Insert the dust cover into the hinges and press down firmly.

 7.


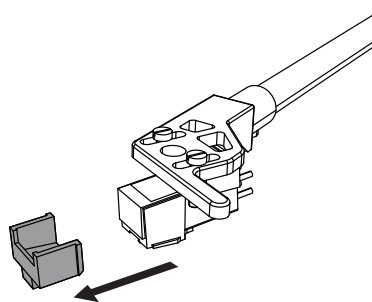


Remove the stylus protector in the parallel direction.


Caution: Applying downward force may
Caution: Applying downward force may

2.3 Installing and Adjusting Stylus Tracking Force

  1. Attach the counterweight to the rear of the tonearm

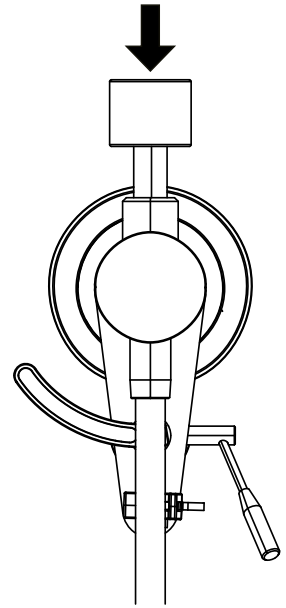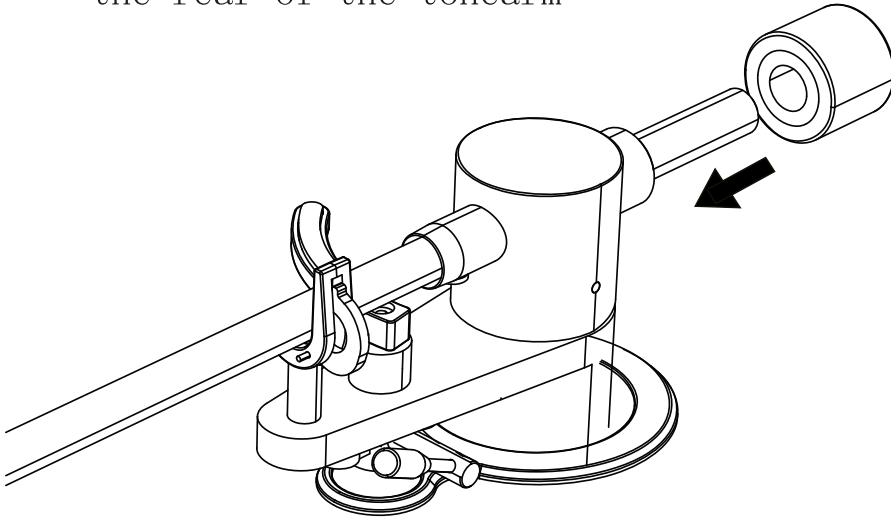

 
2. Adjust the stylus tracking force by sliding the counterweight

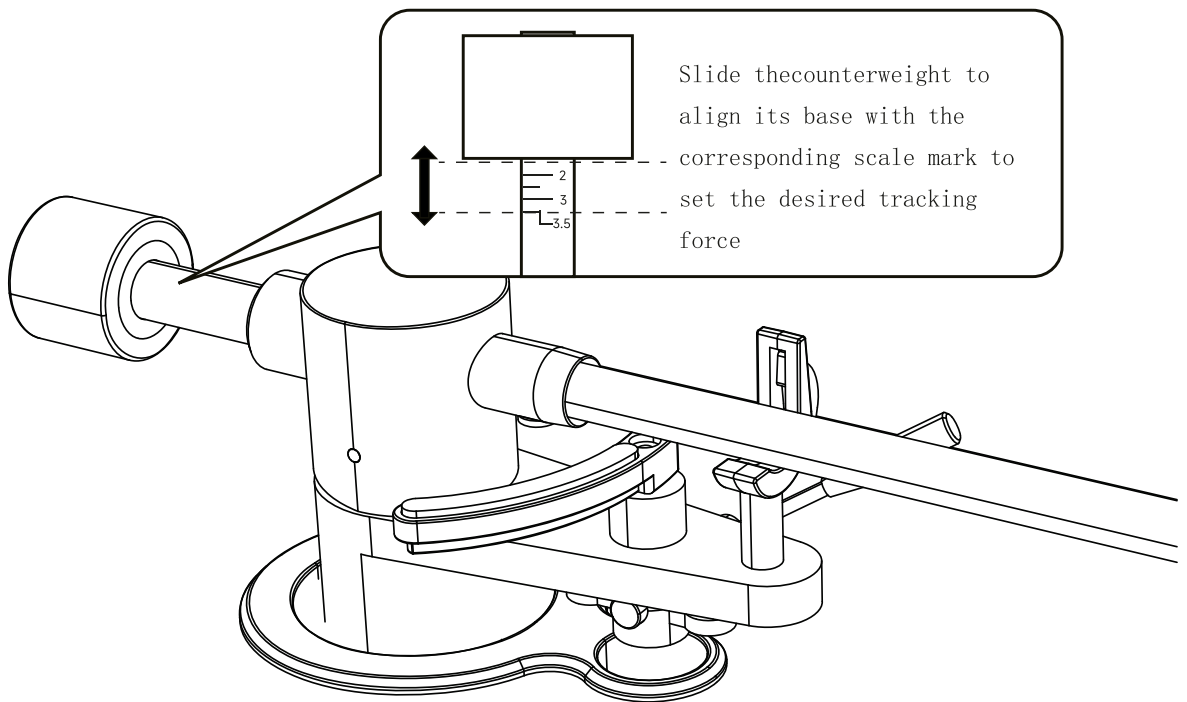


Tip

Recommended tracking force range 2.5–3.5g
with a commonly used recommendation of 3.0g
Users may adjust the tracking force according to their actual needs

 
3. Using the Turntable

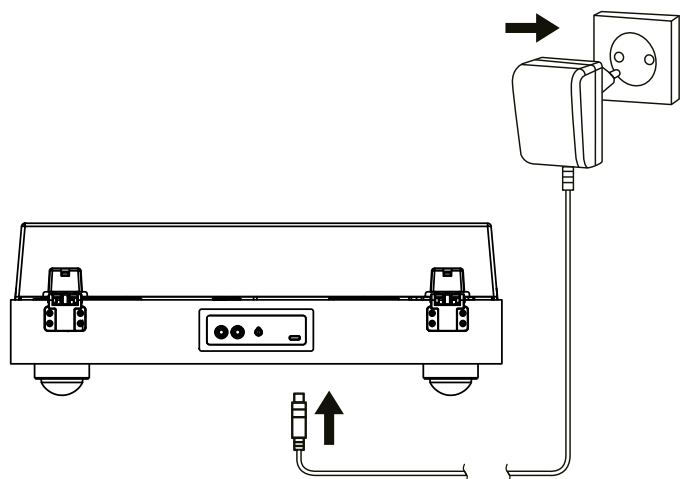


插入电源接口

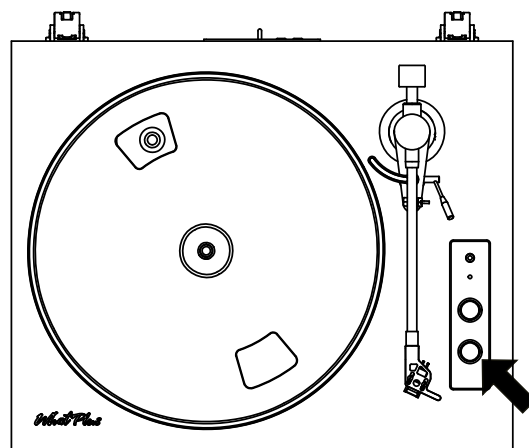 


开机-长按音量旋钮

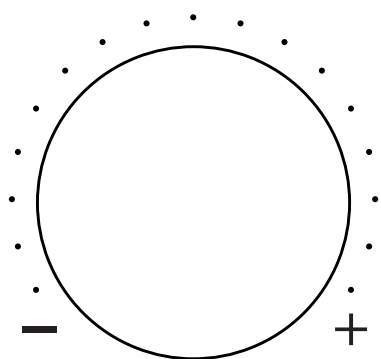 

 
Short press the knob to switch functions. Switch to Turntable mode. A prompt tone "Turntable" will play when entering this mode.

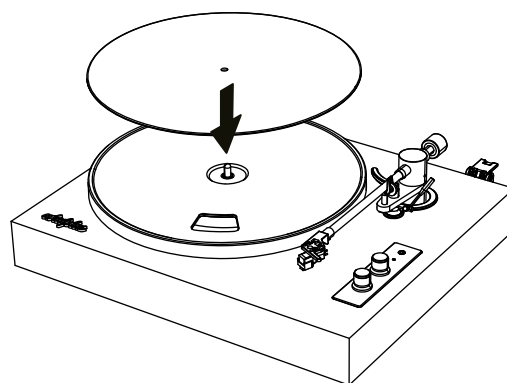

 Place the vinyl record onto the spindle, aligning it with the center hole.

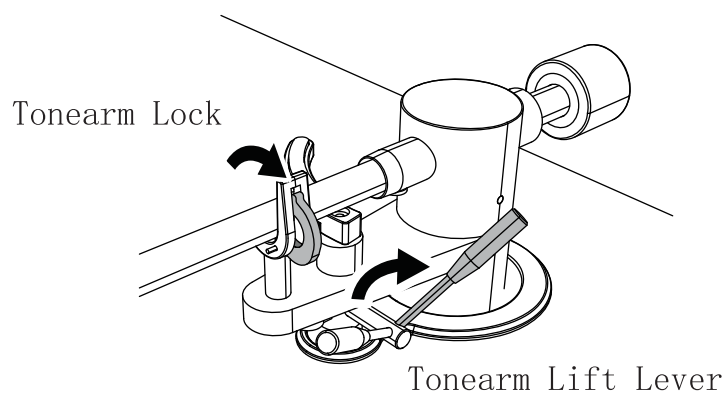


 Release the tonearm lock then raise the tonearm lift lever

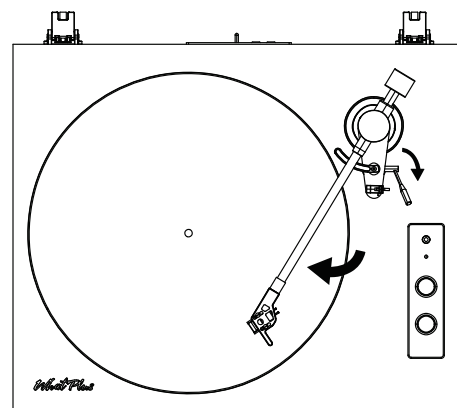


Move the tonearm to the edge of the record, then lower the tonearm lift lever.

 4. Wireless Connection

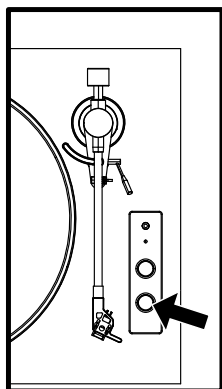

1. Press the knob to switch to wireless mode.
A prompt tone "Bluetooth" will sound when switching.
2. Search for the device name "WhatPlus 1916Pro" and connect.
3. Wait for the wireless pairing to complete.
The indicator light will change from flashing to solid on when successfully connected.

 5. RCA

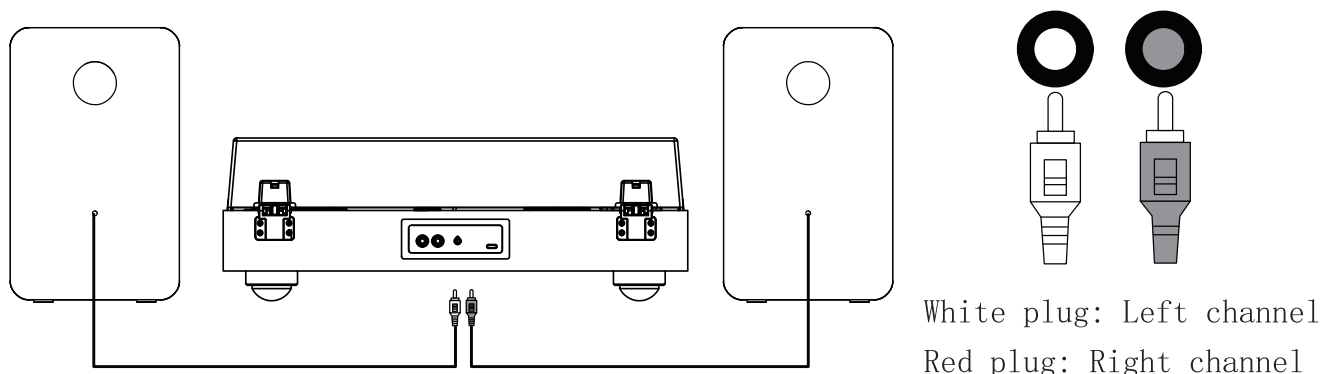

Insert the RCA cable. The playback status in different modes is as follows

1. Vinyl mode: The speaker and the turntable play sound simultaneously.
Adjust the speaker volume to the minimum.
2. Wireless mode: Connect to a phone. The speaker and the turntable play sound simultaneously. Adjust the speaker volume to the minimum.

6. Technical Specifications

Model: WhatPlus 1916 Pro

Bluetooth Wireless Version: V5.4

Power Supply: DC5V2A (Type-C interface)

 
Cartridge Model: AT 3600L

Speaker Size: 4" × 2


Light Strip: LED colorful light

1. 产品概览

1. 顶面图

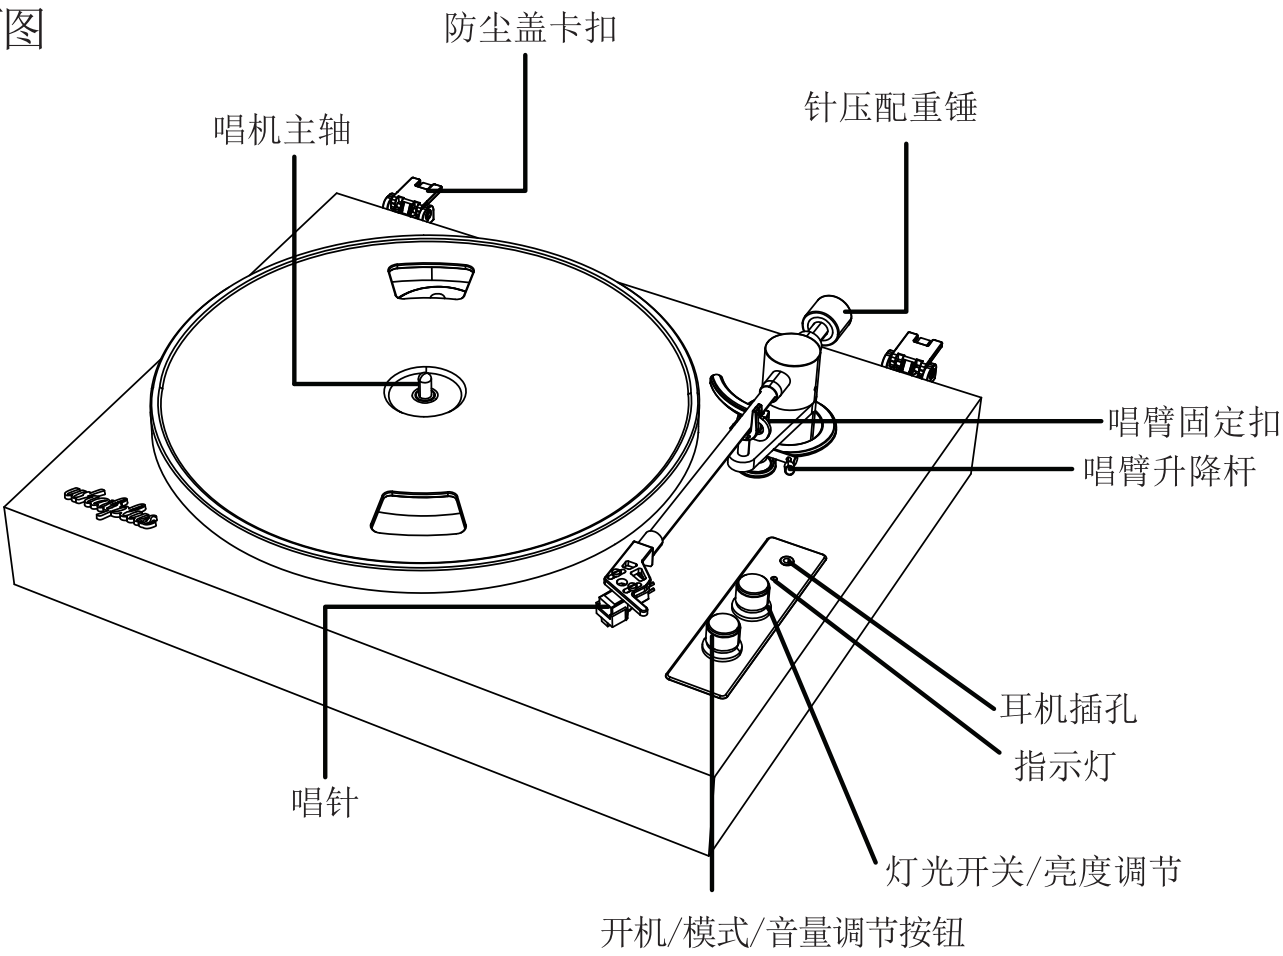

 2. 背面图

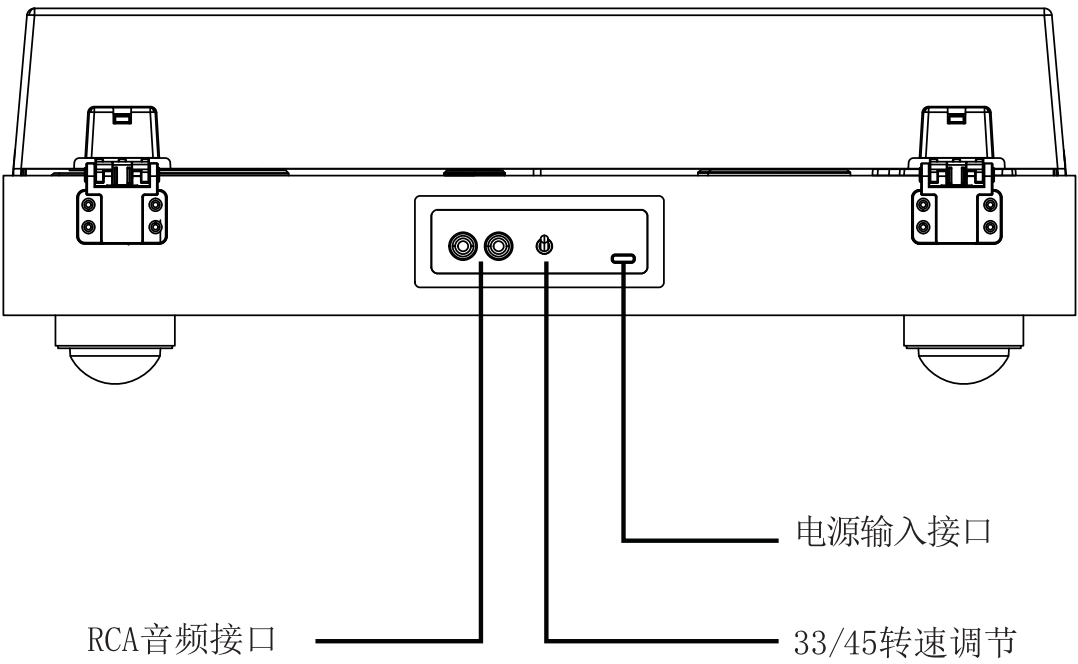


2 安装唱机

2.1 在使用唱片机之前，您需要进行简单的安装将所有的配件从包装中取出并确认对应的数量是否准确，

	配件	数量
1	透明盖	1
2	磨砂塑胶唱盘	1
3	配重锤	1
4	45转盘适配器	1
5	电源适配器	1
6	说明书	1
7	避震杆锁扣	1


2.2 安装唱机

 1.

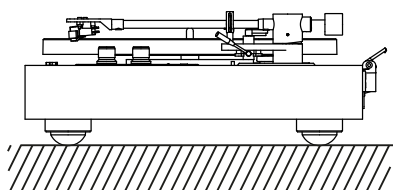


将唱片机放置水平面上

 2.

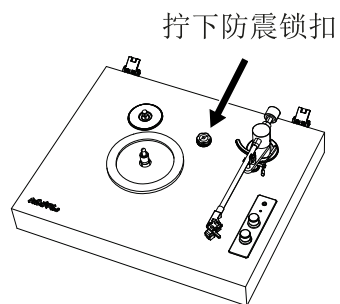


拧下防震锁扣

 3.

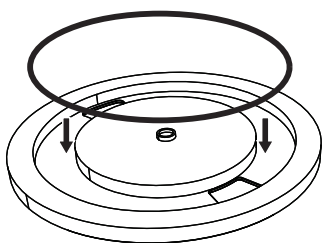


将皮带平整套在唱盘背面-内圈

 4.


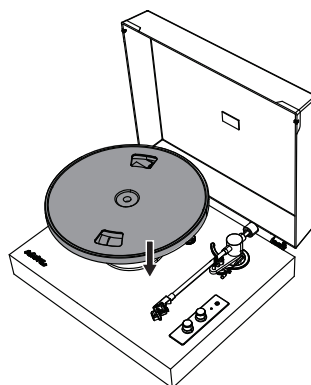


将唱盘对准主轴放置

 
5.

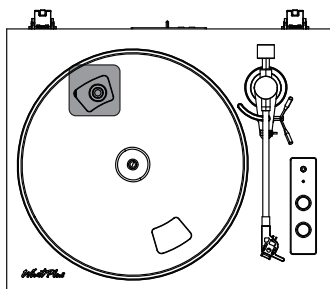


从唱盘孔中勾起皮带，
将其套在转轴上即可安装完成

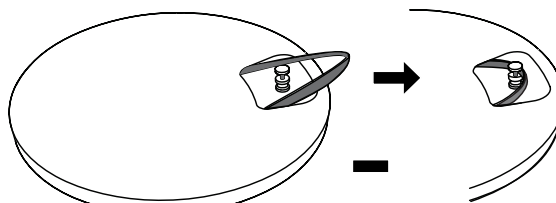  

平整

 


扭曲

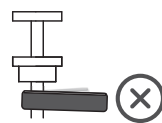 


错误位置

 6.

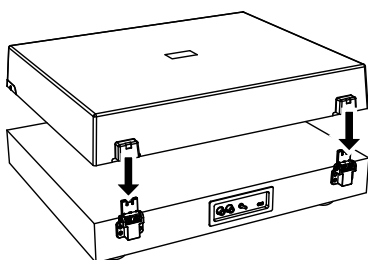

将防尘盖插入卡扣向下压紧


 
7.

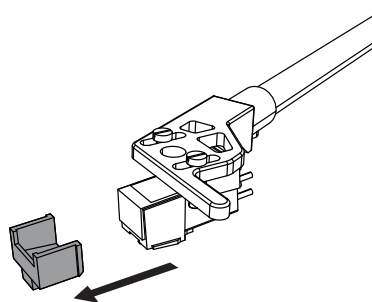


平行方向拆下唱针保护罩
注意：施加向下的力量
可能会导致唱针：从唱头上脱落

2.3 安装调整唱头针压

  1. 将针压配重锤安装到唱臂尾部

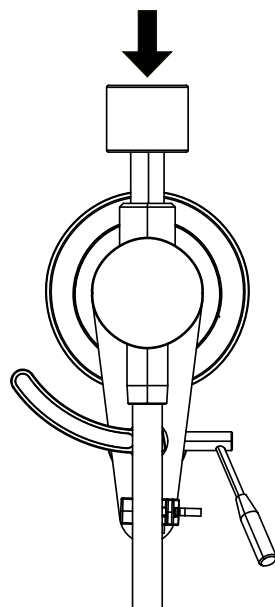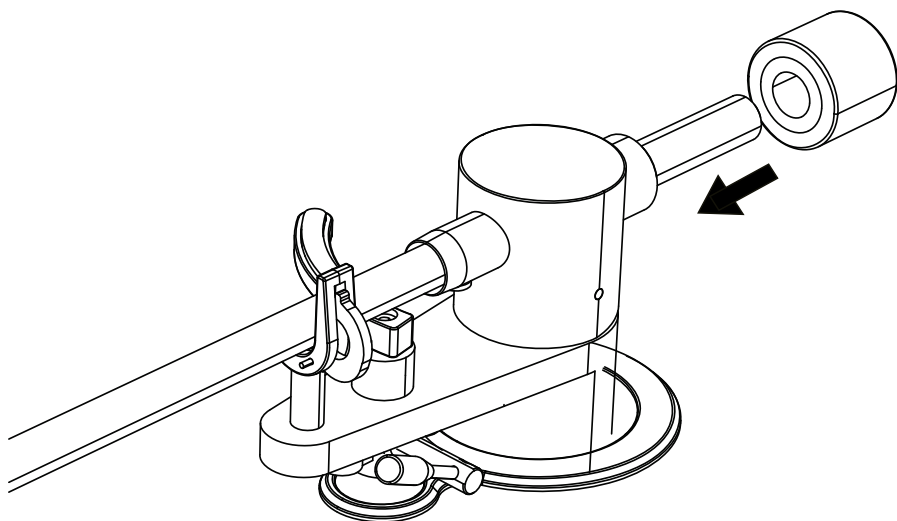

 
2. 推动配重锤调整针压

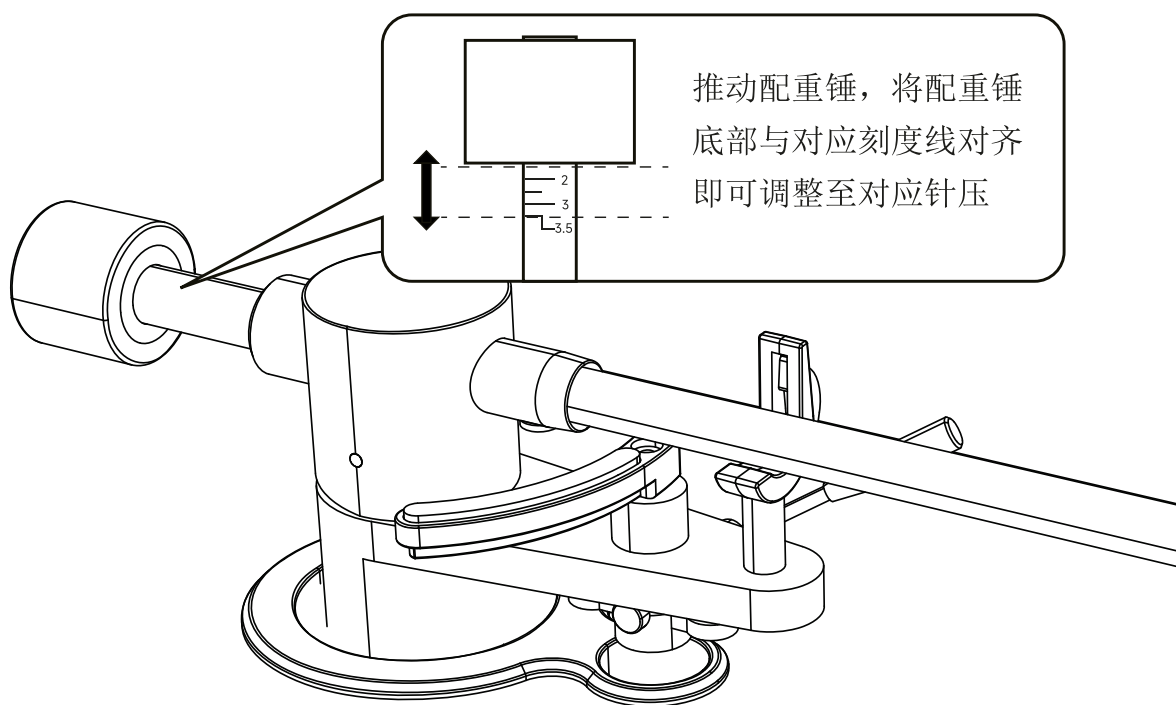


提示

推荐针压范围为2.5-3.5g，常用针压推荐3.0g
用户可根据自身实际需求调整针压

 
3. 使用唱机

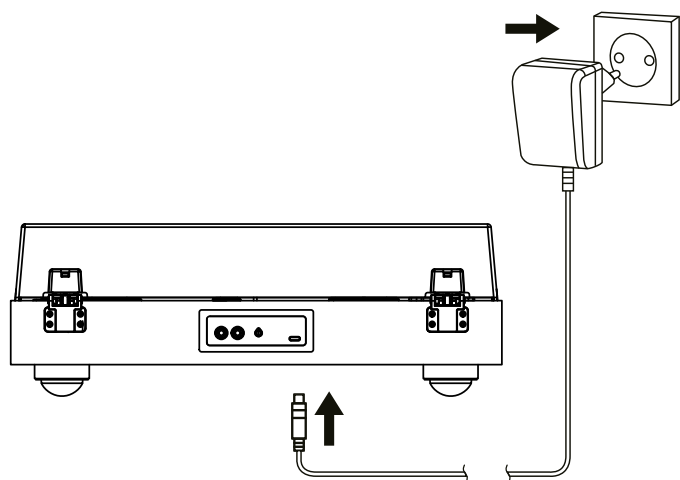


插入电源接口

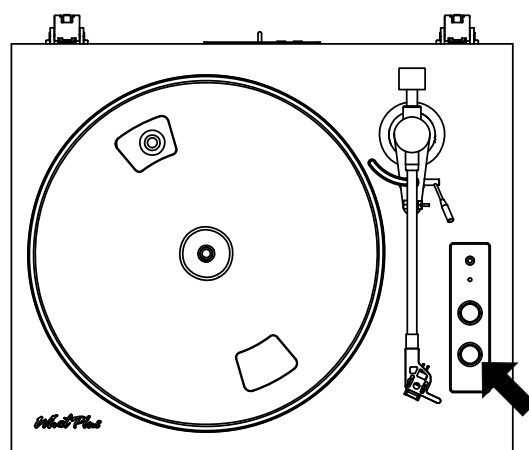 


开机-长按音量旋钮

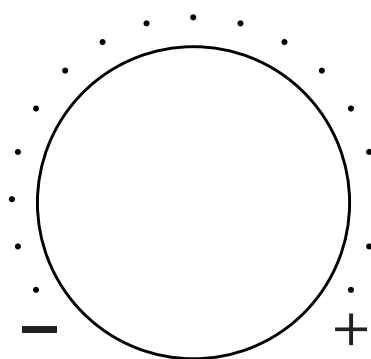 

 点按旋钮切换功能
切换至黑胶模式，切换时黑胶模式时会
响起提示音“Turntable”

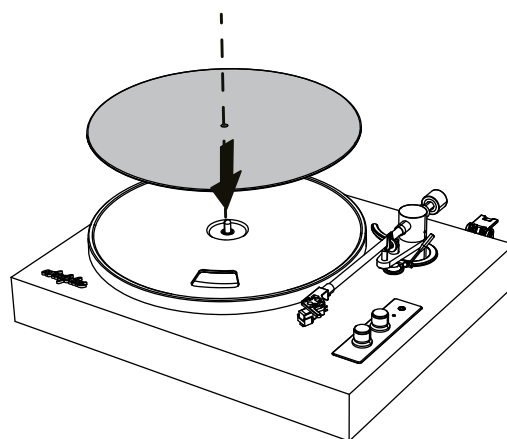


对准中心轴放下黑胶唱片

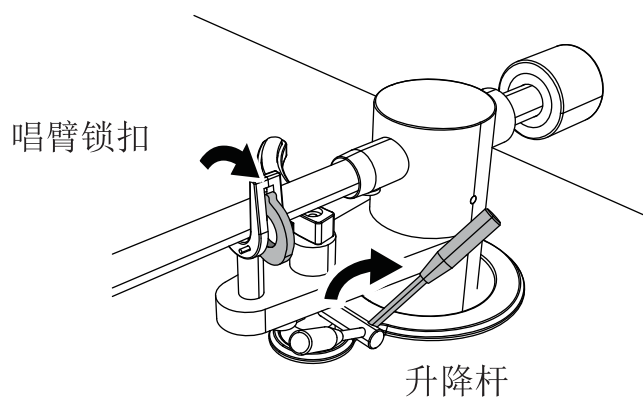 

唱臂锁扣


升降杆

 打开唱臂锁扣，升降杆抬起

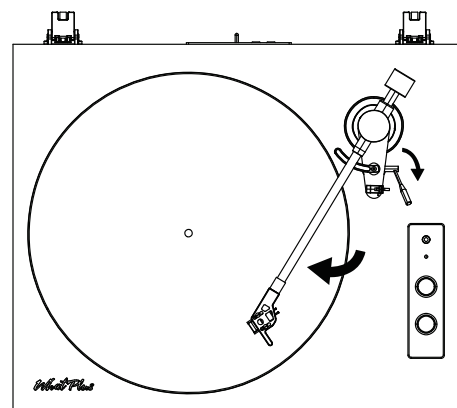



挪动唱臂到唱片边缘
升降杆落

 4. 无线连接

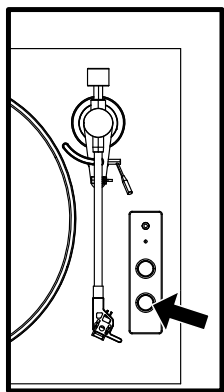

1. 点按旋钮，切换到无线模式，
切换时无线模式时会响起提示音“Bluetooth”
2. 搜索无线名称“WhatPlus 1916Pro”，进行连接
3. 等待无线配对连接, 成功连接后指示灯从闪烁转至常亮

  5. 通过RCA音频线连接外部音响

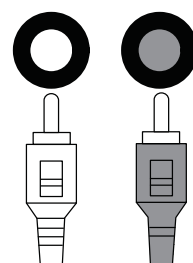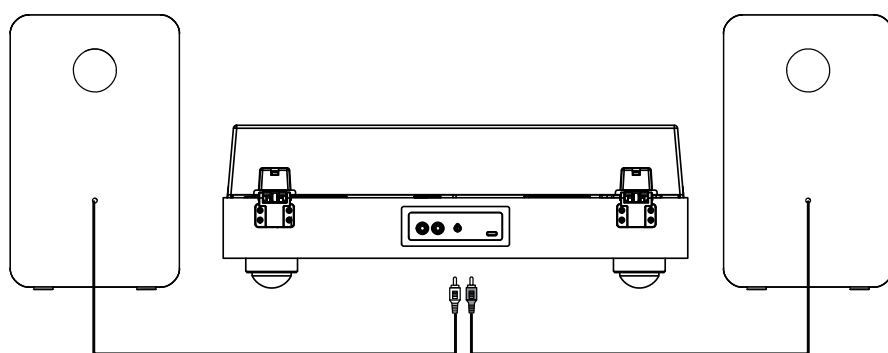

白色插头为左侧
红色插头为右侧

插入RCA后，不同模式下播放状态


1. 黑胶模式：音箱与唱机同时发声 唱机音量调到最小即可
2. 无线模式：连接手机：音箱与唱机同时发声 唱机音量调到最小即可

6. 技术规格


型号：	WhatPlus 1916 Pro
蓝牙无线版本：	V5.4
电源：	DC5V2A (Type-C接口)
唱针型号：	AT 3600L
喇叭尺寸：	4 寸 × 2
灯带：	LED 炫彩灯

1. 製品概要

 1. 上面図

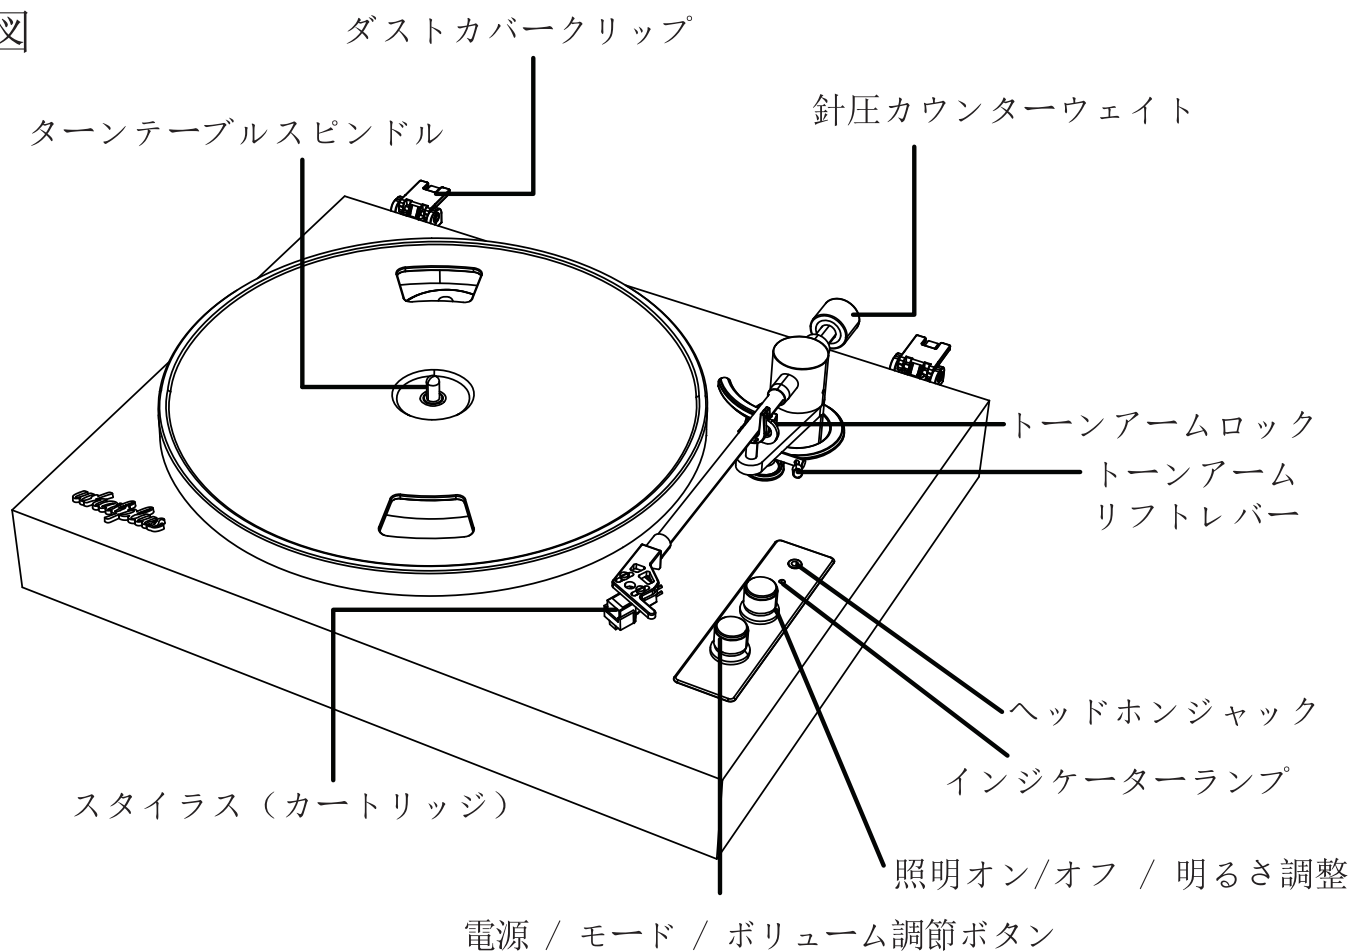

 2. 裏面図

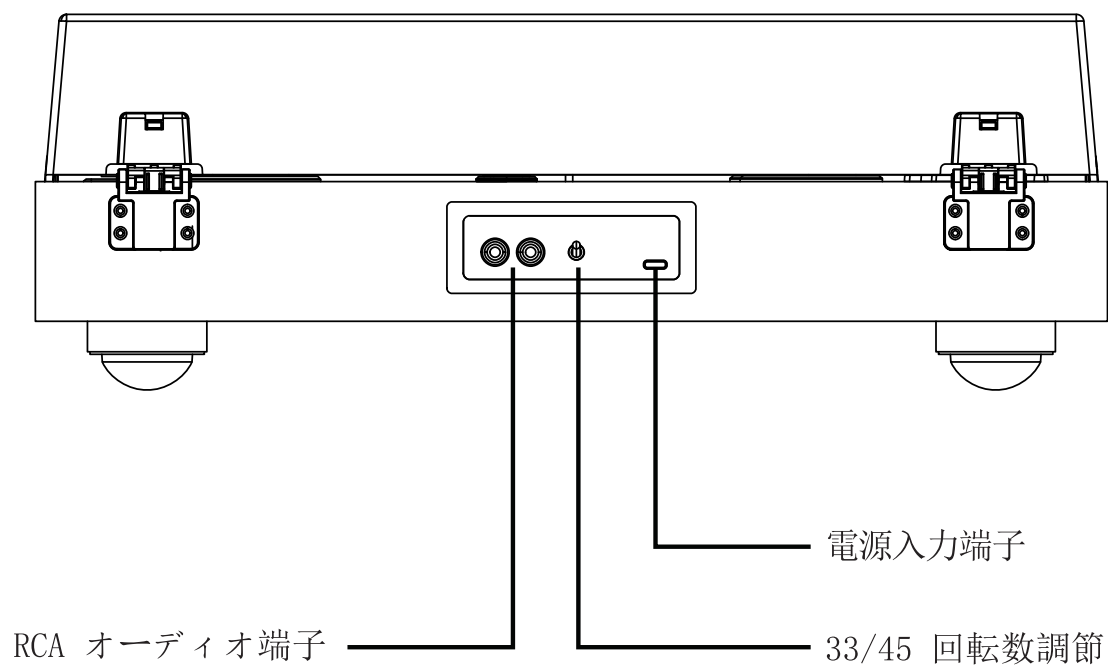


2. プレーヤーの組み立て

2.1プレーヤーをご使用になる前に、簡単な組み立てが必要です。付属品をすべてパッケージから取り出し、数量が正しいことをご確認ください。

	付属品	個数
1	透明カバー	1
2	つや消し樹脂製プラッター	1
3	カウンターウェイト	1
4	45 回転用アダプター	1
5	電源アダプター	1
6	取扱説明書	1
7	トーンアームロック	1

2.2プレーヤーの組み立て

 
1.

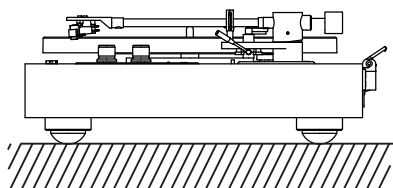


レコードプレーヤーを水平な場所に置いてください

2.

 防震ロックネジを外します

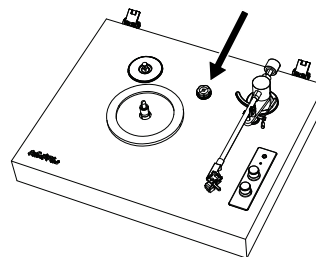


 3.

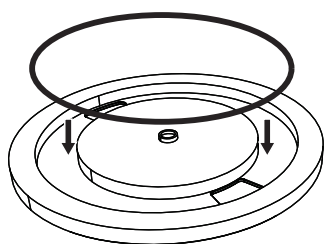


ベルトをプッタの裏側の内周に均等に取り付けます

 4.


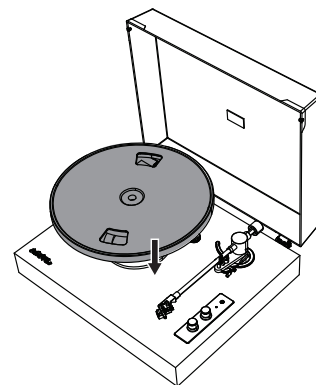


プッターをスピンドルに合わせて置きます

 
5.

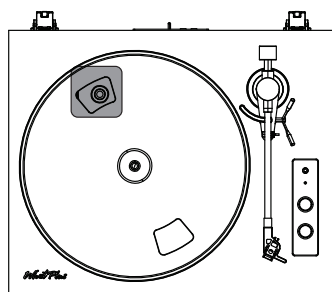

  
プッターの穴からベルトを引っ掛け、
モーターのプーリーにかければ取り付け完了です

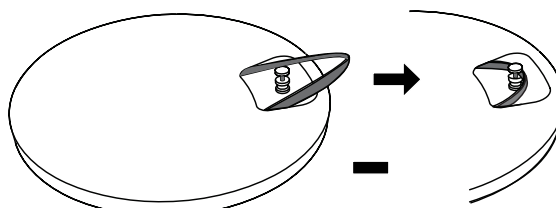

平ら

 


ねじれ

 


誤った位置

 6.

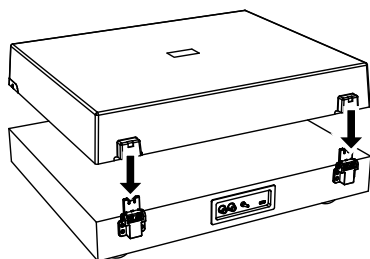

ダストカバーをヒンジに差し込み、
下に押し付けて固定します


 
7.

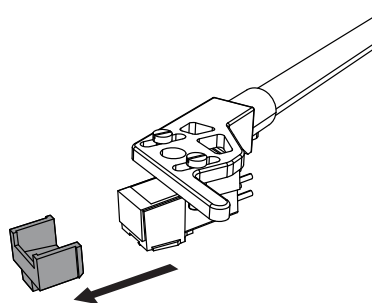


平行方向にスタイラス保護カバーを取り外します
注意：下方向に力を加えると、
スタイラスがカートリッジから外れる恐れがあります

2.3針圧調整用カウンターウェイトの取り付けと調整

  1. 針圧調整用カウンターウェイト
をトーンアームの後端に取り付けます

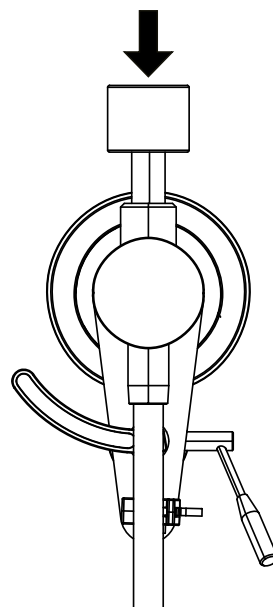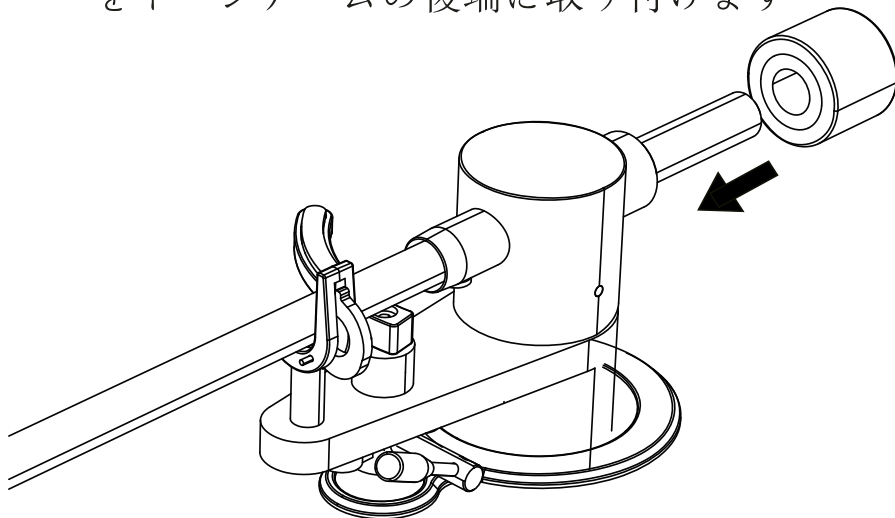

 
2. カウンターウェイトをスライドさせて針圧を調整します

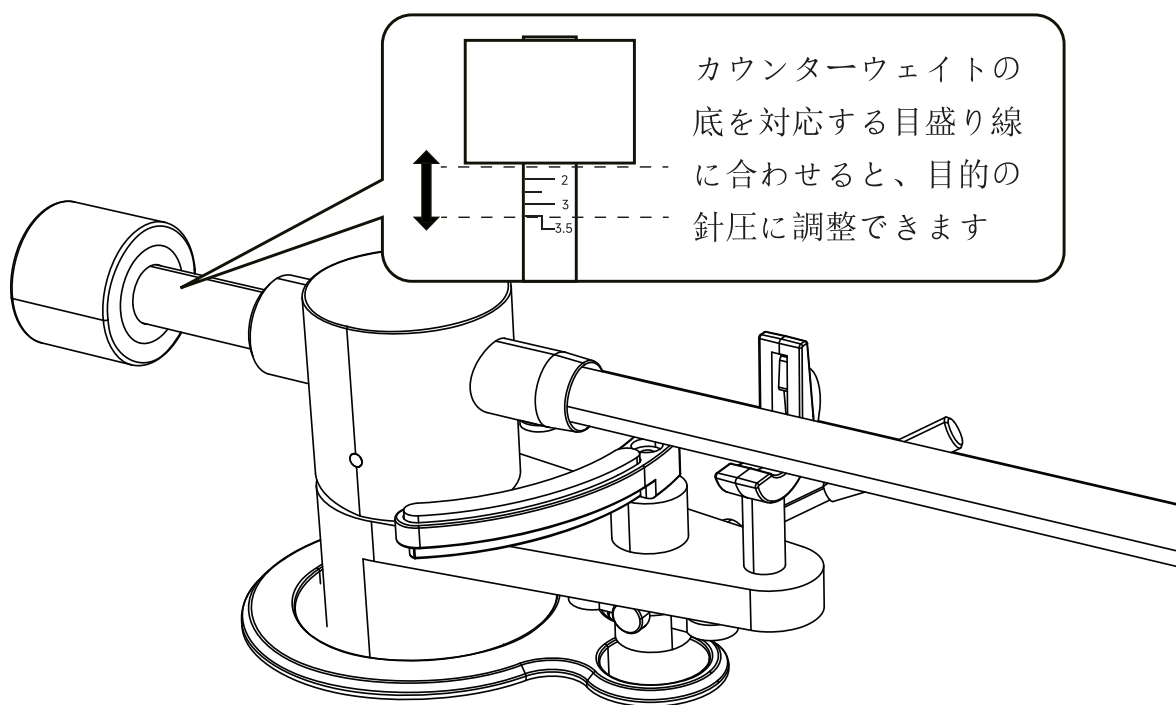


ご注意

推奨針圧範囲は 2.5-3.5g で、一般的に 3.0g が推奨されます。ご自身の使用状況に合わせて調整してください。

 
3. プレーヤーの使用

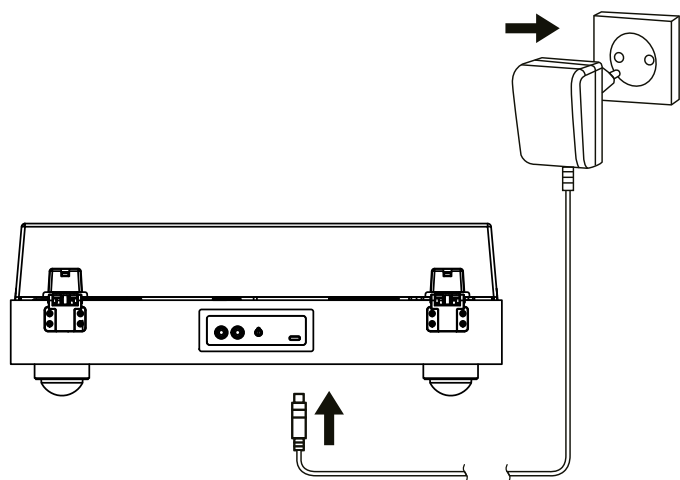


挿入電源接口

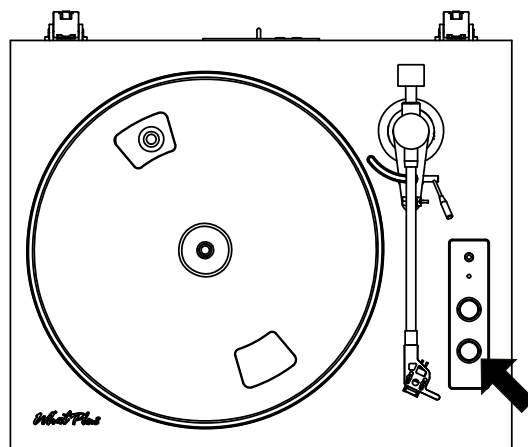 


开机-长按音量旋钮

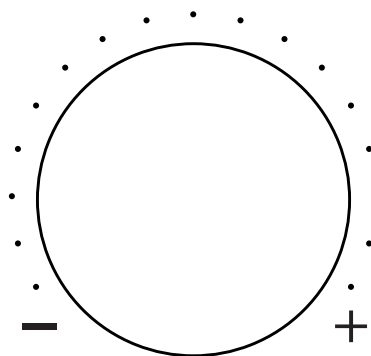 

 
ノブを短押して機能を切り替え
ターンテーブルモードに切り替えると、
プロンプト音「Turntable」が鳴ります。

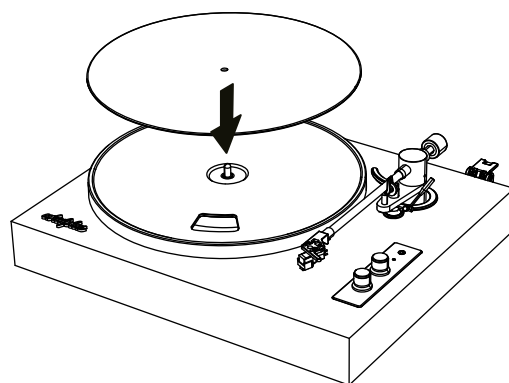

センタースピンドルに
合わせてビニール盤を置きます

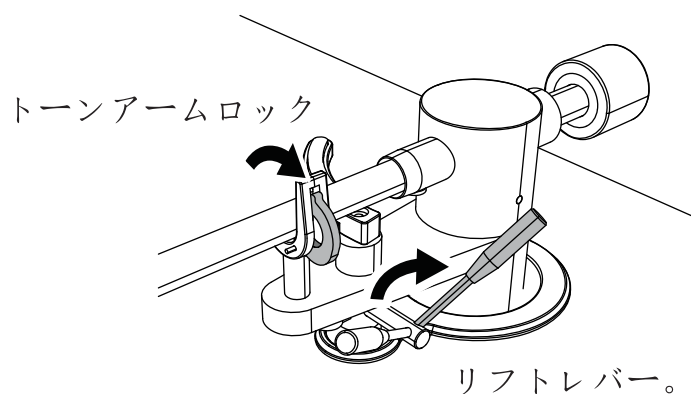 


トーンアームロックを解除し、
リフトレバーを上げます

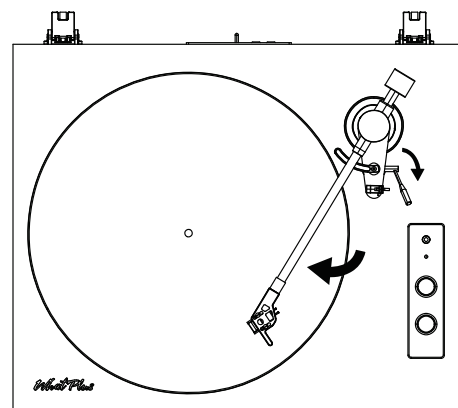 



トーンアームをレコードの縁まで
移動させ、リフトレバーを下げます

 4. 無線接続

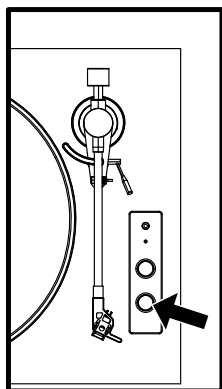

1. ノブを短押ししてワイヤレスモードに切り替えます。
切り替わる際、「Bluetooth」の案内音が鳴ります。
2. デバイス名「WhatPlus 1916Pro」を検索し、接続してください。
3. ペアリング完了をお待ちください。接続成功後、
インジケーターが点滅から常点灯に変わります。

  5. 外部スピーカー接続（RCA）

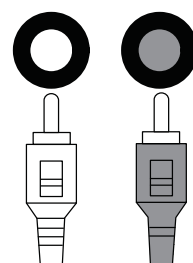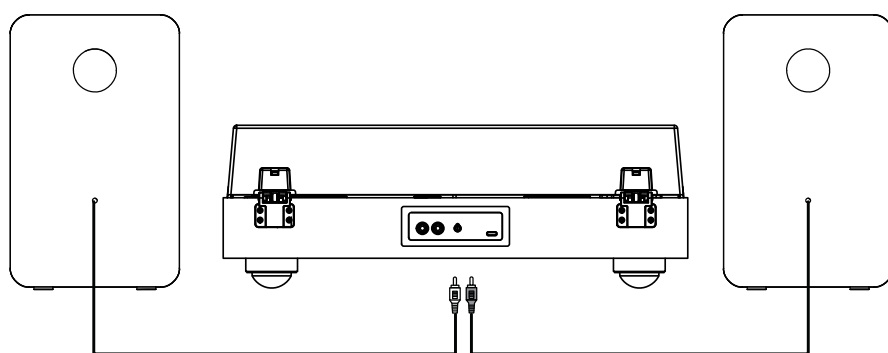

白いプラグ：左チャンネル
赤いプラグ：右チャンネル

RCA ケーブル接続後、各モードでの再生状態

1. レコードモード：スピーカーとプレーヤーから同時に音が出ます。
プレーヤーのボリュームを最小に調整してください。
2. ワイヤレスモード：スマホと接続時、スピーカーとプレーヤーから同時に音が出ます。
プレーヤーのボリュームを最小に調整してください。

6. 技術仕様

型番：WhatPlus 1916 Pro

Bluetooth バージョン：V5.4

電源：DC5V2A（Type-C 端子）

 
カートリッジ型番：AT 3600L

スピーカーサイズ：4 インチ × 2


LED ライト：LED カラーライト

1.제품 개요

1. 상면도

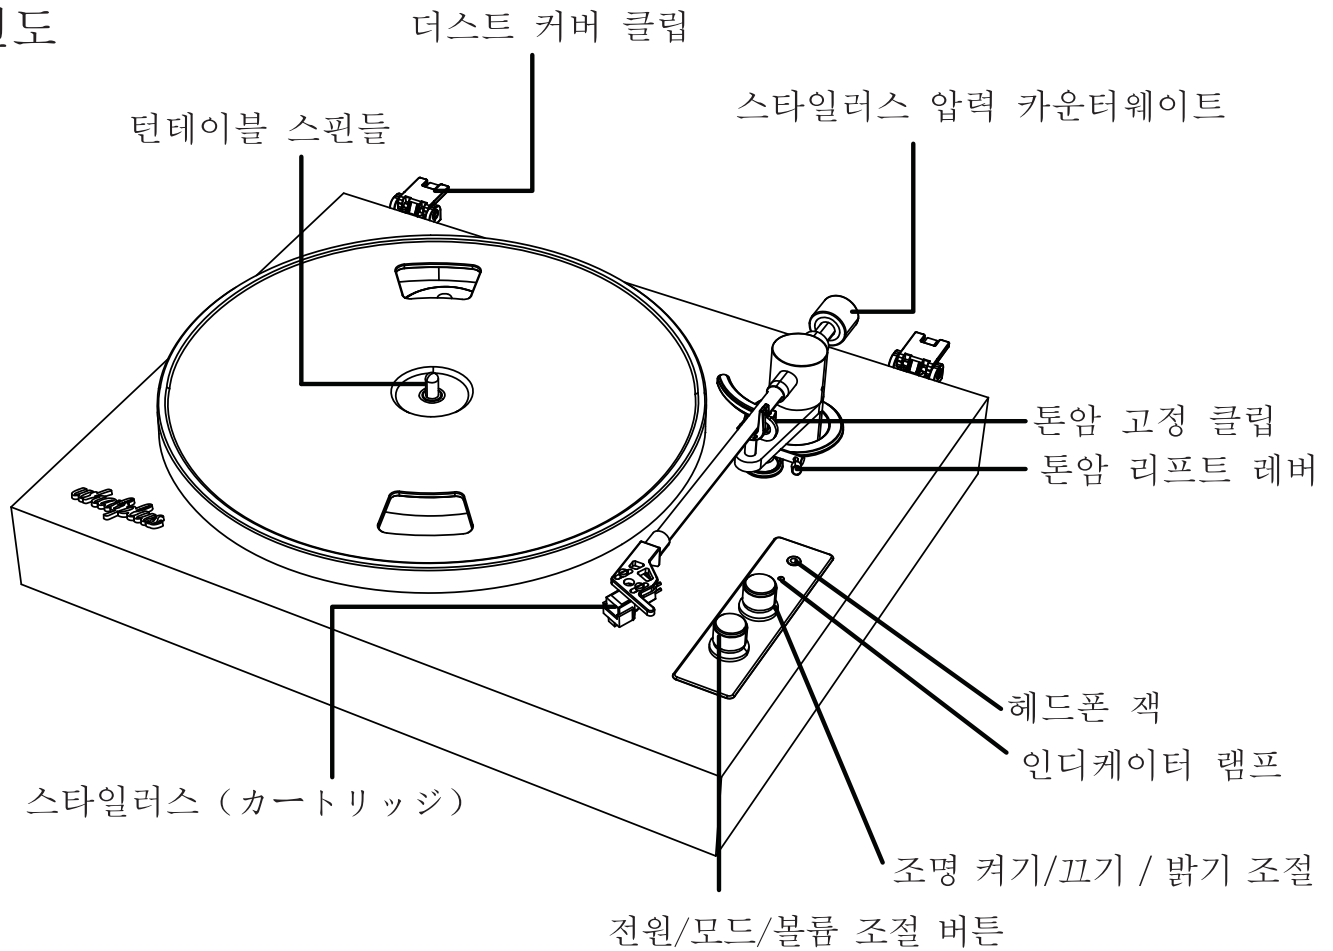

 2. 배면도

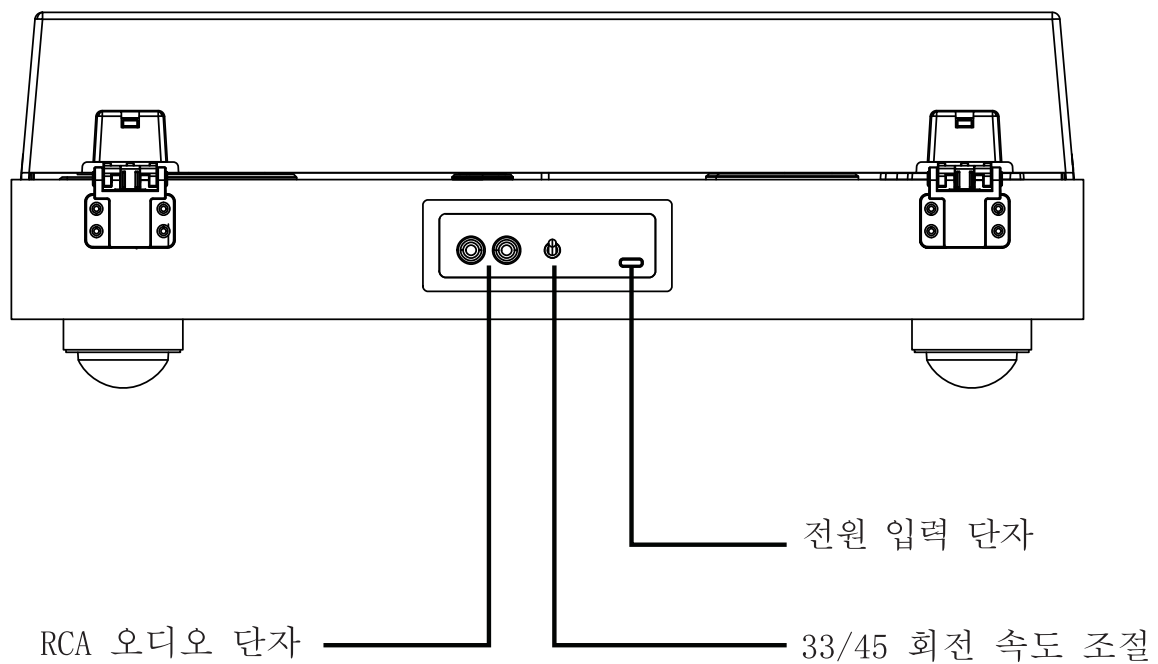


2.턴테이블 조립

2.1턴테이블을 사용하기 전에 간단한 조립이 필요합니다.
모든 부속품을 포장에서 꺼내어 수량이 정확한지 확인하십시오.

	부속품	수량
1	투명 커버	1
2	무광 플라스틱 플래터	1
3	카운터 웨이트	1
4	45rpm 어댑터	1
5	전원 어댑터	1
6	사용 설명서	1
7	톤암 잠금 클립	1

2.2턴테이블 조립

 
1.

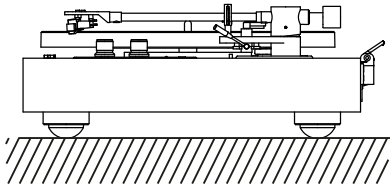


턴테이블을 평평한 표면에 놓으십시오

2.

 충격 방지 잠금 나사를 풀니다

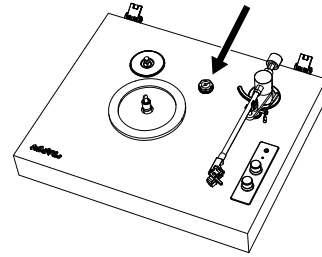


 3.

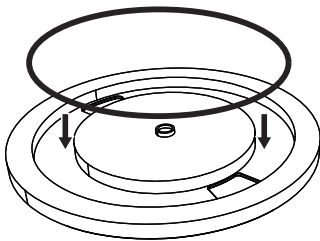


벨트를 플래터 뒷면의 내부
원형 홈에 평평하게 끼웁니다

 4.


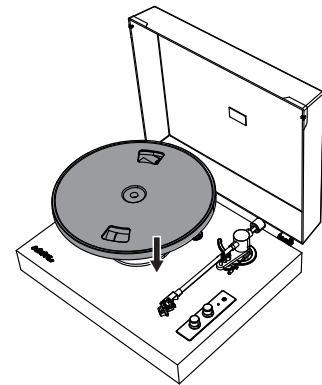


플래터를 스피들에 맞춰 올려놓습니다

 
5.

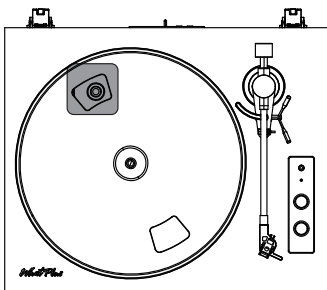


플래터 구멍에서 벨트를 걸어 모터
풀리에 감으면 설치가 완료됩니다

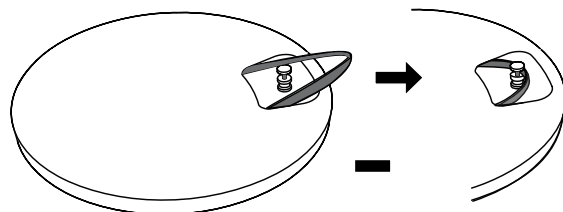  

평평함

 


꼬임

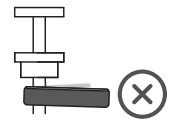 


잘못된 위치

 6.

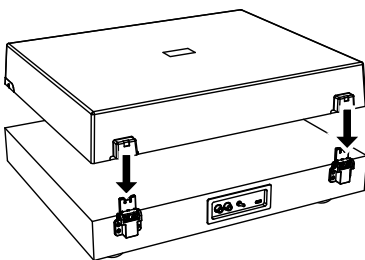

먼지 덮개를 힌지에 삽입하고
아래로 눌러 고정합니다


 
7.

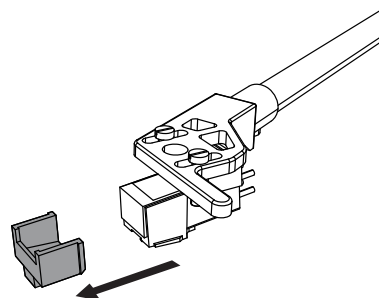


평행 방향으로 스타일러스 보호 커버를 제거합니다
주의: 아래 방향으로 힘을 가하면 스타일러스가
카트리지에서 분리될 수 있습니다

2.3카트리지 스타일러스 압력 조절 및 설치

  1. 스타일러스 압력 카운터 웨이트를
톤암 끝에 설치합니다

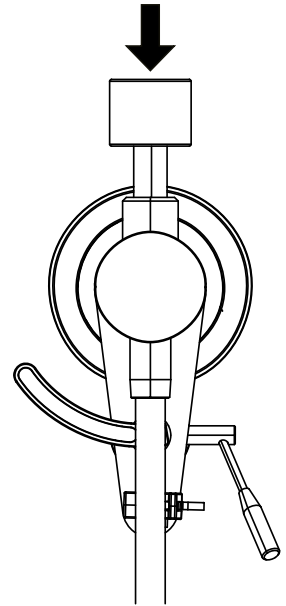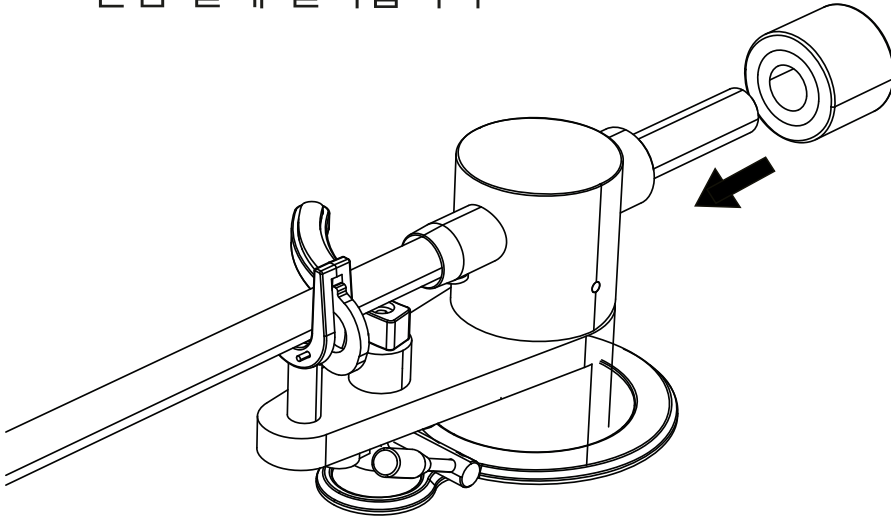

 
2. 카운터 웨이트를 밀어 스타일
러스 압력을 조절합니다

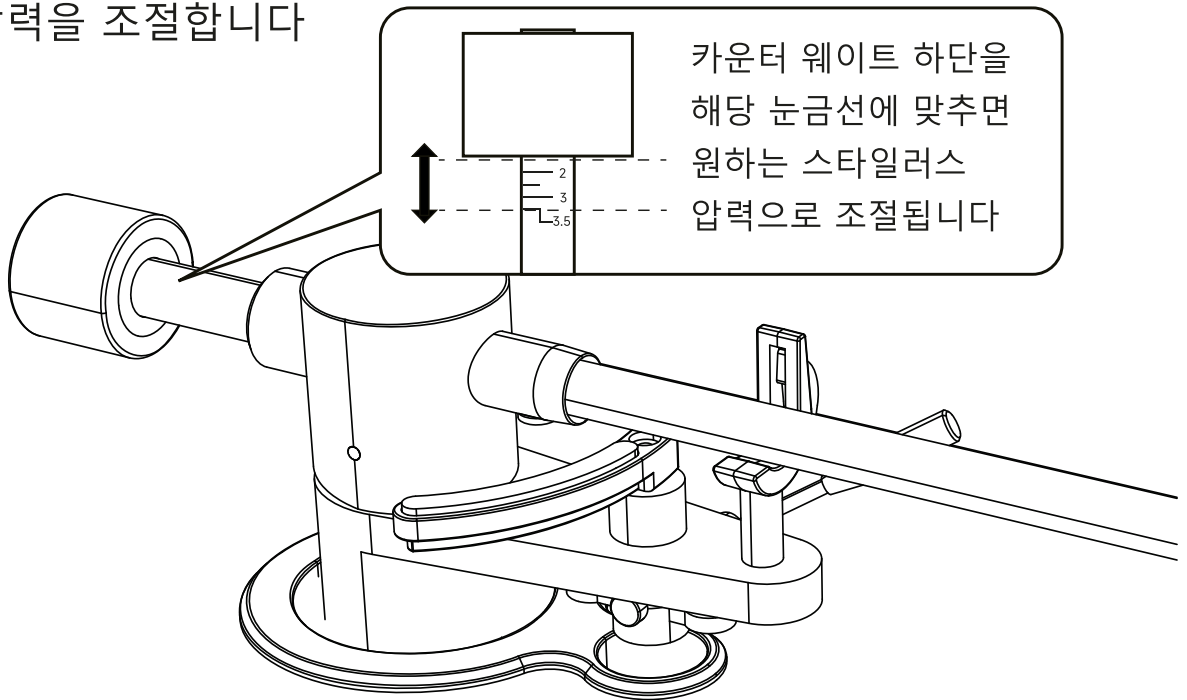


안내

권장 스타일러스 압력 범위는 2.5-3.5g이며,
일반적으로 3.0g을 권장합니다. 사용 환경에 따라
조절하실 수 있습니다.

 
3.턴 테이블 사용

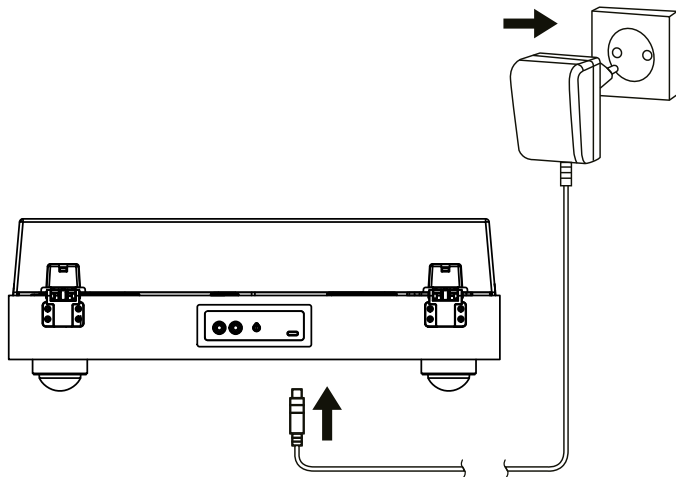


插入电源接口

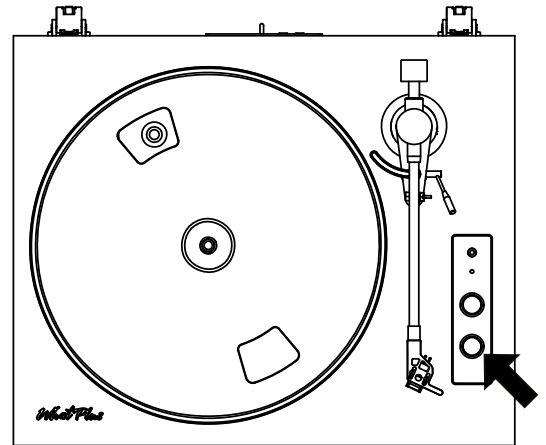 


开机-长按音量旋钮

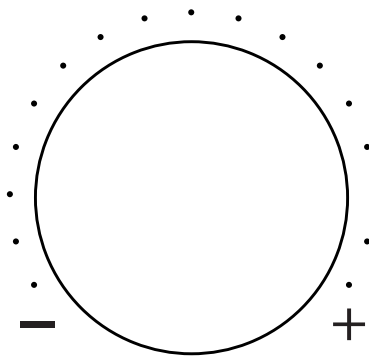 

 
노브를 짧게 눌러 기능을 전환
Turntable 모드로 전환 시,
안내 음성 "Turntable"이 재생됩니다.

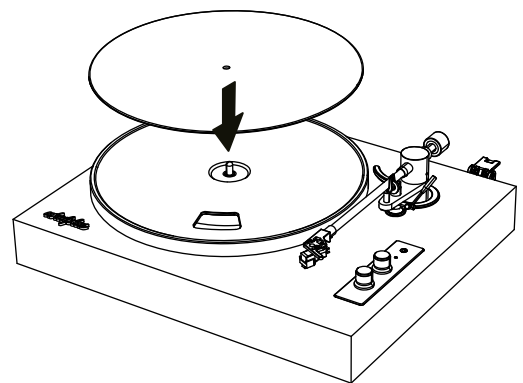

중심축에 맞춰 빈티지
레코드를 놓습니다

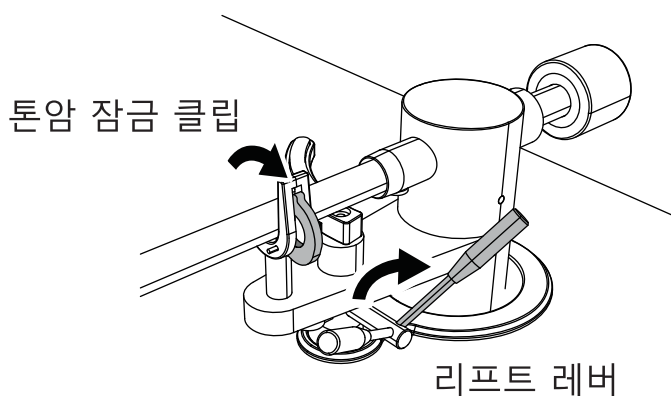 


톤암 잠금 클립을 열고 리프트
레버를 올립니다

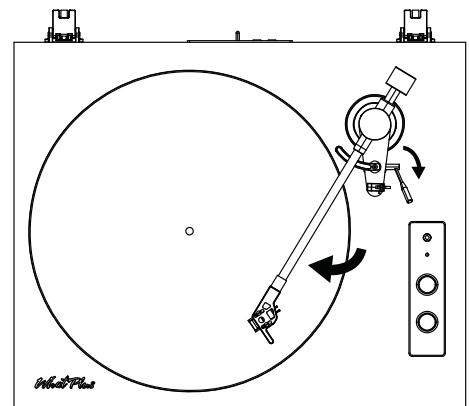 

톤암을 레코드 가장자리까지
이동시키고 리프트 레버를 내립니다

 4. 무선 연결

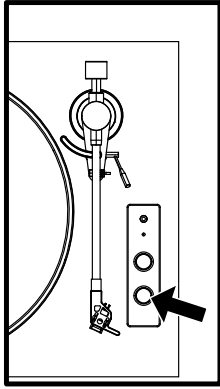



1. 노브를 짧게 눌러 무선 모드로 전환합니다.

무선 모드로 전환 시 안내 음성 "Bluetooth"가 재생됩니다.

2. 무선 이름 "WhatPlus 1916Pro"을 검색하고 연결하십시오.

3. 무선 페어링 완료를 기다리십시오. 연결 성공 시 표시등이 깜빡임에서 계속 켜짐으로 전환됩니다.

  5. RCA 케이블 연결 후 모드별 재생 상태

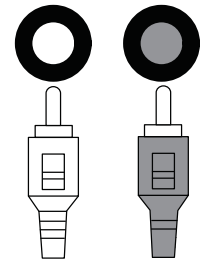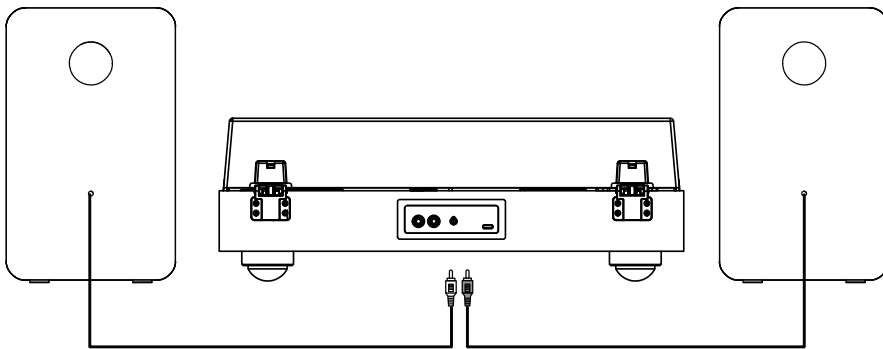

흰색 플러그: 좌측 채널
빨간색 플러그: 우측 채널

RCA 케이블을 연결한 후, 각 모드에서의 재생 상태는 다음과 같습니다.

1. 비닐 모드: 스피커와 턴테이블이 동시에 재생됩니다. 턴테이블 볼륨을 최소로 조절하십시오.

2. 무선 모드: 스마트폰과 연결합니다. 스피커와 턴테이블이 동시에 재생됩니다.

턴테이블 볼륨을 최소로 조절하십시오.

6. 기술 사양

항목: WhatPlus 1916 Pro

블루투스 버전: V5.4

전원 : DC5V2A (Type-C 단자)

카트리지 모델명: AT 3600L

스피커 크기 : 4인치 × 2

LED 라이트 : LED 컬러 라이트

What Plus

品牌方:问加电子科技(山东)有限公司

地址:山东省济宁市兖州区龙桥街道华一大厦

Brand Owner: Wenjia Electronic Technology (Shandong) Co., Ltd.

Address: Huayi Building, Longqiao Subdistrict,
Yanzhou District, Jining City, Shandong Province

5 WhatPlus APP

Software Connection

1. Pair the device with your phone according to the Bluetooth connection instructions.
2. After pairing, open the WhatPlus APP, search for and select WhatPlus 1916 PRO connect. The device will be ready for normal use.

Note

Both your phone system and the APP must stay connected to the device during use.



SCAN code download for mobile phone

AppStore: Search "WhatPlus" for downloads

Google Play: Search "WhatPlus" for downloads

5 WhatPlus APP

软件连接

- 1.根据蓝牙连接说明将机器与手机配对
- 2.完成手机配对后打开 WhatPlus APP 搜索设备选择 WhatPlus 1916 PRO 连接即可正常使用

注：使用时手机系统与软件需同时连接着设备



手机扫码下载

AppStore商城：搜索“WhatPlus”即可下载

应用宝：搜索“WhatPlus”即可下载

华为商城：搜索“WhatPlus”即可下载

5 WhatPlus APP

ソフトウェア接続

1. Bluetooth 接続手順に基づき、本体とスマートフォンをペアリングしてください。

2. ペアリング完了後、WhatPlus アプリを起動し、機器を検索して「WhatPlus 1916 PRO」を選択し接続してください。接続が完了すると、正常にご利用いただけます。

ご注意：ご使用時は、スマートフォン本体の Bluetooth 設定とアプリの両方が機器に接続されている状態にしてください。



QR コードを読み取ってダウンロードしてください。

AppStore: 「WhatPlus」を検索してダウンロード

Google Play: 「WhatPlus」を検索してダウンロード

5 WhatPlus APP

소프트웨어 연결 방법

1. 블루투스 연결 설명에 따라 기기와 휴대폰을 페어링 해 주십시오.
 2. 페어링이 완료된 후 WhatPlus 앱을 실행하고 기기를 검색하여 WhatPlus 1916 PRO 를 선택하여 연결하면 정상적으로 이용하실 수 있습니다.
- 주의
- 사용 시 휴대폰 시스템과 앱이 모두 기기에 연결된 상태를 유지해 주십시오.



QR코드를 스캔하여 다운로드하십시오.

AppStore: 「WhatPlus」를 검색하여 다운로드하세요

Google Play: 「WhatPlus」를 검색하여 다운로드하세요

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.