

AI Screen Printer

Product Manual




Before You Start

- Read this manual before using the printer for the first time.
- Charge the printer with a certified 5V/1A USB power adapter.
- AI image generation and app setup require a network connection.
- For Wi-Fi setup, use a 2.4 GHz Wi-Fi network if required by the app.
- Adult supervision is required when children use or charge the product.

Scan the QR code below to watch the setup video



1. Product Overview

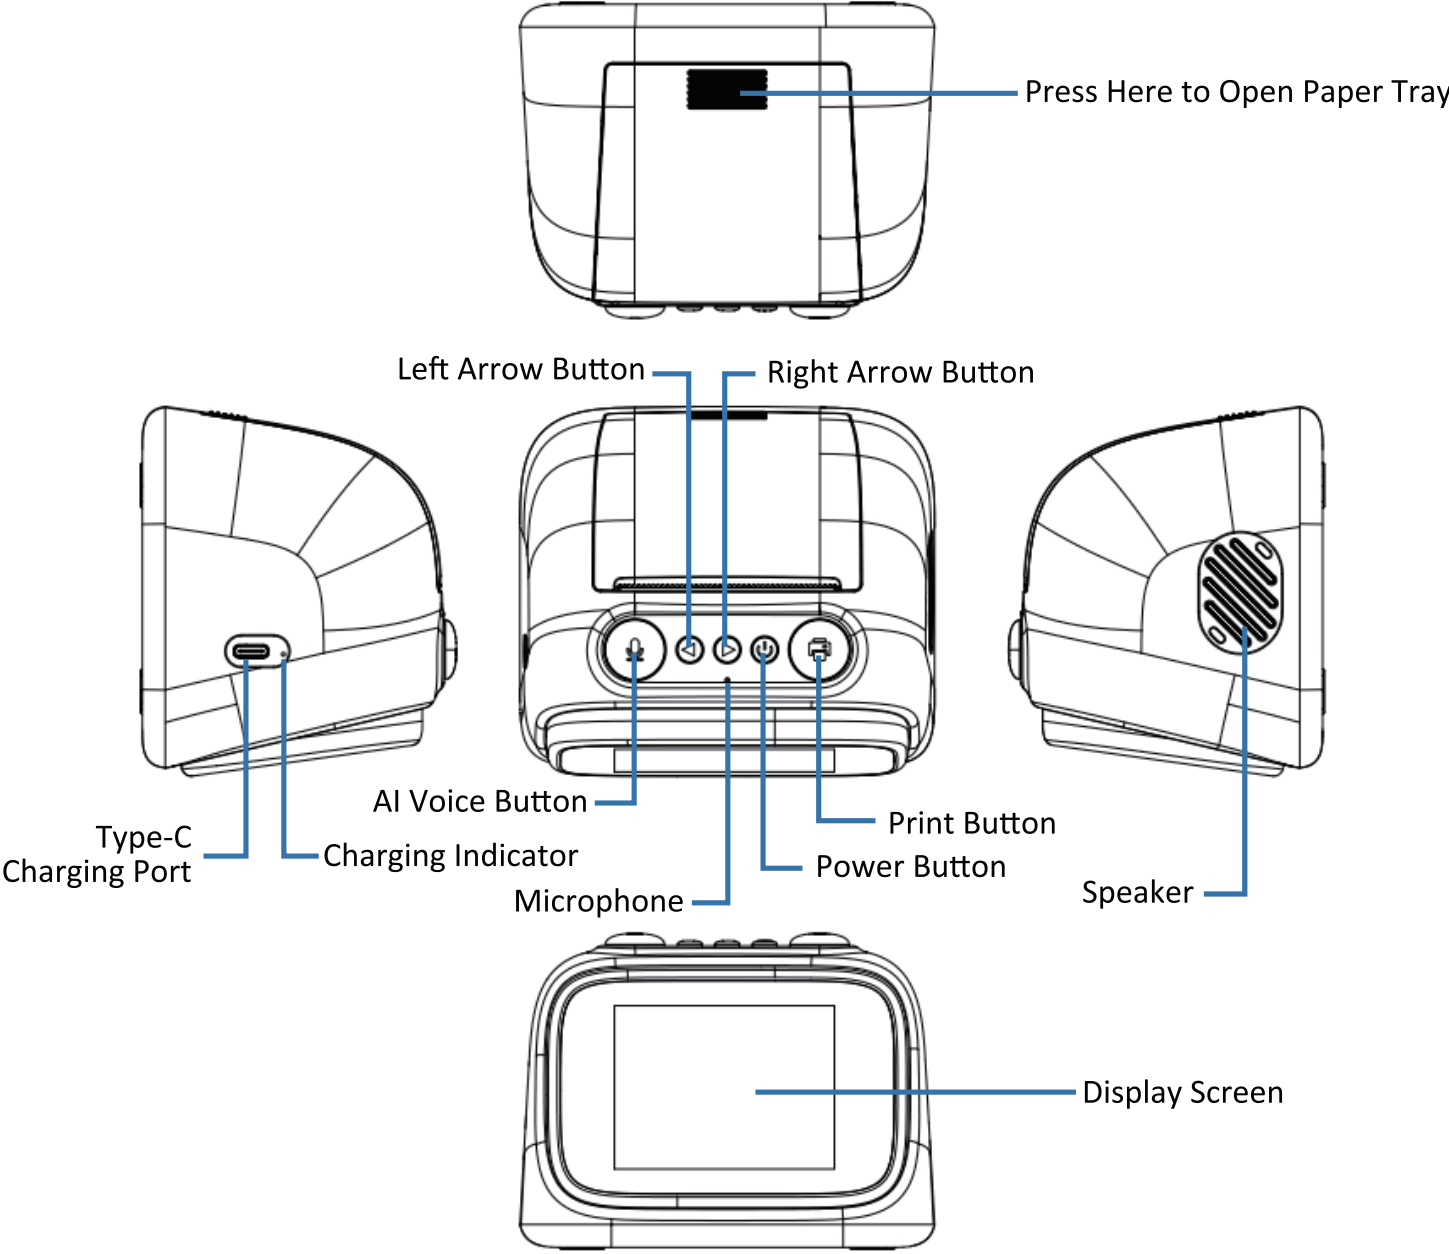

Product structure reference

2. Loading the Paper

- Make sure the printer is turned off.
- Push the paper tray handle upward to open the paper tray door.
- Load the thermal paper with the smoother, printable side facing up. Make sure the paper feeds out smoothly from the top, as shown in the illustration.
- Close the paper tray door securely before use.

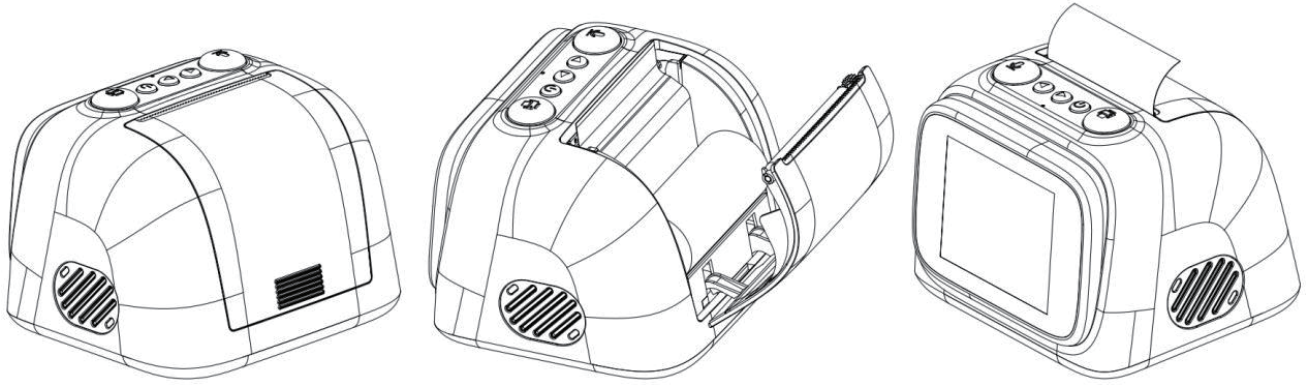


Fig. 2-1 Paper loading steps

3. Network Setup

Important: During setup, your phone may show that the printer hotspot has no internet access. This is normal. Select Use Anyway or Keep Using This Network, then continue setup.

Method A: Set Up Wi-Fi Using the Printer Hotspot

1. Press and hold the Power Button for 2 seconds to turn on the printer. The screen shown in Figure 1 will appear.
2. Press the AI Voice Button twice to print the network setup instructions. Open your phone's Wi-Fi settings and connect to the network starting with "AI_printer," as shown at the bottom of Figure 1.
3. Open your phone's built-in web browser. If a message appears saying that the Wi-Fi network has no internet access, select "Use Anyway" or "Keep Using This Network." Enter 192.168.3.1 in the address bar, tap "Go," and select "Wi-Fi Setup" to connect the printer to your local Wi-Fi network.
4. After setup is complete, the printer will automatically return to the home screen shown in Figure 2. A Wi-Fi status icon will appear at the top of the screen, and the printer is ready for use.

5. To change the Wi-Fi network later, press and hold the Right Arrow Button. When the screen shown in Figure 1 appears, press the AI Voice Button twice to print the setup instructions, then repeat the setup process. Once setup is complete, press the Power Button once to return to the home screen shown in Figure 2.

6. If the printer was previously used without a network connection, the screen may display "Network connecting..." as shown in Figure 3. Press and hold the Right Arrow Button to enter the "Network configuration" screen shown in Figure 4. Then press the AI Voice Button twice to print the setup instructions and follow Steps 2–4 to complete setup.



Fig. 3-1 Network setup screen

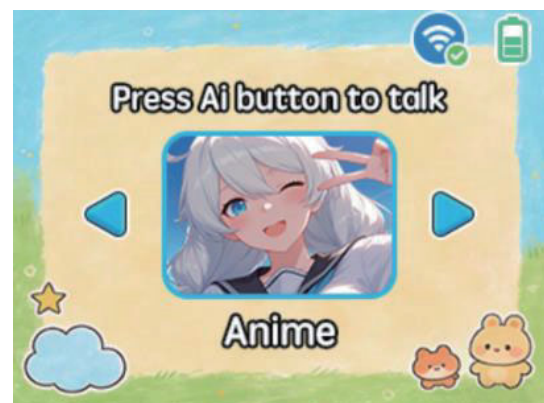


Fig. 3-2 Main screen after connection



Fig. 3-3 Network connecting



Fig. 3-4 Network configuration

Method B: Set Up Wi-Fi Using the App

1. Press and hold the Power Button to turn on the printer. From any screen, press and hold the Left Arrow Button to display the QR code shown in Figure 1.
2. Scan the QR code with your phone to download and install the app.
3. Open the app and select "AI Printer With Screen," as shown in Figure 2.
4. On the app home screen, tap "Set up a new device network" as shown in Figure 3. Turn on Bluetooth on your phone, then search for available devices as shown in Figure 4. Select your printer to continue to the Wi-Fi setup page shown in Figure 5.
5. Enter your local Wi-Fi network name and password, then tap "configuration" to connect the printer. Once connected, the app home screen will update as shown in Figure



Fig. 3-5 App download QR code

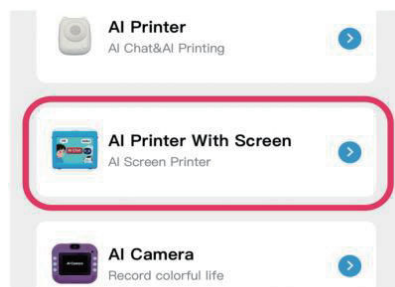


Fig. 3-6 Select device



Fig. 3-7 Set up a new network

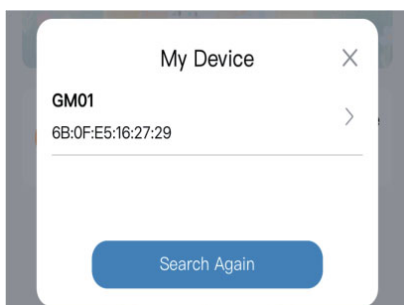


Fig. 3-8 Search Bluetooth device

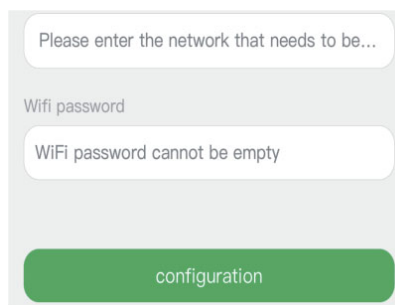


Fig. 3-9 Enter Wi-Fi information

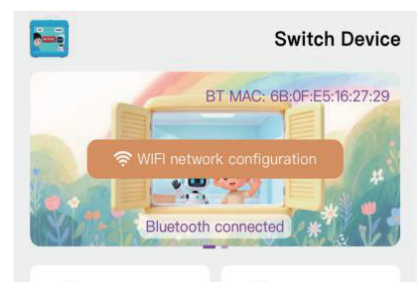


Fig. 3-10 Setup complete

4. Switching Image Modes

After the printer is turned on and connected to the network, press the Left or Right Arrow Button to switch between image modes. Available modes include Simple Line Art, Line Art, Sketch, Anime, Cartoon, and Ink Wash Painting.



Simple Line Art



Line Art



Sketch



Anime



Cartoon



Ink Wash Painting

5. Voice-Activated Image Generation and Printing

1. Turn on the printer, make sure it is connected to the network, and select your preferred image mode.
2. Press and hold the AI Voice Button. After you hear the prompt sound, say what you want the printer to draw, such as "Draw a cute cat" (Figure 1). Release the button when you have finished speaking.
3. The printer will process your voice prompt and display the generated image on the screen.
4. If you are satisfied with the result, press the Print Button to print the image. You can color the printed image as desired.
5. If you press and hold the AI Voice Button without speaking, the message "I didn't hear any sound. Could you say that again?" will appear (Figure 2). Press any button to close the message and return to the mode selection page.

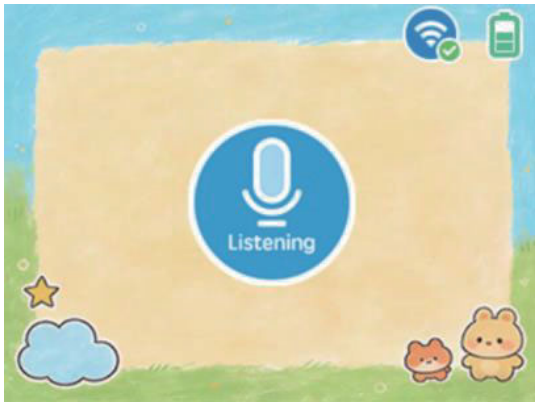


Fig. 5-1 Listening

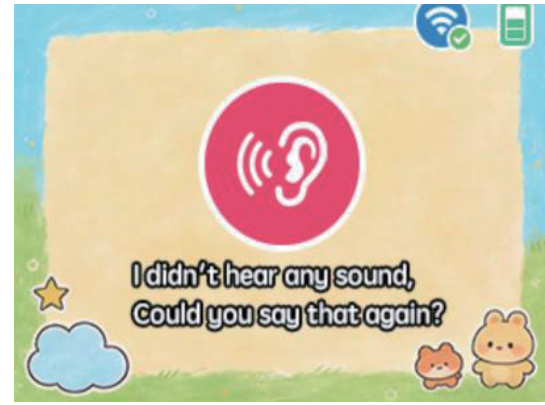


Fig. 5-2 No voice detected

Tip: If the printer does not detect your voice, move closer to the microphone, speak clearly, and check that the network connection is active.

6. Charging

- Use a certified 5V/1A USB power adapter and a Type-C USB cable.
- Do not use the printer while it is charging.
- The red indicator light stays on while charging.
- The red indicator light turns off when the battery is fully charged.

7. Cleaning and Maintenance

- Unplug the charging cable before cleaning.
- Do not submerge the printer in water.
- Do not use or store the printer in damp environments.
- Keep the housing, paper tray, charging port, and buttons dry.
- Wipe the surface with a dry, soft cloth.
- Regularly check the charging cable, plug, housing, and other parts for damage. Stop using the product if any part is damaged.

8. Troubleshooting

Issue	Possible Cause	What To Do
Cannot connect to Wi-Fi	Phone is not connected to the printer hotspot, or the router network is not supported.	Connect to the hotspot starting with AI_printer, choose Use Anyway if prompted, then open 192.168.3.1. Use a 2.4 GHz Wi-Fi network if required by the app.
No image is generated	Network is not connected or the voice prompt was not detected.	Check the Wi-Fi icon, press and hold the AI Voice Button, wait for the prompt sound, then speak clearly.
Print is blank or unclear	Thermal paper may be loaded in the wrong direction.	Reload the thermal paper according to Fig. 2-1 and close the paper tray securely.
Printer does not turn on	Battery may be low.	Charge the printer with a certified 5V/1A adapter before use.
Charging light does not turn on	Cable or adapter may not be connected correctly.	Check the Type-C cable and power adapter. Do not use damaged accessories.

9. Safety Warnings

WARNING: CHOKING HAZARD: Small parts. Not suitable for children under 3 years of age.

- Keep the product away from open flames and high-temperature environments.
- Children should use this product only under adult supervision.
- Charging should be performed under adult supervision.
- Use only a certified 5V/1A USB power adapter for charging.
- Do not charge, use, or store the product in a damp environment.
- The built-in battery is non-removable and non-replaceable. Do not disassemble, puncture, crush, or expose the battery to fire.
- If the product, charging cable, plug, or housing is damaged, stop using the product immediately and contact the seller or customer service.

Customer Support

If you need help with setup, charging, paper loading, or product use, please contact the seller through your order channel or email our customer service team at AONTESS@uergogo.com.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.