

Candlink Electric Candle — User Guide

Overview

The Candlink electric candle communicates with the Candlink app.

Each electric candle has a unique ID, which is used to register the candle in the app. This unique ID is printed on a label located on the bottom of the candle.

Setup

1. Register the candle in the app using its unique ID (see above).
2. After registering the candle in the app, insert 6 batteries into the battery compartment inside the candle. To access the battery compartment, open the cover on the bottom of the candle by turning it counterclockwise.
3. When first powered on, the candle will flash for up to 2 minutes and then turn off. Once the candle turns off, its status in the app should change from “מנותק” (Disconnected) to “מחובר” (Connected).

Communication Modes

On the “עמוד הנר” (Candle Page), a switch in the upper-left corner lets you select one of two modes for communication between the candle and the app:

- **מצב רגיל (Normal Mode):** the candle listens briefly once every minute to check for a message from the app. In this mode, tapping “הדלק נר” (Turn On Candle) will light the candle within a minute (since the candle only listens once per minute). Likewise, while the candle is lit, tapping “כבה נר” (Turn Off Candle) will turn it off within a minute.
- **מצב חיסכון בסוללה (Battery Saving Mode):** the candle listens briefly only once a day to check for a message from the app. In this mode, you must schedule in advance (at least 24 hours ahead is recommended) the date and time the candle should turn on, and until when it should stay lit.

Notes

1. Since the candle listens every minute in Normal Mode, switching from Normal Mode to Battery Saving Mode takes effect within a minute. However, since the candle listens only once a day in Battery Saving Mode, switching from Battery Saving Mode to Normal Mode will take effect sometime within the next 24 hours.

2. In both modes, the candle cannot stay lit for more than 24 hours continuously.

In Normal Mode, if no “turn off” command is sent from the app within 24 hours, the candle will turn off automatically. If you want the candle to stay lit beyond those 24 hours, you must turn it on again after it turns off.

In Battery Saving Mode, if you want the candle to stay lit beyond the 24 hours, you must schedule an additional “turn on” for 24 hours and 1 minute after the first turn-on time.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction