 
 


Matter Smart Motor  
Product Specification

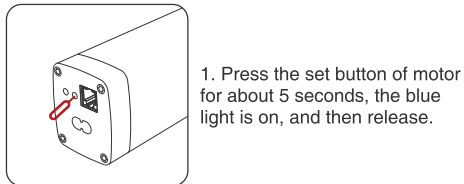 


Please read this manual carefully before using the product and keep it properly.

Remote Control pairing Steps

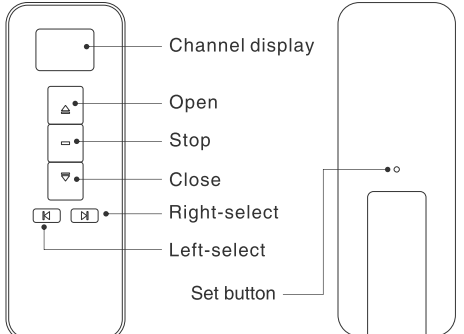


1. Press the set button of motor for about 5 seconds, the blue light is on, and then release.

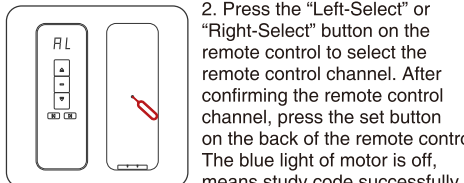


2. Press the "Left-Select" or "Right-Select" button on the remote control to select the remote control channel. After confirming the remote control channel, press the set button on the back of the remote control. The blue light of motor is off, means study code successfully.

 Restore Original Setting

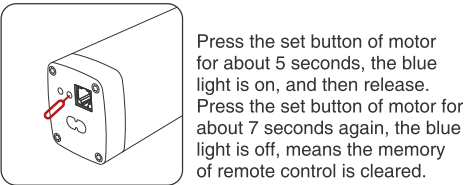


Press the set button of motor for about 5 seconds, the blue light is on, and then release. Press the set button of motor for about 7 seconds again, the blue light is off, means the memory of remote control is cleared.

 Switch The Running Direction

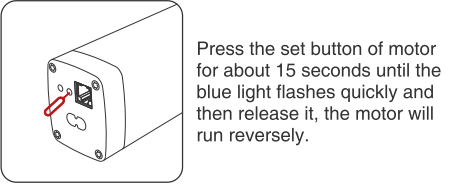

Press the set button of motor for about 15 seconds until the blue light flashes quickly and then release it, the motor will run reversely.

 Smart Central Control

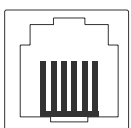

The function of 6P plug:


- 1. Open
- 2. Close
- 3. Stop
- 4. Common
- 5. Stop
- 6. Common

- 1. The contact time of the dry contact mode is more than 0.5 seconds.
- 2. There are three dry contact control mode for you to choose, please specify when ordering.

| Intelligent weak current Control mode A (4 line) |        | Intelligent weak current Control mode B (3 line) |        |
|--------------------------------------------------|--------|--------------------------------------------------|--------|
| 5                                                | common | 5                                                | common |
| 5-2                                              | open   | 5-2                                              | open   |
| 5-3                                              | close  | 5-3                                              | close  |
| 5-4                                              | stop   | 5-2-3                                            | stop   |

| Intelligent weak current control mode (3 line) |        |           |      |          |       |
|------------------------------------------------|--------|-----------|------|----------|-------|
| 5                                              | Common |           |      |          |       |
| First 5-2                                      | Open   | Second5-2 | Stop | Third5-2 | Open  |
|                                                |        | Second5-3 | Stop |          |       |
| First 5-3                                      | Close  | Second5-3 | Stop | Third5-3 | Close |
|                                                |        | Second5-2 | Stop |          |       |


 
Motor Structure Diagram

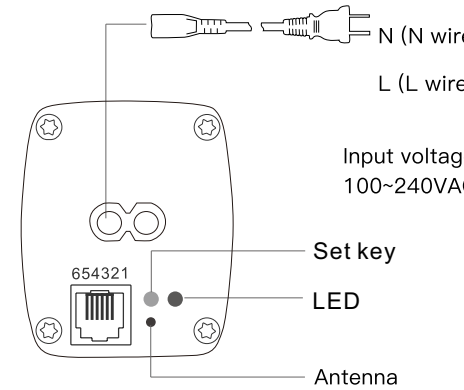

Input voltage: 100~240VAC


Set Up Distribution Network

  Press and hold the "Set key" of the motor until the indicator light remains on. After the light comes on, release your hand and press it again. When the indicator light flashes, it indicates that the motor has entered the distribution network state.

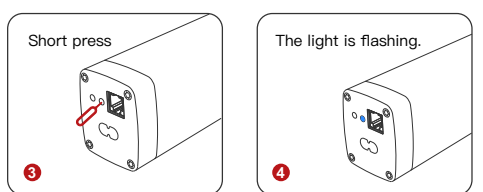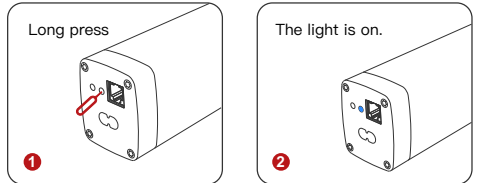


Tuya Network

 Turn on Bluetooth and wifi before connecting to the Internet.

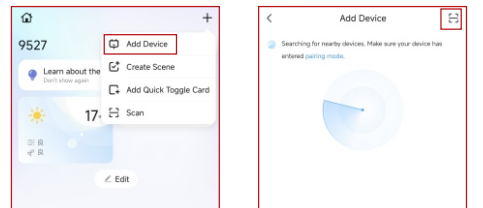

 - 1. Open the Tuya smart APP and click the "+" in the top right corner to add a device.
- 2. Click the button in the upper right corner to scan the QR code of the motor body.

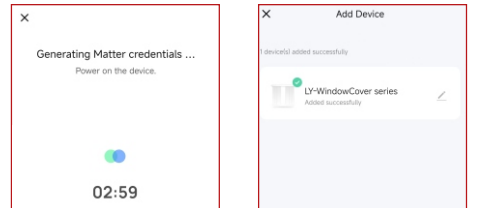

- 3. Ensure that the network connection is normal.
- 4. Add successfully to complete.

Homekit Network

Before networking,turn on your phone's Bluetooth and connect to Wi-Fi and attach an Apple speaker.



- 1. Open Homekit on your iPhone and tap the "+" in the top right corner.
- 2. Click "Add or Scan Accessories".



 
- 3. Scan the QR code of the motor body.
- 4. Click "Add to Family".



- 5. The device is being connected. Please wait patiently.
- 6. Choose the location of the curtains.



- 7. Enter the device name.
- 8. After the device is added, open the device.

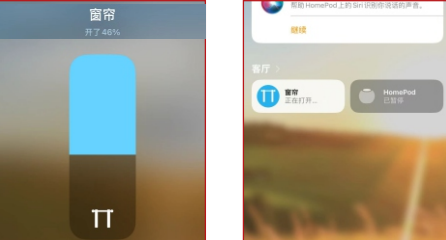


- 9. Go to the window for opening and closing curtains.
- 10. The device is added successfully.

SmartThings Network

Before networking, enable Bluetooth and Wi-Fi on the mobile phone and bind the gateway.



 
- 1. Open the "Samsung SmartThings" APP and tap the "+" in the upper right corner.
- 2. Click Add on the partner device.

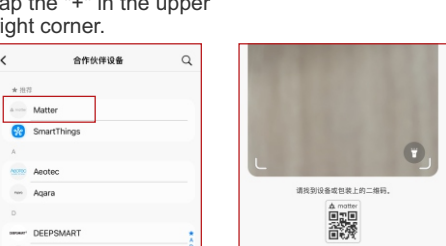

- 3. Select "Matter".
- 4. Scan the QR code of the body after the motor enters the distribution network state.



 
- 5. Wait for the device to connect.
- 6. Click "Add to iCloud Account".

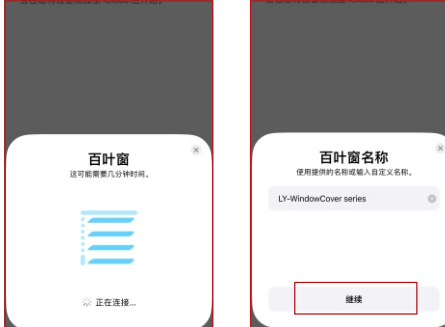

- 7. Wait for the device to connect.
- 8. Enter the device name and click continue.



 - 9. Wait for the device to connect.
- 10. Click "Finish".

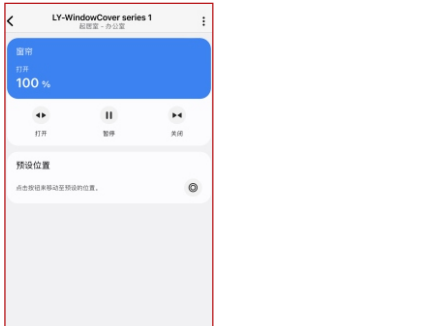

- 11. The device is connected successfully.

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.