 


ENGLISH

QUICK START

SETUP

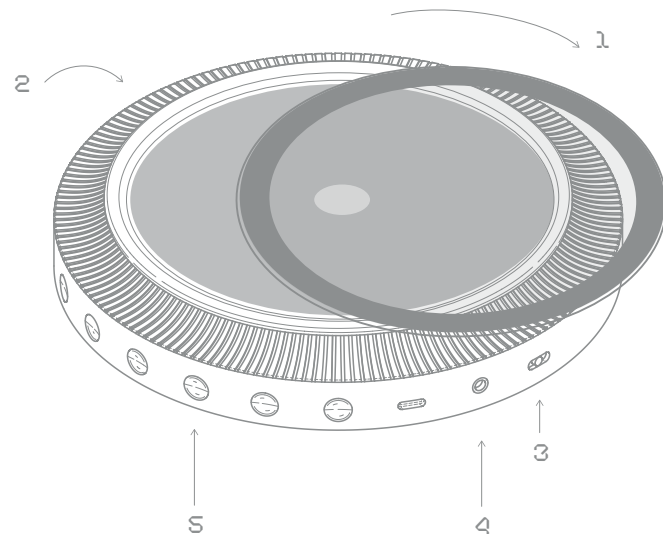

QUICK START

SETUP

- 1 Rotate to open the cover lid.



- 2 Insert a CD and close the cover lid.

- 3 Switch the button to "ON"



The device will automatically start,
Default Bluetooth mode enabled.

Note: if the CD is not inserted, it will automatically shut down after 2 minutes.
Press the play button and restart it. Pressing other keys will be invalid.

- 4 Plug in your headphones.

When inserting headphones, Bluetooth output will be muted.



Note: if the device is played normally or not operated,
the screen will automatically stop after one minute, and press any key to call up the screen.

QUICK START

CHARGING INSTRUCTIONS

When the orange indicator light is flashing, the device needs to be charged.

Different colors of the indicator light correspond to differences in running state.

 
White light: work well;

Green light: fully charged;

Orange light: charging;

Orange flashing light: battery<20%;


Orange flashing light (quickly) : battery<5%;

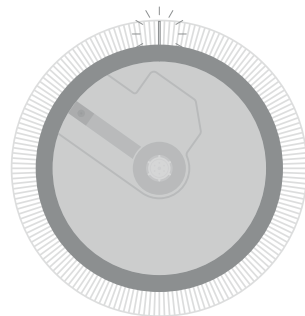

USB-C


When fully charged, the device can play for approximately 10 hours with 3.5mm Audio,
and approximately 8 hours in Bluetooth Mode.

 PRODUCT DIAGRAM

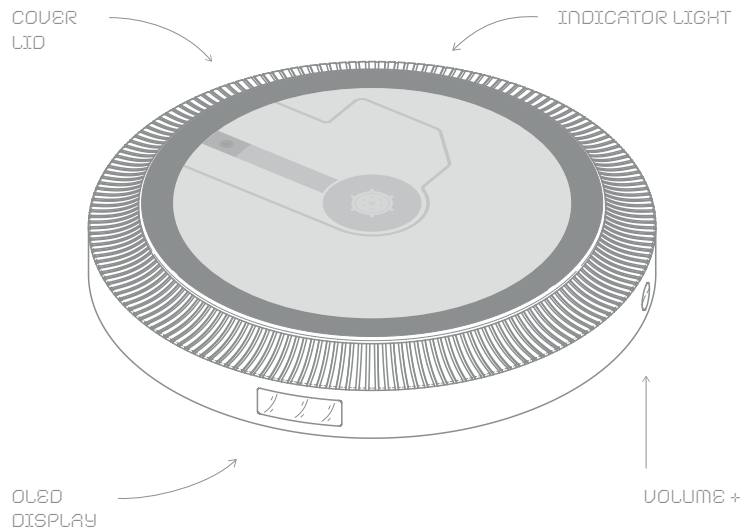

PACKAGE INCLUDED: TTT-DP3, USER MANUAL, CERTIFICATE OF CONFORMITY

 PRODUCT DIAGRAM

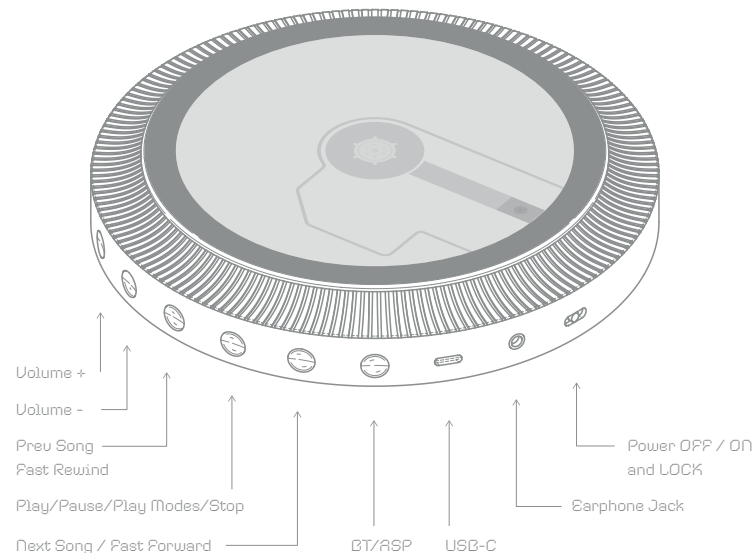

MAIN FUNCTIONS

POWER OFF / ON AND LOCK

Slide the switch to "Power OFF", "Power ON" and "LOCK" (to lock buttons).



PLAY / PAUSE / PLAY MODES / STOP

Short press the "Play" button to pause and play. Long press the "Play" button to stop playing, Short press the button again to play from the first song.

Double click the "Play" button to switch between 3 play modes:
repeat current track, repeat all, RND (Play in random order)



PREV SONG / FAST REWIND

Short press the "Prev Song" button to replay the previous track;
Long press the "Prev Song" button to quickly scan backwards/rewind.



NEXT SONG / FAST FORWARD

Short press the "Next Song" button to play the next track;
Long press the "Next Song" button to quickly scan forward/fast forward.



VOLUME + / VOLUME -



EARPHONE JACK

Standard 3.5mm audio output. Connect to headsets, active speakers or cars.



MAIN FUNCTIONS

BT / ASP



Short press the "BT" button to turn on/off Bluetooth mode.
Long press the "BT" button to switch the anti-shock protection system (ASP) on/off.

BLUETOOTH MODE:

The CD player will automatically search for nearby Bluetooth devices to be paired.
Please turn on the Bluetooth feature on your device.
Your device will be paired with the CD player in a few seconds.

NOTICE!

If your device did not pair successfully,
you can try short pressing the 'BT' button and searching again.
Certain brands of speakers feature a proprietary digital Bluetooth protocol,
which may result in Bluetooth connection failures.

SPECIFICATIONS

MODEL	TTT-DP3
INPUT	USB-C SU 2A
CHARGE TIME	2.5 hours
CAPACITY	2000mAh
DISC FORMAT	CD-DA, HDCD
DISC TYPES	CD, CD-R, CD-RW
OUTPUT MODES	3.5mm Audio Interface, Bluetooth
BLUETOOTH	5.4
BLUETOOTH RANGE	8-10m
SNR	>70dB
THD	<3%
MATERIAL	ABS + PC + Metal
DIMENSION	170×170×27mm
WEIGHT	324g

CAUTION

1. Avoid listening at excessive volumes or for excessive periods of time to reduce the risk of hearing damage.
2. Avoid contact with moisture, rain, sand or various heat sources.
3. When cleaning, use a soft cloth damp with water. Do not use alcohol or benzene solvent to clean.
4. When riding a bicycle, driving a car or a motorcycle, do not use headphones. Stay alert to your surroundings.

	CAUTION	
	excessive volume can damage hearing	
to avoid hurting your ears, avoid excessive use.		

FAQ / TROUBLESHOOTING

Problem

Possible Cause or Solution

The CD player will not turn on.

1. The battery level is too low. Please connect the charging cable and fully charge it before attempting to turn it on.
2. Check if the switch is turned ON.

The CD player does not play or stops playing.

1. Moisture may have condensed on the lens, open the CD cover and leave it open for about one hour to let it dry out.
2. Make sure that the CD is inserted with the label facing up.
3. Ensure the CD is not scratched or damaged.
4. If the laser head accumulates dust, you can try gently wiping it with anhydrous alcohol.

No sound or poor sound.

1. Earphone plug is not firmly inserted into the phone's jack, Please reinsert and ensure that it is fully inserted.
2. Volume is set to a minimum, increase volume.
3. The battery is low, recharge.
4. CD is defective, replace.

WARRANTY

Our company warrants all products to be of the highest quality in material, craftsmanship and service, effective from the date of purchase to the end of the warranty period.

This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferable. Our company is not responsible in any way for any damages, losses or inconveniences caused by equipment failure caused by user negligence, abuse, or noncompliance with the user manual or non-compliance with any additional safety recommendations or warnings included in the product packaging and manual.

WHAT IS NOT COVERED BY THE WARRANTY:

1. The warranty immediately becomes void if the product has been tampered with, repaired or modified by non-authorized personnel.
2. Damage (accidental or otherwise) to the product that does not impact the product's operation, including but not limited to rust, change in color, texture or finish, wear and tear, and gradual deterioration is not covered.
3. Damage caused by accident, abuse, natural disaster, intentional or accidental misuse, fire, neglect or improper maintenance, and use under abnormal conditions is not covered.
4. Products that have exceeded the warranty service period stipulated by our company are not covered.
5. The warranty immediately becomes void if the original serial number is removed, obliterated or altered from the product.
6. Packaging and attached accessories, services and additional configurations other than those promised by the salesperson are not covered.
7. The warranty immediately becomes void if the instructions in the user manual are not followed.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.