


- **Edit the Task**

Click on the To-Do item to edit the content.

- **Complete a Task**

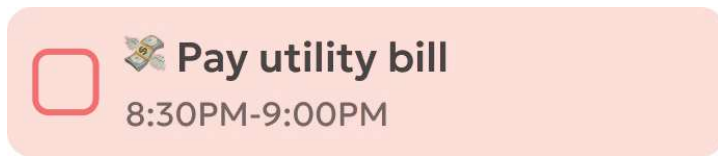

Click the rectangular button on the left to complete the task.


- **Task Reminder**

Overdue tasks will trigger pop-up reminders.

Note: Stay focused on your **Tasks** and **Habit Plans**. In the Task view, Event, Alarm, and **Meal Plan** are hidden.

2.3.6 Filter


Tap “**Filter**” in the top-right corner to choose which content appears on the screen. You can show or hide items such as Dynamic Card, Tasks, Completed Tasks, Plans, Members, and Catalogue. Available filter options may vary depending on the current view.

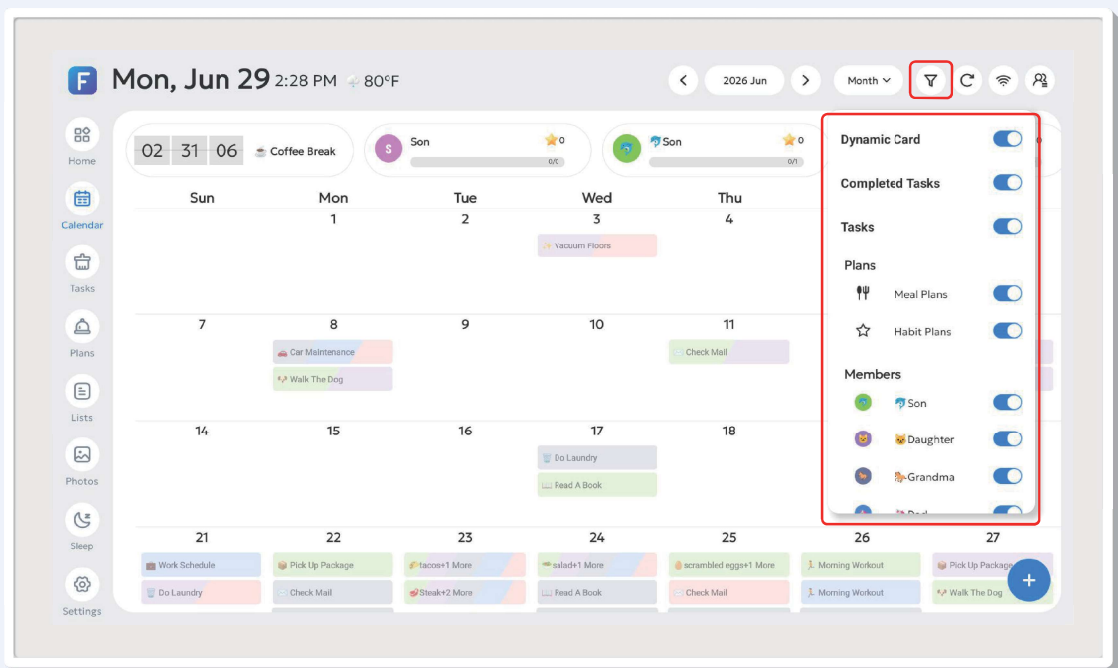

2.3.7 Reward

- Add Stars


Star Points can be set for **Task** and **Habit Plan** to encourage children to build good habits. **Stars** are added when a child completes the assigned tasks or habit goals.

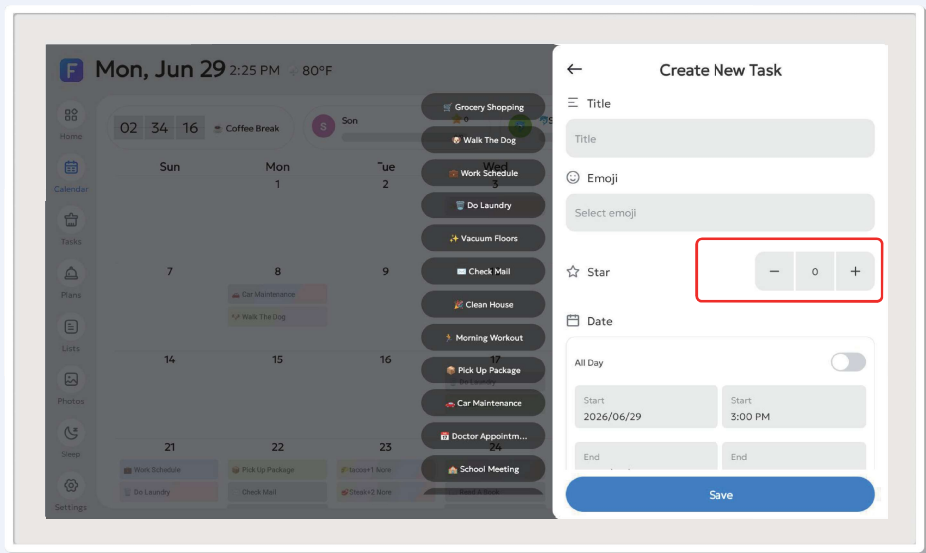

- Reward Redemption

Switch to the Reward panel to create reward goals for each member.


Create rewards for members and set required points. Members can redeem rewards once they accumulate enough points. Rewards can be set as one-time or repeatable. Tap "Redeemed" to view redemption history.

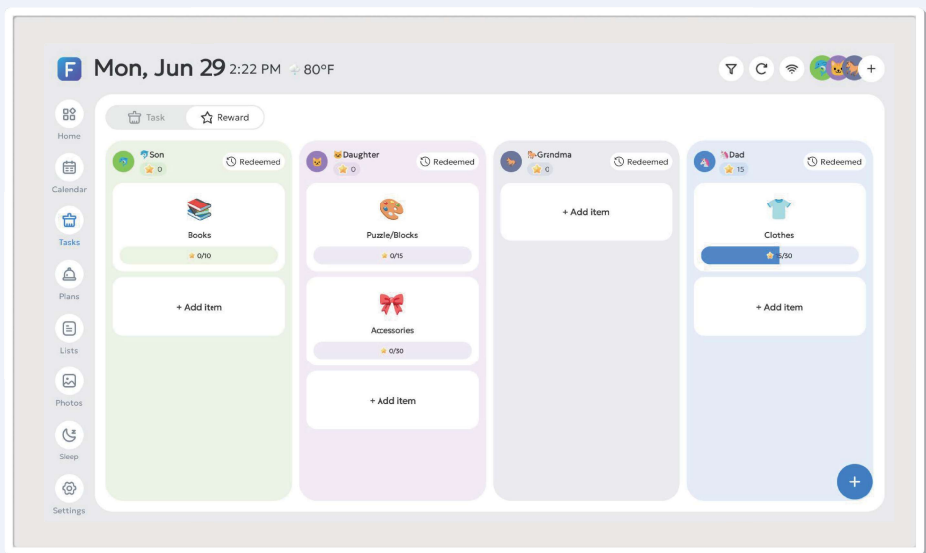

2.3.8 Meal Plan

• Create a Meal Plan


Find the date and meal slot where you want to create a plan, such as **Breakfast, Lunch, Dinner, or Snack**, and tap it. A **Meal Plan** pop-up window will appear. You can select an existing **Recipe**, or tap “**Add Recipe**” to create a new one. After creating a meal plan, long-press the slot for that day to reopen the edit window.

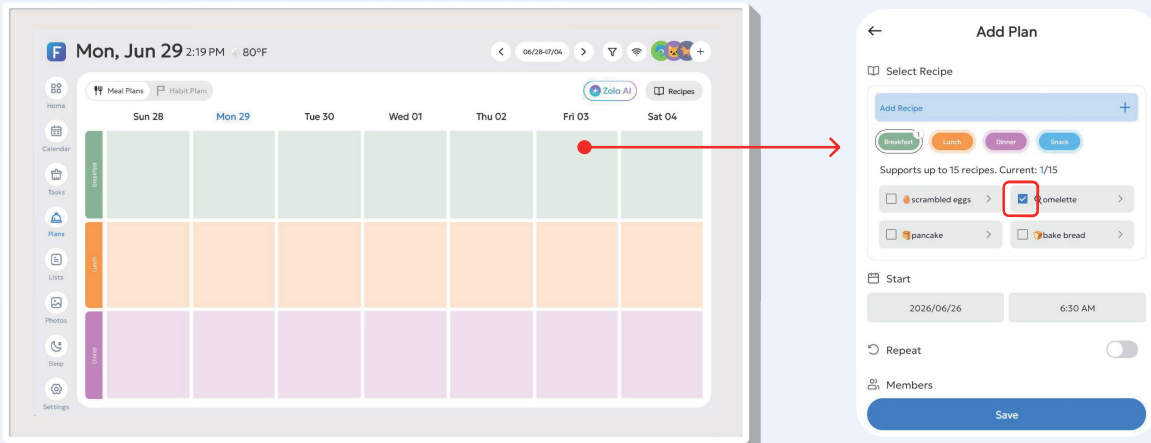

• Add Recipe


Tap “**Add Recipe**”. Enter the Recipe Name, select a category such as Breakfast, Lunch, Dinner, or Snack, then add the required ingredients in “Enter dish name”. You can also add cooking details or notes in “Description”.

Notes: You can upload a dish photo using the FotoCube mobile app.

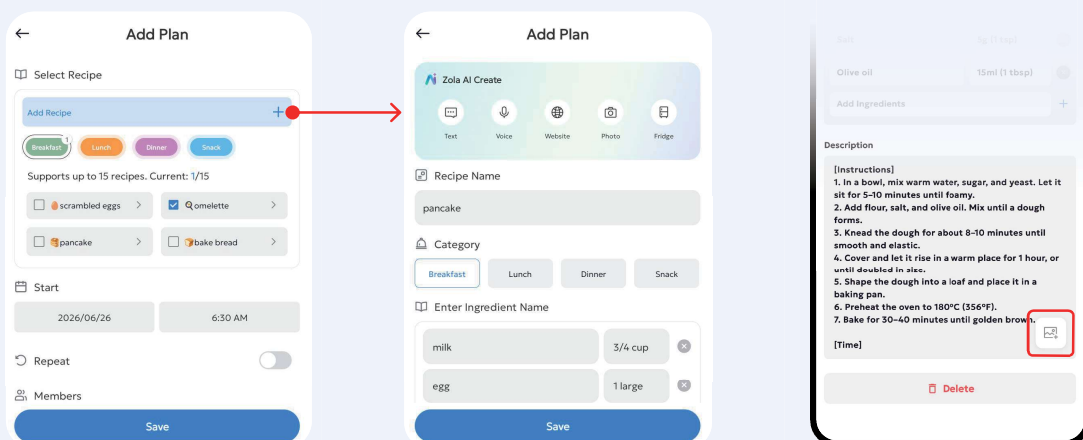

- **View or Edit Recipes**

After creating a meal plan, tap the dish on that day to view its **Ingredients** and **Description**. You can also find the “**Edit**” and “**Delete**” buttons in this window.

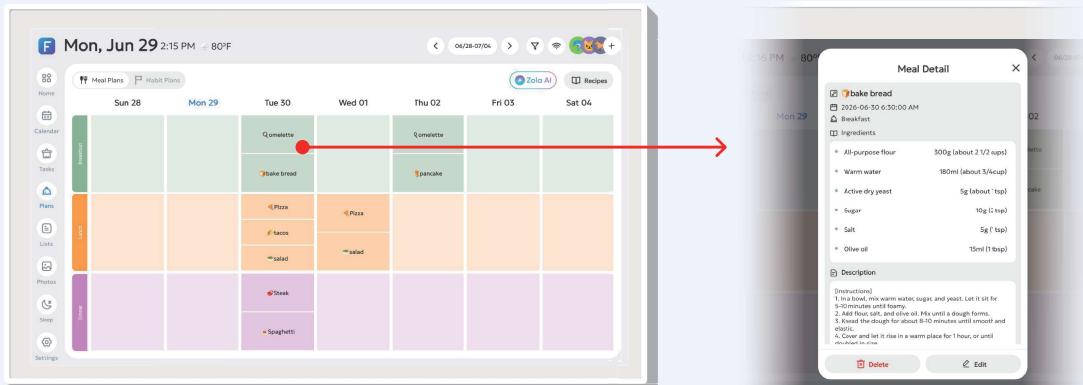

2.3.9 Lists


- **Supports creating checklists for multiple scenarios (e.g., shopping lists, daily to-do lists). Core features:**

List grouping: Organize tasks into groups for clearer organization.

Complete/Cancel: Mark tasks as completed or undo the mark.



Edit/Delete: Edit task details or delete tasks.

Tip: Long-press a **List name** to drag and reorder it.

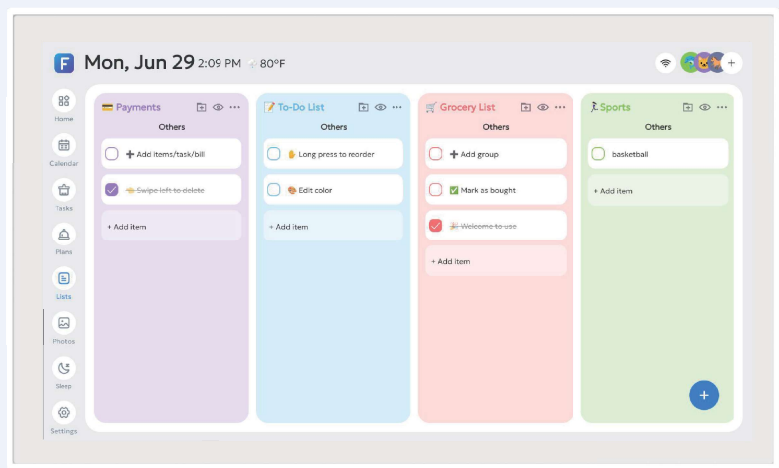

2.3.10 Manage Members

- Tap the “” icon in the top-right corner to open the Member List page. Here, you can manage family members by **adding**, **editing**, or **deleting** member information.

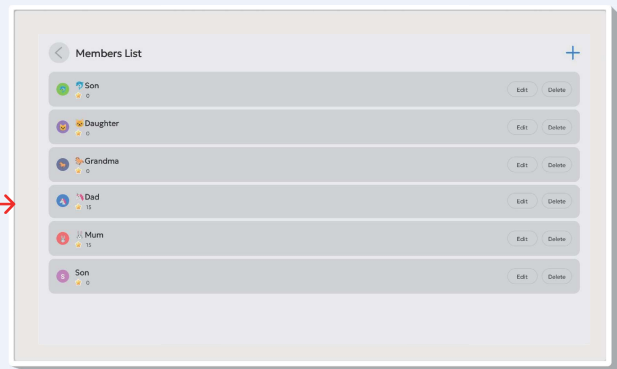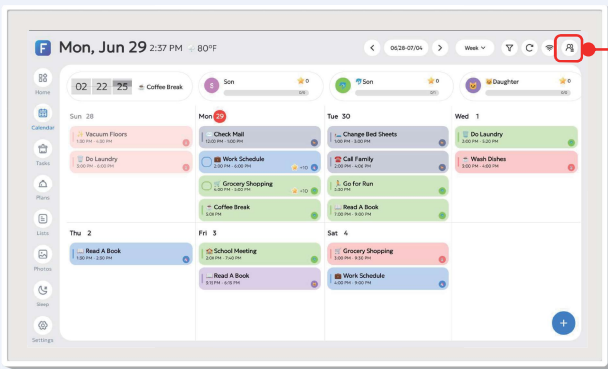


- Tap the “+” button in the top-right corner to open the Create Member pop-up window. Enter the new member’s name.
- You can also add optional details such as birthday, height, and weight . Then select the member’s Role and Color.
- To update a member’s information, tap the “Edit” button and follow the same steps.

2.3.11 Sleep Mode



Click to open Sleep Time settings. When the sleep function is enabled, the screen will turn off during the scheduled sleep period.

If the screen is turned on during the sleep period, it will automatically turn off after a short period of inactivity.

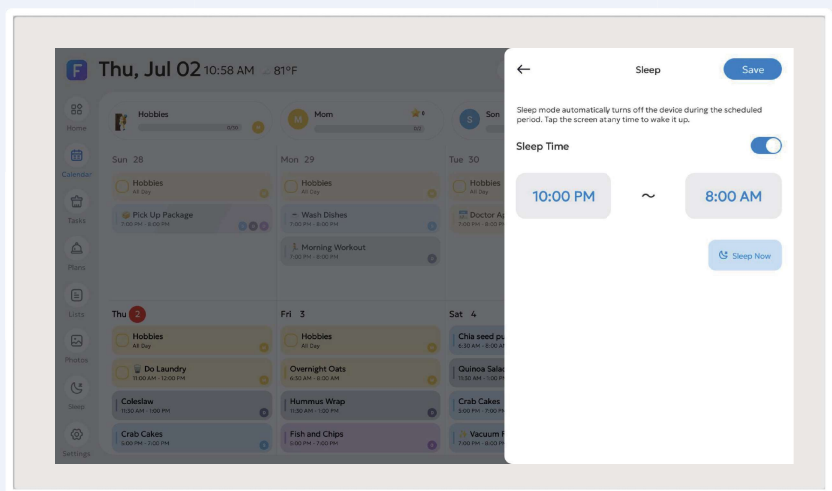

2.4 Photo Frame


You can send photos or videos from your mobile phone to the device, which will be displayed on the screen in real time. You can interact with the device simply and conveniently through the touch screen.

2.4.1 Operation

Swipe left or right to view your photos. To access the menu bar, simply click once on the screen, which will display the menu.

2.4.2 Menu



In the menu, you can quickly access functions such as adding friends, settings, gallery, and mode switching. From the menu, you can also adjust settings for the currently displayed photo, such as using the AI photo processing function, deleting, rotating, setting the playback order, and selecting slide transition effects.

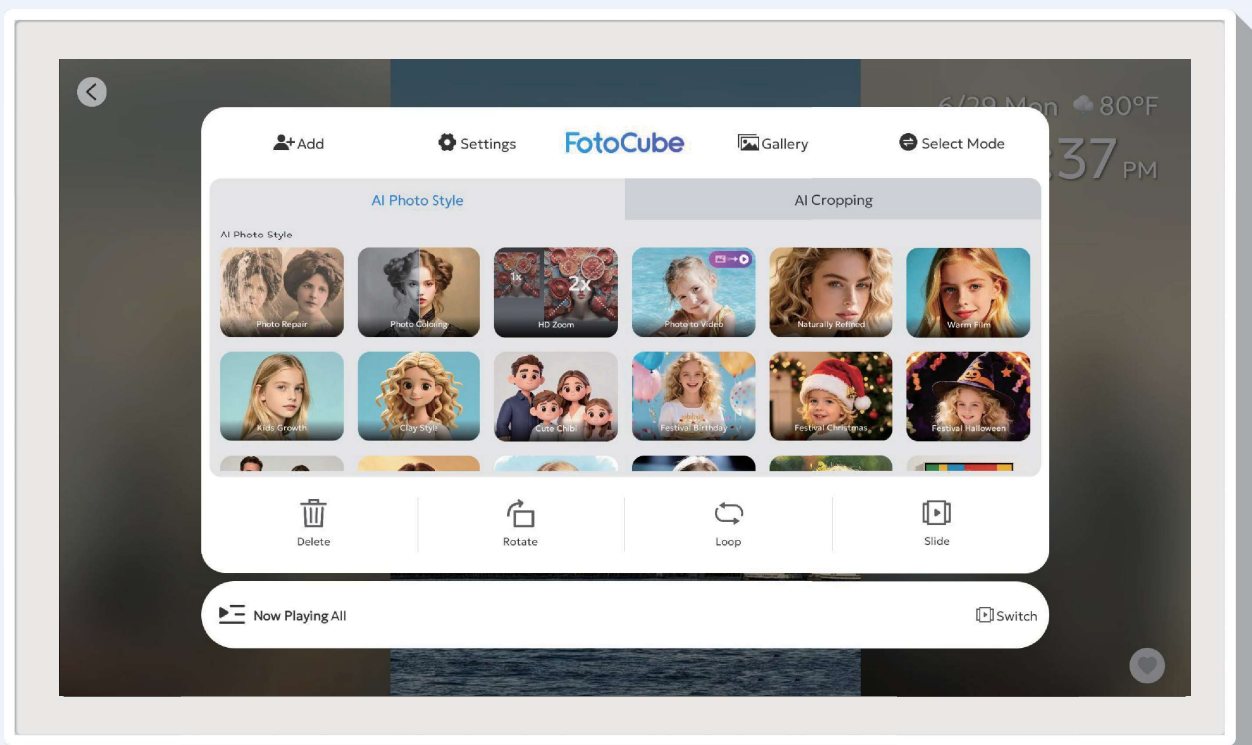

- **Gallery**

Open Gallery from the top menu to view all photos/videos stored on the frame.

- Use the filter icon in the top corner to view media by folder or by user. You can also play only the filtered content.
- You can import or export media using an external storage device, such as an SD card.

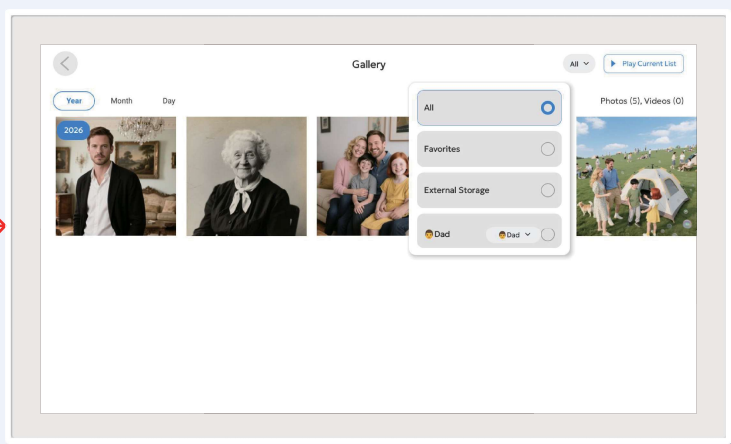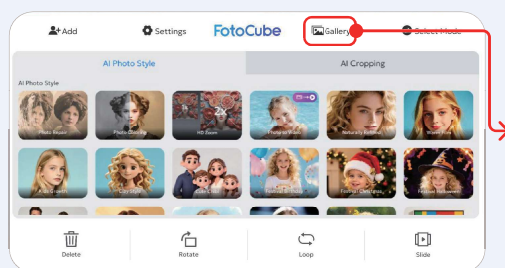

- **Shuffle/Sequential Play**



Shuffle Play: Play the contents of the current playlist randomly.

Sequential Play: Play the contents of the current playlist in sequence.

- **Delete**



Click the "Delete" button to delete the current photo or video.

- **Rotate Photo**



You can rotate the photo clockwise by 90, 180, or 270 degrees.

- **Slide Show**



Supports multiple slide transition effects, but only applies to photos.

- **Like**



Click the "Like" button to add your favorite photos or videos to Favorites.

- **Volume Settings**



For video volume, you can adjust the volume level in "Settings".