



FE-50R



20" High Velocity Fan

With Remote Control



**3 Speed
Wind**



**All Metal
Construction**



**Adjustable
Fan Angle**



**Safety
Grill**



**Grounded
Safety Plug**



**Detachable
Bracket For
Saving Space**

READ & SAVE THESE INSTRUCTIONS



INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

While using your fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word "**WARNING**" to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS:

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- Use of extreme caution is necessary when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended.
- Do not place the fan on a small, unlevel, uneven or any surface which might allow fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible, level surface.
- Always unplug fan when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments, not recommended or sold by the manufacturer, may cause hazards.
- Do not use outdoors.
- Do not use fan in window. Rain may cause electrical hazard (for non-window models).
- Do not operate the fan with blade guards or any safety device removed.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

READ & SAVE THESE INSTRUCTIONS!

WARNING: SHOCK HAZARD

Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch fan motor when in use. This motor is hot when in use, to avoid burns, do not let bare skin touch hot surfaces.

WARNING: FIRE HAZARD

Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. Do not use in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.

CAUTION: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, do not use this product with any solid-state speed control device.

WARNING: PREVENT ELECTRIC SHOCK

This product has a cord with 3-prong grounding-type plug (A) which fits the 3-slot grounded receptacle (A2). DO NOT remove the grounding prong (A1) if only a 2-slot receptacle (B) is available.

For connecting 3-prong grounding-type plug to 2-slot receptacle, use an ADAPTER (C). The grounding lug (C1) extending from the adapter must be connected to a permanent ground with the Metal Screw (D) such as a properly grounded outlet box (E).

 
The adapter should not be used if a 3-slot grounded receptacle is available.

DO NOT DEFEAT THE SAFETY PURPOSE OF EITHER A GROUNDED PRONG OR A GROUNDING LUG.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

WARNING: This product shall not be modified by users.

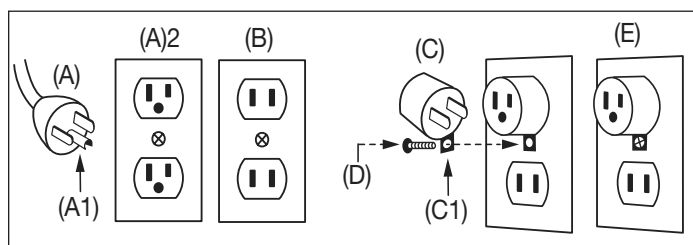

Adapter is not included

DO NOT operate any fan with a damaged cord or plug or after fan malfunctions, has been dropped or damaged in any manner. Do not operate fan with a broken blade, safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement. For all other repairs contact Customer Service by telephone or mail for information and assistance.

DO NOT run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the fan when not in use. Do not operate fan with its ventilation obstructed.

ASSEMBLY INSTRUCTIONS:

Fan Cradle Assembly:

Simple assembly is required to use this fan.

1. Align Cradle Base (packed separately) with support brackets attached to fan body sides. **Note:** you may need to flex the parts to make them align properly.
2. Insert support bracket into opening of Cradle Base. Press spring loaded button down to allow it to insert into Cradle Base, see Fig 1.
3. Press support bracket into Cradle Base until spring button protrudes out open hole in Cradle Base, see Fig. 2.
4. Repeat above process for opposite side of fan.

Fig 1


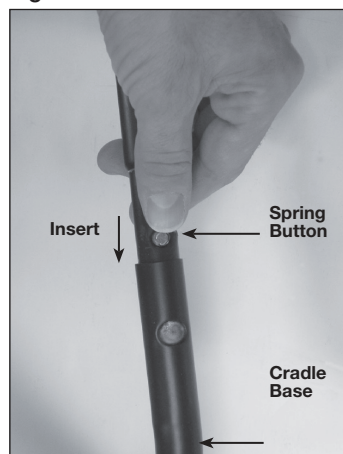 


Fig 2

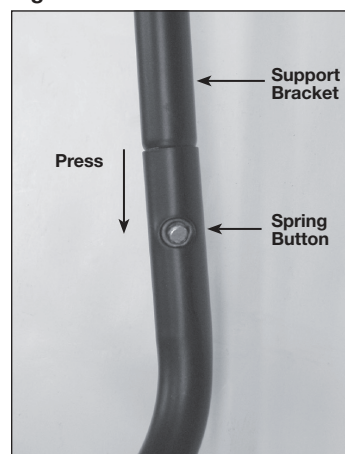 

USAGE:

Fan Operation: Always operate the fan in the upright position following all instructions and recommendations listed in this manual.

Fan Location: Place the fan in the area of the room that will provide proper fan cooling.

Fan Connection: Plug fan directly into 120 volt A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or fan.

Note: To prevent overloading a circuit, do not plug the fan into a circuit that is servicing other electrical needs.

Adjusting Fan Tilt: To adjust the tilt angle, use supplied knob wrench to loosen the adjustment screw. After adjustment, retighten the adjustment screw. Save knob wrench for future use.

 
Control Panel Instructions:

Timer Settings:

Press the "TIMER" button and repeat the action to set 1/2/4/8 hours. Press it again, to set the timer off.

Turning Fan On: Place fan on stable level surface. Plug fan into properly grounded outlet. To start the fan, Press the "SPEED/ON" button; set the wind speed (Low/Med/High).

Turning Fan Off: To turn the fan off, Press the "OFF" button; Remove plug from outlet.

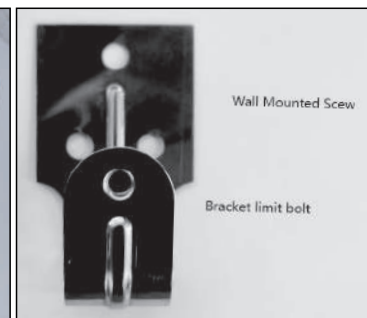

Wall Mounted Function

1. Hardware accessories contain 3 pair wall mounted screw/1 pcs bracket limit bolt & hook.
2. Screw the hooks on to the wall and keep as horizontal position, insert the cradle fan bracket hang in the hook, **ATTENTION:** have to drive the limit bolt to avoid bracket pull away.

Remote Control Instructions:



1. Press ON/OFF button to control the fan power on & off
2. Adjust the wind speed (Low/Med/High) setting by "❄️ -" and "❄️ +".
3. Push the 1/2/4/8 hours button to set the timer period. Long push any timer button for 2 seconds to close the timer function.

BTW, we provided a wall mounted holder to avoid the remote loss. screw into or stick on the wall.

If you lose the remote, you can use a new remote or another same model remote to replace: below process have to be complete within 30 seconds.

Plug the fan into outlet, Long press the button "TIMER" and "🔌" button on control panel for 2 seconds, Then the fan speaker will make a sound, entering the IR code learning state. Press any button on the remote control once. After the fan receives the code, the speaker will make a sound, memorizing the new remote control and clearing the IR codes previously stored.

The remote control uses 2 x AAA size battery (Not included); To replace the battery, open the remote cover on the back using

Battery Warning

Do not install the batteries backwards. Install batteries with the proper polarity (+ and -). There is a risk of explosion or leakage if the battery is incorrectly installed.

Always remove discharged batteries from the product to avoid damage by possible battery leakage.

Always remove battery when the product is not going to be used for long periods of time.

Do not dispose of batteries in re because batteries may explode or leak.

Do not short circuit battery terminals.

NOTE: Follow battery disposal instructions on battery packaging or contact your local safety council for safety disposal of batteries.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

CARE AND MAINTENANCE:

Cleaning: CAUTION-Before cleaning the fan be sure to disconnect power cord from the plug. Clean the grille surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER. Allow fan to dry completely before use. Periodic grille cleaning with a vacuum will prevent dust build up. The motor is sealed and does not require any interior maintenance, cleaning or lubrication.

Maintenance: The Internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

Repair: DO NOT OPERATE THE FAN WITHOUT THE GRILLE IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

Storage: Keep original carton for storage of the fan. Coil and tie the power cord to avoid damage during storage.

Note: Some models come with a plug where you can replace a fuse. If your model has this, please read and follow the below instructions to replace the fuse.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

Fuse Replacement:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover by sliding open fuse access cover on top of attachment plug towards blades. See Fig. 2
3. Remove fuse carefully. Use a small tool to pry the end of the fuse from holder cavity. Be careful not to break glass window.
4. Replace fuse.
WARNING: Risk of fire. Replace fuse only with identical 2.5 or 5.0 Amp, 125 Volt fuse (3.6mm x 10mm). Be sure fuse is properly seated within its cavity.
5. Close fuse cover by sliding it back to its original closed position.

Fig 1



Fig 2



Fig 3





LIMITED WARRANTY

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to Albatross Industry.INC for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than Albatross Industry.INC are not covered in this warranty. Albatross Industry.INC will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages,so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Need Help?

-  customerservice@albatrossindustry.com
-  Phone #: (833) 852-3776, ext 101
-  Direct #: (336) 804-8067
-  <https://albatrossindustry.com>