

ALL-IN-ONE KARAOKE

Model No.: TKXLSBLK



USER MANUAL

1 Items Included



1 X TKXLSBLK
Karaoke machine



2 X TKXLSBLK
Karaoke
microphones



1 X Remote
Control



 
1 X USB-C
charging cable




1 X User
Manual

2 At A Glance

Front Shot

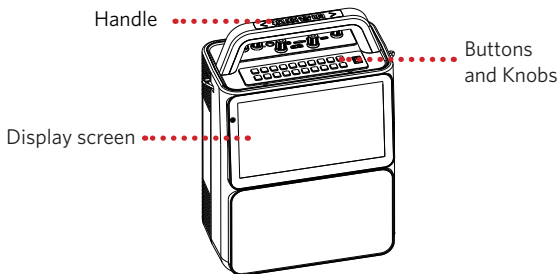


Buttons

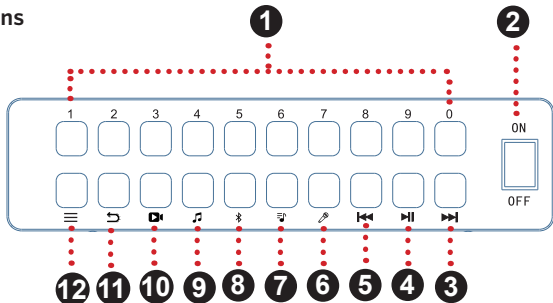 


No.	Parts	Description
1	Numerical buttons (0-9)	Press to enter a song number and quickly select the desired song. For example, to play the 24th song in your playlist: press 2, then 4.
2	ON/OFF Switch	Press to turn the device on/off.
3	NEXT button	Press to skip to next track/Move the cursor forwards. Press and hold to fast forward the track.
4	Play/Pause button	Press to start or pause the music playback.
5	Previous button	Press to skip to previous track/Move the cursor backwards. Press and hold to fast rewind the track.
6	MIC Priority button	Press to enable or disable MIC Priority mode (MIC Priority mode automatically lowers the volume of the background music when someone is speaking into the microphone.).
7	Vocal mode	Press to enable or disable vocal mode.
8	Bluetooth button	Press to access the Bluetooth playback mode
9	Music button	Press to start the playback of the music file in the TF card/USB drive.
10	Video button	Press to start the playback of the video file in the TF card/USB drive.
11	Return button	Press to return to previous screen.
12	Menu button	Press to display the option menu.

 Back Shot

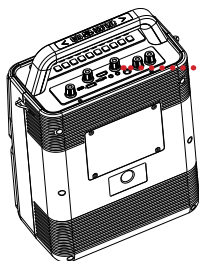


Knobs and
Input/Output
Ports

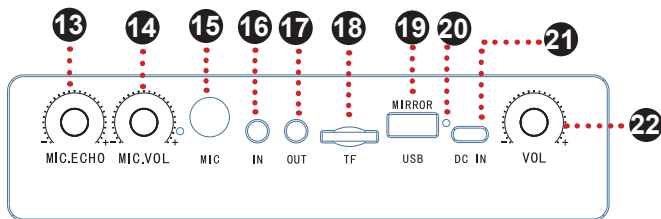 


No.	Parts	Description
13	MIC.ECHO knob	Turn the knob to adjust the echo level of MIC voice input.
14	MIC. VOL knob	Turn the knob to adjust the volume of microphone voice input.
15	MIC input jack	Connect the wired microphone to enable karaoke for multiple people
16	AUX input Jack	Connect to other external audio source input device
17	AUX Output Jack	Connect to headphone/recorder for audio monitoring/recording, or to another speaker for delivering louder, clearer, richer sound for parties.
18	TF card slot	For the audio source input from the TF Card.
19	USB port	For USB audio source input and screen mirroring connection
20	Charging LED indicator	Indicates the charging status for the device
21	USB-C charging port	For charging the Karaoke machine (Power input: 5V/3A).
22	Music Volume knob	Turn the knob to adjust the music playback volume.

 Microphone

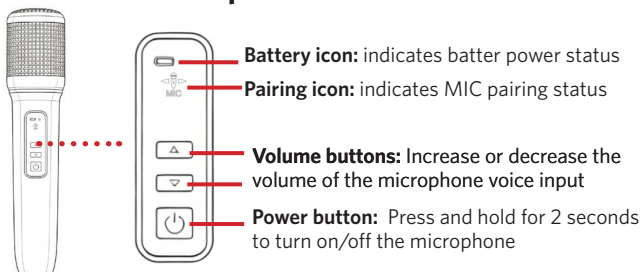

3 About the Remote Control

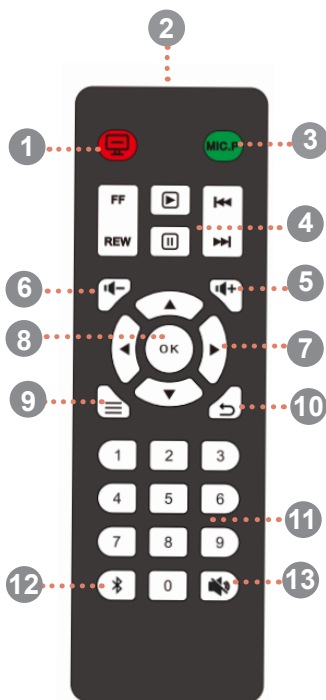 

1. Display on/off button

2. IR transmitter

3. MIC Priority: Enable/disable MIC Priority mode (lowers the volume of the background music when someone is speaking).

4. Playback Control buttons

 **Play/Pause button**

 **Play/Pause button**

 **Previous track button**

 **Next track button**

FF **Fast forward button**

REW **Fast rewind button**

5, 6. Playback Volume: Increase or decrease the music playback volume

7. Directional buttons: Press to navigate through the file list or setting items, or increase or adjust the value.

8. OK: press to confirm the selection

9. Menu: press to display the option menu

10. Return: press to return the previous screen.

11. Numerical buttons (0-9) : Press to enter a song number. For example, to play the 24th song in your playlist: press 2, then 4.

12. Bluetooth: press to quickly switch to Bluetooth playback mode.

13. Mute: press to mute or restore playback sound.

Install the Remote Control Batteries

Follow these steps to install the remote control batteries:

Step 1. Press the latch at the back of the remote control to open the battery cover.

Step 2. Match the batteries' polarities (+/-) with the markings inside the compartment, insert two AAA-sized batteries, then snap the cover back into place.

Notes:

1. Never combine new and used batteries or batteries of different types or brands, as this can damage the remote or reduce performance.
2. If the remote becomes slow or buttons don't respond, it's a sign the batteries are low and need replacing.
3. To prevent corrosive leakage, take the batteries out if the remote will be unused for an extended period.


Use the Remote Control

Point its IR transmitter at the TV's IR receiver, ensuring a clear line of sight, and press the desired button to send a signal.

4 Charging


► **Note:** before charging, make sure the Karaoke Machine is powered off.

Charging the Karaoke Machine

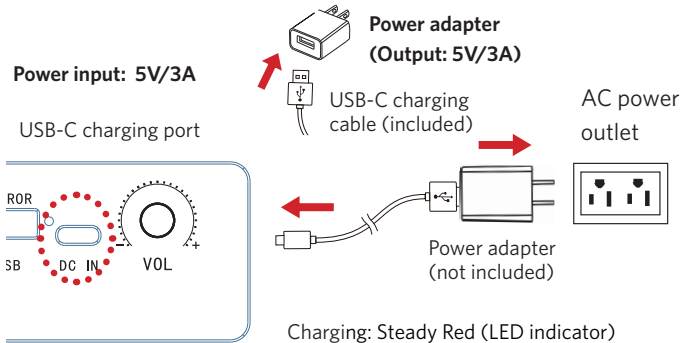

Charging Time: 5 hours

Charging the microphone

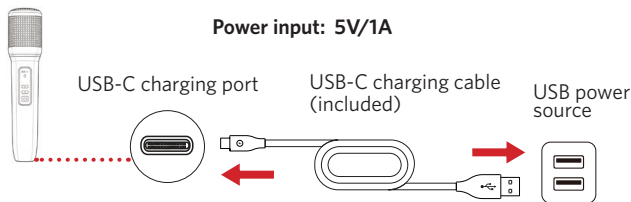

Charging: Flashing white (Battery icon on the MIC display)

Fully charged: Stop flashing (Battery icon on the MIC display)

Charging Time: 5-6 hours

5 Pairing The Karaoke Machine With The MIC

1. Turn on the Karaoke Machine

Press the "I" or "O" end of the ON/OFF switch to turn on/off the machine. Once it is turned on, the machine's display screen turns on.

2. Turn on the Microphone

Press and hold the **Power button for 3 seconds** to turn on/off the microphone. Once the microphone is turned on, it will default to pairing mode, and the Pairing icon on the MIC display will flash white.

3. Pairing: Bring the microphone and the machine close to each other, and they will automatically pair with each other. Once they are successfully paired, the Pairing icon will stop flashing.

6 Main Menu

When the machine is on, it will automatically enter the main menu screen.


To select a menu,

There are 3 methods to select a menu on the display screen, choose one of them to do.

Method 1: Singly press the Shortcut buttons on the machine to quickly select the menu, such as press the **Video mode button** , the **Music Mode button** , and the Bluetooth mode button .

Method 2: Use the **Next track/Previous track buttons** on the machine to navigate the menus, then press the **Play/Pause button** to confirm.

Method 3: Press the **Directional buttons** on the remote control to select your desired menu, then press the **OK button** to confirm.

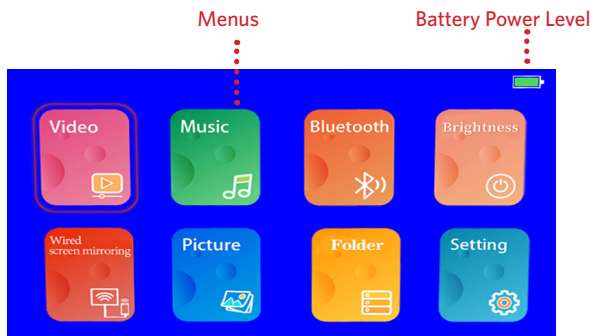

Press the **Return button** to exit and return to previous screen.

7 Video mode

1. Insert a TF card /USB drive (supports up to 128G) into the TF card slot/USB port of your karaoke machine.

2. Select **Video** from the Main Menu to enter the Video playback mode.

The Karaoke machine will recognize the video files in your TF card/USB drive, and automatically start video playback.

3. Press the **Return button** to display the video playlist to select your desired video for playback.

3. Control playback via the **physical buttons on the karaoke machine or the remote control**. For additional playback options, press the **Menu button** to bring up the on-screen playback control bar. **To start karaoke, sing along with the music.**



On-screen playback control bar

8 Music mode


1. Insert a TF card /USB drive (supports up to 128G) into the TF card slot/ USB port of your karaoke machine.

2. Select **Music** from the Main Menu to enter the Video playback mode.

The Karaoke machine will recognize the music files in your TF card/USB drive, and automatically start music playback.

The display shows the music playlist, use the **Next track/Previous track/Numerical buttons** on the machine or the **Directional buttons** on the remote control to select your desired song for playback.

3. Control the video playback via the **physical buttons on the device or the remote control**. For additional playback options, press the **Menu button** to bring up the on-screen playback control bar. **To start karaoke, sing along with the music.**

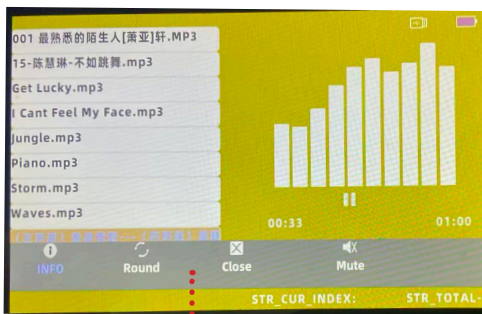

On-screen playback control bar

9 Bluetooth Mode

1. Select **Bluetooth** from the Main Menu to enter Bluetooth playback mode. You will hear a voice prompt “Bluetooth Mode”.

2. Turn on Bluetooth in your device’s settings and search for “**TR Karaoke**”, then tap **TR Karaoke >Pair** to connect.

If successfully paired with your device, you will hear a a voice prompt “Bluetooth connected”.

3. Open your media player app on your device, and select your desired file for playback.

4. Control the music playback via the physical buttons on the device, the remote control or through your phone. **To start karaoke, sing along with the music.**

Notes:

1. The karaoke machine automatically reconnects to the last paired Bluetooth device upon power-up.

2. When you receive or make a call, the music that is playing will automatically pause. Answer the call on your phone and the person’s voice on the other end of the line can be only heard through the phone. Once you end the call, the music will resume.

10 AUX mode

1. Connect the AUX cable (not included) to the AUX In port of the Karaoke machine and to the Audio Out of your media device (such as your phone). It will immediately play the music files in the Audio Out device.

2. Control the playback via the physical buttons on the device, the remote control or through your phone. **To start karaoke, sing along with the music.**

Note: The machine will take the newly connected TF card, USB drive or Audio out device as the first priority for the music playback. If the TF card, USB drive and Audio Out device are connected to the machine at the same time, the one with fewer media files will be recognized and played first.

11 Wired Screen Mirroring Mode

This karaoke machine features the Wired Screen Mirroring mode, which replicates your entire phone screen in real time onto the Karaoke Machine's display via wired cable. Every single visual element—home screen, apps, notifications, video, game, text input—is synchronously duplicated on the big screen, with audio transmitted together.

1. Connect the USB data cable to the USB port of the karaoke machine and the data-enabled charging port on your phone.

2. Select **Wired Screen Mirroring** from the main menu to enter screen mirroring mode.

Scan the QR code shown on the machine's display or on the right side. Alternatively, search for "HCCast" in app stores (including Google Play, etc.) to download and install the HCCast app on your phone.



Note: Apple users do not need to install the HCCast app; skip this step.

3. Launch HCCast, select "Use USB to transfer files", select **ALLOW** to turn on all permissions. Select your desired visual element on your phone to start mirroring.

12 More Features

● Viewing photos

Select **Pictures** from the Main Menu to enter photo view mode. Control the playback via the physical buttons on the device, the remote control or through your phone.

● Managing the media files(Explorer)

Select **Folder** from the Main Menu to access the internal storage folder and external storage folder (USB drive or TF card). Select the folder to view the file list, select your desired file for playback. **Press the Menu button to display an edit menu, you can copy, cut, delete or rename and so on.**

● Settings

Select **Brightness and Settings** from the Main Menu to enter system settings mode. You can customize and control various settings, such as Brightness, Auto Sleep Time, Volume Level, etc.

13 Specifications

TKXLSBLK Karaoke Machine

Operation	Button /Remote control
Display Size	8-inch HD display screen
Power Input	5V / 3A
Battery Capacity	5400 mAh/7.4V
Charging Time	5 hours
Playtime	
TF card/USB drive	Supports up to 128G
Bluetooth Version	V5.1
Operation Range	33ft (10M)
Power consumption	30W
Dimension	9.25" × 5.51" ×13.98" / 235x 140 x 355mm
Weight	98.8 oz (2.8 Kg)

TKXLSBLK Karaoke Microphone

Power Input	5V / 1A
Battery Capacity	500mAh
Charging Time	5-6 hours
Playtime	12 hours (at maximum volume)
S/N Ratio	> 75 dB
Bluetooth Version	V5.1
Operation Range	33ft (10M)
Length	8.87"/210 mm
Weight	6.21 oz (176 g)

12 Safety Instructions

1. Read, keep and follow these instructions.
2. Handle with care. Dropping the device may cause malfunctions or damage.
3. Do not disassemble this device.
4. Do not expose this device to rain or moisture or submerge in water.
5. Use within 0°C to 35°C (32°F to 95°F). Prolonged exposure to extreme temperatures may damage components.
6. Keep the device away from excessive heat, such as sunshine, fire or the like.
7. Do not use the device outdoors during thunderstorms.
8. Use original or certified cables.
9. Do not use any corrosive cleaner/oil to clean.
10. Keep out of reach of children. It contains small parts which may be a choking hazard.
11. Observe local laws and regulations while using the device.
12. To prevent damage to your device's parts or internal circuits, do not use it in dusty, smoky, damp or dirty environments.
13. Do not use, store or transport the device where flammables or explosives are stored. Using your device in these environments increases the risk of explosion or fire.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling.

Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.