

instructions

Product Name: Bluetooth remote

Model: LYBT016F-JG-001

Technical specifications and parameters:

project	parameter
product name	Bluetooth remote
Connection Method	Bluetooth wireless connection
Number of buttons	16 keys
Case material	ABS engineering plastic, black, with fine sparkle surface pattern
Button Material	Silicone, color: Pantone Black
Screen printing color	Pantone White / Pantone 179 C (Red)
pilot lamp	Top silicone translucent indicator light
microphone	Built-in microphone (rear microphone jack for sound pickup)
power supply mode	Two AAA batteries
working voltage	2.2-3.3V
Operating current	$\leq 30\text{mA}$
Dormant current	$\leq 20\mu\text{A}$

operating instruction:

(1) Install the battery

Open the battery compartment cover on the back of the remote control, insert the battery according to the positive and negative polarity markings inside the compartment, and then close the battery compartment cover. Please use only certified batteries and ensure that the polarity is correctly oriented.

(2) Turn on the remote control and enter pairing mode.

Press the Pairing button to wake up the remote control from sleep mode and initiate the auto-reconnection and pairing mode.

(3) Complete device pairing

In the Bluetooth settings interface for devices such as televisions, media players, or projectors, enable Bluetooth and search for available devices; then select the name of this remote control to pair and connect. Once the connection is successful, the status indicator will change accordingly, and the device can be used normally.

Note: The Bluetooth setup menu and pairing procedure may vary slightly depending on the device;

please refer to the on-screen instructions for your specific device.

(4) Battery Installation and Replacement

1. Use your thumb to push open (or lift up) the battery compartment cover in the direction indicated on the cover plate.
2. Remove the old battery and insert the new battery according to its positive and negative polarity (see the polarity markings inside the battery compartment).
3. Close the battery compartment cover – the click indicating that the fastener is securely in place is sufficient.

It is recommended to use batteries of the same brand and model with similar capacity; when the remote control will not be used for an extended period, please remove the batteries to prevent battery leakage from damaging the device.

FCC Caution:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.