

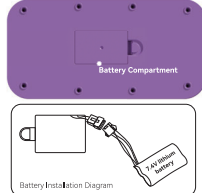
印刷模式：四色印刷

折页

尺寸：100*140MM

出血：3MM

150g双铜纸

—— Instruction manual —— Dance Mat User Manual  Please read the instruction manual carefully before using this equipment. —01—	If any problems, please contact our after-sales email: oppvoci199support@163.com IMPORTANT : 1.Peciar Customer Care After-sales Mailbox: oppvoci199support@163.com 2.Please read this user manual first for best experience. Make Playtime Easier! Every detail matters! WARM REMINDER: If the blanket has an odor, this is normal for new products as they are sealed during transportation. Please do not worry if there is an odor immediately after opening the package. The dance mat is made of environmentally friendly and non-toxic materials, the odor is harmless. Simply place the mat in a well-ventilated area for a while to eliminate the odor. IMPORTANT : This product may not be suitable for the following individuals. Please consult a doctor before use if you: -Are planning to become pregnant, are pregnant, or are currently menstruating. -Have an implanted electronic device such as a pacemaker; -Have a prosthetic limb or limited leg mobility, or other chronic conditions or injuries. -Are currently receiving medical treatment or experiencing physical discomfort. -Have a malignant tumor, heart disease, or osteoporosis —02—	If any problems, please contact our after-sales email: oppvoci199support@163.com IMPORTANT NOTES 1. Ensure sufficient space when using the dance mat to prevent falls or bumps. 2. It is recommended to use the dance mat barefoot. In winter, anti-slip cotton socks are acceptable, but silk socks are not recommended as they are slippery. Do not wear shoes, as this may damage the mat surface. 3. Children and the elderly should be supervised by an adult to prevent accidents. 4. Do not use the mat for extended periods. Excessive exercise can be harmful. It is recommended to take a break every 30 minutes. 5. Keep pets away from the mat. 6. If there is no response after turning it on, please check if the batteries are inserted backwards or if the batteries have power. You can try replacing the batteries. 7. Please be careful not to put your ear near the speaker to avoid excessive volume affecting your hearing. 8. If you do not perform any operation, it will enter deep mode. You can activate it by pressing any button. 9. Do not place heavy objects on the dance mat for extended periods. 10. Keep the dance mat away from sharp objects to prevent damage to its surface. 11. Avoid using the dance mat in high-temperature environments, such as near heating devices. 12. When cleaning the dance mat, gently wipe the surface with a soft, damp cloth. Do not use any abrasive or chemical cleaners, and never wash it with water. 13. When not in use, store the dance mat in a cool, dry place, away from direct sunlight. 14. Do not disassemble or repair the dance mat yourself. —03—	If any problems, please contact our after-sales email: oppvoci199support@163.com BATTERY USAGE INSTRUCTIONS  1. The product uses a 7.4V rechargeable battery. 2. Different types of batteries or new and used batteries should not be mixed. 3. Rechargeable batteries may only be charged under adult supervision. 4. Used batteries should be removed from the toy. 5. Rechargeable batteries must be removed from the toy before charging. 6. Power terminals must not be short-circuited. The battery charger's cord, plug, enclosure, and other parts should be inspected regularly for damage. If damage is found, stop using it until the damage has been repaired. 7. Only batteries of the same type or equivalent to the recommended model may be used. 8. Do not connect more than the recommended number of power sources. —04—	If any problems, please contact our after-sales email: oppvoci199support@163.com WHY YOU'LL LOVE IT 1. Sparkling Princess Design Dreamy pink-purple theme with glowing LED buttons, crown & star details, brings fairy-tale magic to every dance. 2. Four Fun Game Modes Challenge, Piano, Rhythm Drum, Memory modes. 30 levels for Challenge/Piano/Rhythm Drum, 99 levels for Memory mode. 3 Adjustable Speeds 3 speed levels for different ages and skills. 4. 7-Level Volume Control Easy volume adjustment for quiet or lively play. 5.Wireless Bluetooth Connection Pair with phones/tablets easily, play your favorite music freely. 6. Rechargeable Battery Built-in 500mAh lithium battery, long playtime, no frequent battery changes. 7. Light-Up 6-Button Pad Cheerful LED lights flash with rhythm, makes dancing more fun and engaging. —05—	If any problems, please contact our after-sales email: oppvoci199support@163.com 8. Non-Slip & Waterproof Surface Safe grip for kids, easy to clean after play. 9. Durable & Skin-Friendly Material Soft, thick pad, safe for kids' feet, long-lasting use. 10. Easy Storage & Carry Foldable design, lightweight, easy to store and take anywhere. —06—
If any problems, please contact our after-sales email: oppvoci199support@163.com PRODUCT FUNCTION MODE DISPLAY  Volume + Volume - Mode Select Start/Pause Level Select Speed Switch Bluetooth Connection Off Single Player Mode / On —07—	If any problems, please contact our after-sales email: oppvoci199support@163.com GAME MODES (1) Challenge Mode Display: 001 30 levels Bluetooth music available Two ways to enter: 1. Default mode after power-on, press START to begin. 2. Press MODE until the display shows 1, then press START. Voice prompt: READY GO to start the game. 30 levels in total. Light speed increases as level rises. A wrong step triggers a prompt tone; 6 mistakes = fail tone, restart current level. Complete all 30 levels => victory voice + cheers repeat 3 times, then standby. Use LEVEL button to select levels. (2) Piano Mode Display: 002 30 levels Press MODE until display shows 2, then press START. Voice prompt: READY GO to start piano game. Use LEVEL button to select levels. 6 pads play piano notes. 6 mistakes = fail tone, restart current level. Clear level => applause tone, auto next level. —08—	If any problems, please contact our after-sales email: oppvoci199support@163.com (3) Rhythm Drum Mode Display: 003 30 levels Press MODE until display shows 3, then press START. Voice prompt: READY GO to start drum game. Use LEVEL button to select levels. 6 pads play drum beats. 6 mistakes = fail tone, restart current level. Clear level => applause tone, auto next level. (4) Memory Mode Display: 004 99 levels Press MODE until display shows 4, then press START. Memorize the light sequence on the pad. After light demo: voice prompt READY GO, step in order. Correct steps => next level, wrong => back to current level, retry. Use LEVEL button to select levels: Max 99 levels, memorize 99 sequences. Great for memory training. Other: Bluetooth Music Mode Turn on the dance mat and press BLUETOOTH to activate Bluetooth. On your phone, enable Bluetooth and search for the device named sepaaktoy. Once connected, you can play your phone's music as background music while dancing. —09—	If any problems, please contact our after-sales email: oppvoci199support@163.com COMPLETE SET Package: Gift Box Packaging Product Function: Interesting Workout & Keep Your Kids Away From Video Games Material: ABS Age Range: 3+ Years Product Size:  Dance Mat: 90*90 cm (35.4 x 35.4 inches)  Packaging: 43 x 25.5 x 12cm (16.93 x 10.04 x 4.72 inches) Package Includes:  Rechargeable Lithium Battery  Charging Cable  Screwdriver  Instruction manual —10—	If any problems, please contact our after-sales email: oppvoci199support@163.com Oppvoci CUSTOMER CARE SUPPORT WARRANTY POLICY Mailbox: oppvoci199support@163.com Please contact us if you need any help as follow: * Brand Technical Support * Package is NOT in perfect condition * Parts missing * Any other quality issues Each Oppvoci dance mat undergoes thorough inspection and testing prior to leaving the factory. It is warranted to be free from defects in workmanship and materials throughout the designated worry-free period. If you experience any issues after purchase, please do not hesitate to contact the Oppvoci Customer Care Support Service Centers. —11—	If any problems, please contact our after-sales email: oppvoci199support@163.com A Warm and Heartfelt Letter from Professional Brand to Our Dear Customers Dear Customer, We are committed to delivering innovative, high-quality products and services to families with young children. Every dance mat undergoes strict quality inspections before shipment, reflecting our dedication to excellence. While we strive for perfection, occasional errors or oversights may occur during the service process. If you encounter any issues, please do not hesitate to reach out to our Support Team. We will be more than happy to assist you. Best regards, Oppvoci Customer Happiness & Care Support Team —12—

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.