

拳击靶-260818

五折页

印刷模式：四色印刷

单页尺寸10.5*15cm

157g 双铜版纸

出血：3mm

Oppvoci


MUSIC BOXING TARGET

Instruction Manual



Please read this user manual carefully before use.

PACKAGE CONTENTS

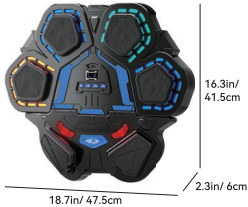

Boxing Gloves x2
USB Cable x1
EAV Shock Pad x1
Video Stickers x4

If you have any questions or concerns, please contact our customer support at: oppvoci199support@163.com

PRODUCT ASSEMBLY

Identify the Parts (Check Orientation)

①Control Module ②Lower module
③Left module ④Central locking ⑤Right module

- Place the main control module ① on a flat surface.
- Insert the left target ③ alignment module ④.
- Insert the right target ⑤ alignment module ④.
- Insert the central locking ④ (buckle to fix the installed module).
- Align the lower target module ② and insert it into the slot.
- Ensure all modules are securely installed.

TIPS

- Kind reminder: Please align the card slot before pressing during installation. Hearing a 'click' sound indicates that the installation is in place.
- Adult Assistance Recommended: Young children should have adult assistance during assembly.

PRODUCT DISASSEMBLY

- Flip the product, find and hold down the lower target module ② unlock button continuously.
- Pull out the lower target module ②.
- Pull out the central lock ④.
- Press and hold the left target ③ unlock button on the back.
- Pull out the left target ③.
- Press and hold the right target ⑤ unlock button on the back.
- Pull out the right target ⑤.
- Complete disassembly.

IMPORTANT

- Always remove the center lock first before sliding out the modules.
- Do not use excessive force. Improper disassembly may damage the product.
- Repeated disassembly following assembly is not recommended, as it may cause damage to components.

WALL INSTALLATION

Step 1 Attach the soft (loop) side to the boxing target

The soft (loop) hook-and-loop tape may be used directly. If excess length is present, cut it to the desired size as required.

Step 2 Attach EAV Shock Pad

Align the EAV Shock Pads with the corresponding shapes and firmly attach them in place.

WARNING: EAV Shock Pads effectively cushion and disperse impact force. To equally against wall and enhance security installation.

Step 3 Attach the hard (hook) side to the wall

Choose a suitable height for installation. Peel off the backing and stick the hard (hook) side of the tape to the wall. Press firmly.

Step 4 Mount the boxing target

Align the soft (loop) tape on the target with the hard (hook) tape on the wall. Then press firmly to attach.

RECOMMENDED WALL SURFACES: Ceramic Tile, Marble, Smooth Wood, Painted Wall.

NOT RECOMMENDED: Rough Concrete, Rough Wall, Glass/Polystyrene.

Important and prohibited cases:

- Harsh wall and rough concrete will have weak adhesion. The product may fall off during use and slight damage may occur after removal.
- Do not install directly on surfaces such as glass and mirrors. Impact force may cause cracking and safety risks. Please use the wall to lean and force of feet and gloves before attaching the hook-and-loop tape.

A SINCERE LETTER TO OUR VALUED CUSTOMERS

Dear Customer,

Thank you for choosing Oppvoci.

At Oppvoci, we are committed to creating innovative sports products that make exercise more fun, interactive, and enjoyable. Our Music Boxing Target combines music, rhythm, and boxing training to provide an exciting workout experience for both kids and adults.

Before shipment, every Oppvoci Music Boxing Target undergoes strict quality inspections to help ensure reliable performance and product quality. We are dedicated to providing you with a great product experience and excellent customer support.

If you have any questions or need assistance while using your product, please feel free to contact our customer care team. We are always happy to help and will do our best to provide a timely solution.

Thank you for your trust and support.

Best regards,
Oppvoci Customer Care Department

LED DISPLAY INSTRUCTIONS

Mode	Display Content
C1	Boxing Mode
C2	Programming Playback Mode
During Game	Number of Hits
During Programming	Edit Strike Memory

Button Functions

- SPEED**: Adjust game speed / Decrease volume
- ON/OFF**: Power the unit on or off
- CODING**: Enter programming mode
- MODE**: Switch working modes / Increase volume

CHARGING INSTRUCTIONS:

- Interface: Use a Type-C cable to charge the device.
- Charging Current: 480 mA
- Charging Time: Approximately 3 hours.
- Note: The device will automatically power off during charging. This is normal operation and not a fault.
- Operating Current: 400 mA.
- Battery Life: Up to 3.5-4 hours on a full charge.

If you have any questions or concerns, please contact our customer support at: oppvoci199support@163.com

OPERATING INSTRUCTIONS

Speed Button (Decrease Volume)

Short Press: Switch Speed

- Music Background Mode: Choose from 5 adjustable speed levels. The display will show your current setting.
- Programming Playback Mode: Switch between 5 background songs.
- Bluetooth Mode: The speed button is disabled and fixed at 1.0. The game speed automatically syncs with the rhythm of your Bluetooth music, and the current level is displayed on the screen.

Long Press: Decrease Volume

- 9 volume levels available.
- Hold for 1 second to adjust, current volume will display on screen.

Power Switch Pause

Short Press: Pause / Resume Game

- Music Background Mode: Game and background music pause when the game is paused.
- Bluetooth Mode: Only the game pauses; Bluetooth music continues playing.

Long Press: Power On / Off

- Long Press for 2 Seconds: Power On / Off

If you have any questions or concerns, please contact our customer support at: oppvoci199support@163.com

OPERATING INSTRUCTIONS

Bluetooth Programming Mode

Short Press: Bluetooth On / Off (Device Name: Music Boxing Target)

- Short Press: Turn Bluetooth on/off. A prompt sound will be played for Bluetooth on, successful connection, and disconnection. Short press again to turn Bluetooth off and return to Music Background Mode.

Long Press: Enter Programming Mode

- Programming Time: 30 seconds, with a countdown reminder in the last 5 seconds. The device will automatically exit programming mode when time is up.
- Up to 100 actions can be programmed.
- During programming, long press again to exit early and save the recorded content.
- When the device is charging, it will automatically power off and all programmed content will be cleared.

Programming Indicator Light

After entering programming mode, the last two of the six buttons light up green. When a hit is detected, they briefly turn blue and return to green (see Fig. 1).

Blue Light on Impact

Fig. 1

Fig. 2

Programming Playback

- After exiting programming mode, the programmed content plays automatically (see Fig. 2).
- Reprogramming will overwrite the previous content.
- If no program has been set, the two upper buttons will flash as a reminder.
- If programmed content exists, it will loop continuously and automatically stop after 3 minutes, then restart playback.

OPERATING INSTRUCTIONS

Mode Switch (Increase volume)

Short Press: Switch Working Mode

- Short press to switch between Boxing Mode and Programming Playback Mode (Boxing Mode is default on power-on). Short press is disabled when already in Programming Playback Mode.

In Programming Playback Mode:

- If no program is stored, a 'ding' sound will play, and the two upper buttons will flash. If a program exists, the program will start automatically and loop continuously.

Long Press: Increase Volume

- Hold the bottom button for 1 second to increase the volume (9 adjustable levels). The display will show your current volume level in real time.

TIPS

- Choose a mode that matches your fitness level.
- Higher speed levels are more challenging.
- Adjust volume to a comfortable level for your environment.
- Use different modes to keep your training fun and effective.

If you have any questions or concerns, please contact our customer support at: oppvoci199support@163.com

IMPORTANT NOTES

- Wait at least 30 minutes after a meal before using the product.
- Do not use if you are feeling unwell, fatigued, or under the weather.
- Boxing gloves are strongly recommended to protect your hands during use.
- Do not disassemble, modify, or attempt to repair the product yourself.
- Do not use in humid environments or expose the device to water.
- Recharge the product when the battery is low to avoid deep discharge, which can damage the battery life.
- Do not wash the product with water. Clean only with a soft, dry cloth.
- This product is not a toy. Adult supervision recommended for minors.

CUSTOMER SUPPORT

If you have any questions or need assistance, please contact us.

oppvoci199support@163.com

Oppvoci Thank you for choosing Oppvoci. Enjoy your smart training experience!

Oppvoci CUSTOMER CARE

SUPPORT WARRANTY POLICY

oppvoci199support@163.com

Please contact us if you need any help as follows:

- Brand Technical Support
- Damaged or Incomplete Package
- Missing Components or Accessories
- Warranty & Quality Support

1 YEAR WARRANTY

Oppvoci music boxing target is fully inspected and tested before factory dispatch. Enjoy our 1-year warranty-free warranty covering manufacturing and material defects starting on your purchase date. Please contact Oppvoci Customer Support for assistance with any after-sales matters.

10

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.