


SEREED**KL2606****Model No:** KL2606**Trademark:** SEREED**Manufacturer Name:** Chizhou Kuaileda Toys Co., Ltd.**Manufacturer Address:** Matang Industry Zone, Dingqiao Town,
Qingyang Chizhou City, Anhui Province, China**Email:** sereedservice@outlook.com**Telephone:** +8616559510074**Read this manual carefully before use and keep it for future reference.**

About Your New Vehicle

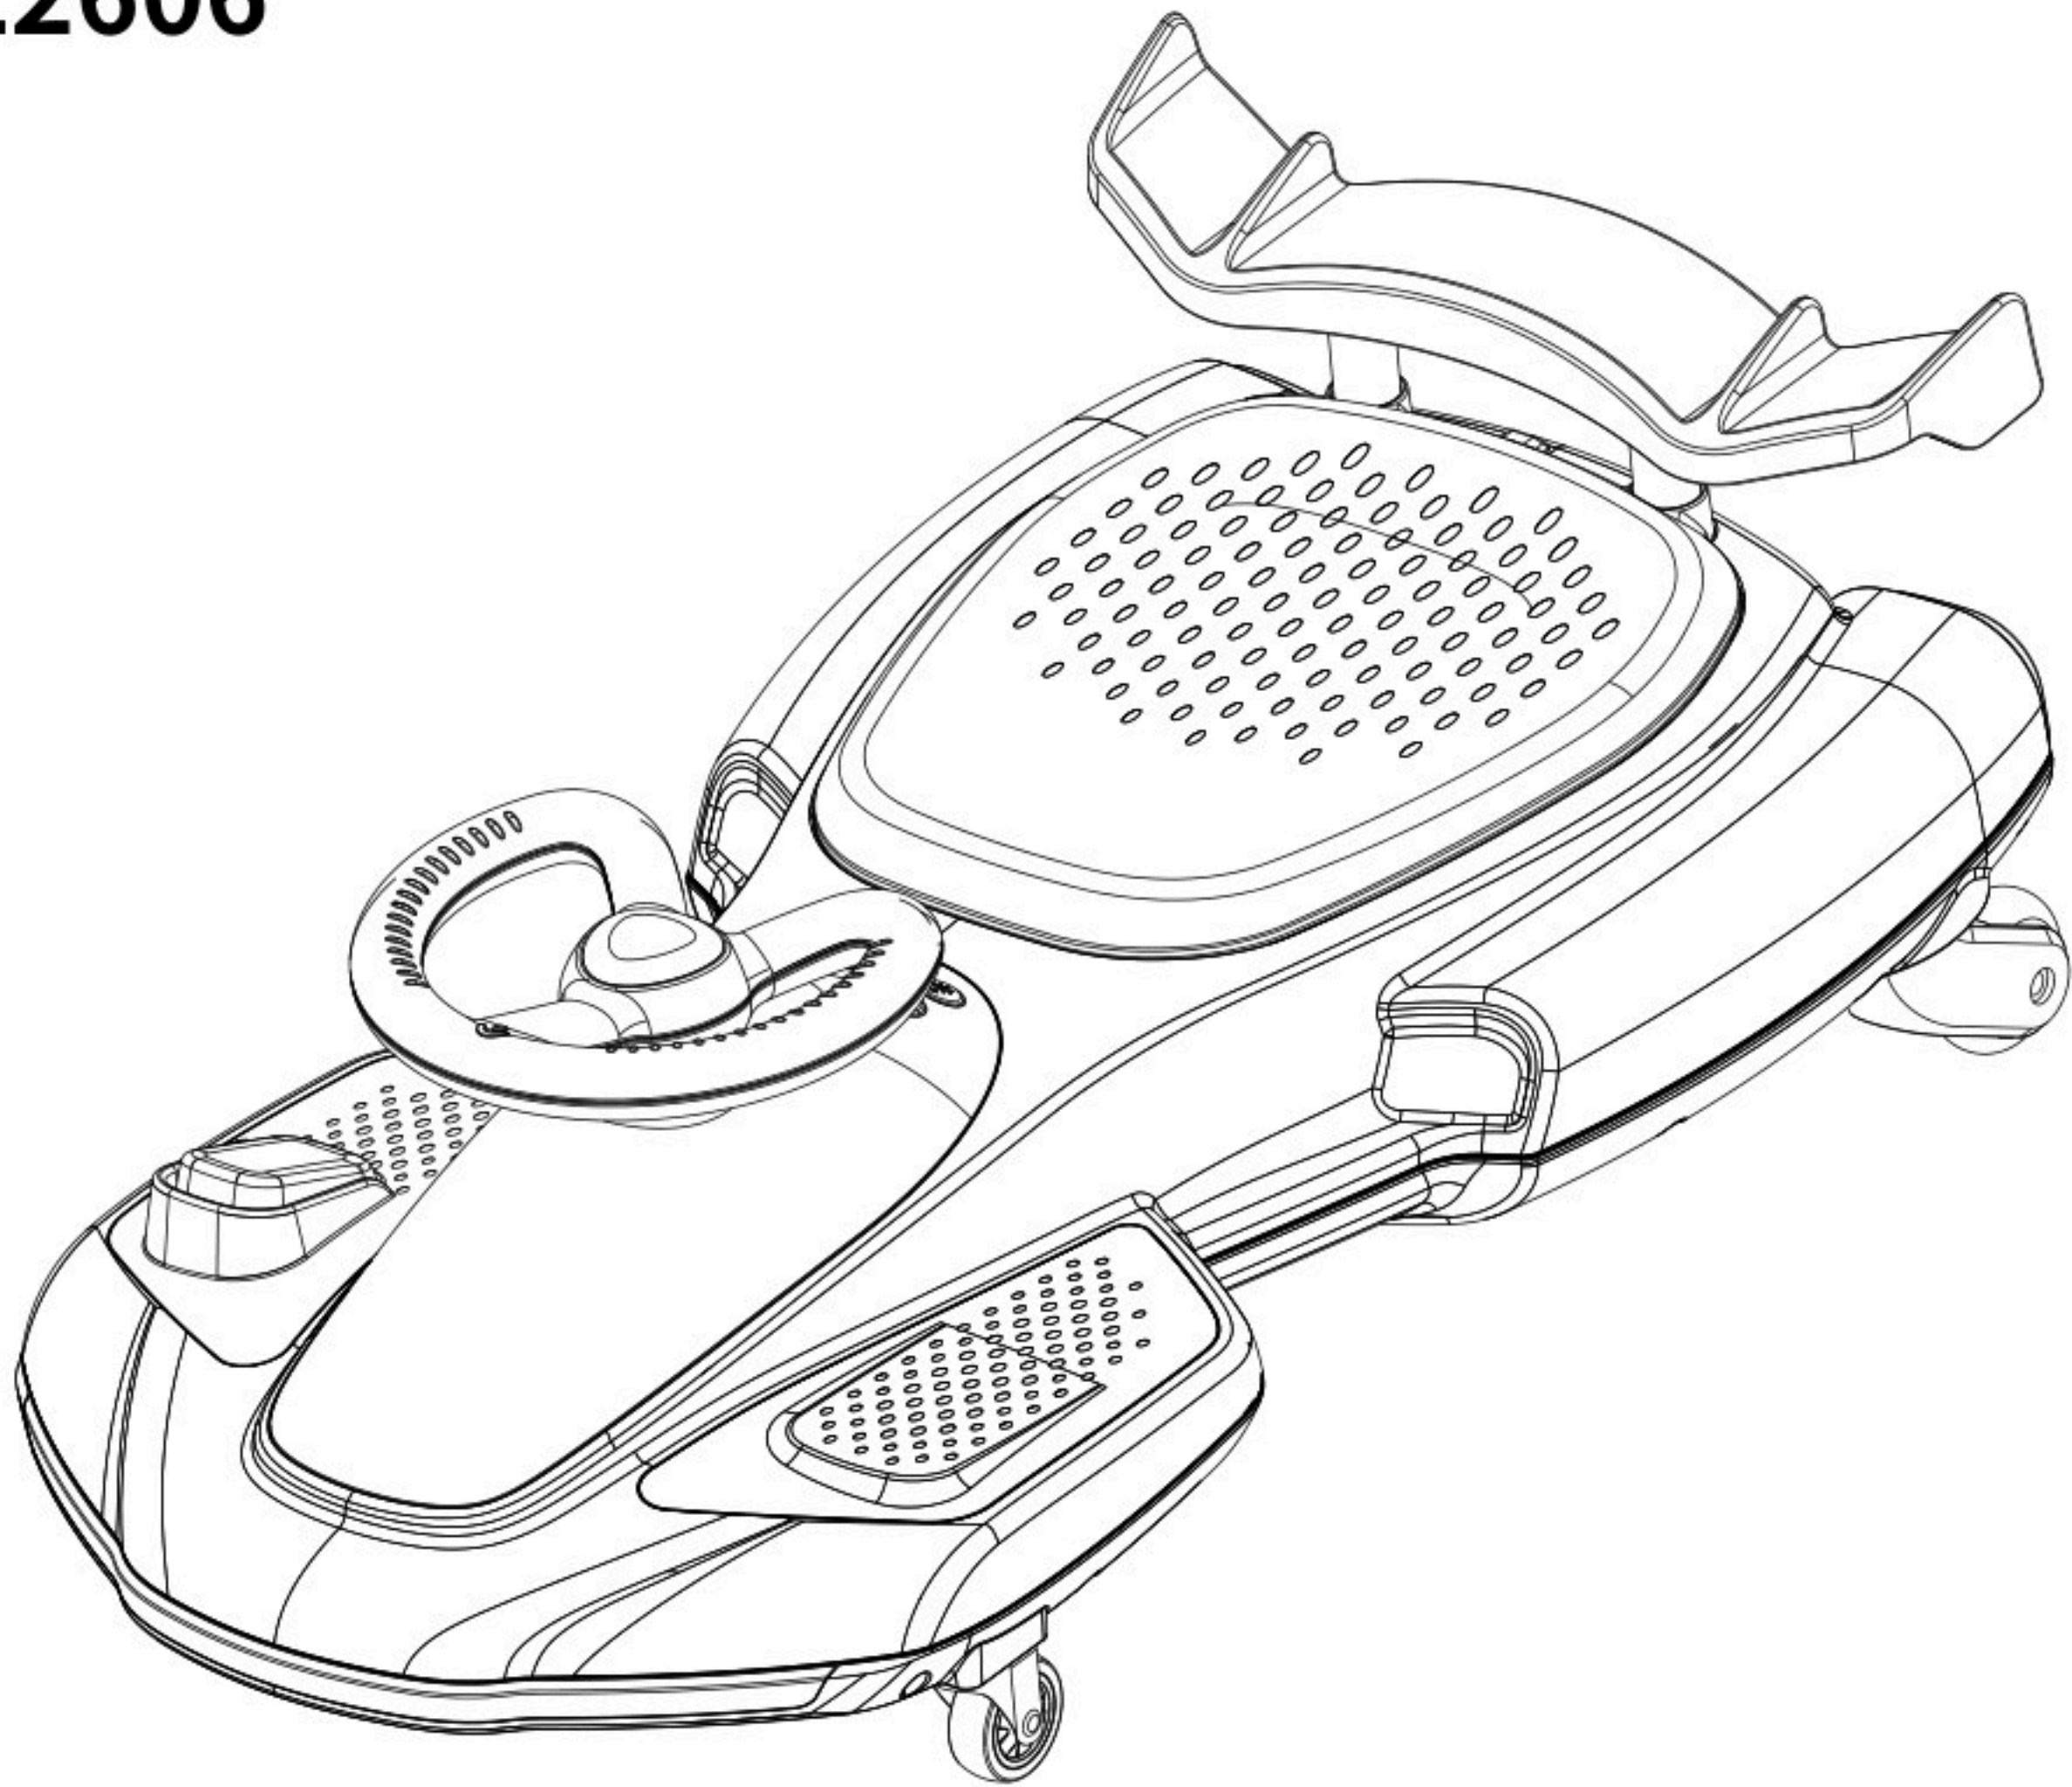

WARNING!

1. It should be used under adult guidance.
2. Parents should ensure that children have taken the safety measures before use.
3. The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third party.
4. Products should be assembled by an adult. Protective equipment should be worn. Not to be used in traffic. Not suitable for children under 3 years. Choking hazard-small parts. In unassembled state, contains potentially hazardous small parts. Please keep out of the reach of small children. Pay attention to the potential hazards of using the toy in areas other than private grounds.
5. When the vehicle's driving load exceeds 30 KG, PU wheels may cause scratches and damage to hardwood floors.

Battery:	12V 4.5Ah
Material:	PP, PU
Suitable age:	36-96 months
Load Capacity:	Max 30 KG
Size of car:	83.7*45.1*34.8
Speed:	6-7km/h
Charging time:	8-10 hours
Charger:	INPUT: 100-240V OUTPUT: 12V DC 500mA
Fuse:	Auto-reset fuse

Safety Information

WARNING!

General Safety:

1. Where products need assembly they must always be assembled by an adult. As a parent/carer, it is also your responsibility to check the tightness of screws, nuts and bolts before each use and if necessary, adjust and re-tighten.
2. This product may contain small parts and it is your responsibility as a parent/carer to exclude children from the area during assembly due to small parts.
3. Remove protective material and poly bags and dispose of them responsibly before giving the assembled product to your child.
4. Remember to retain these instructions for future reference.

Positioning:

1. Do not allow your child to ride at night or in poor light conditions.
2. Do not let your child play near steps, swimming pools / spas or other sources of water, on slopes, on streets or around cars, even if parked on your own property.
3. It is prohibited to drive/use this product on the public roads.
4. This product is designed to be used on smooth surfaces and should not be used on soft ground or in the rain or snow. May not be suitable for carpet driving.

Before Use:

- 1. Very Important! You Must Charge The Battery Fully Before The First Use.**
2. Dispose of all packaging material responsibly before giving this product to your child.
3. Check tightness of all components before giving this product to your child.

Safety Information

WARNING!

During Use:

1. This product is only suitable for children 36-96 months.
 2. The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
 3. The maximum rider weight capacity for this product is 30KG. Overload may damage this product.
 4. Adult supervision is highly recommended when children play with wheeled toys. Please take care of your child.
 5. Do not allow the child to ride with bare feet or without suitable footwear.
 6. Ensure the child keeps clothing, hands, hair, fingers and feet away from moving parts.
 7. The use of protective gear including approved helmets, gloves and pad is recommended.
 8. Store this product at room temperature; do not leave it outside or uncared for.
 9. Never let any child play with the battery or charger at any time, or let them charge the product.
 10. Do not use if product is faulty or damaged.
 11. Do not tamper with the battery or electrical parts inside the product.
 12. To reduce the risk of risk of injury, adult supervision is required.
- Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider









Safety Information

WARNING!

Charging the Battery:

1. All charging and re-charging must be carried out by an adult.
2. Do not attempt to use the product while it is being charged. When charging, all the functions will be cut off.
3. Charging should be carried out under cover and in a well-ventilated area.
4. Make sure the vehicle is powered off while charging.
5. Always ensure the charger is plugged into a wall outlet. Do not use an extension.
6. Do not charge near sources of potential sparks, fires or flames or where flammable gases, liquids and materials are stored.
7. During charging the battery and the charger may get hot.
8. Only charge the battery for a maximum time of 10 hours.
9. Always ensure that once the battery becomes discharged/flat that you re-charge for the recommended time. Failing to do so will significantly shorten battery life.
10. Charging the product below 4°C (40°F) or above 40°C (104°F) will decrease the battery life significantly.
11. V.R.L.A. batteries are heavy and contain lead & acid. They are dangerous if improperly handled.
12. Battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
13. Only use the battery supplied with this product. The use of other batteries may cause damage to the motor, charger and subsequent wiring, which could lead to fire and/or explosion.
14. Never short-circuit the terminals of the battery, or any subsequent wiring.
15. Never bypass or bridge a broken/blown fuse or circuit breaker and always replace with the same type/value and model.

Parts List

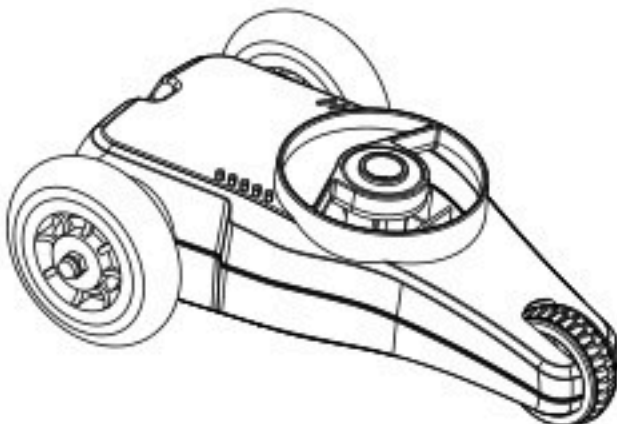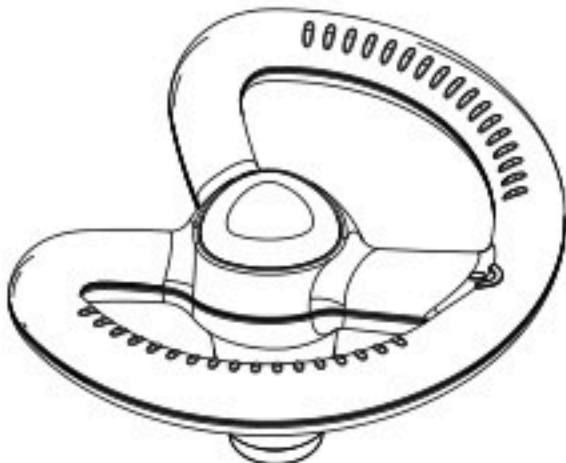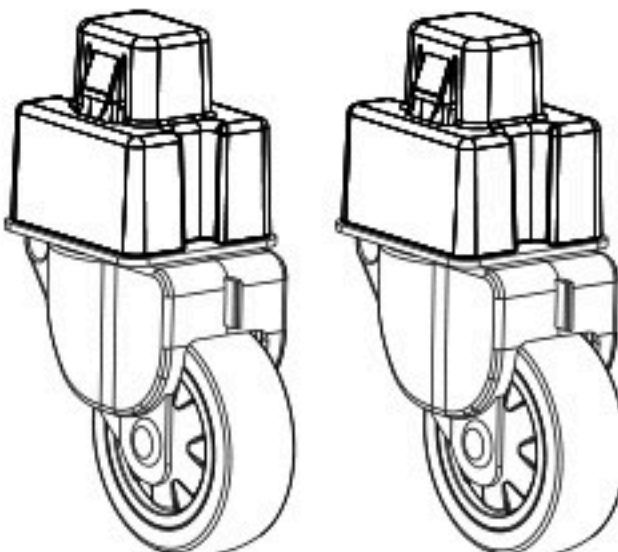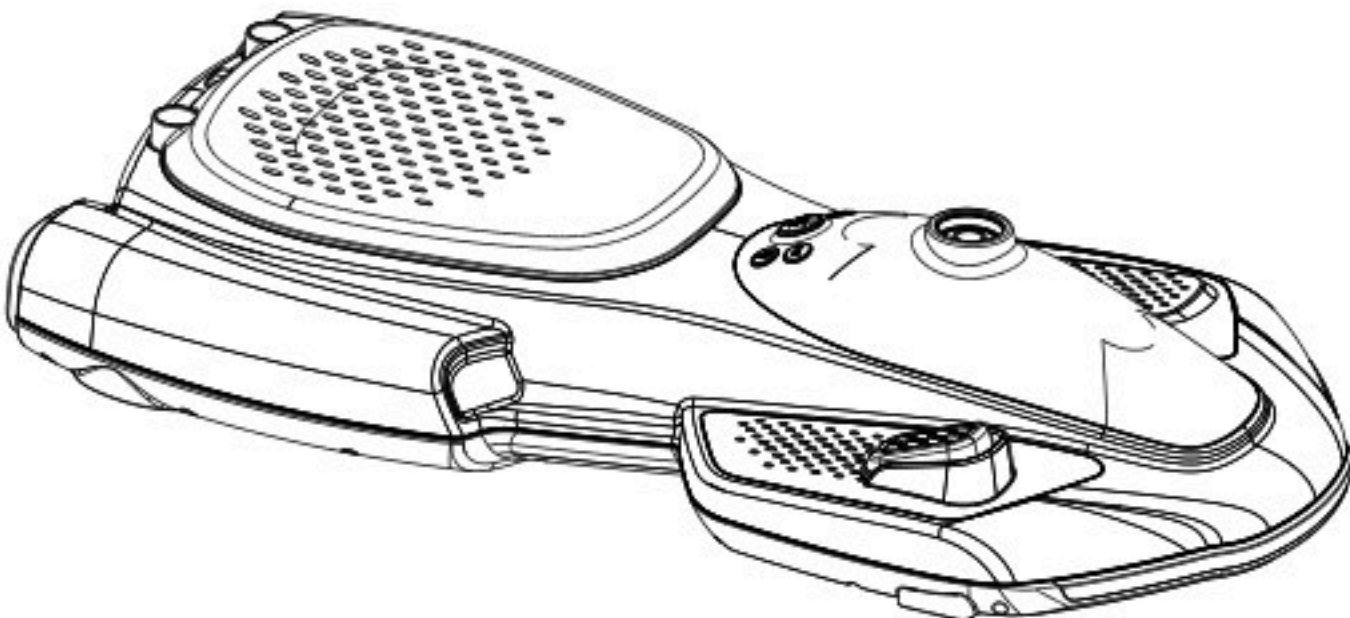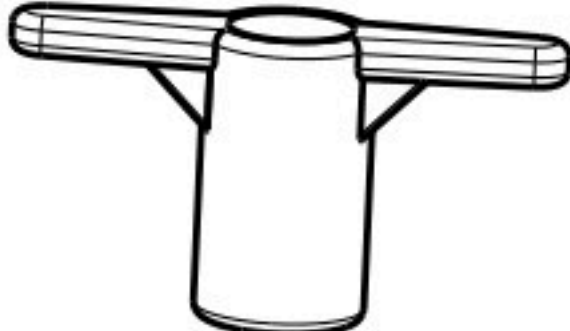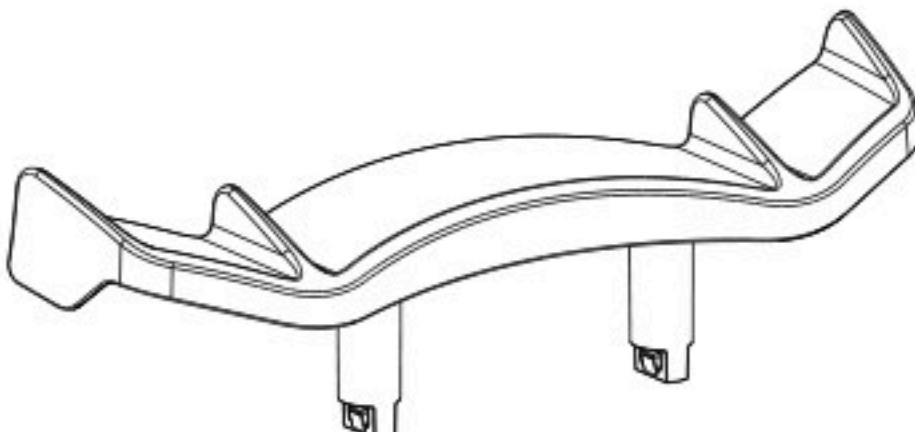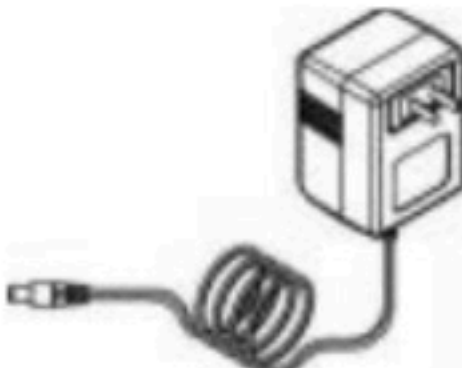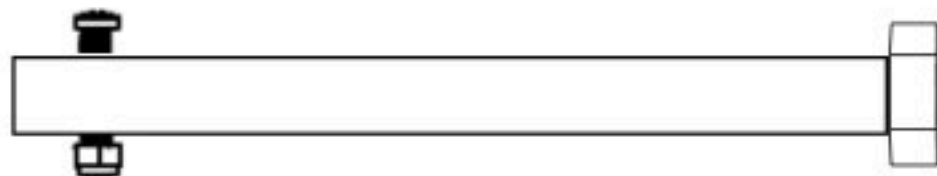Bogie 	Steering wheel 	Front wheel 	
Rear wheel/Hex Key/Axle Bolt 		Vehicle body 	
Socket wrench 	Swing 	Charger 	
Square tube 	Placed on the Square tube.     Washer M5×38 Bolt M5 Nut M8 Nut		

Assembly Steps


1. Install the square tube and steering wheel.




M5×38 Bolt



M5 Nut

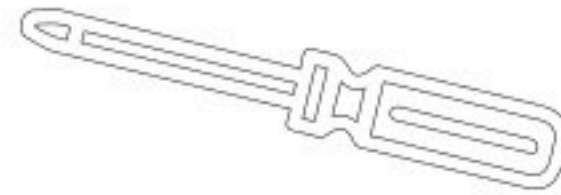

Screwdriver (not included)

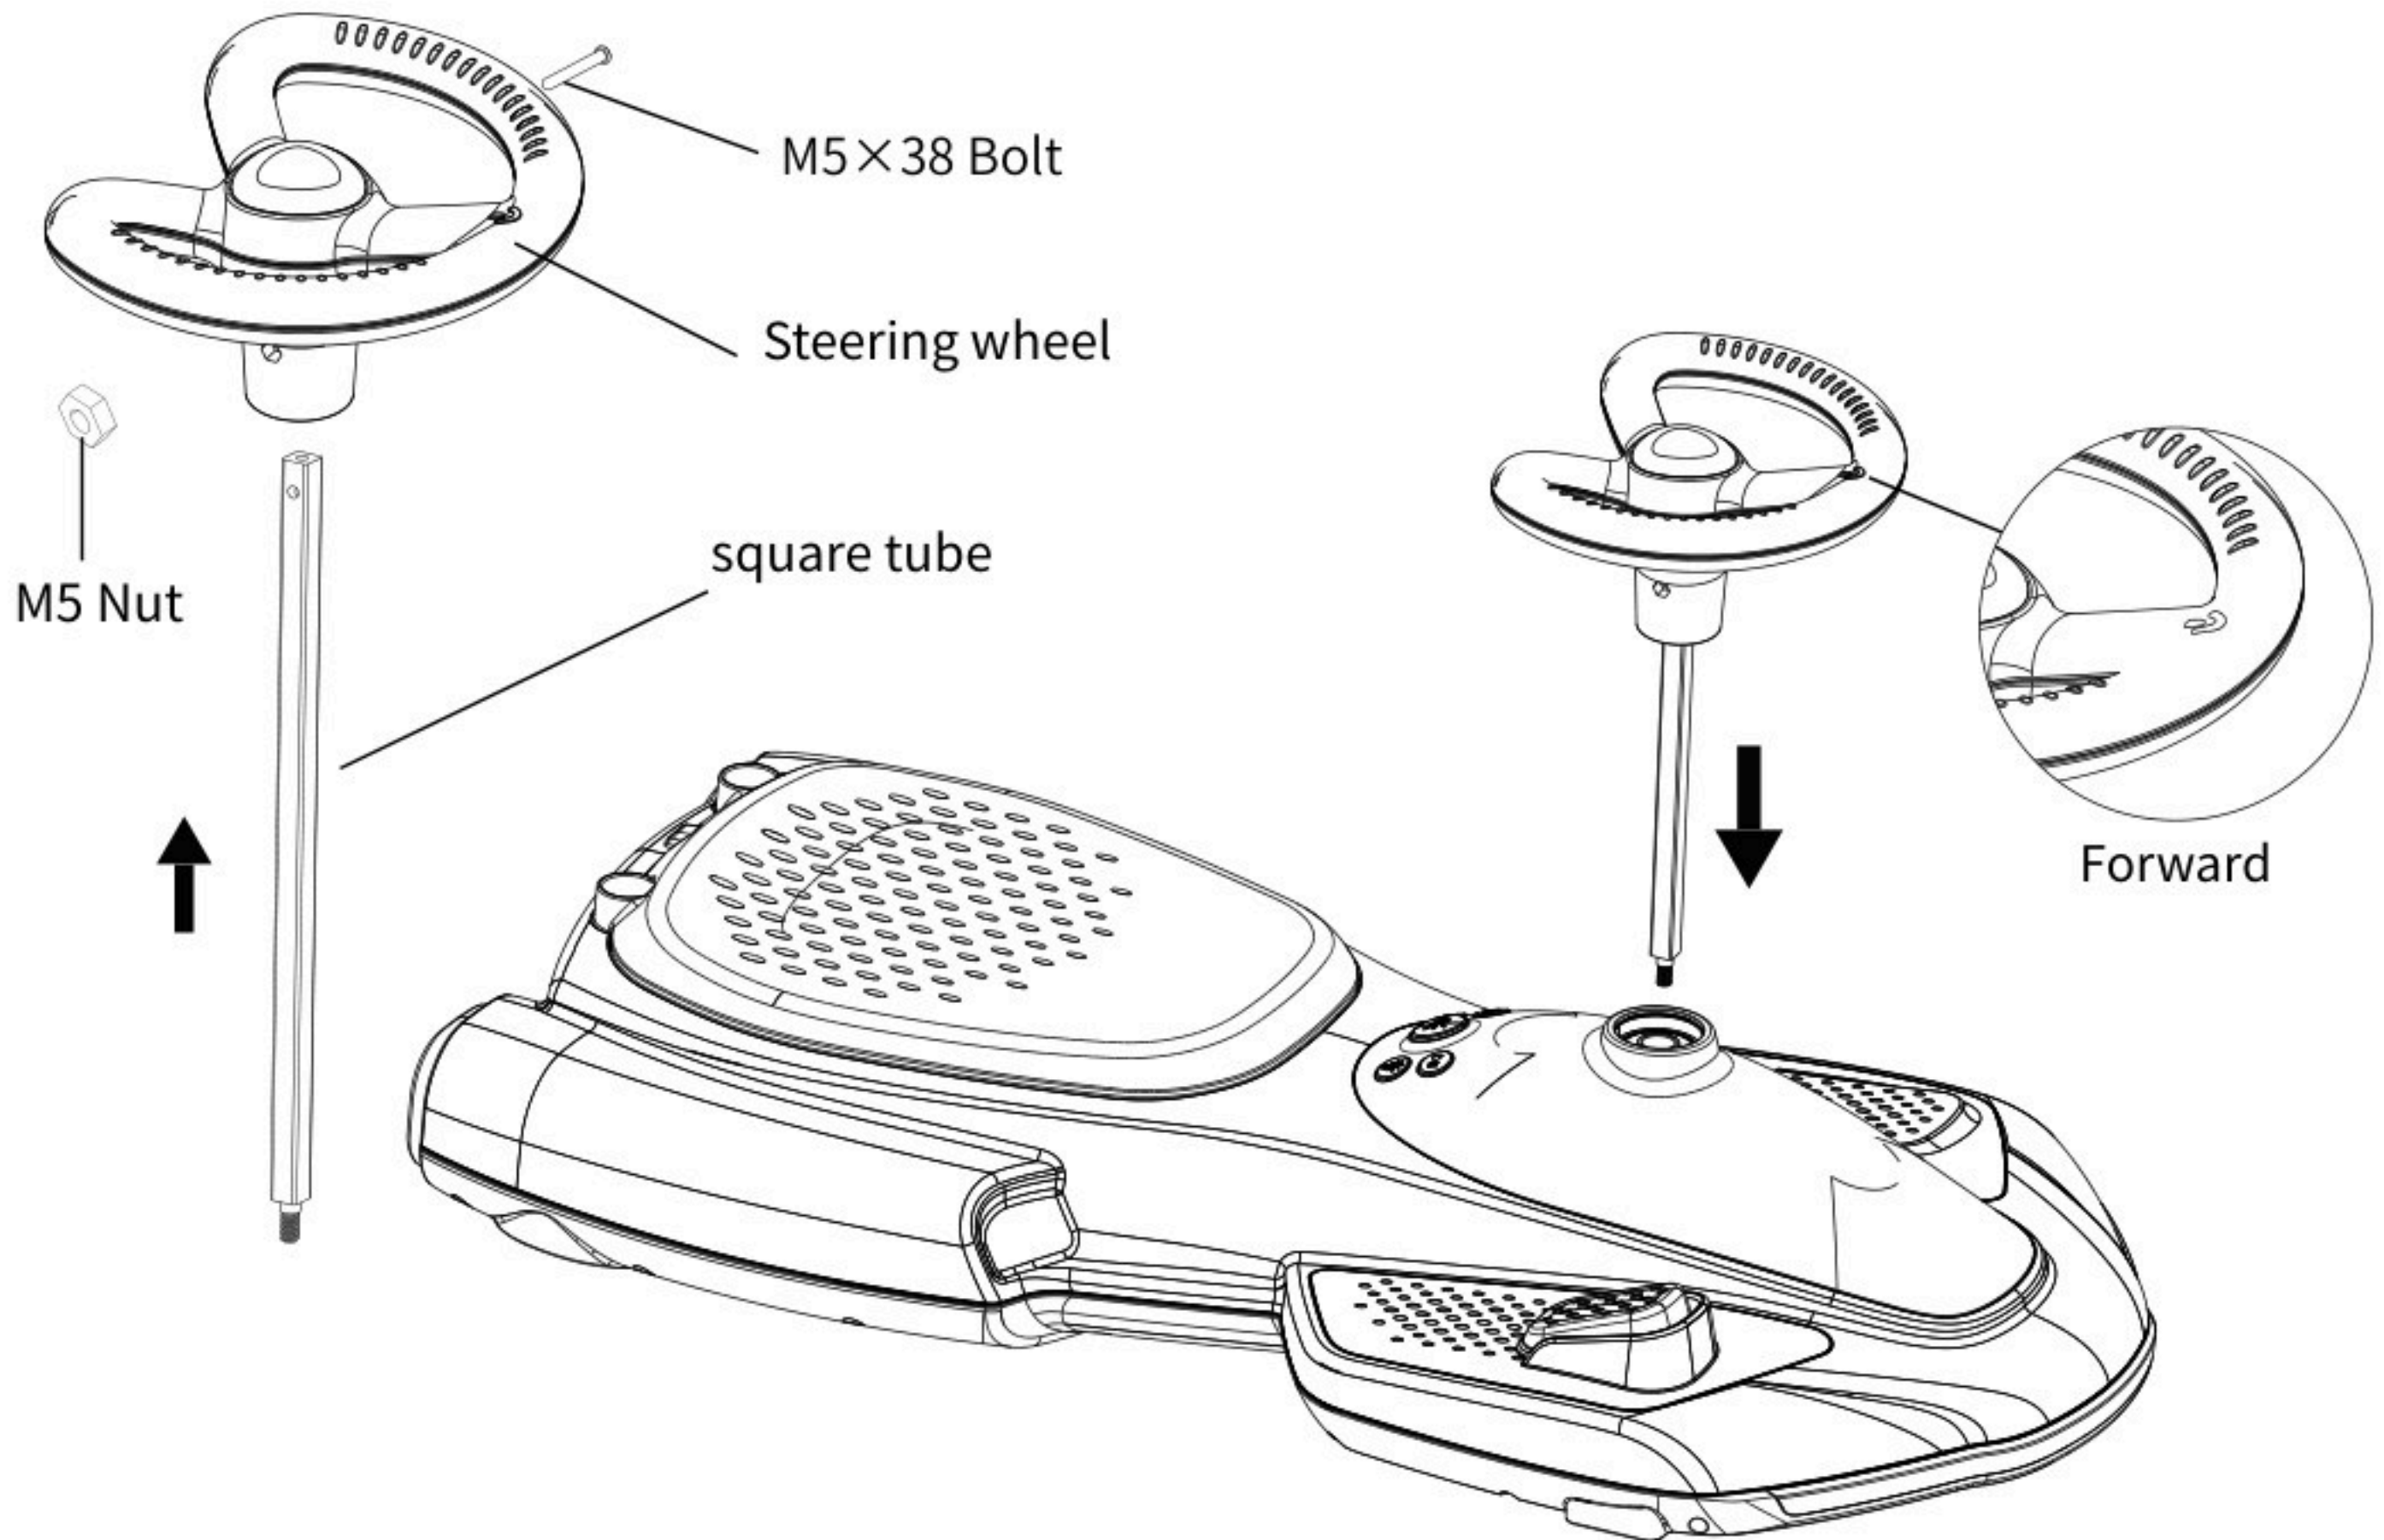


Install the square tube and steering wheel.

1. Remove the bolt and nut from the square tube.
2. Insert the square tube into the steering wheel and align it with the holes.
3. Insert the bolt through the holes and fasten the nut.
4. Insert the fully assembled steering wheel and square tube into the vehicle body.

Note: The side of the steering wheel with the arrow should face forward.

Assembly Steps

2. Install the bogie.

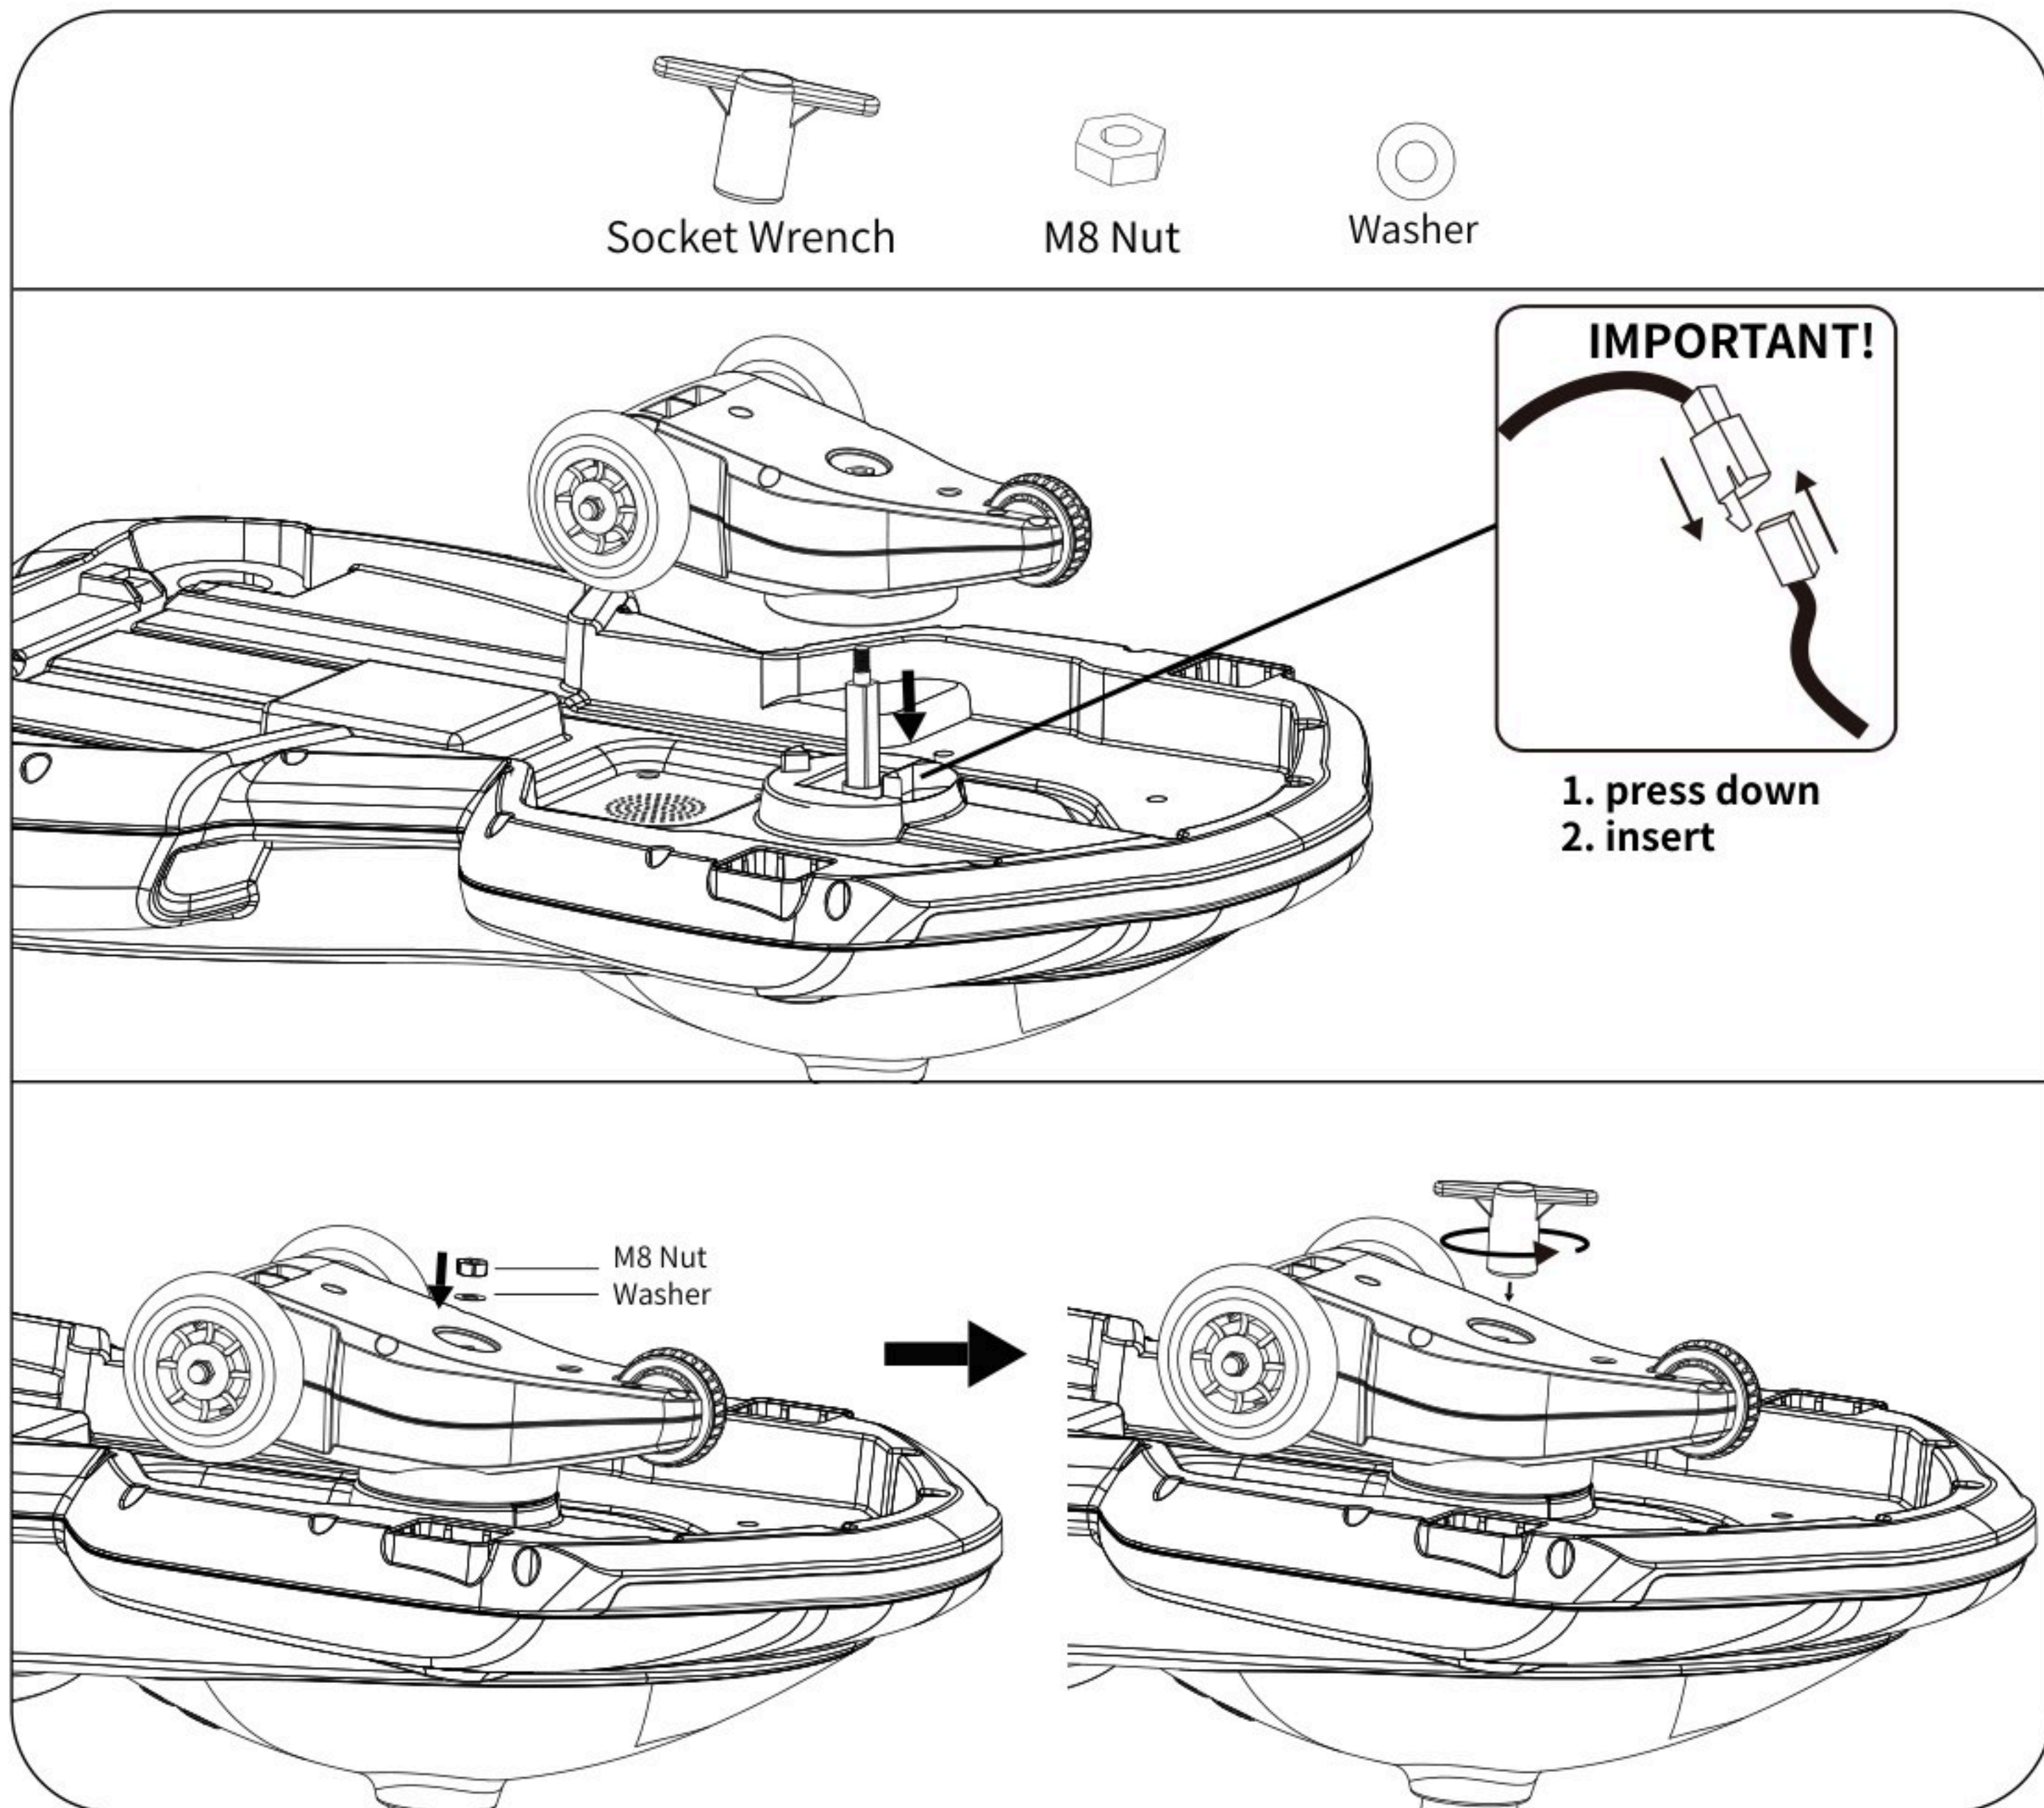


Install the bogie

1. Remove the washer and M8 nut from the end of the square tube.
2. Insert the end of the square tube into the bogie.
3. Press the clips on the bogie inward, align them with the corresponding clips on the body, and push in until they fully snap into place. Then tuck the clips into the body interior.
4. Install the washer and M8 nut in sequence onto the bottom of the bogie.
5. Use the supplied socket wrench to tighten the nut, ensuring the bogie is securely fastened.

Assembly Steps

3. Assembly of the Front and Rear Wheels

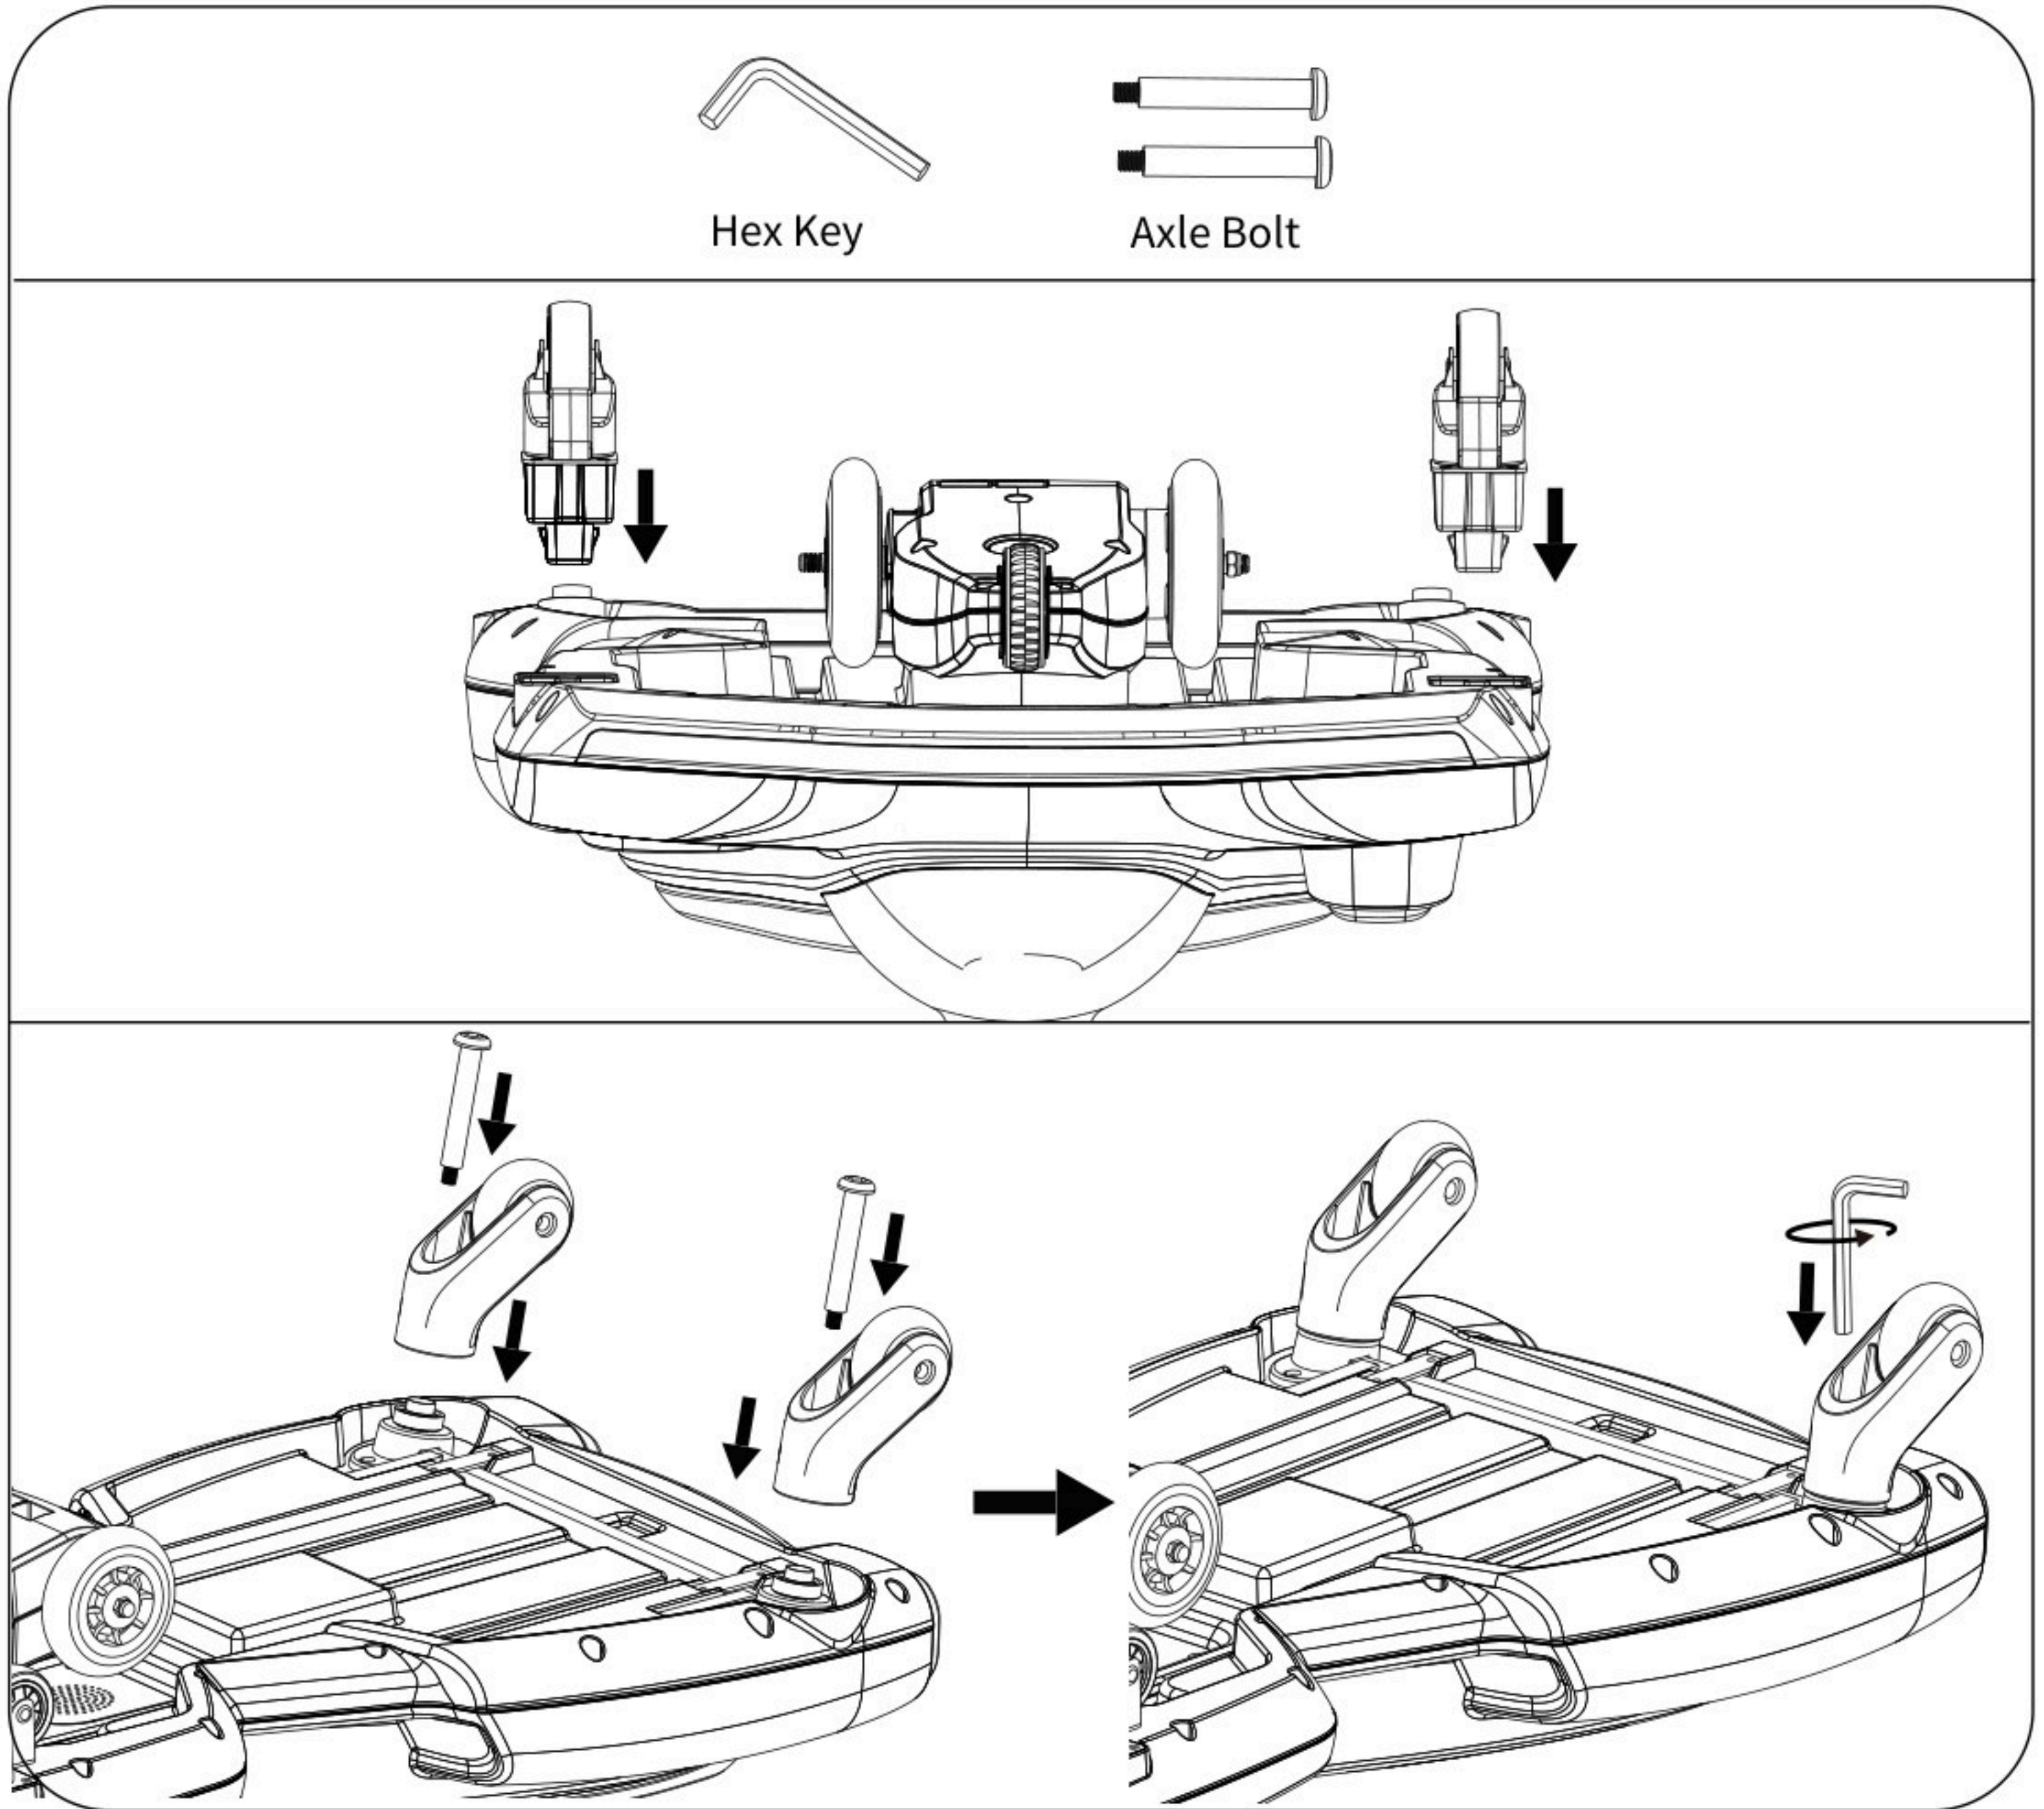


Assembly of the Front and Rear Wheels

1. Align the front wheel with the slots on both sides of the front frame, then press down firmly until it clicks into place and is securely fixed.
2. Align the rear wheel with the mounting holes at the rear of the frame, insert the axle bolt through the holes, and then tighten the rear wheel securely with the L-shaped hex key.

Assembly Steps

4. Install the seat and swing.

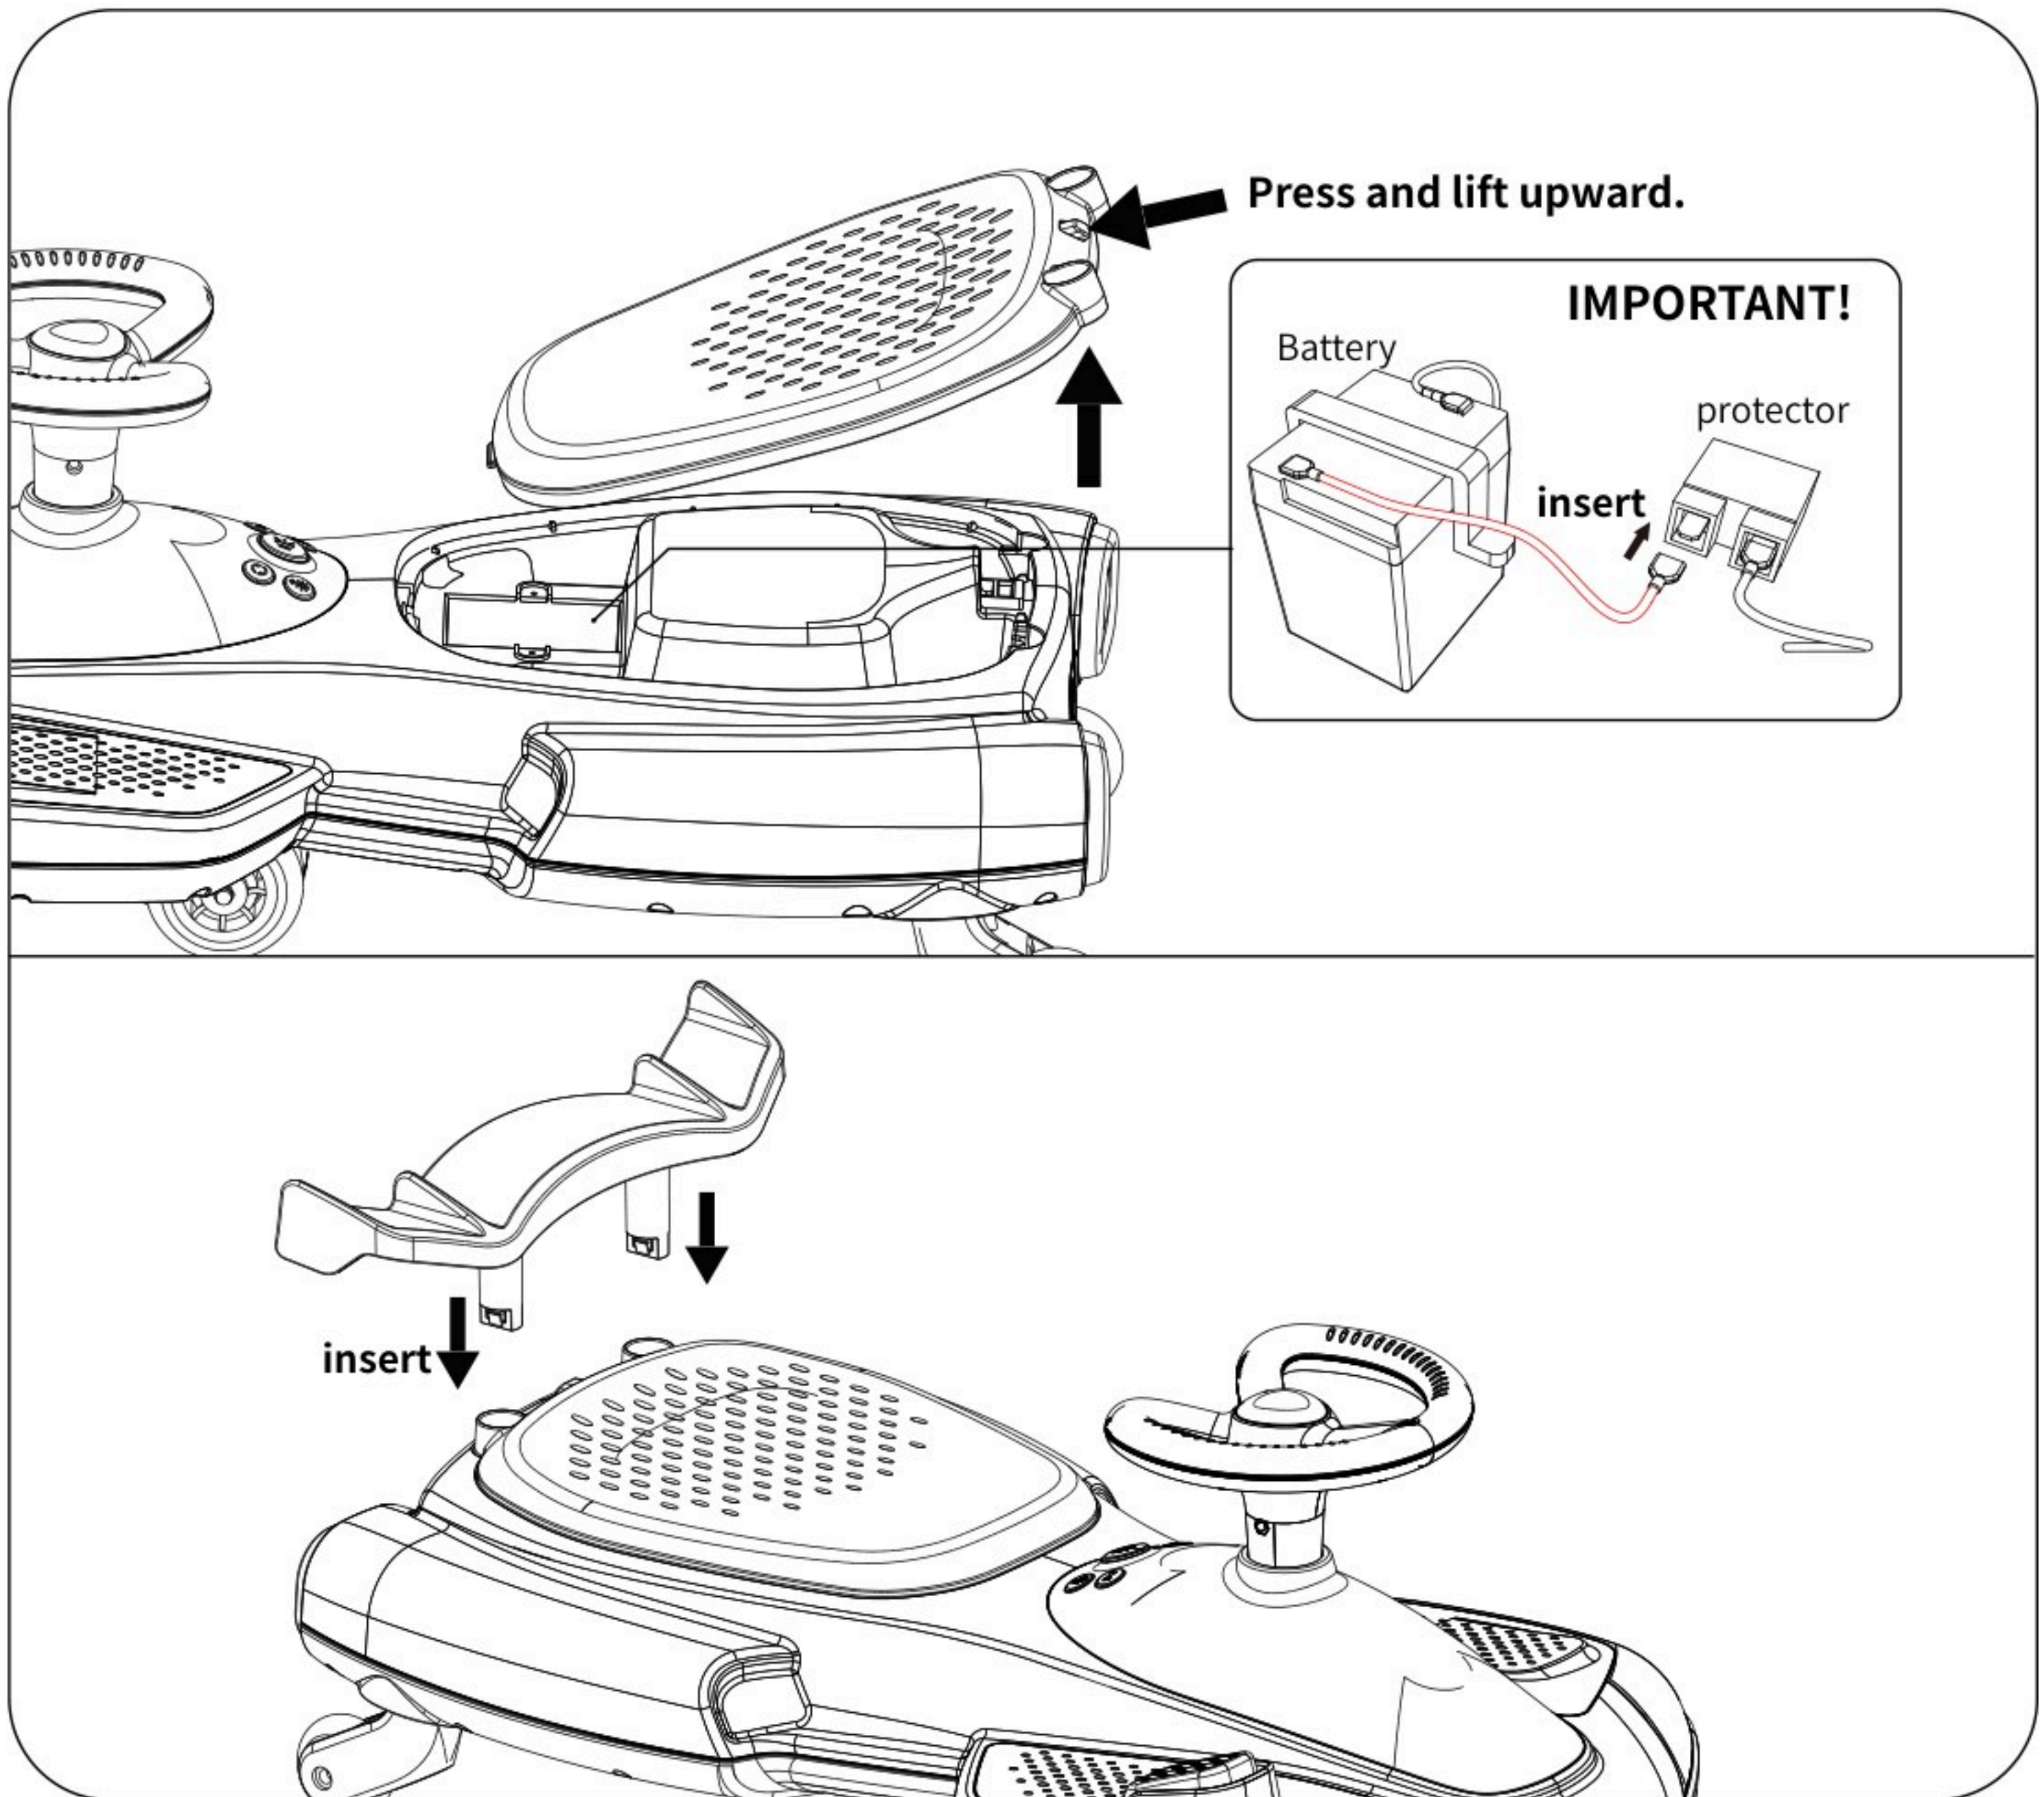

Install the internal battery wiring


1. Press the button at the rear of the seat to open the seat.
2. Insert the red wire firmly into this vacant position to complete the circuit connection.

Install the swing

1. Align the rear spoiler with the mounting holes on the vehicle's rear seat, insert it, and press firmly until it is fully locked in place.

How To Operate Your Vehicle

Use Manual(Ensure the power switch has been turned on)

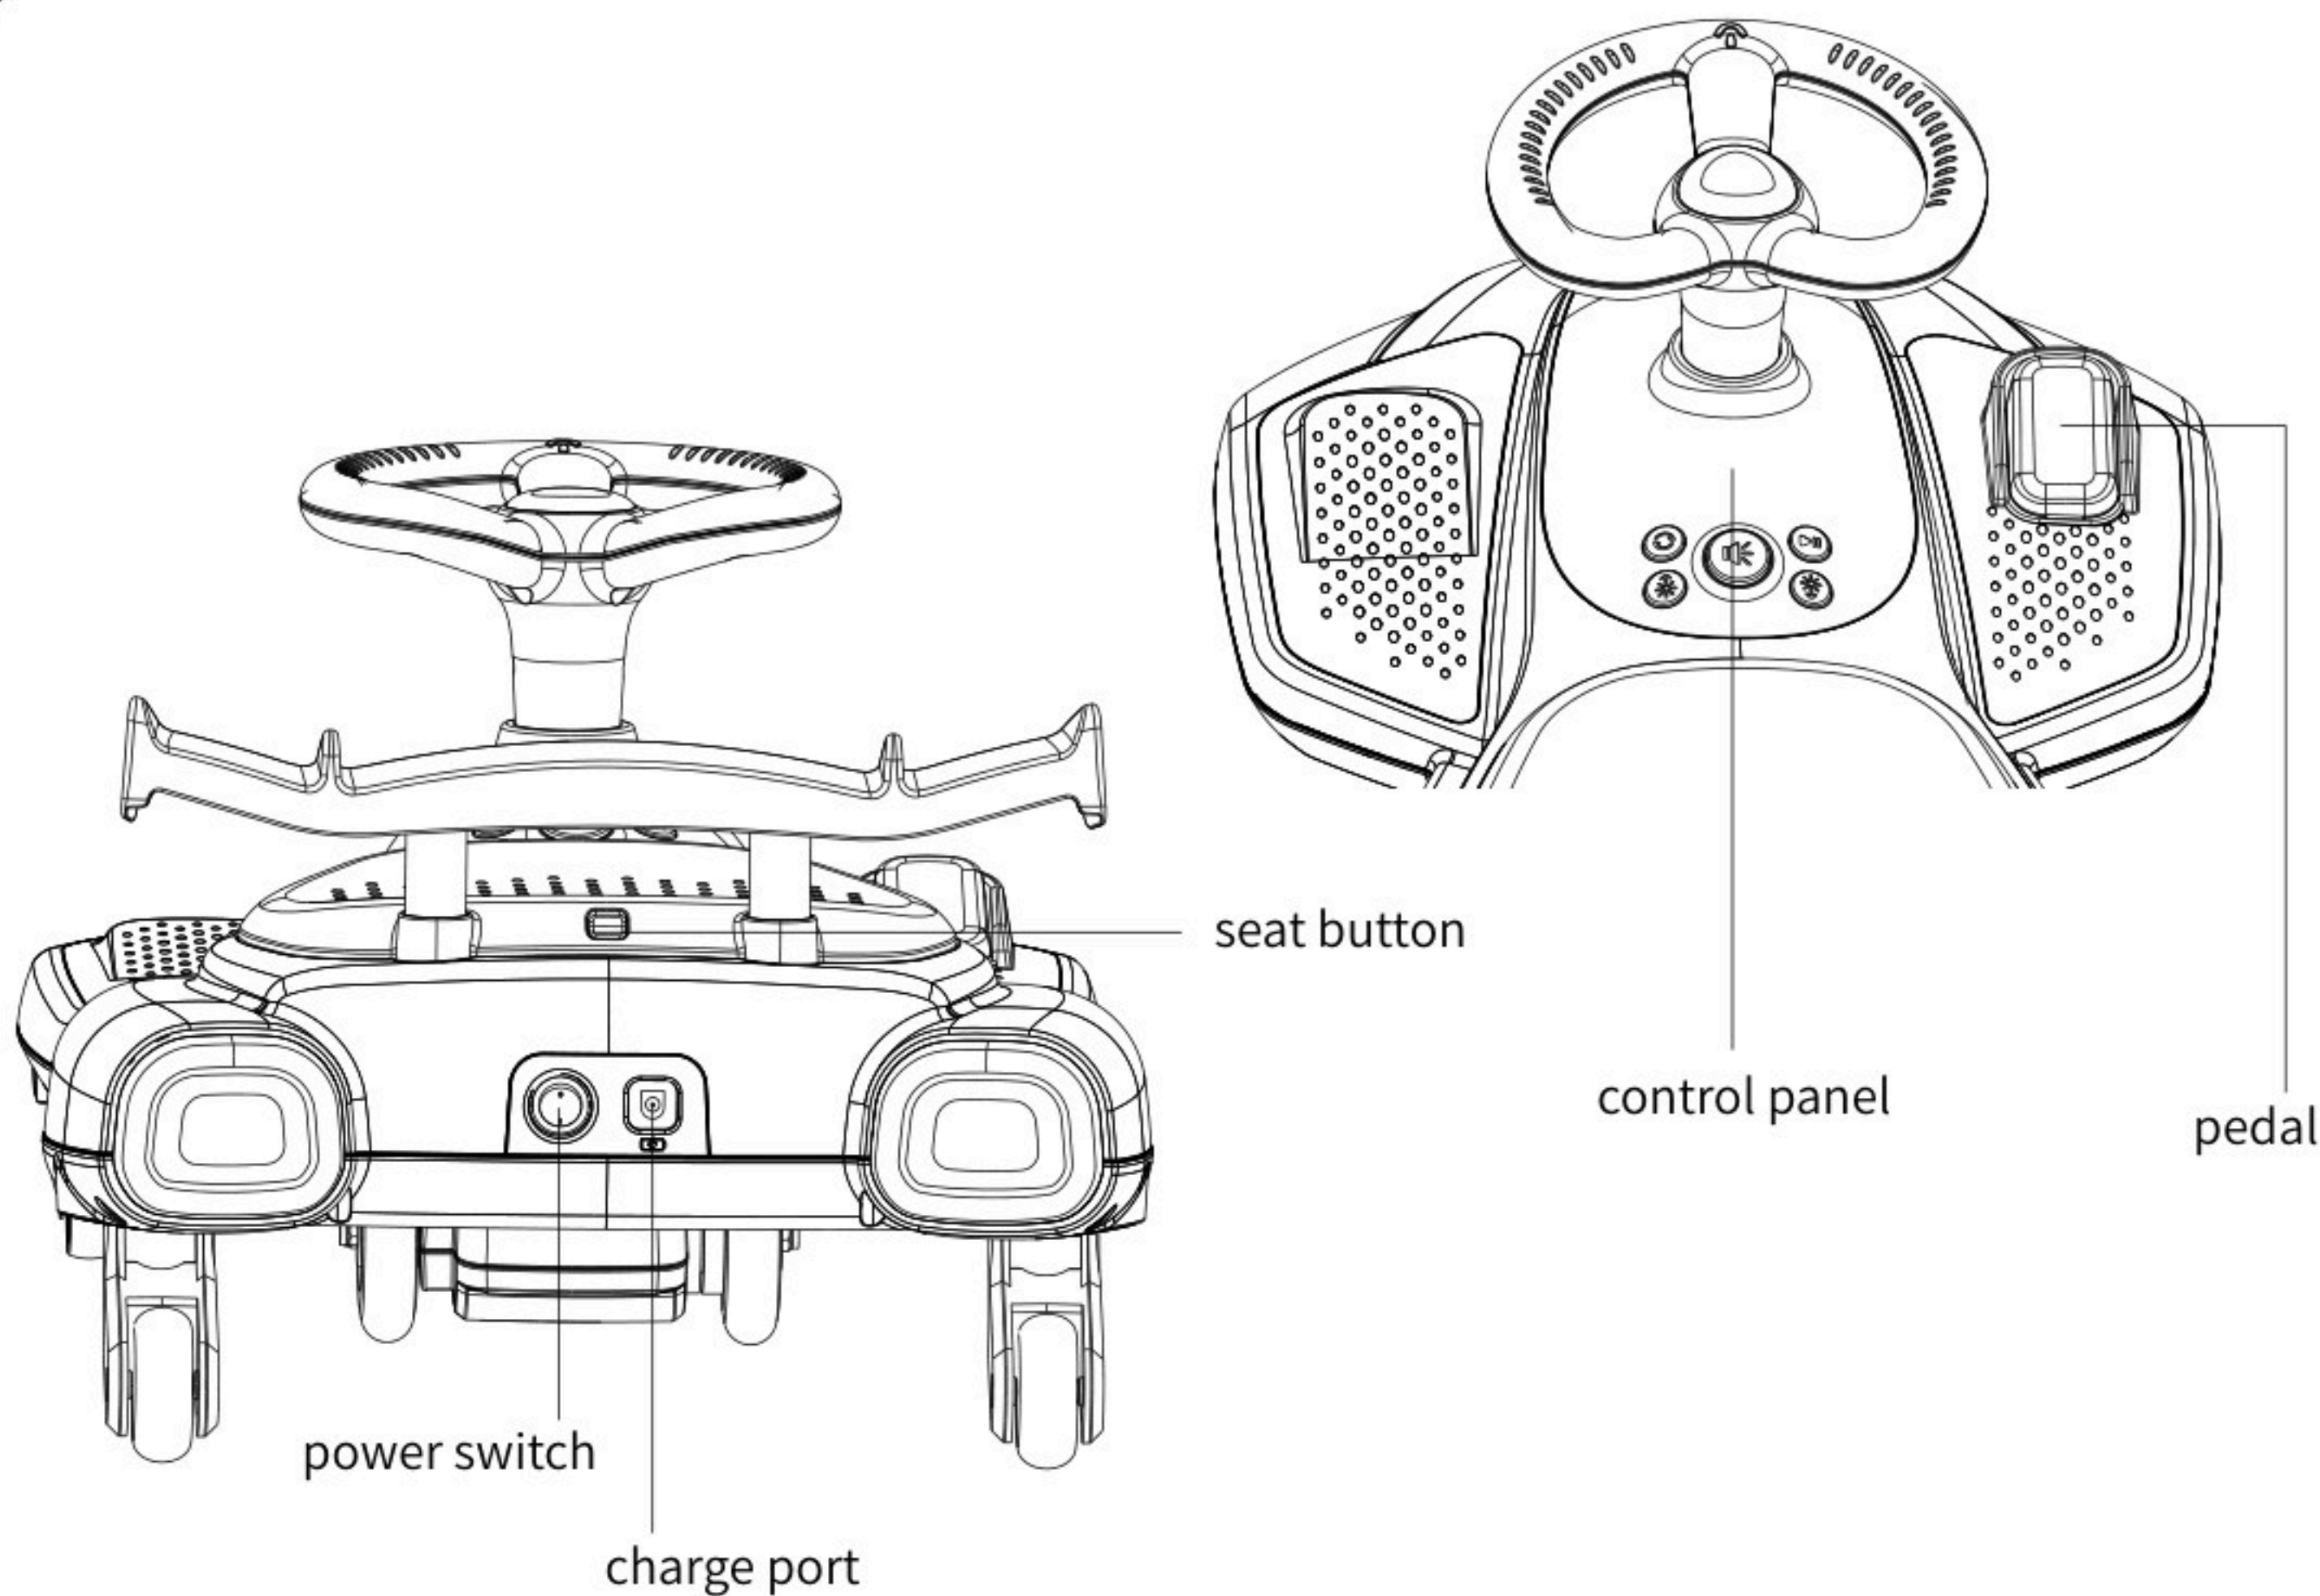

1. Turn on the power switch.

2. Forward

Hold the steering wheel in the forward direction. Press the pedal switch. The vehicle will drive forward.

3. Stop

Release the pedal, then the motor will stop engaging. The vehicle will stop gradually.


IMPORTANT!

Always stop the vehicle first before changing the direction to avoid rollover and damage to the gear box and motor.

Not recommended to ride on carpet, grass, gravel and other 'rough' surfaces, which will diminish the toy's ability to propel forward.

How To Operate Your Vehicle

Instruction of Control Panel

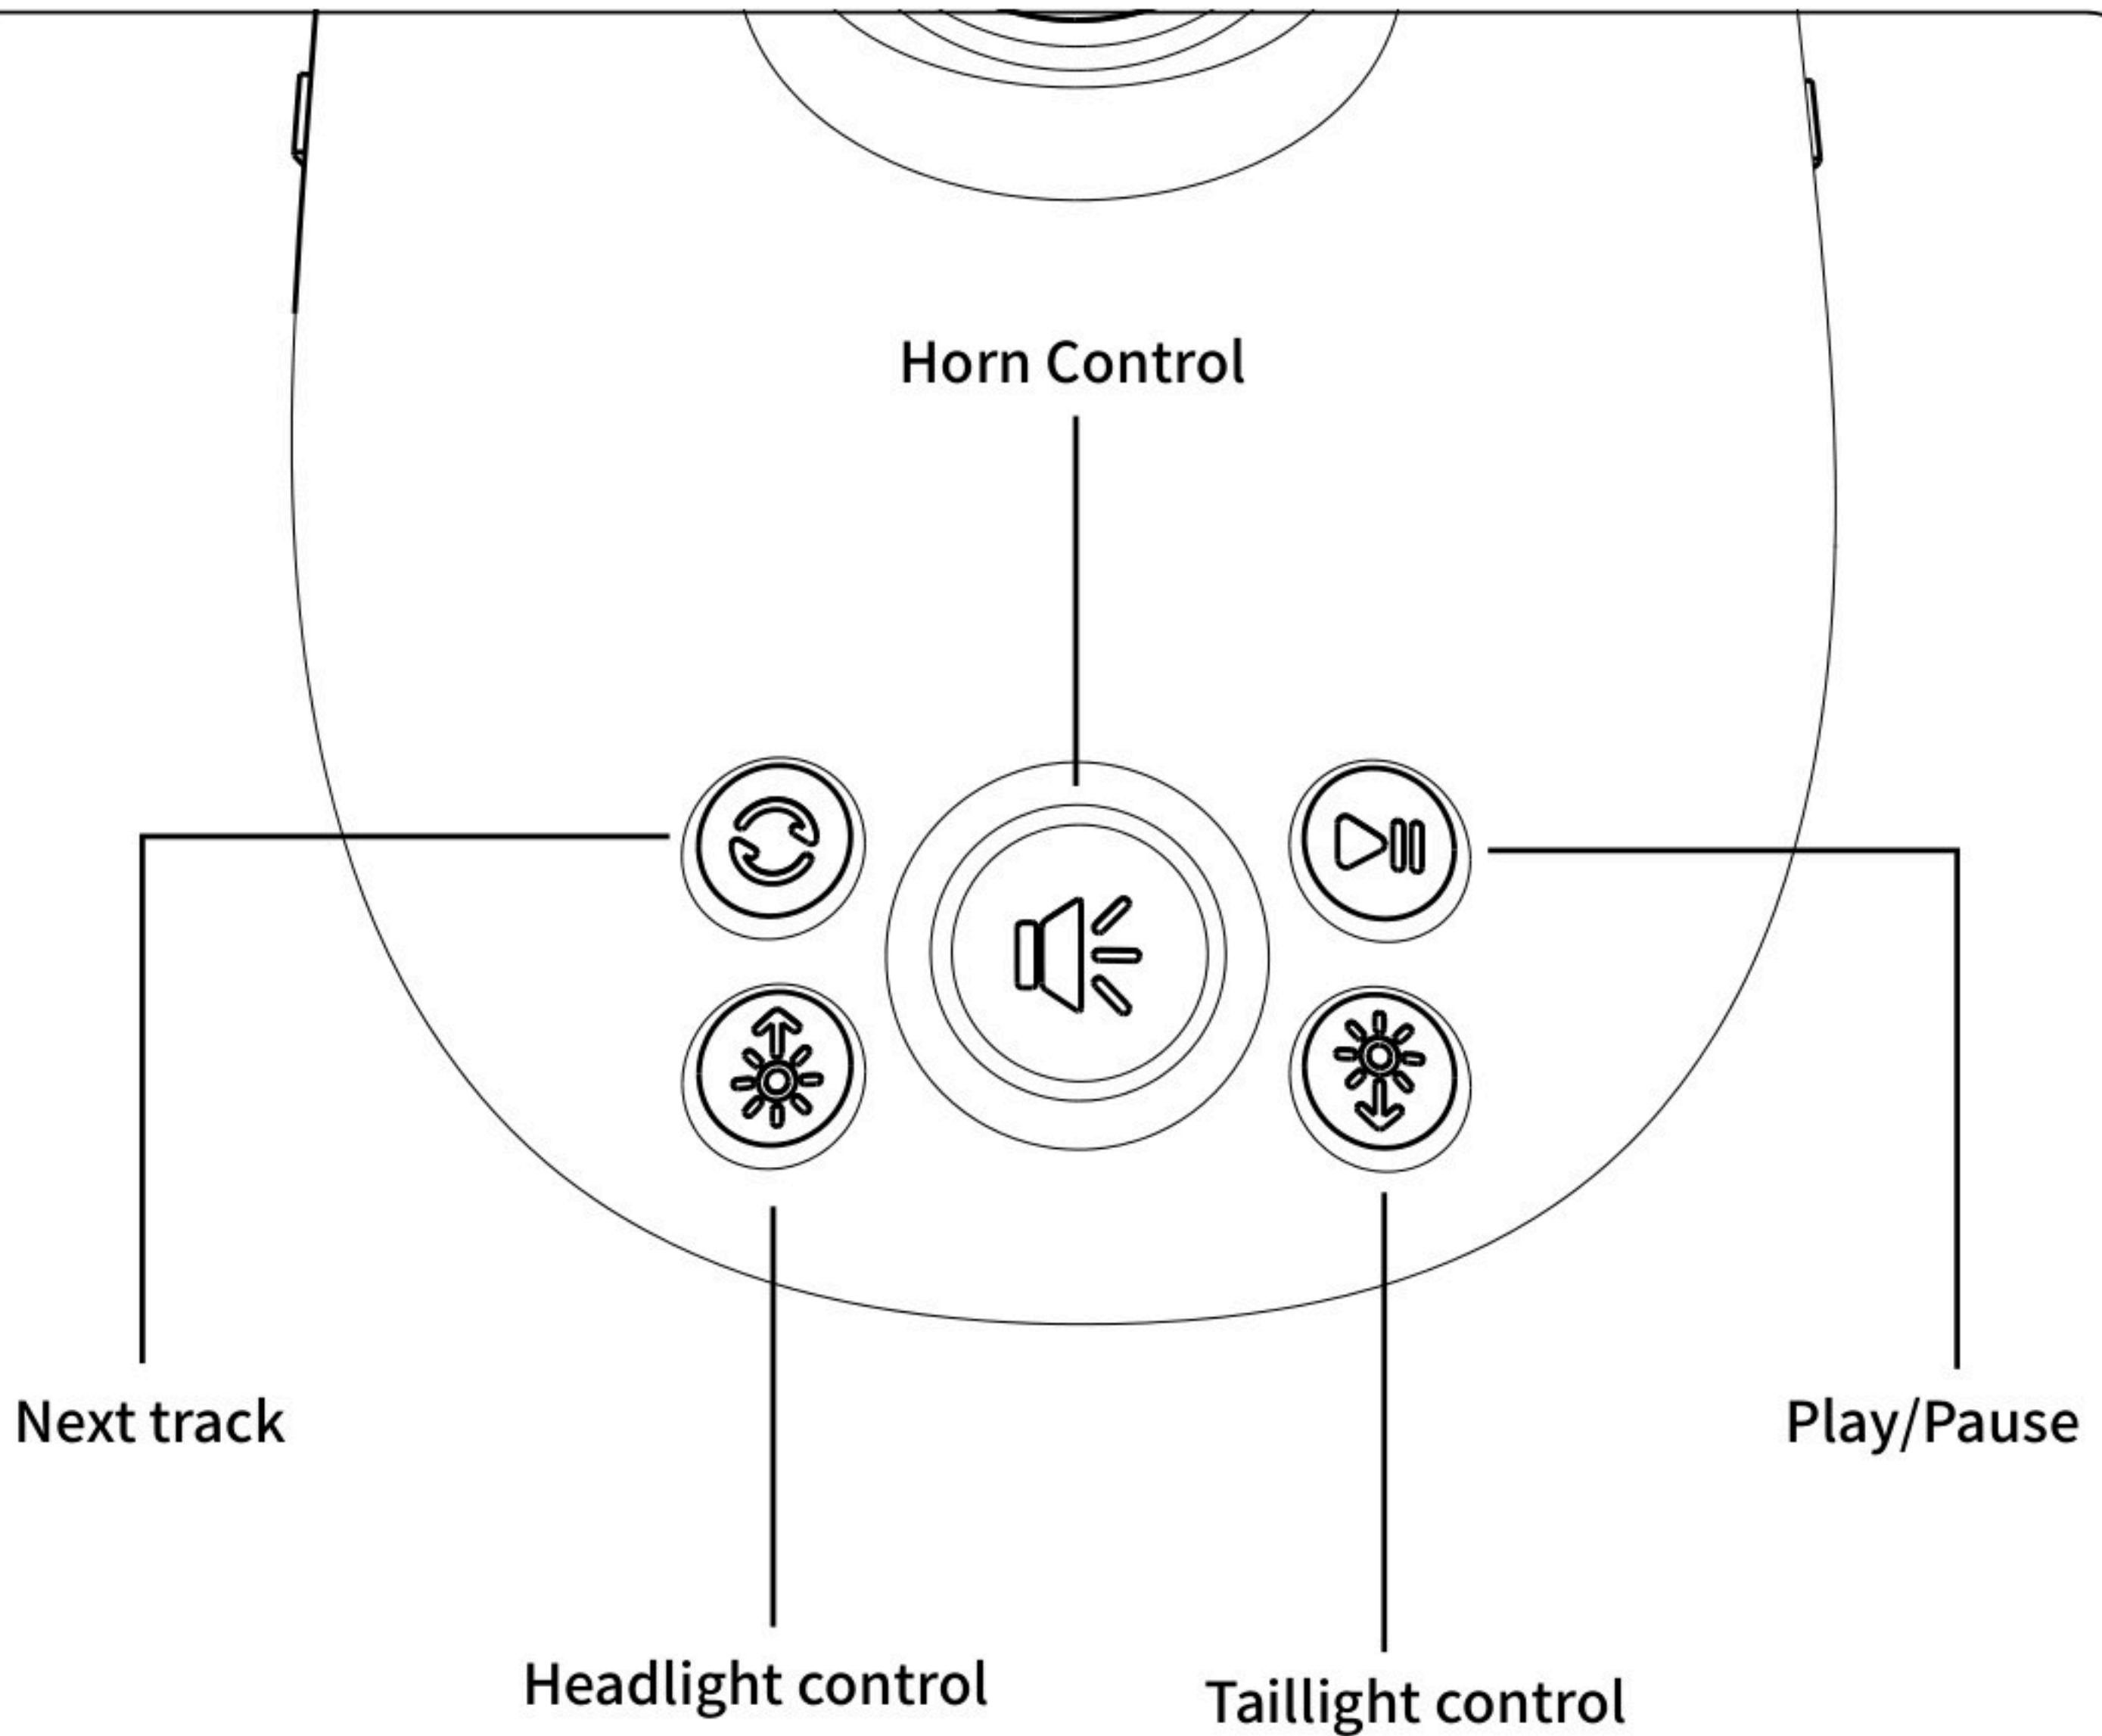

Note:

1. Press the Next track button to switch to the next song.
2. Press the Horn button, and the car will emit a beeping sound.
3. Press the Play/Pause button to play or pause the music.
4. Press the Headlight Control Button to change the color of the headlights.
5. Press the Taillight Control Button to change the color of the taillights.

How To Operate Your Vehicle

Bluetooth Function Operation

Turn on the power switch located in the back of the wiggle car, then enable Bluetooth on your mobile phone. Search for the '**KL2606**' device and connect to it. Once successfully connected, you can play music through your mobile phone.

Additional Operating Instructions


1. If the device has no operation for 20 minutes, it will automatically enter sleep mode.

Note: The vehicle will not enter sleep mode if music keeps playing.

2. If you continue to step on the pedal but the vehicle is unable to move forward due to obstruction, the system will automatically cut off the power. After about 40 seconds, the power will automatically recover, and the device can be used normally.

Charging Your Vehicle

1. The charging input socket is in the back of the car.
2. The **POWER SWITCH** must be turned in **OFF** position when charging.
3. **Before the first use, first use, please fully charged. Do not recharge the battery for more than 10 hours to avoid overheating the charger.**
4. After each use or at least once a month when not in use, recharge the battery one time.

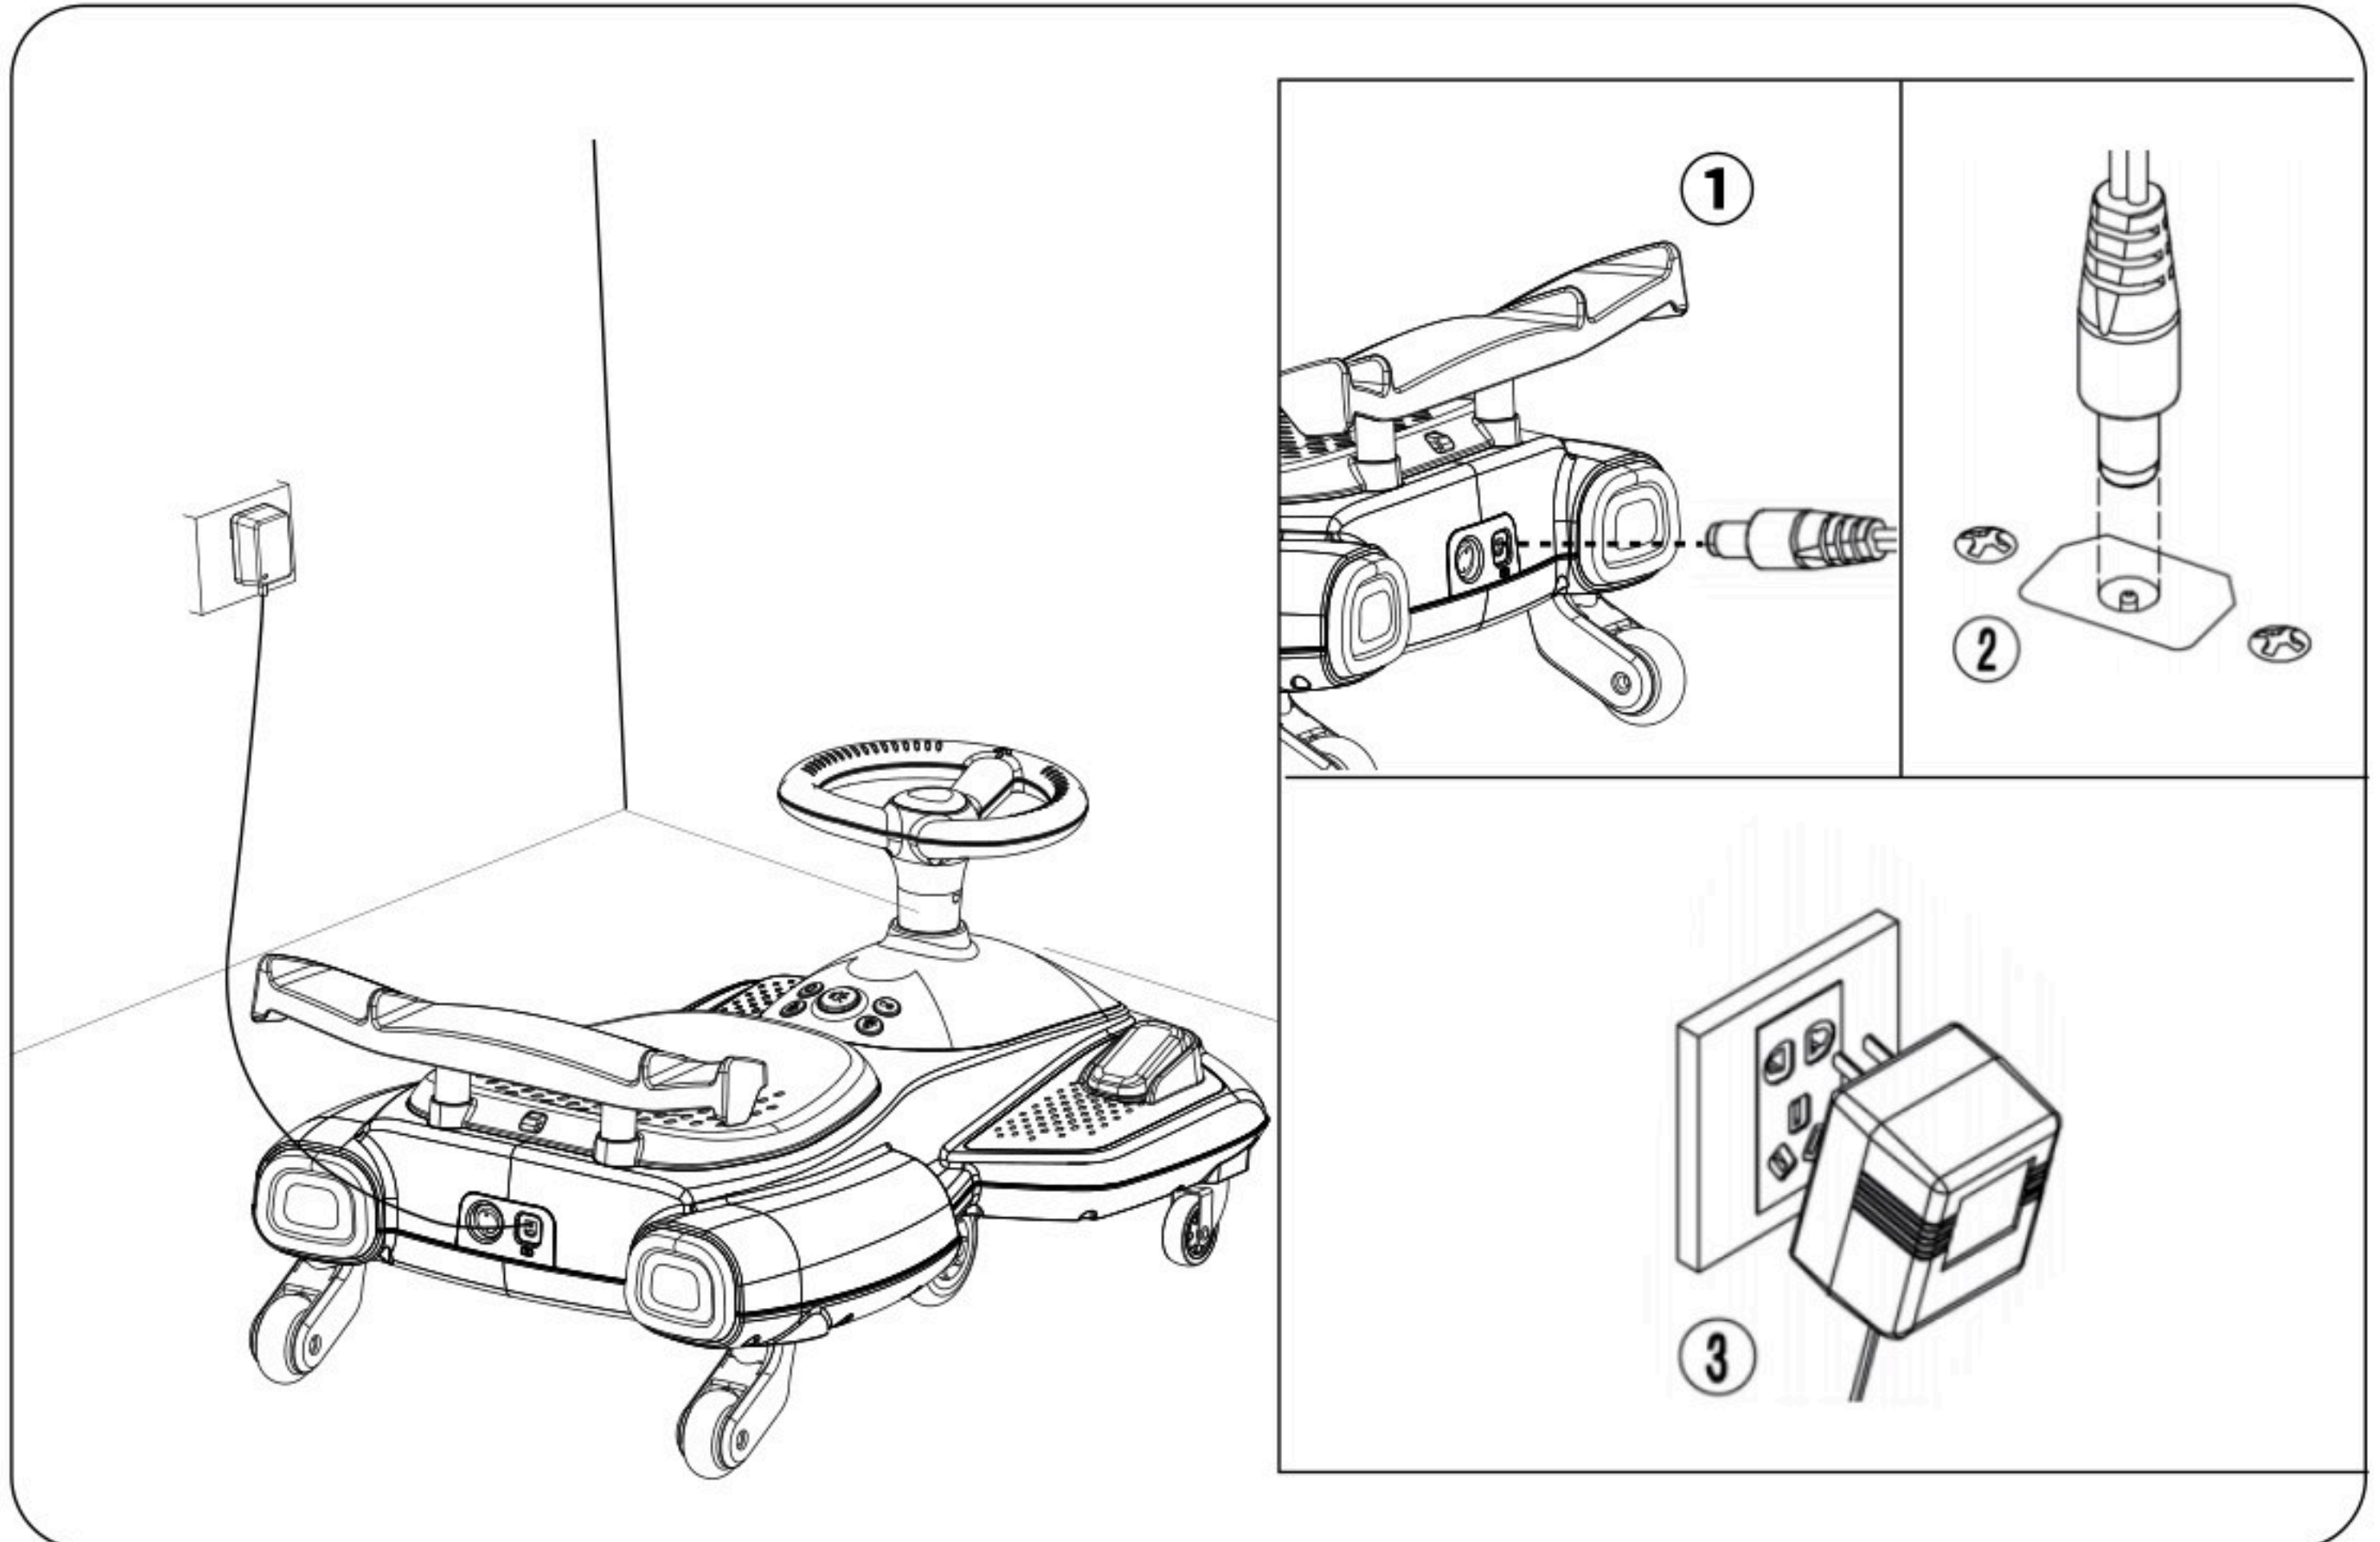

1. Find the charging input socket in the back of the car.
2. Turn off the power switch, then plug the charger port into the input socket.
3. Plug the charger plug into the wall outlet. The indicator light on the charger will turn red and the battery will begin to recharge. When fully charged, the indicator will turn green.

Note: When only the charger is plugged into the wall outlet without being connected to the wiggly car, the indicator will show green.

Low Battery Reminder

1. Voice Broadcast: When the battery is low, the device will automatically trigger a voice broadcast: **Low battery. Please charge now.**
2. LED Light Strip: When the battery is low, the LED light strip will automatically turn into a red breathing light.


Note: After charging the device, the low battery reminder will be automatically canceled, the voice prompt will stop, and the red breathing light will go out.

WARNING!

PREVENT FIRE AND ELECTRIC SHOCK:

1. Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
2. Do not use the battery or charger for any other product. Overheating, fire or explosion could occur.
3. NEVER modify the electric circuit system. Tampering with the electric system may cause a shock, fire or explosion or may permanently damage the system.
4. Do not allow direct contact between battery terminals. Fire or explosion can occur.
5. Do not allow any type of liquid on the battery or its components.
6. Do not charge near heat or flammable materials. Charge the battery in a well-ventilated area ONLY.
7. Charge the battery in a dry area ONLY.
8. Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
9. Do not open the charger. Exposed wiring and circuitry inside case may cause electric shock.
10. Only adults may handle or charge the battery. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
11. Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
12. Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
13. Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
14. Do not charge battery upside down.
15. Always secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.
16. A recommendation for adult supervision of young children.
17. The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

Drive Battery Replacement

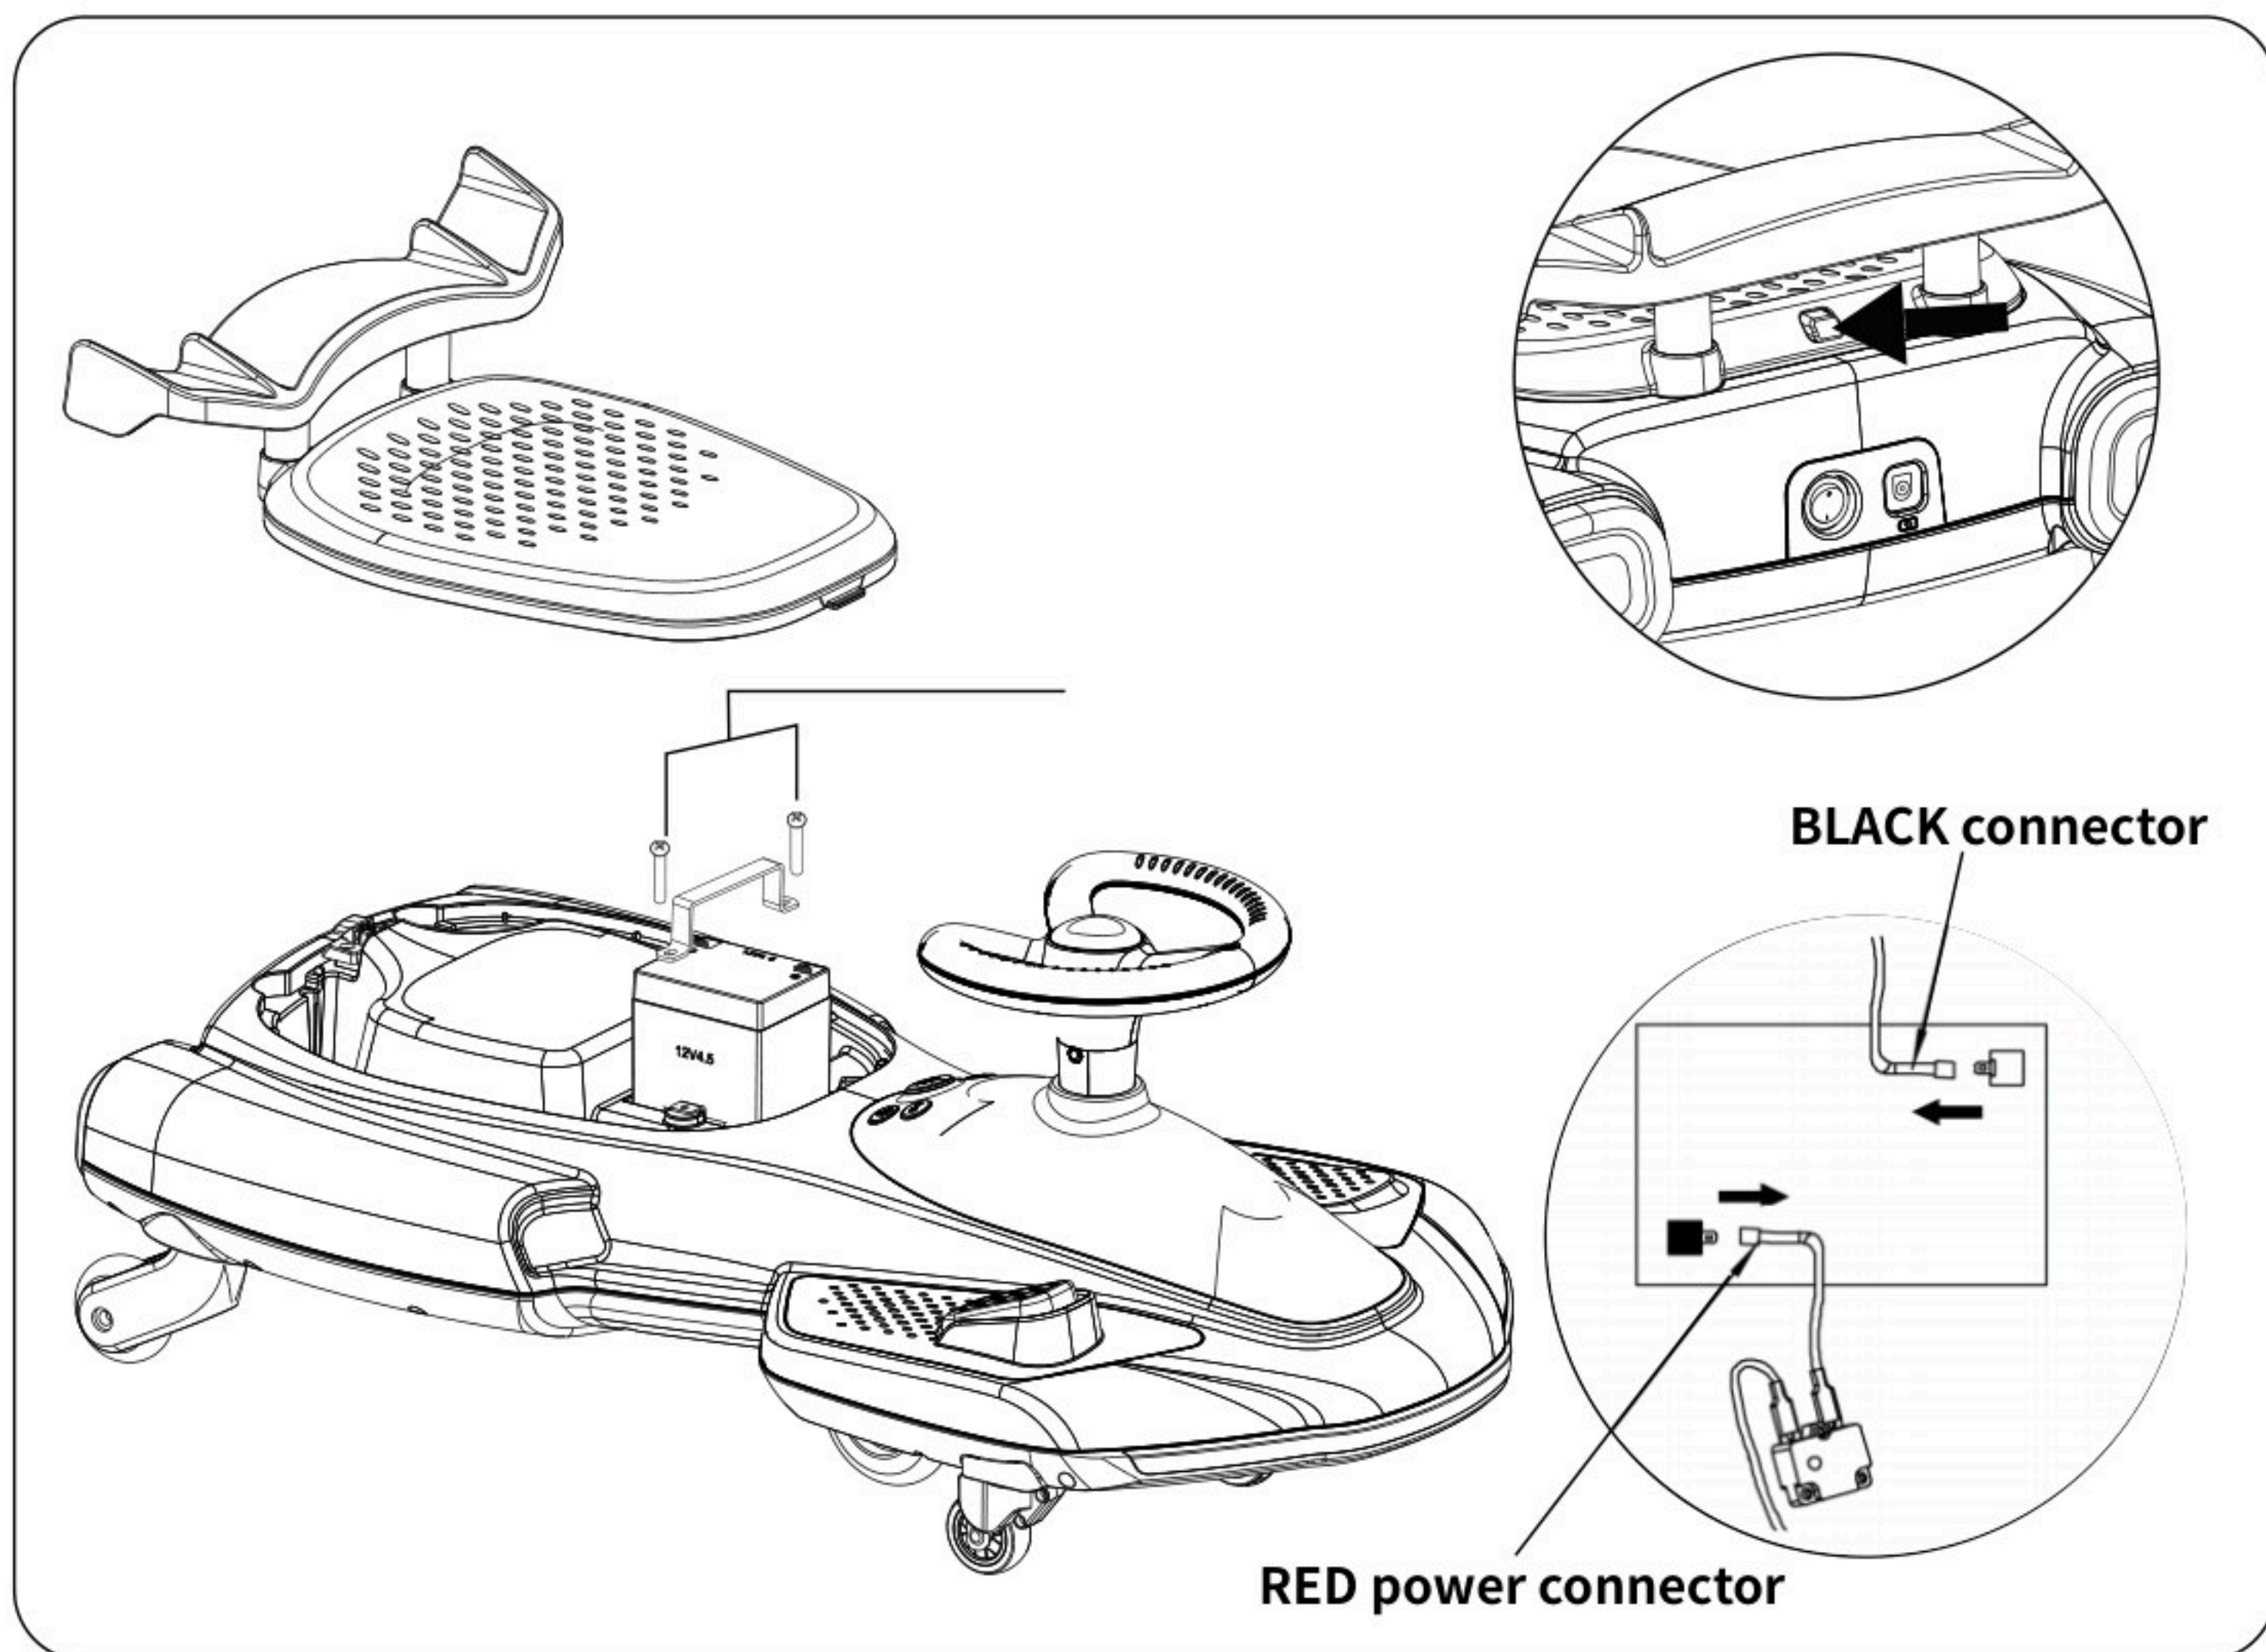

1. As shown in the picture, press the button at the rear of the seat to open it.
2. Remove Battery hold-down bracket and screws.
3. Un-plug RED power connector.
4. Carefully unplug BLACK connector.

CAREFULLY LIFT OUT THE BATTERY:

1. Depending on the condition of the battery (i.e.: leakage) you may want to wear protective rubber gloves before removal.
2. Do not lift the battery by its connectors or cables.
3. Place the dead battery in a plastic bag and dispose of according to local regulations.
4. Install replacement battery in same position as original.

INSTALL NEW BATTERY:

1. Reconnect the BLACK Connector.
2. Reconnect RED Power Connector.
3. Install Battery hold-down bracket and screws.

WARNING: Ensure no wires are pinched or bound up.

4. Place the seat in the corresponding position and press firmly to secure it.

Troubleshooting Guide

Type of fault	Type of Analysis of causes	Solutions
The car can't move.	-The battery is below normal level -Safety protection of line -The screw on the wheels has fallen off -The battery connector has fallen off -The battery is damaged -The electrical equipments damaged -The motor is damaged	-Charge the battery -Wait for a moment -Tight the screw again -Come on again -Change the battery -Bring it to repair -Contact the seller
The battery can't be charged.	-Battery connector has fallen off -Battery charger is powered off -Battery charger is damaged	-Plug into again -Plug into again -Change the battery charger
Running distance per charge is short.	-Battery is not full -Battery is old	-Charge the battery again -Change the battery
There is noise and heat when charging the battery.	Chemical reaction	It is normal.
The speed is low.	-Battery is old -Battery is out of power -Overweight -Driving on uneven road	-Change the battery -Charge the battery again -Lighten the weight to less than 30KG. Step on the pedal for 6-8 seconds to reach the maximum speed -Drive on flat road
NOTE: If you can't solve the problem, please feel free to contact us.		

Maintaining Your Vehicle

1. It is parents' responsibility to check main parts of the toy before using. Must regularly examine for potential hazard, such as the battery, charger, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
2. Make sure the plastic parts of the vehicle are not cracked or broken.
3. Occasionally use a lightweight oil to lubricate moving parts such as wheels.
4. Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
5. Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
6. Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle is not being used.
7. Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
8. Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
9. Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
10. When not in use, all the electrical source should be turned off. Turn off the power switch and disconnect the battery connection.

Disposal Of Battery

Disposal of Battery



1. Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
2. Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
3. Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
4. Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries.
5. Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries.



WARNING

**CHOKING HAZARD-Small parts.
Not for children under 3 years.**



FC



Made in China

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.