

Manual



Model: TypeB M1

The Apple Find My network provides an easy, secure way to locate item using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

To use the Apple Find My app to locate item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Open or download the free Find My app or Google's Find Hub app from the App Store or on Google Play.

For iOS

1. Press and hold the button for 5 seconds.
2. Open the Find My App.
3. Tap Add item.
4. Tap Other Supported item.
5. MiniTag will appear. Tap Connect.
6. You are now connected.

To Disconnect the Device:

1. Open the app and select the item.
2. Scroll to the bottom of the screen.
3. Tap Remove Item and then tap Remove to confirm.

For Android™ device

1. Press and hold for 5 seconds.
2. Turn on your Android phone's screen.
3. You will receive a quick pairing notification on your phone prompting you to set up a new device, along with a picture of the device.

4. Follow the on-screen instructions to complete the pairing process.

To Disconnect the Device:

1. Open the app and tap on the item.
2. Tap the settings icon on the right of the item.
3. Tap "Remove from Find Hub" to disconnect.

Confirm Status

1. Double-click the button.
2. If the device emits one beep and the light blinks three times, the device is connected.
3. If the device emits three beeps and no lights blink, the device is not connected.

Factory Reset

1. Press the button 4 times.
2. Wait for the beeps, then immediately press & hold the button for 8 seconds and a short music will sound.

Power off/Disable

Press 5 times, beeps will sound.

Battery Specifications

Replaceable battery capacity: CR2032 3V-220mAh

Google, Android, Google Play, Find Hub and Fast Pair are trademarks of Google LLC.

This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.

Find Hub helps you find and connect to what matters in a single, secure place. Find your lost phone or other important belongings quickly. You can also use Find Hub for seamless location sharing with friends & family for peace of mind.

Pairing with your Android device

1. Make sure that your phone has Bluetooth and Location turned on.
2. Verify that your phone is connected to a Wi-Fi or mobile network.
3. Make sure your phone is within 0.5 meters (1.6 feet) of the device.
4. Navigate to Settings > Google > Devices & Sharing > Devices > check Scan for nearby Device is ON.

Note: If you dismiss the Fast Pair™ pop up twice or frequently pair and unpair a tag, you might trigger the banning logic, which prevents unnecessary Fast Pair pop ups. To resolve this, you can either wait for five minutes for the Fast Pair pop up to be re-enabled or reboot your phone. Some of these steps are applicable only on Android 10 and above.

Regulatory safety Information



WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN

swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.

If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour poison Information centre for fast expert advice.

Rated voltage 3v


Rated current ~15mA

Immediately dispose of used batteries and keep away from children.

Do NOT dispose of batteries in household trash. Even used batteries may cause severe injury or death.

FCC ID:2BXO4-M1

product overview

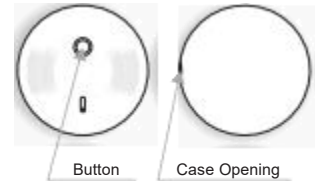

FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.