

9.7 Inch Car Display User Manual

Safety Warning

- Do not operate the device frequently while driving to avoid traffic distraction and safety hazards.
- Install the unit on a flat dashboard, keep away from airbag area and driving sight line.
- Only support DC12V vehicle power input. DO NOT use on 24V trucks, otherwise the unit will be burned out.
- Do not clean the screen with alcohol, corrosive liquid or chemical detergent. Only use soft dry cloth.
- Unauthorized disassembly, modification or water damage will void warranty.

FCC Compliance Warning

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 5 mm between the radiator and your body.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Packing List

- 9.7 Inch Touch Screen Main Unit ×1
- Suction Cup Bracket ×1
- Type-C Power Cable ×1
- AUX Audio Cable ×1
- User Manual ×1
- Rear View Camera (Optional) ×1

Product Specifications

- Screen Size: 9.7 Inch HD IPS Touch Screen
- Resolution: 1024×600
- Input Voltage: DC 12V
- System: Linux Intelligent System
- Bluetooth: 5.0 (Hands-free Call / Music)
- Wireless Function: Wireless CarPlay / Wireless Android Auto
- Audio Output: FM Transmitter / AUX Output
- External Ports: Type-C, TF Card Slot, AUX IN
- Working Temperature: -20℃ ~ +60℃

Installation Steps

1. Remove the protective film from the suction bracket, fix it firmly on a flat dashboard surface and lock the buckle.
2. Adjust the screen angle to ensure clear vision without blocking the windshield.
3. Connect the Type-C power cable to the screen and car cigarette lighter for power supply.
4. Connect AUX cable to original car speaker, or turn on FM transmitter to match car radio frequency for audio output.

5. For rear view camera (optional): connect trigger wire to reverse lamp positive pole, the screen will auto switch to reverse image while reversing.

Operation Instructions

Power On / Off

Auto power on with vehicle ACC power. Long press power button for 3 seconds to manually power on/off.

Wireless CarPlay / Android Auto

1. Turn on mobile phone Bluetooth and Wi-Fi.
2. Click CarPlay / Android Auto icon on home screen.
3. Pair and connect according to phone prompt.
4. Support navigation, hands-free call, music playback and voice assistant display.

Bluetooth Function

After Bluetooth pairing, support hands-free answering/hangingup calls and Bluetooth music streaming.

Media Playback

Support TF card MP3/MP4 video local playback.

System Setting

Adjust brightness, volume, language, time and restore factory settings.

Troubleshooting

- No Power: Reconnect power cable; check cigarette lighter fuse.
- Connection Failed: Delete old Bluetooth/Wi-Fi records and re-pair.
- No Sound: Match correct FM frequency or re-plug AUX cable, increase volume.
- No Reverse Image: Check reverse trigger wire connection.
- Unresponsive Touch: Wipe screen clean and restart the device.

Warranty Terms

- 12 months official warranty from shipment date.

- Warranty does not cover man-made damage, water ingress, disassembly/modification and accessory consumables (cable, bracket, camera).