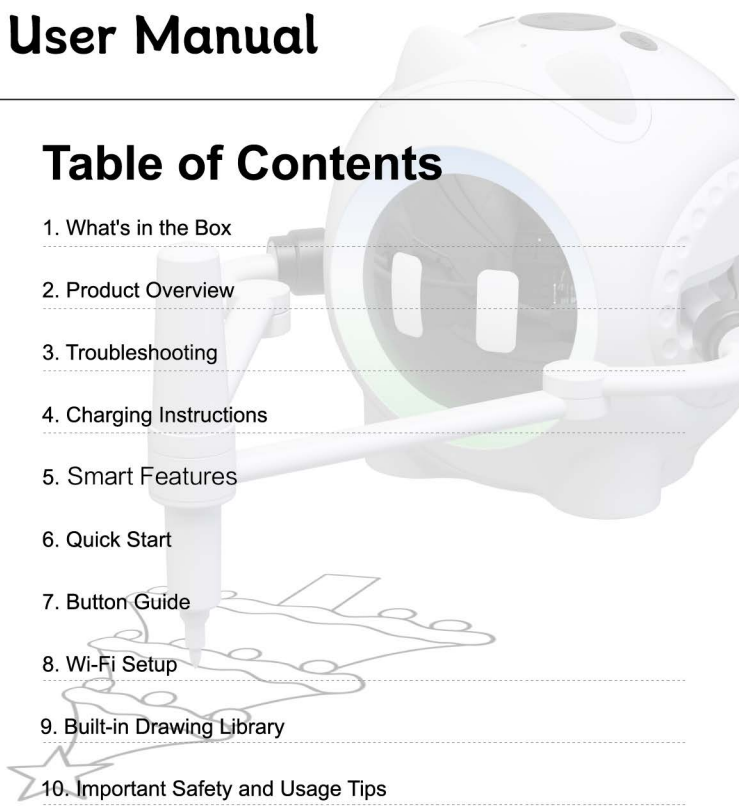 



Kids Magic Drawing Machine User Manual

Table of Contents


- 
1. What's in the Box
 2. Product Overview
 3. Troubleshooting
 4. Charging Instructions
 5. Smart Features
 6. Quick Start
 7. Button Guide
 8. Wi-Fi Setup
 9. Built-in Drawing Library
 10. Important Safety and Usage Tips

What's in the Box

 Your drawing machine comes with the following accessories.

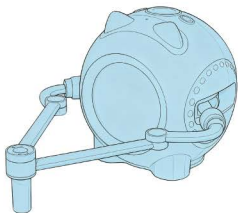


Machine main unit

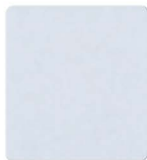 


Erasable drawing surface



Mechanical arm

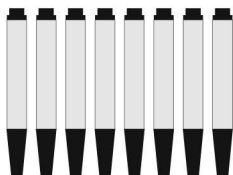

8 pens

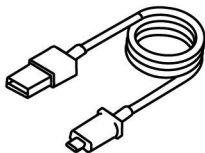

**Type-C
charging cable**



**12 watercolor
pens**

Key Features: Create art automatically, talk with machine, and bring your drawing ideas to life — just speak your imagination.



Product Overview

Feature	Details
Weight	700g
Input	5V/1A
Charging Port	Type-C
Charging Time	Approximately 2 hours
Working Time	Up to 6 hours on a full charge


Troubleshooting

Issue Description	Solution
Poor drawing quality	Check if the mechanical arm is fully attached; reposition or reinsert the pen.
Degraded drawing quality after long use	Restart the device to reset the pen's origin position affected by continuous operation.
Device Not Charging	Verify that the Type-C charging cable is properly connected to both the device and power source.
Power On Failure	Confirm the power connection is secure; try turning on the device.
Smart Features Not Working	Ensure the machine is connected to Wi-Fi.

Charging Instructions

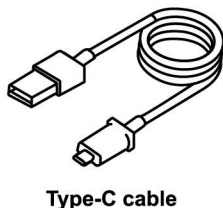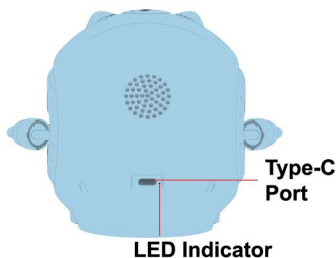

- 1 Use the included Type-C cable to connect the device to a compatible power source.
- 2 **Charging Indicator:** ● Red light = Charging in progress
● Green light = Fully charged
- 3 Disconnect the charging cable once the device is fully charged.

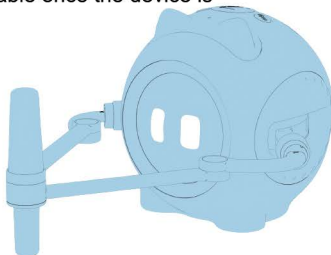


4 Important Safety Notes

- Do not operate the Machine while it is charging.
- Avoid using damaged power cables or power outlets.
- Ensure the device is turned off before starting the charging process.

The machine Features Guide

Note: smart chat and smart drawing functions require a network connection. These features cannot be used offline.

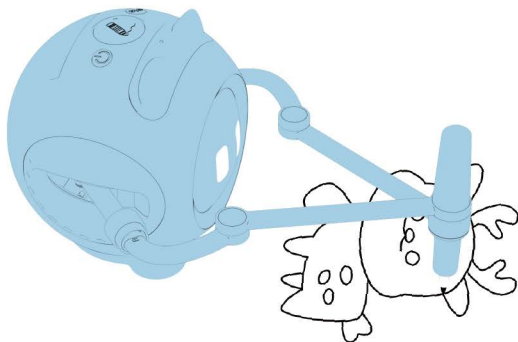

1. Left Button: Press and hold the power button to power on. Press twice quickly to enter Wi-Fi pairing mode.


2. One-Tap Random Drawing: Once connected to Wi-Fi, briefly press the middle button once. The machine will automatically create a unique drawing for you.

3. Voice Drawing (Pro Tip): Press and hold the middle button to talk to the machine. Tell it what you want to draw — the machine will create a custom artwork just for you.

Quick Start


Step 1: Install the Mechanical Arm

- Hold the mechanical arm and align it with the machine body.
- Align the arm and clip onto the machine, then adjust the position up and down with your hands.

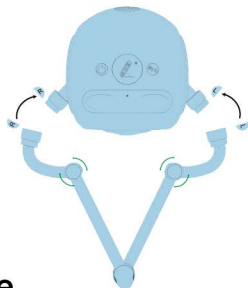


Step 2: Turn on the Machine

- Press and hold the power button to turn on the device.
- Briefly press the power button twice to start Wi-Fi setup. Your machine is ready to use once Wi-Fi is connected!
- The mechanical arm will swing left and right to complete automatic calibration.

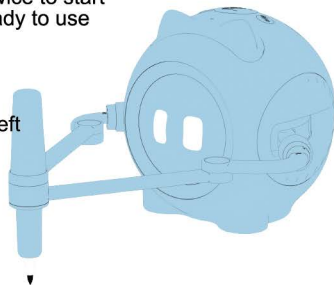

Button Guide

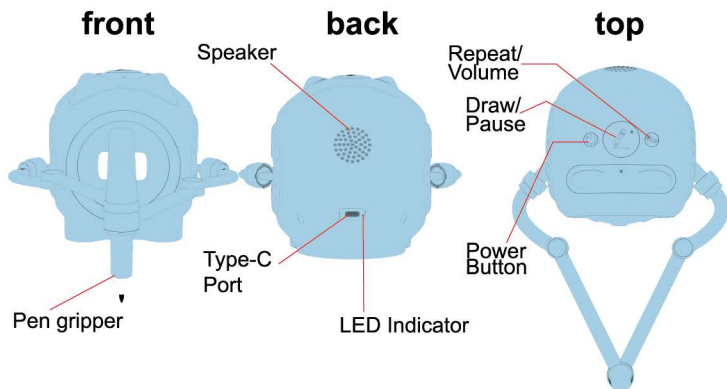

Power Button

Press and hold: Power on/off

Press twice quickly: Wi-Fi pairing mode

Draw Button

Press once: Start random drawing

Press and hold: Voice chat / Voice drawing

Press during drawing: Pause

Repeat/Volume Button

Press and hold: Change light color

Press once: Change volume (High– Medium– Low – Mute)

Other Buttons

The machine enters standby mode after 60 seconds of inactivity.
It automatically shuts off after 5 minutes of inactivity.

Wi-Fi Setup

Android

1. Search for "IntoYun" on Google Play and install the app.
2. Press the machine's power button twice quickly to enter Wi-Fi pairing mode.
3. Open IntoYun and tap "Configure Wi-Fi".
4. Follow the app prompts: turn on Bluetooth, find your machine's Bluetooth name, and pair.
5. Go to the Wi-Fi page and connect to your home Wi-Fi (or personal hotspot). When connected, setup is complete!



iOS

1. Search for "IntoYun" on App Store and install the app.
2. Press the machine's power button twice quickly to enter Wi-Fi pairing mode.
3. Open IntoYun and tap "Configure Wi-Fi".
4. Follow the app prompts: turn on Bluetooth, find your machine's Bluetooth name, and pair.
5. Go to the Wi-Fi page and connect to your home Wi-Fi (or personal hotspot). When connected, setup is complete!



Note: This machine supports 2.4GHz Wi-Fi only (5GHz not supported).

Built-in Drawing Library

Category	Quantity	Category	Quantity
Vehicles	71	Animals	140
Everyday Objects	67	Sports	62
Food & Drinks	54	Musical Instruments	38
Vegetables	88	Dinosaurs	48
Fruits	70	Nuts	41
People & Characters	55	Cartoon	31
Clothing	79	Buildings	60
Plants	103	Weapons	21
Nature	74	Other	8

Note: Categories and counts reflect the current library. New designs are added regularly via app updates

Important Safety and Usage Tips

- Do not move the machine during the drawing process—this may disrupt the drawing accuracy.
- Regularly check the condition of the power cable and charging cable; replace damaged cables immediately.
- Use only compatible power sources that meet the device's specifications (see Section 2: Product Specifications).
- Follow all operating instructions in this manual to avoid device damage or personal injury.
- Keep the machine away from water, high temperatures, and sharp objects.
- For additional assistance, please refer to the detailed operation guide or contact customer support.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.