


Ages 8+



Scan the QR  
code to watch

# INTELLIGENT ROBOTIC DOG USER MANUAL

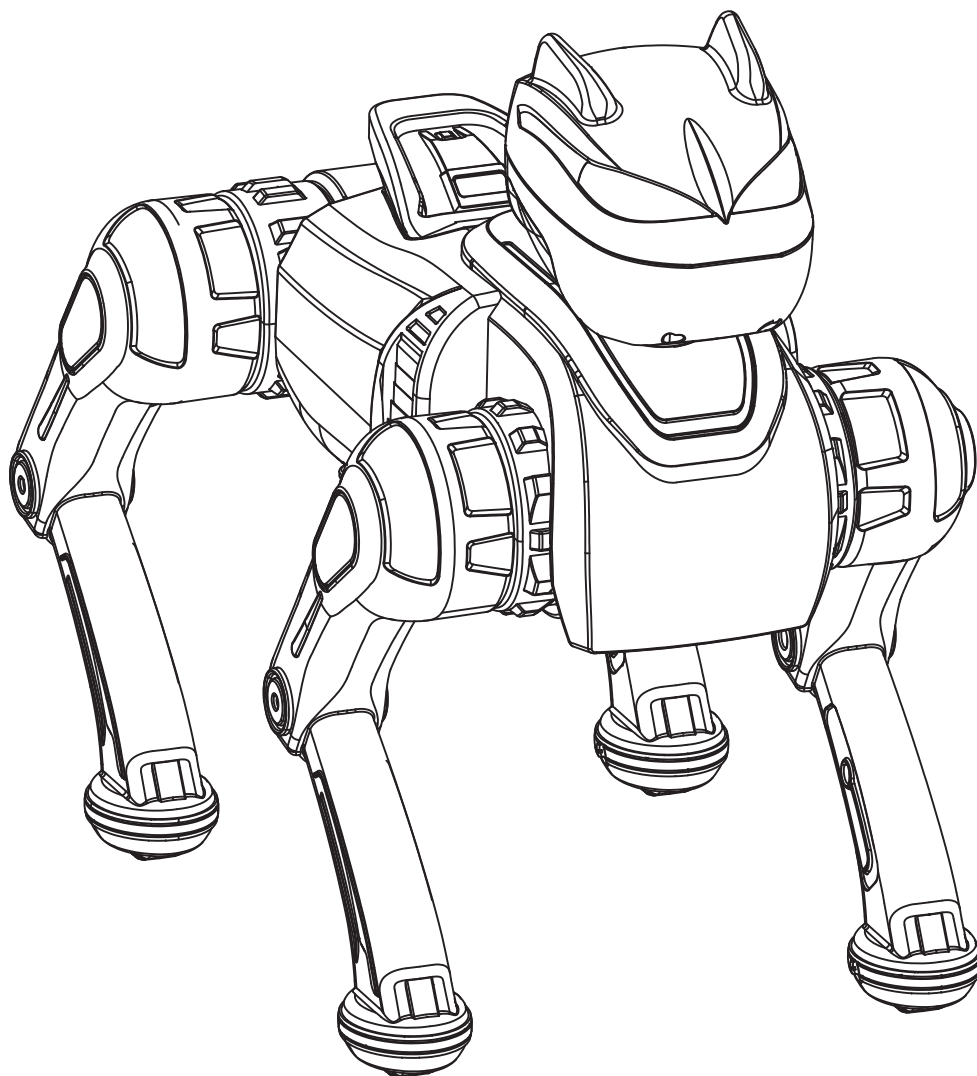

Please read this manual carefully before use and keep it properly for future reference.


## Pre-Use Instructions

1. This product is suitable for users aged 8 and above. An adult must complete equipment assembly, battery charging and other preparations before handing the product over to the user.
2. Do not disassemble or modify the body structure and internal parts of this product without authorization. Any unauthorized modification may cause abnormal operation, equipment damage and potential safety hazards.
3. The product must be operated under continuous adult supervision at all times.

## Battery Installation Instructions


### Robotic Dog Modular Battery Mounting

1. Align the port of the modular battery with the built-in port on the robotic dog body, then insert the battery horizontally into the battery compartment smoothly.
2. Fasten the battery buckles on both sides to secure the modular battery tightly and prevent it from loosening or falling off.

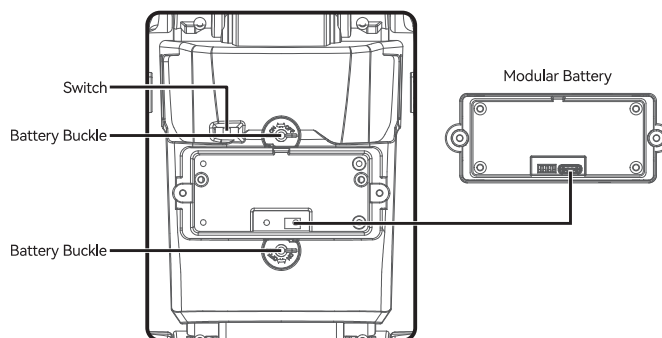


### Charging Instructions

1. This device is equipped with a dedicated 3.7V modular lithium battery. Fully charge the battery before first use.
2. When charging, connect the charging cable to the charging port of the modular battery first, then plug the USB end into a certified power supply to start charging normally.
3. It takes about 180 minutes to fully charge the device. The indicator light stays solid red during charging and turns off once fully charged. Do not overcharge. Extended charging will not increase power and will shorten battery service life.
4. Regularly inspect the appearance and wires of the device, battery and charging cable. Stop using immediately if damage, aging or malfunctions are found, and resume use only after repairing or replacing accessories.

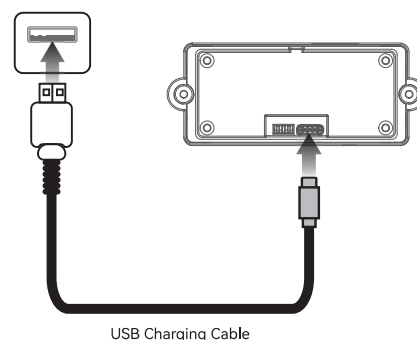


## Mode Switching Instructions

 
Mode Switch



 **Power Off Mode**  
Switch to the left.



 **Voice Recognition Mode**  
Switch to the middle.



**Remote control mode**  
Switch to the right.

### Power-on prompt:


Switch the bottom switch to the power-on position. The device will start and emit a voice prompt indicating that it has been successfully powered on.

### Voice control rules:

In voice mode, you must first say the wake-up phrase "Hey Leo" and wait for the device to respond before issuing a voice command. The device will then execute the corresponding action. During the action demonstration, saying "Stop" will terminate the current operation.

After entering voice recognition mode, if no voice command is input within 60 seconds, the device will automatically exit this mode.

# Remote Control Function Description

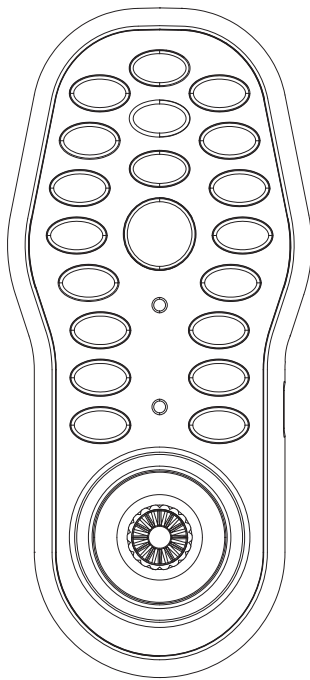

Press and hold the power button to turn on the device; the indicator light will flash blue. After the device is powered on, the indicator light on the remote control will remain on, indicating successful pairing. If the indicator light continues to flash, pairing has failed, and you need to repeat the above steps. Press and hold the power button to turn off the remote control.

## Basic Motion Control:

Move the joystick up/down/left/right to control the device's forward/backward/left/right movement; other function buttons only require a short press to trigger their corresponding functions.

## Broadcast And Music Modes:

A short press of the learning button switches the device's voice prompts, and a short press of the song button switches the built-in songs.

## Programming Mode:

Briefly press the programming button to enter the programming recording state; press the desired function buttons in sequence to enter the action commands, and briefly press the programming button again to complete the recording. The device will automatically execute the entire set of actions in the recorded order. (Programming operations are unavailable for songs and learning modes.)


## Voice Recognition Mode:

Short press the voice key, the robot dog's eye lights will flash, and the device will prompt that voice recognition mode has been activated. First wake up the device by calling "Hey Leo". After it responds, issue voice commands to trigger corresponding movements. During movement demonstration, pressing the Stop button or any button on the remote control will halt the ongoing action.

Once voice recognition mode is enabled, if no voice command is received within 60 seconds, the device must be woken up again.

## Charging Instructions


1. This device is equipped with a dedicated 3.7V lithium battery. Fully charge the battery before first use.
2. When charging, connect the charging cable to the charging port of the modular battery first, then plug the USB end into a certified power supply to start charging normally.
3. It takes about 60 minutes to fully charge the device. The indicator light stays solid red during charging and turns off once fully charged. Do not overcharge. Extended charging will not increase power and will shorten battery service life.
4. Regularly inspect the appearance and wires of the device, battery and charging cable. Stop using immediately if damage, aging or malfunctions are found, and resume use only after repairing or replacing accessories.

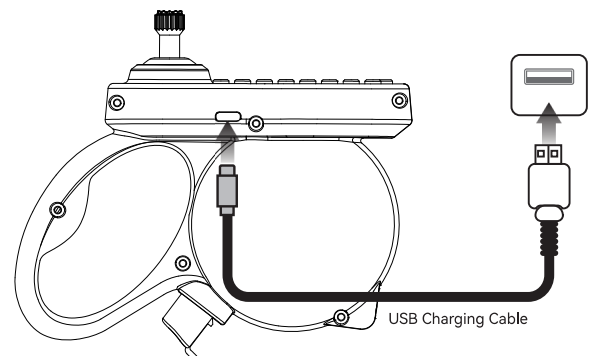


## Precautions for using lithium batteries

1. Before charging the device, the battery polarity and rated voltage must be checked to ensure charging safety.
2. Do not charge the battery near flammable or explosive materials. If the battery exhibits any abnormalities such as unusual odor, overheating, deformation, or discoloration during use or charging, stop using it immediately.
3. All battery charging operations must be completed under the full supervision of an adult; unattended charging is prohibited.
4. If the battery leaks, avoid contact between the electrolyte and skin or eyes. If contact occurs, immediately flush with plenty of water and seek medical attention.
5. This device is only compatible with original factory-supplied batteries, chargers and charging cables. The use of non-original accessories is strictly prohibited to prevent damage to the device and potential safety hazards.
6. When a product is left unused for an extended period, the battery should be removed and stored separately, and recharged periodically to prevent battery depletion and leakage that could corrode the equipment.
7. Short-circuiting battery electrodes and unauthorized modification of battery circuits are strictly prohibited. All illegal electrical operations must be eliminated.
8. It is prohibited to use flammable materials such as organic solvents and industrial alcohol to wipe equipment and charging accessories.
9. This product contains plastic, metal, and precision electronic components. It is prohibited to store or use it in a humid or dark environment for a long time. The condition of the machine body, circuits, and accessories should be checked regularly. If any damage or malfunction occurs, use must be stopped immediately and the machine can only be operated again after repair.

## Tow Rope Operation Instructions

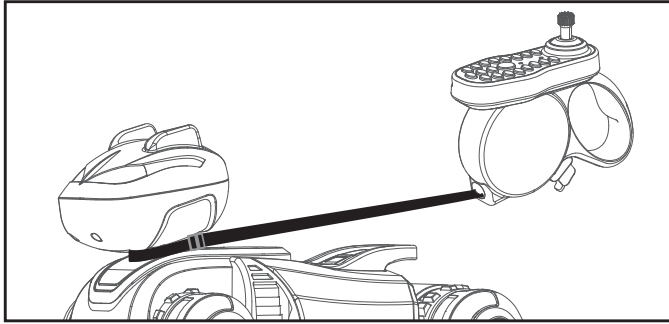

The tow rope can be pulled up to 2 meters long.

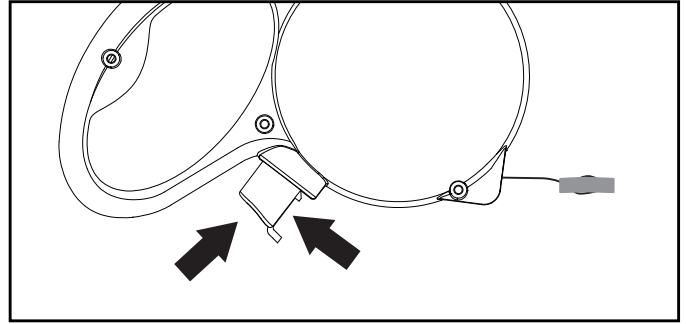

Press the latch to unlock the tow rope, push it up to lock it.

## Remote Control Operation Instructions

### Basic Motion Control:

Move the joystick up/down/left/right to control the device's forward/backward/left/right movement; other function buttons only require a short press to trigger their corresponding functions.

### Broadcast And Music Modes:

A short press of the learning button switches the device's voice prompts, and a short press of the song button switches the built-in songs.

### Programming Mode:

Briefly press the programming button to enter the programming recording state; press the desired function buttons in sequence to enter the action commands, and briefly press the programming button again to complete the recording. The device will automatically execute the entire set of actions in the recorded order. (Programming operations are unavailable for songs and learning modes.)

### Voice Recognition Mode:


Short press the voice key, the robot dog's eye lights will flash, and the device will prompt that voice recognition mode has been activated. First wake up the device by calling "Hey Leo". After it responds, issue voice commands to trigger corresponding movements. During movement demonstration, pressing the Stop button or any button on the remote control will halt the ongoing action.



**Note:** Once voice recognition mode is enabled, if no voice command is received within 60 seconds, the device must be woken up again.


### Gesture Control Mode:

A short press of the gesture button will cause the remote control indicator light to flash rapidly, indicating that the device has entered gesture control mode. The device will then follow the hand gestures of the person holding the remote control to perform forward, backward, left, and right movements. A short press of the gesture button again will turn the indicator light back to a solid light, indicating that gesture control mode has been deactivated.

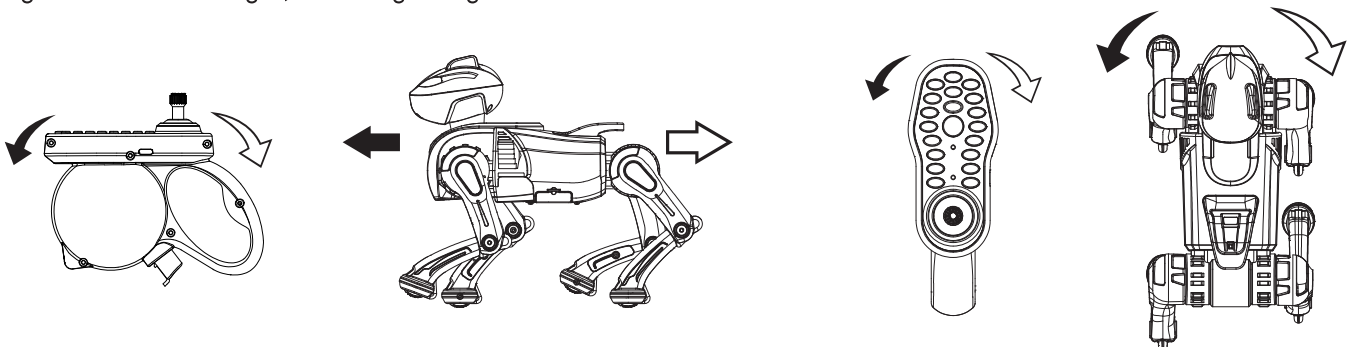


## Operation Demonstration


### 1. Sit Down

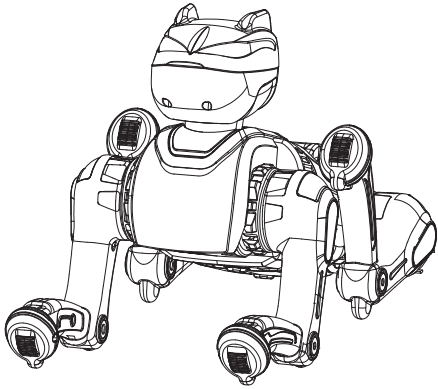


### 2. Lie Down

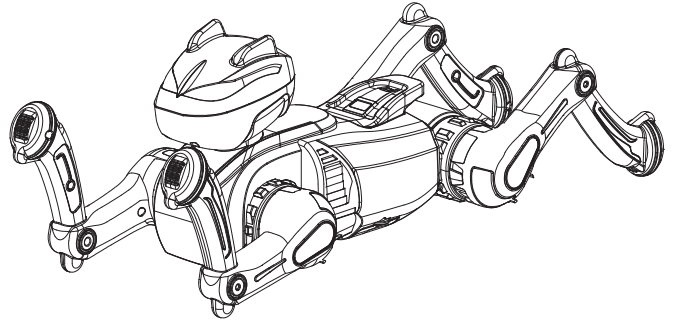


### 3. Stand Upside Down,

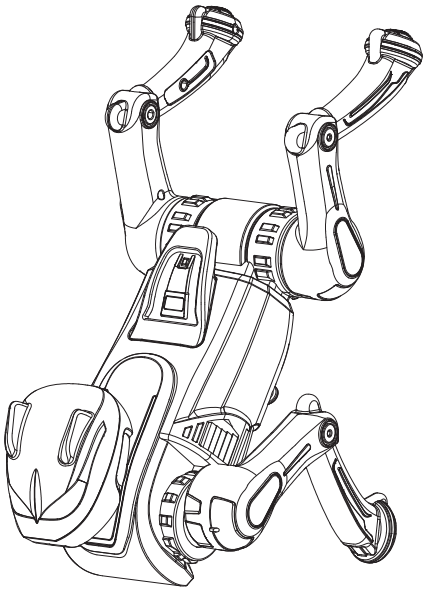


### 4. Go Pee

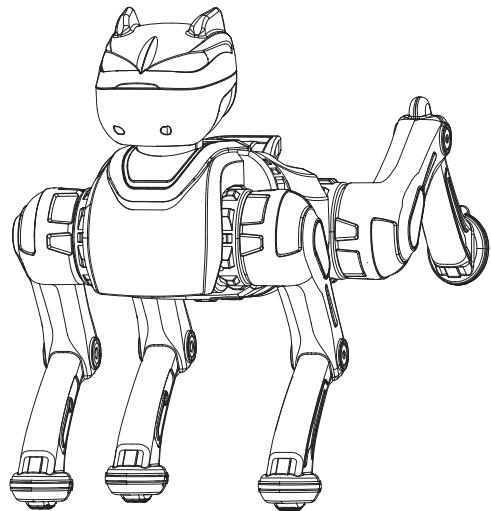


### 5. Shake Hands

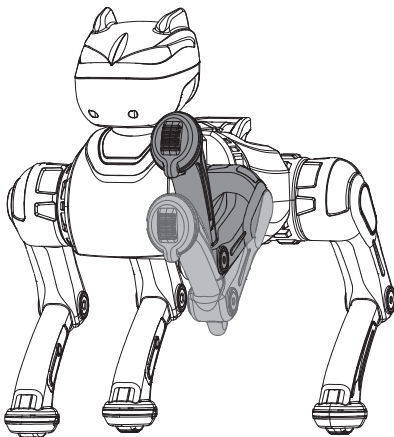


### 6. Start Dancing,

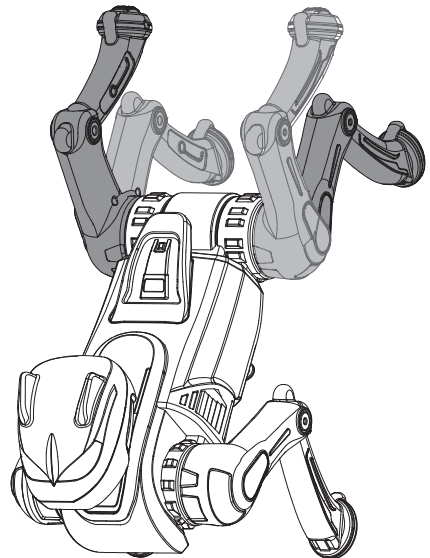


## 7. Show Kung fu

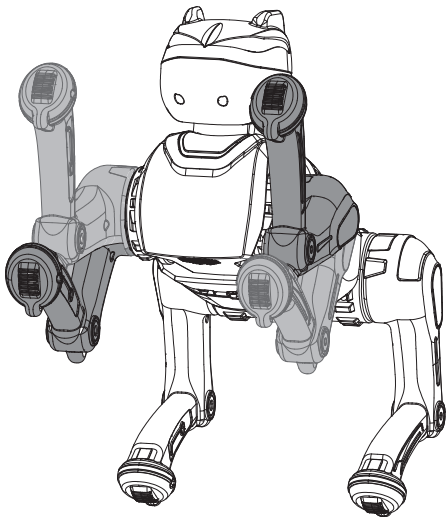


## 8. Send Greetings

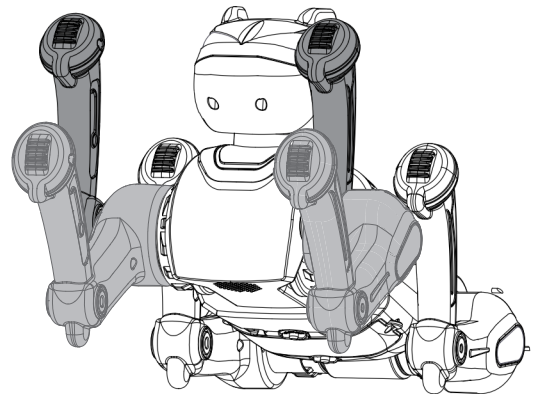


## 9. Do Push Up

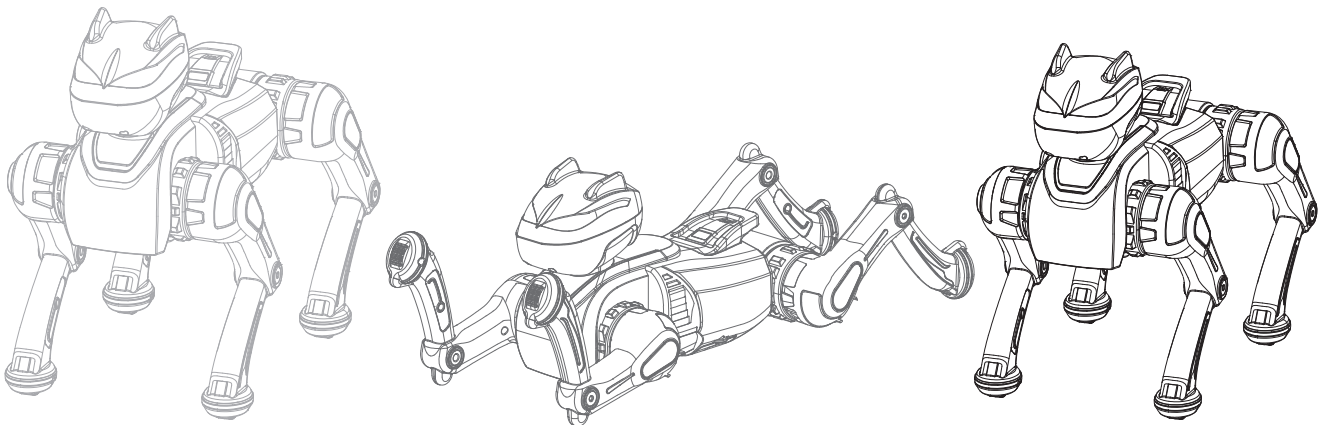


## 10. Roll Over

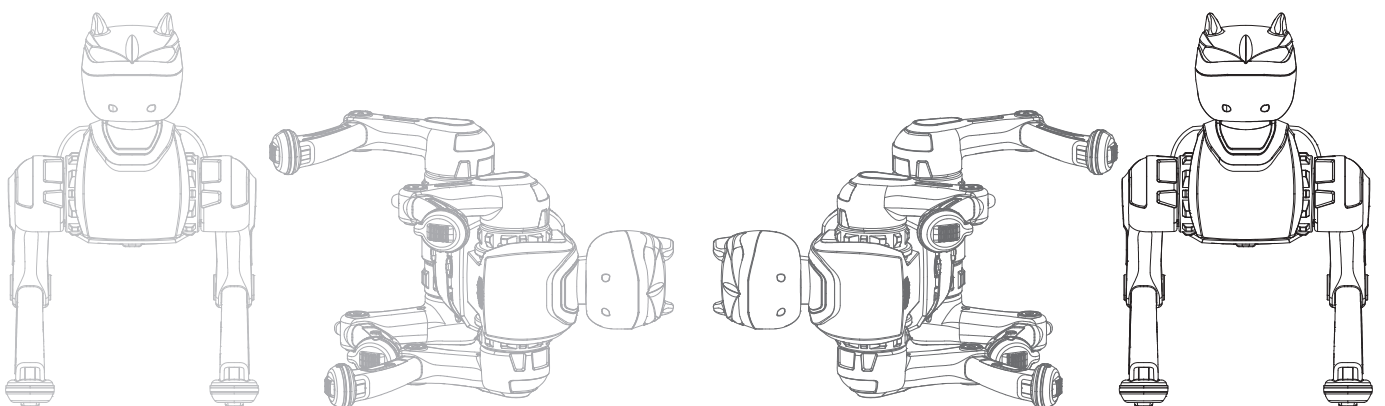

## 11. Jump Up

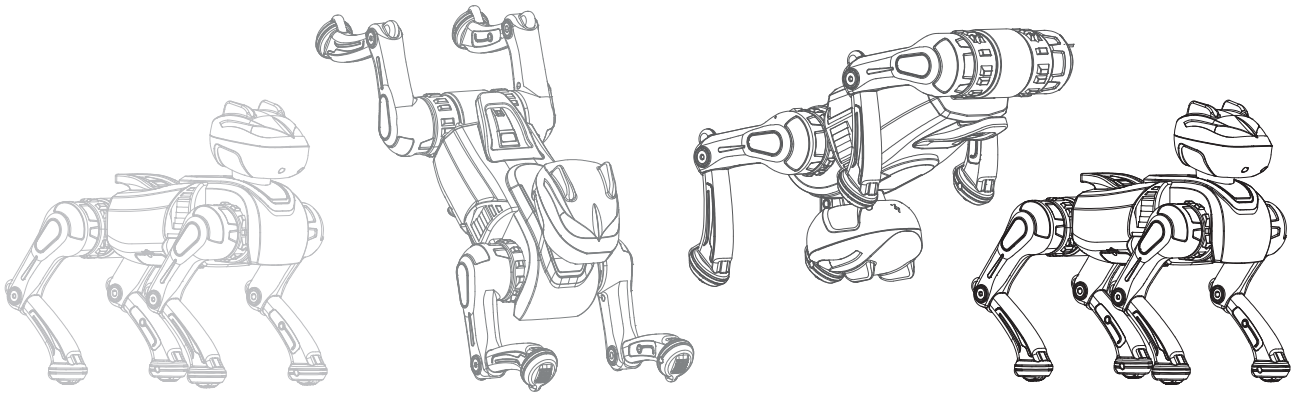




## 12. Start Swimming

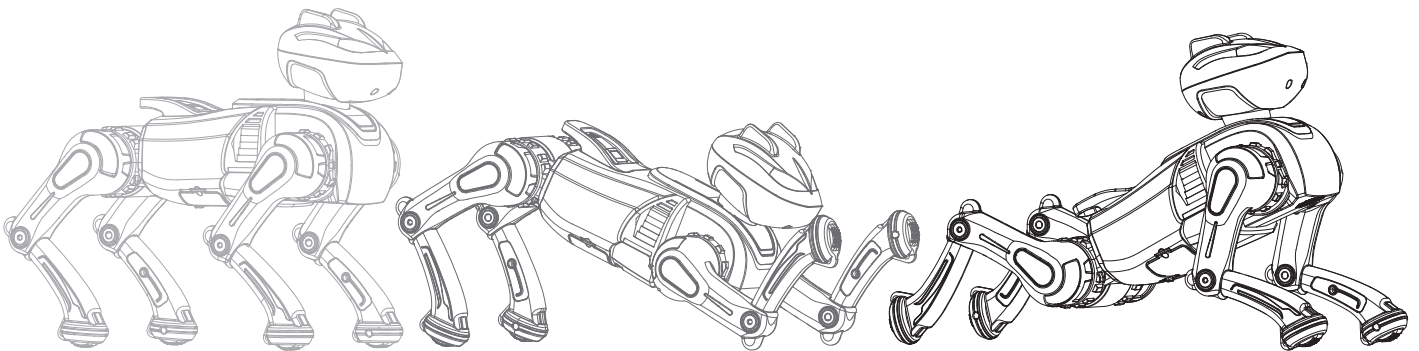

## Voice Commands

After entering voice recognition mode, call "Hey Leo" to wake up the device.

- |                   |                    |                    |                       |                |
|-------------------|--------------------|--------------------|-----------------------|----------------|
| 01. Move Forward  | 05. Play Music     | 09. Start Learning | 13. Go Pee            | 17. Sit Down   |
| 02. Move Backward | 06. Send Greetings | 10. Show Kung Fu   | 14. Stand Upside Down | 18. Lie Down   |
| 03. To Turn Left  | 07. Roll Over      | 11. Shake Hands    | 15. Start Swimming    | 19. Do Push up |
| 04. To Turn Right | 08. Jump Up        | 12. Start Dancing  | 16. Act Cute          |                |

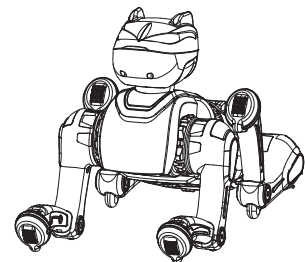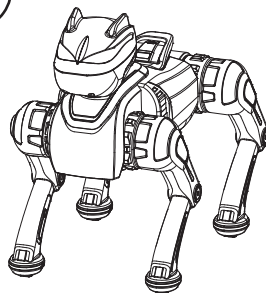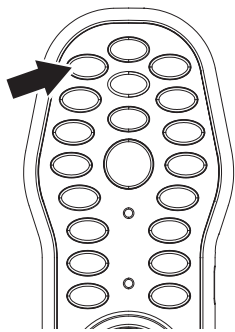

After pressing the voice command button on the remote control, say "Sit down," and the robot dog will automatically retract its hind legs and sit down.