

200*120MM 底面印刷

HY-3317 Bluetooth speaker

Component:

- Bluetooth Speaker x 1
- Charging Cable x 1



Specification:

- Bluetooth:** V5.3,Transmission Ranges10 Meter
- Input:** DC 5V, **Output:**RMS 10W
- Speaker:** 3Ω 10W 3"x2
- Battery Capacity:** 1200mAh
- FM Frequency range:** 87.5-108MHz,Build-in antenna
- Music Mode:** Support Mp3 play, Maximum capacity Supports32G

Key Manual

Power-saving mode:

If no connection is established within 15 minutes of the device being switched on, it will switch off automatically.

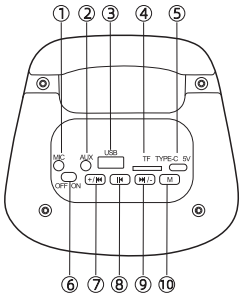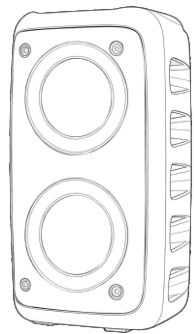

- ① MIC IN
- ② AUX IN
- ③ USB PORT
- ④ MICROSD CARD PORT
- ⑤ Type-C USB CHARGING & CHARGING INDICATOR
- ⑥ ON/OFF SWITCH
- ⑦ NEXT SONG/VOL+
- ⑧ PLAY/PAUSE
- ⑨ PREVIOUS SONG / VOL-
- ⑩ MODE

Bluetooth Function

- 1.Turn on the power switch or press MODE key repeatedly into Bluetooth Mode.
- 2.Turn on buleetooth connction in your phone and search bluetooth name "HY-3317 "

Click to connect. Once connected, you can play music in Music application on phone.

PS:Please make sure your phone volume is turned on and turn up the volume of your phone into a suitable range.

Press and hold the "▶| " button to force a disconnection or reconnect via Bluetooth

TWS Function

- 1.Turn on another same type bluetooth speaker and keep both of them in Bluetooth Function.
- 2.press and hold MODE key of one of the speakers and don't release until you hear the bell rings

Wait for a moment. The speaker will connect another speaker automatically.

PS:If another speaker was connected to the same phone before, you should disconnect it on the phone firstly. (Note: Once the TWS earbuds are paired, the karaoke function is disabled; to use the karaoke function, disconnect the TWS earbuds.)

Music Mode

- 1.Put in Micro SD card or USB flash disk or press MODE key repeatedly into music mode for playing Mp3 Music in the Micro SD card or USB flash disk.
2. Press "▶|" key can play/pause music.press key can switch songs press and hold key can turn up/down the volume of the speaker.

FM Radio

- 1.Turn on the speaker and press MODE key repeatedly into FM Radio Mode.
2. Press "▶| " key the speaker will search and store broadcast channel automatically. Once the search is finished, you can press "◀◀ " and " ▶▶ " key to switch broadcast channel.

PS:The speaker should close to window or balcony and stay away interference like computer, motor and so on, which may improve the listening effect ion.

(Note: The light does not come on in FM mode; when switched to FM, the flashing light will automatically go out)

AUX Input

- 1.Using suitable audio cable to connect audio output equipment. Turn on the equipment and play musician suitable volume.
- 2.Using suitable audio cable to connect audio output equipment. Turn on the equipment and play musician suitable volume.
- 3.press "▶| " key can play or pause,press and hold "◀◀ " and " ▶▶ " key can turn up/down the volume.

MIC Port

Put Wired Microphone into MIC Port, Turn on Microphone then you can use

Double-click "▶| " to turn the microphone reverb on or off

PS:TIn FM Mode, You can not use Microphone Function, Please switch to other modes, also Do not head to the woofer, otherwise there will be noise. Please turn off the microphone when you do not use.

LED Light Function

Double click the "M" key can turn on/off LED light function.

PS:TThe machine may turn off LED light automatically in the FM radio function in order to decrease interference for better listening effect.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.