

14-

 


Accelerator pedal (up/down)	Direction pedal (forward/backward)
Left indicator/light (rotation)	Left side fly (right side fly)

Loosen the battery latching in the direction of the arrow, then slide the battery cover to the right.

Set the "mode" battery (not included).

When the fan blades are completely assembled, you take the fan spacer bar blades from the accessories package for replacement. There are position requirements for the fan blades; the letters engraved on the fan blades must be installed in the marked positions as given in the above picture. That is, 'A' corresponds to 'A' and 'B' corresponds to 'B', otherwise the shaft cannot take off smoothly (When installing, please pay attention that the fan blades cannot be deformed.)



1. Enter heading mode. The default text of the aircraft when the power is switched on. Press the **power** (power) function key for 2 seconds, the display control reads the word of "ID", while the light of aircraft flashes for 1 second and the blue heading light slowly, the aircraft heading mode starts. If the input is right deviation, please rotate the power to adjust the deviation you need after matching frequency.

2. Exit heading mode. Press the heading function key

1. **Armrest control (no voltage received):** When the power of the armrest control is insufficient, the retracting light will flash slowly; please replace the battery.

2. **Armrest no voltage output:** When the power of the joystick is insufficient, the retracting control will be sound of "D", the red light of the joystick will keep flashing; at this time, the joystick limits the sitting mode, the aircraft can continue to fly normally for 60 seconds, and will be forced to landing on the ground and stop flying. (When the aircraft indicates low power, please fly back the aircraft in time and recharge the joystick or replace the battery).

3. **Out-of-range reminder:** When the aircraft moves beyond the control range of the