

---

THANK YOU FOR CHOOSING  
**CCFAME!!**

[WWW.CCFAME.COM](http://WWW.CCFAME.COM)

# CCFAME



Biometric Wireless charging safe

**OWNER'S MANUAL**

## SCAN TO GET LIFETIME WARRANTY!

We have a clear mission: to offer sturdy and durable items that provide customers with safer and more reliable products.

We recognize that every customer is unique. To ensure that each customer receives exclusive service, we have assigned a unique code to every product. *Please register your product within 14 days to guarantee improved after-sales service in the future.*

If anything goes wrong with your product, please reach out to us so we can make it right.



[support@ccfame.com](mailto:support@ccfame.com)

TABLE OF CONTENTS

|                                         |       |
|-----------------------------------------|-------|
| Accessories and Functions               | 2     |
| Overview                                | 3     |
| First Use Instructions                  | 4     |
| Passcode Setting                        | 5     |
| Fingerprint Setting                     | 6     |
| Patterns, Functions and Operating Steps | 7     |
| Detailed Function Introduction          | 8-11  |
| Wireless Charging                       | 12    |
| Steel Safety Cable Installation         | 13    |
| Emergency Port                          | 14    |
| Lockout Mechanism                       | 15    |
| Wi-Fi Settings and Functions            | 17-18 |



## ACCESSORIES AND FUNCTIONS



 
Spare Key\*2




AC Adapter\*1



Steel Wire Rope\*1

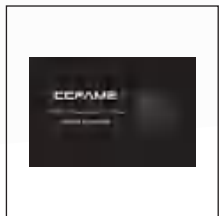

Manual\*1

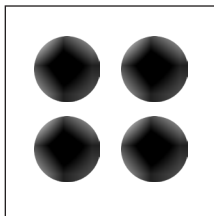 

Anti-Slip Pad\*4


## OVERVIEW

 BIOMETRIC SCANNER

WIRELESS CHARGER PAD

DIGITAL KEYPAD

BREATHING LIGHT

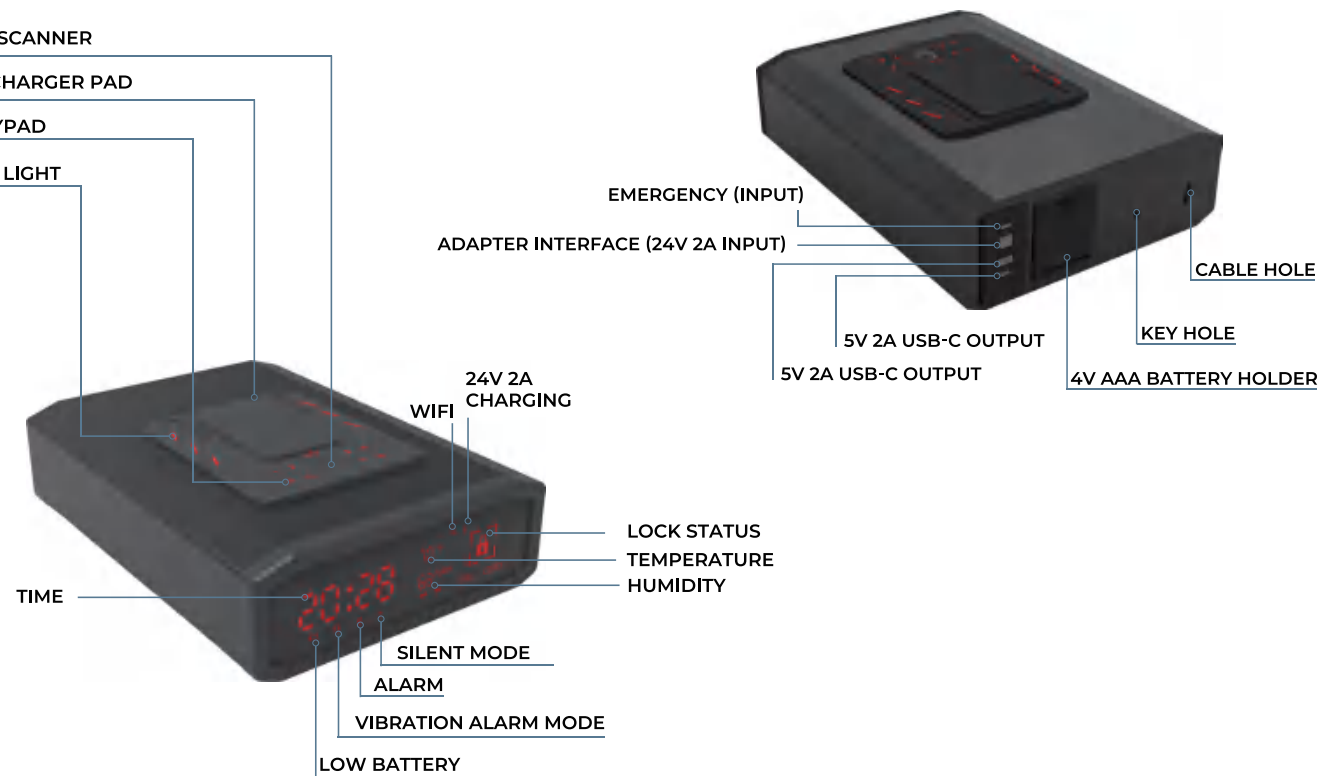

# FIRST USE INSTRUCTIONS

## **\*\*Open the Safe\*\***

Insert the key into the keyhole and turn it 90 degrees counter-clockwise to open the safe.

## **\*\*Power the Safe\*\***

- a. Remove the drawer accessories, connect the adapter to the power source, and install the backup battery to prevent interruptions from power outages.
- b. After hearing a "beep," the safe is ready for use. Default password: 1234.



# SAFE SETTINGS

## **\*\*Passcode Settings\*\***

1. Press the Settings button (Below the Biometric Scanner inside the safe). After hearing two "beep" sounds and seeing the password key indicator light up, enter a new 4-8 digit password.

2. Press the Settings key again after inputting the password; a "beep" indicates that the password setup was successful.

**Change the password:** Try pressing and holding the Settings button for over 6 seconds to restore factory settings, then operate again.

### **Notes:**

1. Default password: **1234**.
2. The new password activates immediately; the old one becomes invalid.



# FINGERPRINT SETTING

**\*\* Fingerprint Settings\*\***

- 1. Press the Settings button (Below the Biometric Scanner inside the safe). After hearing a "beep" and seeing the fingerprint key indicator light up, press your fingerprint on the scanner 3 times.
- 2. If successful, you will hear a "beep". If it fails ,you'll hear three "beeps" and see the light turn red.

**\*\*Fingerprint Registration Tips\*\***

- 1. Place the center of your fingerprint flat on the scanner's center to capture key details.
- 2. Rotate your finger slightly between scans to collect subtle differences and improve accuracy.
- 3. Keep your fingers free of excess moisture, lotion,or dirt to avoid scanning errors.
- 4. If registration fails, re-scan the same fingerprint 4-5 times. There are 30 fingerprint slots available



# PATTERNS, FUNCTIONS AND OPERATING STEPS

| Number Key | Function                  | Operation Details                                                                                                                                                                                                                   |
|------------|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1          | Mute Switch               | Long-press Key 1 for 3 seconds to turn mute on / off; sound will be restored after power-off restart.                                                                                                                               |
| 2          | Time Setting              | Long-press Key 2 for 3 seconds to enter setting mode. Key 5 adjusts hours, Key 6 adjusts minutes, Key 7 switches to 24-hour format, Key 8 switches to 12-hour format. Long-press Key 2 again to save the setting.                   |
| 3          | Alarm Time Setting        | Long-press Key 3 for 3 seconds to enter setting mode. Key 5 adjusts hours, Key 6 adjusts minutes. Long-press Key 3 again to save the setting.                                                                                       |
| 4          | Alarm On / Off            | Long-press Key 4 for 3 seconds to turn the alarm on / off. Press any key or use fingerprint within 20 seconds after the alarm rings to stop it.                                                                                     |
| 5          | Screen Brightness Setting | Long-press Key 5 for 3 seconds to enter setting mode (5 brightness levels in total). Press Key 7 to switch levels. Long-press Key 5 again to save the setting. Default to the lowest brightness when running only on battery power. |
| 6          | Vibration Alarm On / Off  | Long-press Key 6 for 3 seconds to activate it. Once enabled, you must unlock the safe successfully before you can turn it off.                                                                                                      |
| 7          | Always-On Screen Setting  | Long-press Key 7 for 3 seconds to turn the always-on screen function on / off.                                                                                                                                                      |
| 8          | Breathing Light Setting   | Long-press Key 8 for 3 seconds to enter the color / mode setting. Press Key 7 to change colors; press Key 7 again to switch modes: Flashing → Steady On → Off. Long-press Key 8 again to save the setting.                          |

## DETAILED FUNCTION INTRODUCTION

### **\*\*Silent Mode Settings\*\***

Press and hold "1" for 3 seconds. The blue light flashes to confirm silent mode is enabled, and the mute indicator turns on.

Press and hold "1" for another 3 seconds. The blue light flashes again, sound is restored, and the mute indicator turns off.

(**Note:** The "1" key toggles mute. Audio will reset to normal after a power cycle.)

### **\*\*Time Settings\*\***

1. Press and hold "2" for 3 seconds. The blue light flashes, the time digits blink, and the buzzer beeps once to enter time-setting mode.
2. Press "5" to adjust hours and "6" to adjust minutes.
3. Press "7" for 24-hour format, or "8" for 12-hour format.
4. Once finished, hold "2" for over 3 seconds to save and exit. The system will also auto-exit after a few seconds of inactivity.



## DETAILED FUNCTION INTRODUCTION

### **\*\*Alarm Time Settings\*\***

1. Press and hold "3" for 3 seconds to enter alarm-time setup. The alarm indicator lights up and the buzzer beeps once.
2. Press "5" to adjust hours and "6" to adjust minutes.
3. Hold "3" for over 3 seconds to save and exit. The system will also exit automatically after a short period of inactivity.

**Please note:** Completing the alarm setting does not mean the alarm is activated. Long-press the 4 key to turn on the alarm.

### **\*\*Alarm On / Off\*\***

1. Press and hold "4" for 3 seconds to turn the alarm ON. The alarm indicator illuminates with one beep.
2. Press and hold "4" for 3 seconds to turn the alarm OFF. The alarm indicator goes out with one beep.
3. The alarm will ring for 20 seconds. Stop it by pressing any keypad button or scanning your fingerprint.



## DETAILED FUNCTION INTRODUCTION

### **\*\*Screen Brightness Display Settings\*\***

1. Press and hold "5" for 3 seconds to enter brightness adjustment mode. Five brightness levels are available.
2. Tap "7" to cycle through different brightness levels.
3. Hold "5" for more than 3 seconds to save and exit. The system will automatically exit if no button is pressed for several seconds.

**Note:** When running on backup battery without external power, the screen defaults to the dimmest brightness.

### **\*\*Vibration Alarm On / Off\*\***

1. Press and hold "6" for 3 seconds to activate the vibration alarm. The vibration indicator turns on with one beep.

**Note:** After the vibration alarm is turned on, it can only be deactivated once the safe is unlocked successfully.



## DETAILED FUNCTION INTRODUCTION

### **\*\*Screen Display Settings\*\***

1. Press and hold the 7 key for 3 seconds to enable the always-on screen mode.
2. Press and hold the 7 key for another 3 seconds to disable this mode. When turned off, the screen lights up temporarily when any key is pressed and automatically shuts off after 30 seconds.

**Note:** Always-on screen mode only works when the safe is connected to the power adapter.

### **\*\*Breathing Light Color and Mode Settings\*\***

1. Press and hold "8" for 3 seconds to access breathing-light settings. The indicator illuminates with one beep.
2. Tap "7" to cycle through seven available colors.
3. Tap "7" again to toggle the light effect (Flashing → Steady → Off → Flashing).
4. Once you finish your selection, hold "8" for over 3 seconds to save and exit. The system will auto-exit after a few seconds of inactivity.



## WIRELESS CHARGING

Wireless charging only works when the power adapter is plugged in. The top-panel zone delivers 15W fast charging for smartphones, and the lower zone provides 5W charging for headphones and smartwatches and exit. The system will auto-exit after a few seconds of inactivity.

phone **15W**

watch **5W**  
headphone **5W**

### Note:

1. Wireless charging does not work if the safe is only on battery power (no adapter connected).
2. Phones that do not support wireless charging cannot use this pad.
3. Use a thin phone case or remove it entirely for optimal charging.



## STEEL SAFETY CABLE INSTALLATION

### Step 1


1. Open the safe drawer and insert the end of the safety cable into the rear slot.
2. Pull the cable end fully downward.

### Step 2

1. Close the drawer to ensure that the cable is securely fastened.
2. Wrap the cable around a stable object.

**Friendly reminder:** We recommend using a security cable to secure it.

**Note:** The safety cable can only be inserted or removed when the drawer is open.

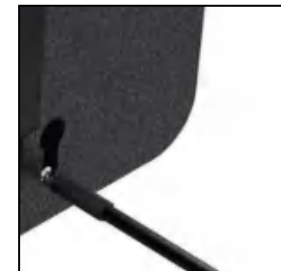

## EMERGENCY PORT

### The emergency port is Type-C-only.

Connect an external power source to it for power supply and safe unlocking.

**Battery type:** 4AAA  
**Adapter voltage:** 24V 2A

#### Emergency Port Limitations:

1. Provides power supply only for the safe.
2. Does not function as a charging port for the safe.
3. Cannot power the safe's display.



## LOCKOUT MECHANISM

### The safe will be locked for 100 seconds under the following conditions:

1. If the password is incorrectly entered 3 times in a row.
2. If the fingerprint is incorrectly entered 5 times in a row.

**The alarm and lockout will cease once the power is disconnected,** and the safe can then be unlocked by entering the correct password.

#### During the lockout period:

1. All keypad buttons will be disabled
2. Entering the password or fingerprint will have no effect.
3. The keypad's blue light will flash, and the safe will emit a beeping sound.

# WI-FI SETTINGS AND FUNCTIONS

## Preparation

- 1.Download and install the Tuya Smart app on your phone (available in all major app stores).
- 2.Register and log in to your account (registration via phone number / email is supported).
- 3.Prepare a home Wi-Fi network.
- 4.Turn on Bluetooth on your phone and connect it to the Wi-Fi network.
- 5.Make sure the safe has sufficient power: plug it in or install batteries.

## Connecting to Wi-Fi (Pairing)

- 1.Open the Tuya Smart app and tap the “+” icon at the top right of the home page, then tap “Add Device”.
- 2.Enter pairing mode: press the number 8 key twice, then press the settings key twice. The safe will emit a beeping sound. Find your safe in the app on your phone and tap “Add”.
- 3.Enter the Wi-Fi password (it must match the Wi-Fi network your phone is connected to).
- 4.Wait for the progress bar to finish. Once “Added Successfully” appears, pairing is complete.

**If pairing fails:** please confirm that the Wi-Fi and password are correct, then try again. If it still fails, long-press the settings key to exit and re-enter pairing mode.



# WI-FI SETTINGS AND FUNCTIONS

## Common App Functions

- 1.**Alarm Settings:** You can freely set an alarm time. After setting it, tap the “Enable” button at the bottom of the page, and the safe will emit a “beep”, indicating that the alarm has been set successfully.
- 2.**Screen Brightness:** You can set the screen mode to Always On or Always Off, and freely adjust the brightness. Tap “Done” and the safe will emit a “beep”, indicating the setting has taken effect.
- 3.**Digital Password:** You can set an unlock password consisting of 6 digits. Tap “Done” and a “beep” means the password has been set successfully. For security, please avoid using consecutive or repeated digits and keep the password confidential.
- 4.**Fingerprint Password:** Multiple fingerprints can be enrolled. Tap “Start Enrollment” and the safe will emit a “beep”. The app will show Fingerprint 1, Fingerprint 2, Fingerprint 3 in turn. Press your finger on the fingerprint sensor of the safe three consecutive times, and the app will complete the enrollment step by step until the “Enrollment Successful” page appears, meaning enrollment is complete. If you do not touch the fingerprint sensor after tapping “Start Enrollment”, the safe will emit a “beep-beep”, the fingerprint will not be recorded, and the page will automatically exit.

 
**5.Unlock Log:** You can view the date and time of every unlock, and switch between dates to review records.

Unlocking with the key will not be recorded.

**6.Alarms:** Covers five types of alarms — vibration, anti-pry, low battery, fingerprint attempt failure, and password attempt failure — which can be enabled or disabled individually as needed.

**7.Light Settings:** Supports customization of the light switch, light mode (Static / Breathing), and light color (Red, Green, Yellow, Blue, Pink-Purple, Sky Blue). Tap “Done” and a “beep” indicates the light setting has been set successfully.

**Note: One safe can only be paired with one mobile phone. When a new phone is bound to the safe, the old phone will no longer work.**

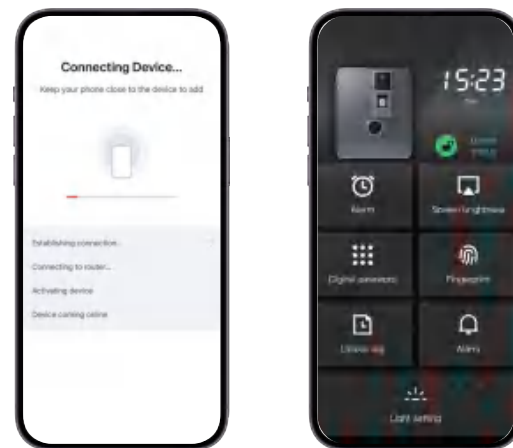

#### FCC Warning

##### 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

##### 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

##### 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

##### FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.