

SC05说明书-英文

材质:双面印刷

单页尺寸:65*90mm

User Manual

Warning

To reduce the risk of fire or electric shock, do not:

1. Expose the product to rain or moisture.
2. Place objects filled with liquid, such as vases, on the product.
3. Expose the product to excessive heat sources, including direct sunlight, fire, or the like.
4. Inhale battery materials—this poses a risk of chemical burns.

Product Specifications

Model: SC05
Dimensions: 63.5 x 28.4 x 65.5mm
Weight: 81.5g
Display: 1.45-inch LCD screen
Battery: Camera unit (570mAh); Charging case (800mAh)
Lens: F/2.4
Storage: External TF card slot, supports up to 128GB
Still Images: Format (JPG), Resolutions (2M/5M/8M)
Video Clips: Format (MP4), Resolutions (2.7K/1080P/720P)

Functions

1. Control Overview

2. Button Overview

Button/Indicator	Function Description
Power Button	1. Press and hold to turn the camera on or off. When on, a short press enters the Settings menu. 2. In submenus, a short press moves the selection down.

Memory Card Installation and Formatting

Memory Card Installation
This camera uses a TF memory card, supporting up to 256 GB. The card slot is located on the side of the unit. Insert the TF card correctly into the slot; you will hear a click when it is fully seated. Improper insertion may damage the card or the slot. To remove it, gently push the card inward to eject it.

Memory Card Formatting

When you insert a memory card into the camera for the first time, the system will automatically prompt you to format it. Formatting is permitted only if the card contains no files you wish to keep; otherwise, you may encounter issues such as failed recording or a blue screen.

On the home screen, briefly press the Power button to open the Settings menu. Use the Up/Down buttons to select [Language], then press the Shutter button to enter it. After that, select [Format] and press OK to confirm.

Camera Settings

Power on the Camera
Press and hold the Power button. The screen will light up and the camera will power on, as shown below.

Setting the Language

On the home screen, briefly press the Power button to enter the Settings menu. Use the Up/Down buttons to select [Language], then press the Shutter button to confirm. Use the Up/Down buttons again to choose your preferred language.

System Settings

On the home screen, briefly press the Power button to enter the Settings menu, as shown below.

Submenu	Menu Contents
Rec Resolution	2.7K 30FPS/1080P 30FPS/720P 30FPS
White Balance	Auto / Sunny / Cloudy / Incandescent / Fluorescent
Exposure Settings	~3/-2/-1/0/1/2/3
Filter	Normal / Black & White / Negative / Sepia / Red / Green / Blue
Auto Screen Saver	Off / 30s / 1 min / 2 min
Auto Power Off	Off / 3 min / 5 min / 10 min

Use the Camera

Taking Photos

On the home screen, briefly press the Mode button to switch to Photo mode. Point the camera at your subject, hold it steady, and press the Shutter button to take a picture.

Recording Video

On the home screen, briefly press the Mode button to switch to Video mode. Press the Shutter button to start recording, and press it again to stop.

Playing Back Photos / Videos

After capturing photos or videos, you can play them back directly on the camera. On the home screen, briefly press the Mode button to switch to Playback mode, where you can view your photos and videos.

1. Use the MODE and Power buttons to navigate through photos and videos;
2. While viewing a video, press the Shutter button to play or exit the video.
3. While viewing a photo or video, press and hold the Shutter button to delete the current file.
4. Press and hold the Mode button to exit Playback mode.

Wi-Fi Function

This camera supports remote control via a smartphone app within Wi-Fi coverage. To use the Wi-Fi function, first scan the QR code below with your smartphone to download the app.

Using the App

1. Turn on the camera. On the home screen, press and hold the MODE button to turn on the Wi-Fi hotspot. The camera screen will display the Wi-Fi network name and password.

Usage Guidelines

Safety Precautions

1. Do not disassemble or modify this product.
2. If any part of the camera emits smoke or an unusual odor, stop using it immediately to avoid risk of fire or electric shock. Turn off the camera, remove the battery, or unplug the power cord from the outlet. Make sure the camera has stopped smoking or emitting any unusual smell before handling.
3. Do not expose the camera to water or other liquids, or immerse it in water or any liquid. This camera is not waterproof. If the exterior comes into contact with liquids or saltwater, wipe it dry with a soft cloth. If water or foreign objects enter the interior, immediately turn off the camera, remove the battery, or unplug the power cord.
4. When using the flash, keep a safe distance from the eyes of people or animals. Being too close to a strong light source may cause vision damage. Take extra care to keep the flash at least 1 meter (39 inches) away from infants.
5. Keep the camera and battery out of the reach of children.
6. Do not heat the battery or expose it to fire, as it may explode.

Maintenance and Cleaning

1. If the camera will not be used for an extended period, remove the battery and store it in a dust-free, dry environment with a temperature no higher than 30°C.
2. To prolong battery life, fully discharge the battery before storing it.
3. At least once every three months, fully charge the battery and then fully discharge it.
4. If dust or dirt accumulates on the lens or display, gently wipe it with a clean, soft lens cleaning cloth.
5. Since this device is a precision instrument, do not drop it or subject it to strong impacts or vibration.

Troubleshooting

1. Cannot charge

- (1) If the charging indicator does not light up, the charger may not be connected. Please check that the charger is properly plugged in.
- (2) It is recommended to begin charging the battery within a temperature range of 10°C to 30°C.

2. Battery life is too short

- (1) Check whether the battery is fully charged.
- (2) If the ambient temperature is below 10°C, the battery will drain quickly.
- (3) Battery life varies depending on the usage mode.

3. Memory card not recognized

- (1) Please verify that the memory card is a TF card.
- (2) Check whether the card has been inserted incorrectly.
- (3) The card may not have been formatted when used in the camera for the first time.

4. Memory card cannot be formatted

- (1) If the camera fails to format the card, try formatting it on a computer first, then reinsert it into the camera. Alternatively, try using a different memory card.

5. Cannot focus properly

- (1) Do not shake the camera; hold it steady. The camera will autofocus within 1–3 seconds.
- (2) When shooting at a distance of less than 3.3 feet, you can manually focus by half-pressing the shutter button. For video recording, you need to keep it held down continuously.

6. Cannot connect to computer

- (1) Check that the USB cable is properly connected.
- (2) Verify that the computer's USB port is working normally.
- (3) Check the compatibility of your computer's operating system.

Other

1. Do not insert any objects other than a memory card into the card slot.
2. For a few seconds after powering on, the image displayed on the camera may be unstable. This is not a malfunction.
3. Due to the optical characteristics of the lens, color dispersion (lateral chromatic aberration) may appear at the edges of the image. This is not a camera defect.
4. The memory card may become warm after extended use. This is normal.
5. The camera screen may heat up during prolonged use. This is normal.

This device (Model: SC05) complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.

— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

The device input voltage is 5V, the input current is 2A, and the rated power is 1.3W.