



*Please read the instructions before use

Product Name	Open-Ear Earbuds
Product Model	P08
BT Version	6.0
Corresponding Audio Decoder	SBC
Charging Port	TYPE-C
Supported Protocols	HFP, A2DP, AVCTP, AVDTP, AVRCP
Input	5V $\Rightarrow$ 1A
Frequency Response Range	20-20KHZ
Weight	About 44g
Single Ear Weight	About 5g
Charging Case Size	2.6 x 2.05 x 1.18inch
Headphone Size	1.06 x 0.984inch
Charging Time	About 1.5 hours



Place left and right earbuds in the correct ears.

Position the speaker outlet toward your ear canal.

Open the lid to power on the earbuds, then wear them. You'll hear a prompt tone, indicating they are in pairing mode. Turn on Bluetooth on your device and select the earbuds "P08" from the list to connect. After pairing is successful, you will hear a prompt tone "Connected".

*Earbud waiting to connect status: White light flashing

Take out the earbuds from the charging case and within 3 minutes of turning them on, they will automatically reconnect to the last device. Otherwise, they will automatically power off.

←

Bluetooth

Bluetooth ☒

Device name Xiaomi 13 >

P08 Connected | Battery 100% | Active

Device type Specify the device type to further optimize your experience Earphones

Use for

Phone calls Connected to phone audio ☒

Media audio Connected to media audio ☒

Allow access to contacts and call history ☐ For sharing contacts

Properties

Keep volume consistent
Keep the volume of Bluetooth devices and the phone strictly consistent. You can turn this feature on and off when media isn't playing in the background. ☒

AAC
Provide a high-quality audio experience ☒

Charging the Case :

Charge the case with the included USB-C cable. Full charge takes about 1.5 hours.

Charging the Earbuds :

Place earbuds in the case and close the lid. The indicator lights up while charging.

Note: Before first use, please fully charge the device. Keep the earbuds and USB-C port dry before charging.

Case	White light flashes	<10% Low battery alert
	Orange light flashes	Charging the case
	Orange light stays on	Fully charged
Earbuds	White light stays on	Charging the earbuds
	Light turns off	Fully charged

Play/Pause	Double click on the left or right earbud (L or R)
Previous Track	Triple click on the left earbud (L)
Next Track	Triple click on the right earbud (R)

Answer a Call	Click on the left or right earbud (L or R)
End a Call	Click on the left or right earbud (L or R)
Reject a Call	Press and hold the left or right earbud (L or R) for about 2 seconds

Voice Assistant	Quadruple click on the left or right earbud (L or R)
-----------------	--

Power On	Remove the earbuds from the charging case, and they will power on automatically.
----------	--

Power Off	Place the earbuds into the charging case and close the lid. The earbuds will power off automatically and start charging. 1. If the lid is opened and no device connects to the earbuds within 3 minutes, the earbuds will power off automatically. 2. When the distance between the earbuds and the paired device exceeds the effective communication range, the earbuds will disconnect and attempt reconnection. If reconnection fails after more than 3 minutes, the earbuds will power off automatically.
-----------	---

VIXSKY

GET IT ON
Google Play

Available on the
App Store

1. Download the VIXSKY app by scanning the QR code or searching for it in the App Store.
2. Open the app and log in.
3. Follow the in-app instructions to pair your earbuds. Add the device within the app; ensure the earbuds are paired with your phone's Bluetooth before adding.
4. Once successfully added, you can access additional features.

If your earbuds fail to connect to the VIXSKY App, reinstall the App or update it to the latest version via your mobile app store.

*Please note: To ensure the app's proper functioning, select your current country/region under "Settings - Region".

The screenshot displays the P08 app interface, which is divided into two main sections: a left sidebar for device management and a right pane for custom settings.

Left Sidebar (Device Management):


- Header:** Shows the time 1:52, signal strength, and battery level. The device name "P08" is displayed next to a gear icon for settings.
- Device Status:** Two earbuds are shown, both with a green battery icon and "100%" charge.
- Change name:** A button labeled "P08" with a right-pointing arrow.
- Custom settings:** A button with a right-pointing arrow.
- EQ adjustment:** A button with a right-pointing arrow.
- Game Mode:** A button with a green toggle switch.
- White noise:** A button with a right-pointing arrow.

Right Pane (Custom settings):

- Header:** Shows the time 2:22, signal strength, and battery level. The title "Custom settings" is displayed next to a back arrow.
- Navigation:** Three buttons are present: "Click" (underlined), "Double click", and "Triple click".
- Image:** A detailed illustration of a right ear with a black earbud inserted.
- Left Control:** A button labeled "Left" with a volume slider set to the right and the text "Increase volume".
- Right Control:** A button labeled "Right" with a volume slider set to the left and the text "Decrease volume".

- Check earbud battery levels/Game mode
- Custom settings

Customize the touch controls via the VIXSKY app to suit your preferences. Please note that the factory default settings do not include touch controls for adjusting the volume; however, you can configure this function yourself.

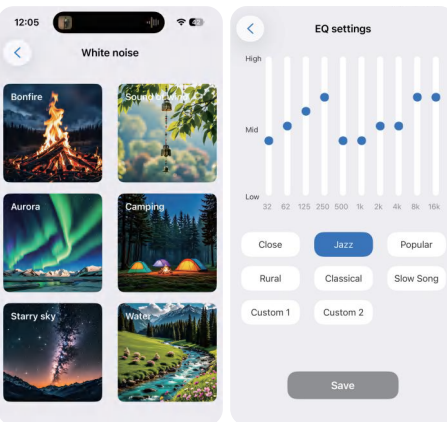

- White noise
- EQ Adjustment

Open the VIXSKY app to explore 5 EQ presets—Jazz, Classical, and more—or build a fully custom EQ.

Besides the features listed above, you may update the firmware and explore many other useful features via the app.

1. No sound from one earbud
Method 1: Long press the touch area of the silent earbud for 4–6 seconds. The earbud indicator light will flash, and the two earbuds will automatically re-pair. If the indicator does not flash, the earbud is depleted and must be charged first.
Method 2: Charge with a data cable for 1.5 hours. A dead charging case may also result in no audio output.
2. Low volume when connected to Apple devices
Go to Phone Settings > Sound & Haptics > Headphone Safety, then Disable Reduce Loud Sounds.
3. Audio delay during video playback or gaming
Audio latency may occur when your phone transmits audio to the earbuds. This varies based on environment, network conditions, and your phone's audio codec.
4. Intermittent / cutting-out audio
Nearby Wi-Fi, 4G/5G signals, high-power electronics, or physical barriers like walls can cause signal interference and intermittent sound. Try moving to another location or re-pairing your earbuds to resolve the issue.
5. One earbud fails to charge
Wipe the metal charging contacts on the earbud and charging case with a dry tissue. Place the earbud back into the charging case and close the lid. The charging case's white indicator will stay on while charging the earbud. If the indicator does not light up, the charging case battery is depleted; charge it with a data cable.

6. Cannot find or connect via Bluetooth
Method 1: These earbuds do not support simultaneous connection to two devices. To pair with a new device, turn off Bluetooth on your previously connected device. When the earbud indicator flashes, the earbuds are in pairing mode and ready to be detected by searching for the Bluetooth name.
- Method 2: If the charging case has no power (no indicator lights when the case lid is opened), plug in a data cable to charge it before attempting to pair the earbuds.
7. Bluetooth remains connected after closing the charging case lid
This issue is usually caused by dust on the earbud bottom contacts. Clean the charging pins on the bottom of the earbuds.
8. How to reset the earbuds
 - (a) Unpair and delete the earbud Bluetooth record on your phone
 - (b) Place both earbuds into the charging case and close the lid. Wait approximately one minute.
 - (c) Open the case, enable Bluetooth on your phone and reconnect. During pairing, only one earbud indicator will flash.
9. How to clean
After each use, wipe the earbuds with a soft, dry cloth and clean the charging contacts with a cotton swab to prevent charging and power-off issues caused by sweat accumulation.

- We recommend using a 5V output adapter certified to FCC, UL or CE standards, paired with the matching charging cable for charging.
- Keep out of reach of infants and young children. Ingestion may cause serious injury.
 - Lower the volume before connecting your earbuds. High volume upon connection may result in sudden loud noise.
 - If you notice abnormal conditions such as smoke, strange odors or excessive heat during use, immediately stop use and charging, cut off power, and remove the earbuds from the charging case. Do not reuse this product. Contact our support team.
- This product contains a built-in rechargeable lithium-polymer battery. Do not disassemble or damage it. Fire, overheating, electrolyte leakage, rupture or accidental ingestion may cause severe injury.
- Do not use, store or place the product near open flames, in direct sunlight, inside a sun-heated vehicle, or in other high-temperature environments. These conditions may cause fire, overheating, liquid leakage, rupture or product failure.
- Do not place any objects other than the earbuds inside the charging case. This may cause fire, electric shock or malfunction.
- Do not charge earbuds of other models in this charging case, as it may damage the batteries of other earbuds.
- If the charging contacts on the earbuds are wet, do not insert them into the charging case. This may cause electric shock, injury or malfunction.

- Do not touch the charging terminals of the charging case with your fingers or hands. May cause electric shock, injury or malfunction.
- Do not dry the unit with a hair dryer. Deformation may occur.
- Do not wipe the product with thinners, volatile oils, alcohol or similar substances. These may lead to deformation and discoloration.

- Listening at high volume may damage your hearing. For traffic safety, do not use these earbuds while driving or cycling.
- Please do not use earbuds in areas where environmental noise cannot be heard, such as railroad crossings, train station platforms, pedestrian crosswalks, and construction sites, which may pose a danger.
- Do not place heavy objects or apply pressure to these earbuds, as they may cause deformation during long-term storage.
- Static electricity built up on your body may cause mild ear discomfort. Wearing clothing made from natural fibers can reduce this effect.
- Do not subject these earbuds to heavy impact.

- Do not expose the earbuds to water. Liquid ingress may result in fire, electric shock or product failure. Please observe the precautions below:
- Take care not to drop the earbuds into sinks or other water-filled containers.
- Do not use the earbuds in humid locations or in severe weather including rain and snow.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from

that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

FCC ID: 2BYFR-P08

This product comes with a 1-year limited warranty effective from the date of purchase. Warranty service is valid only when the following conditions are satisfied:

- 1.The device is operated properly in accordance with the product user manual.
- 2.This warranty does not cover failures or damage resulting from human factors (including unauthorized disassembly, heavy impact deformation caused by compression or stepping, water immersion accidents), accidents (fire, external force squeezing, drops, etc.), or natural disasters (earthquake, typhoon, lightning strikes, etc.).

Compatible with iOS, Android, and Bluetooth-enabled laptops with proper Bluetooth drivers.

Maximum wireless range, playback time and charging time are reference values only and may differ based on usage environment.

Specifications and product design are subject to change without prior notice. Product production may also be discontinued at any time.

- Diagrams in this manual may differ from the actual product.
- KIND REMINDER**
- Please do not disassemble this product by yourself.
 - Please use the included charging cable and charger for charging.
 - Immediately stop use if you experience any discomfort while wearing this Bluetooth earbuds.

1. Open Ear Clip-On Earbuds
2. User Manual
3. USB-C Charging Cable

If the user manual does not resolve your issue or if you have any other questions, please contact VIXSKY Customer Support through your Amazon order for further assistance. We'll help you resolve your issue quickly and can provide a free replacement or exchange if needed.

Thank you for purchasing the VIXSKY authentic product.
For any assistance please contact us by email: support@vixsky.co