

Chapter 1. Unboxing Your Magic Chest

 
Open the box with your Grand Mage and check for these 7 important items:

1 Tkid Printer
Your Magic Workshop

2 Power Cord (Adapter)
Brings power to the machine.



3 Colorful Filament (PLA)
The material your Tkid shapes into toys.

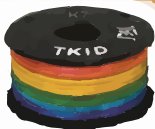

4 Filament Spool Holder Holds the filament reel steady.



5 Pliers (Cutter)
Trims the filament tip.



Adult use only

6 Calibration Card
Helps the machine measure and prepare.



7 Fun Stickers
Decorate your Tkid machine or the toys you print!



Tip: If anything is missing, ask your Grand Mage to contact Tkid support before you start.

Chapter 2. Waking Up Your Machine



Grand Mage, please help!

1



Step 1 Get the App

Search "XMAKER" in the App Store or Google Play, then install the **XMAKER App**. On Windows, visit www.tkid.tech to download **XMAKER**.

2



Step 2 Turn It On

Plug in the power cord, then flip the red power Switch to "I". A warm light means the machine is on.

3



Step 3 Reset the Machine

Press and hold the red Reset button until you hear a "Beep!" The light turns steady amber/yellow.

4



Step 4 Connect the Wi-Fi

Open the **XMAKER App**, tap **Add Device**, choose **Tkid**, and enter the **Wi-Fi password**.




Chapter 3. Getting the XMAKER App

The XMAKER app is your magic remote.

1 For Mobile Devices

 
Search for "XMAKER" in the App Store or Google Play, or visit www.tkid.tech to download the XMAKER app.

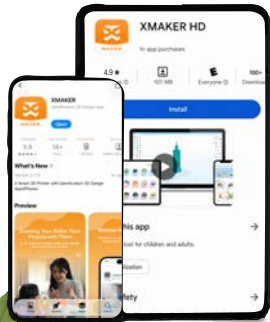

2 For Windows Computers

Download XMAKER from www.tkid.tech to prepare 3D models for printing.

 Windows only, macOS not supported.

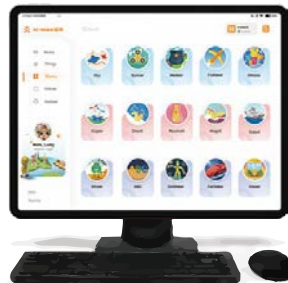

First-time helper:

Open the print door and gently remove the foam padding that protects the nozzle.