


## WIRELESS BELLY SPEAKER

Built-in Music • Bluetooth® Audio • White Noise

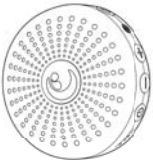

### USER MANUAL


Model: BM-01

#### KNOW YOUR SPEAKER

##### IN THE BOX

- Wireless Belly Speaker x1
- Reusable Silicone Pads x2
- USB-C Data/Charging Cable x1
- Storage Pouch x1
- User Manual x1

##### BUTTON DESCRIPTION

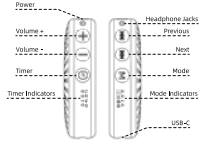

|              |                                                                          |
|--------------|--------------------------------------------------------------------------|
| <b>Power</b> | Hold 3 sec = Power On/Off<br>Press = Play/Pause                          |
| <b>Mode</b>  | Switch playback mode:<br>Sequential / Shuffle / Bluetooth® / White Noise |
| <b>Timer</b> | 15 / 30 / 45 / 60 min<br>Volume fades during that 5 min                  |

#### GETTING STARTED

##### 1. CHARGE BEFORE FIRST USE

Connect the speaker using the included USB-C cable. The speaker stays powered off while charging. See MUSIC FILES & USB-C for charging status and battery details.

##### 2. POWER ON

Press and hold the **Power** button for **3 seconds**. The speaker remembers the previous playback mode and volume level.

##### 3. ATTACH & PLACE

Make sure your skin is **clean, dry, and free of lotion or body oil**. Attach the silicone pad to the belly-facing side, then gently place the speaker on your belly.

##### 4. START PLAYBACK

Press **M** to select a playback mode. Use **+ / -** to adjust volume. Short press **Power** to pause or resume.

#### QUICK TROUBLESHOOTING

**Won't turn on**  
Charge the speaker, then hold Power for 3 sec.  
**Bluetooth won't connect**  
Select Bluetooth Mode, then connect to **BellyMusic**.  
**MP3 won't play**  
Make sure the file is a standard MP3.  
**Pad won't stay in place**  
Clean and dry the skin and pad. For best hold, use while resting in a **semi-reclined position**.

#### PLAYBACK MODES

Press the **M** button to cycle through:

##### 1. SEQUENTIAL PLAYBACK

Stored music plays in order.  
**Maximum sound output: 500 dBA**  
(measured close to the speaker)  
Start at a lower volume before placing the speaker on your belly and adjust gradually as needed.

##### 2. SHUFFLE PLAYBACK

Stored music plays in random order.

##### 3. BLUETOOTH® MODE

Use Bluetooth to stream audio from a compatible phone, tablet, or other device.  
The Bluetooth indicator:  
**Flashes — Waiting for connection**  
**Stays solid — Connected**  
To pair, open Bluetooth settings on your device and select: **BellyMusic**

##### 4. WHITE NOISE MODE

Plays the 10 built-in soothing sounds:  
White Noise • Rain • Campfire • Ocean Waves • Flowing Water • Crickets • Light Rain • Heavy Rain • Lullaby 1 • Lullaby 2  
Use **Previous / Next** to move through the available sounds.

#### BUILT-IN MUSIC

**8 music tracks are preloaded in the speaker.**  
Use **Previous / Next** to change tracks.  
You can also add your own MP3 files via USB-C. See **MUSIC FILES & USB-C**.

#### PLAYBACK CONTROLS

##### VOLUME

Use **+ / -** to select one of **9 volume levels**.

Stored music plays in order.  
**Maximum sound output: 500 dBA**  
(measured close to the speaker)  
Start at a lower volume before placing the speaker on your belly and adjust gradually as needed.

##### PREVIOUS / NEXT

Press the **Previous** or **Next** button to change tracks or soothing sounds. Bluetooth track control may vary depending on the connected device or app.

##### TIMER

Press the **Timer** button to cycle through: **15 → 30 → 45 → 60 → OFF**.  
The corresponding light shows the selected time. During the **final 5 minutes**, playback volume gradually decreases. When the timer ends, the **speaker powers off automatically**.

##### MEMORY

After restarting, the speaker remembers the previous **playback mode and volume level**.

##### HEADPHONES

Two 3.5 mm headphone jacks allow one or two compatible wired headphones to be connected. The belly speaker continues playing while headphones are connected.

#### MUSIC FILES & USB-C

##### ADD YOUR OWN MUSIC

The speaker includes **2 GB of internal storage** for MP3 audio files.

##### CONNECT TO A COMPUTER

1. Connect the speaker using the USB-C data cable.
2. Open the removable drive named: **BellyMusic**
3. Add or delete **MP3 files** as needed.
4. Safely eject **BellyMusic** before disconnecting.

##### RECOMMENDED FORMAT: MP3

Standard **MP3** files are recommended for reliable playback. If your file is in another format, you may convert it using an online audio converter such as CloudConvert.com. Select MP3 as the output format, save the converted file to your computer, then copy it to the BellyMusic drive. Third-party conversion services are independent services and are not required to use this product.

##### IMPORTANT

Keep backup copies of personal audio files. Do not use the speaker as the only storage location for important files.

##### CHARGING

Connect the speaker to a USB power source using the included USB-C Cable.  
**Solid light blue**: Charging  
**Flashing light blue**: Fully Charged  
**Charging Time**: Approx. 60 minutes  
**Battery Life**: Over 10 hours  
The speaker remains powered off while charging.

#### REUSABLE SILICONE PAD

##### FOR BEST HOLD

For best results, use while **resting in a semi-reclined position** with the speaker **facing upward**.  
Avoid standing, walking, exercising, or other movement while attached.  
The pad is designed to help **position** the speaker during resting use, not for high-strength adhesion during active movement.

##### APPLY & REMOVE

1. Make sure the skin is **clean and dry**.
2. Attach the pad to the belly-facing side of the speaker.
3. Remove the protective film & place the speaker on your belly.
4. Press gently until secure.
5. To remove, peel away **slowly and gently**.  
For better adhesion, keep skin free from lotion, oil, sweat, and moisture.  
Do not use on irritated or damaged skin.

##### CLEAN THE PAD

If adhesion decreases:  
1. Remove the pad.  
2. Rinse with clean, **lukewarm water**.  
3. Gently remove residue with clean fingers.  
4. Allow to **air-dry completely** before reuse.  
Do not use alcohol, bleach, strong solvents, or abrasive cleaners. Stop use if skin irritation occurs.

##### CARE

Wipe the speaker with a soft, dry cloth.  
Do not rinse or immerse the speaker in water.  
Keep liquid away from the USB-C port and headphone jacks.

#### SPECIFICATIONS

|                     |                        |
|---------------------|------------------------|
| <b>Product Name</b> | Wireless Belly Speaker |
| <b>Model</b>        | BM-01                  |
| <b>Size</b>         | Ø72 × 20 mm            |
| <b>Port</b>         | USB-C                  |
| <b>Battery</b>      | 3.7V/500mAh            |
| <b>Max. Output</b>  | 800 dBA                |

#### SAFETY INFORMATION

- **This product is not a medical device** and does not replace prenatal care or professional medical advice.  
- **Keep dry.** Do not immerse in water or use while charging.  
- Do not disassemble, modify, crush, puncture, burn, or expose the product to excessive heat or open flame.  
- Stop use if the product is **damaged**, unusually hot, swollen, or if skin irritation occurs.  
- Keep the product and accessories away from babies and young children. **This product is not a toy.**

#### FCC WARNING STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.  
Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
The device has been evaluated to meet general RF exposure requirement.