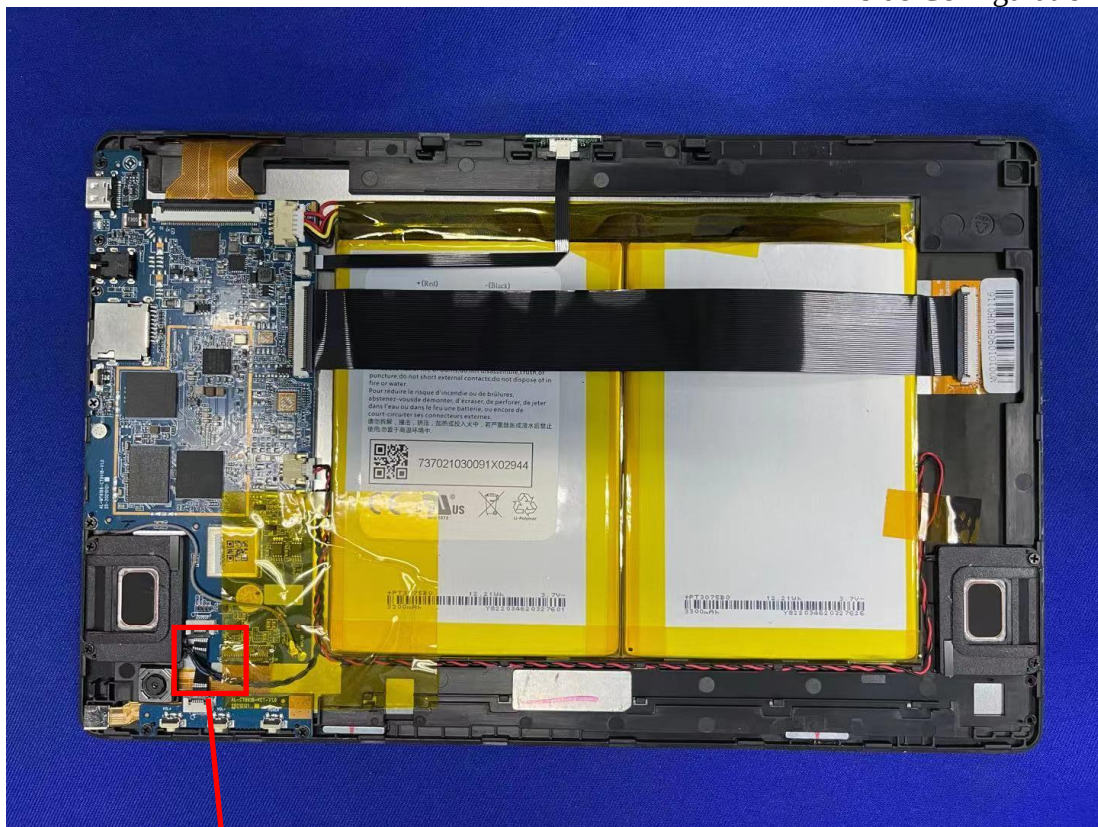


Figure 7
General Appearance of the EUT

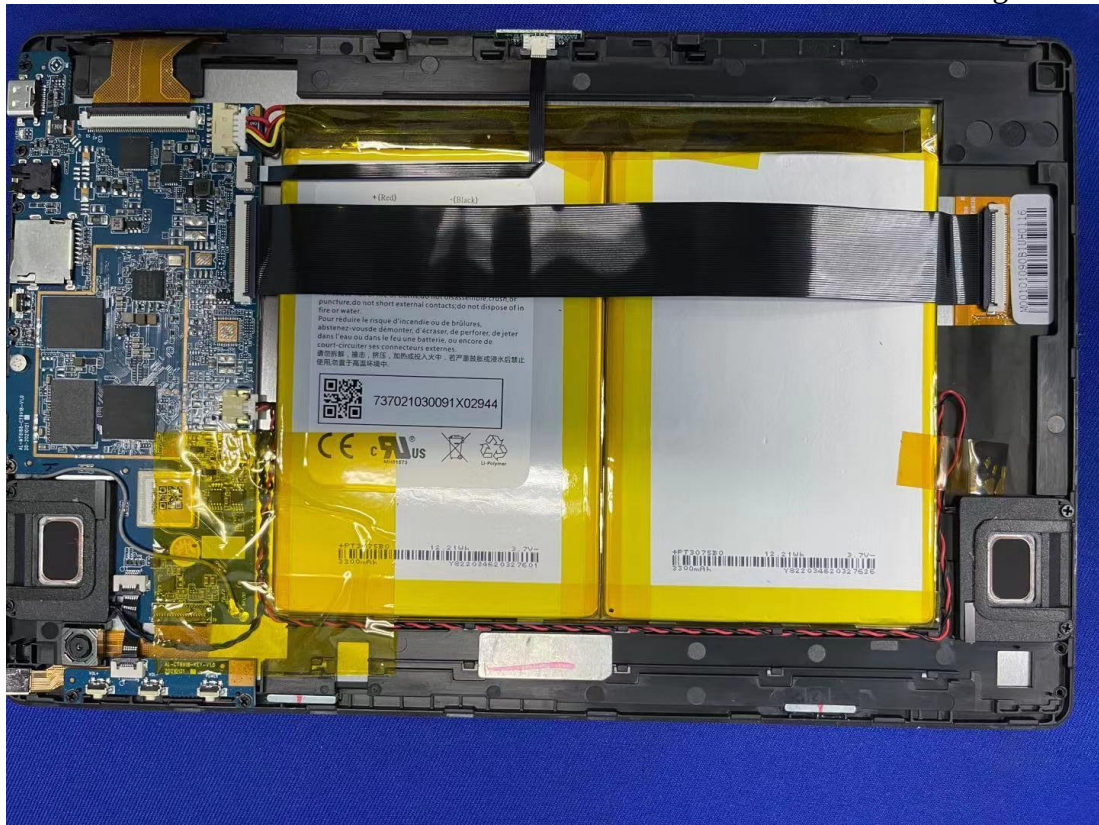


Figure 8
Inside Configuration of the EUT



BT/WIFI Ant

Figure 9
Inside Configuration of the EUT



M/N: CT9C18
Figure 10
General Appearance of the EUT


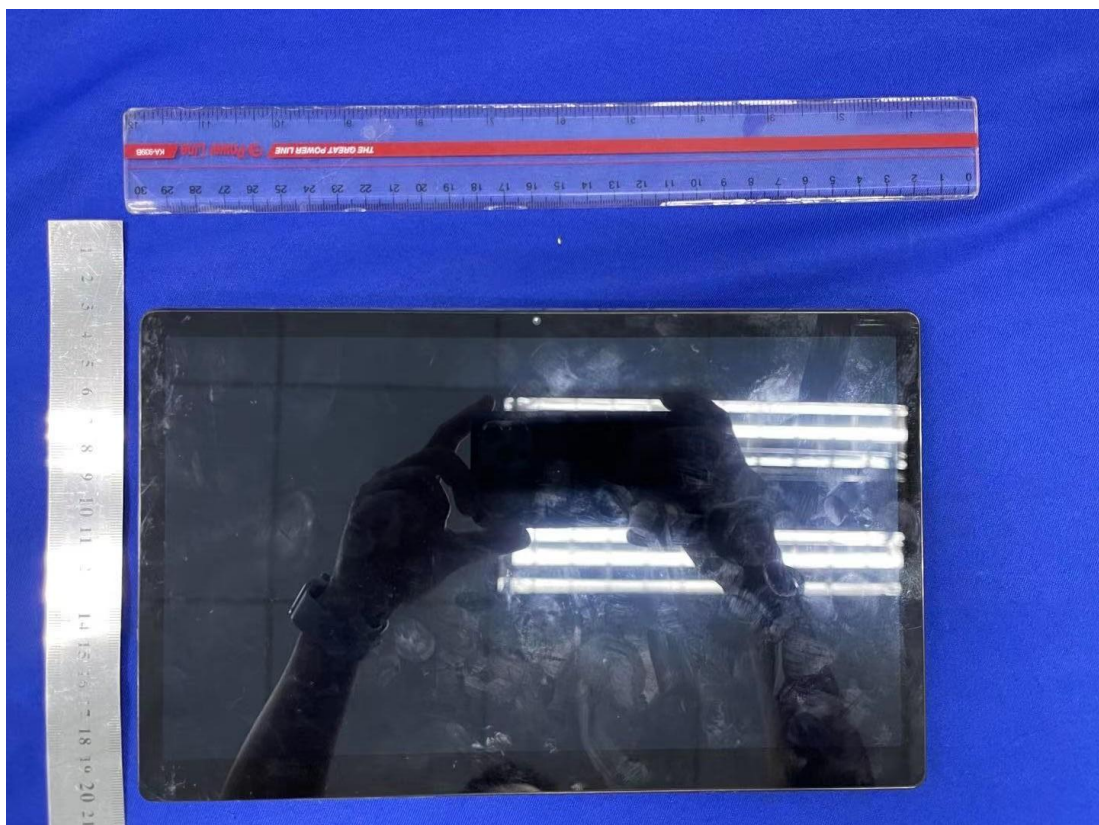


Figure 11
Inside Configuration of the EUT

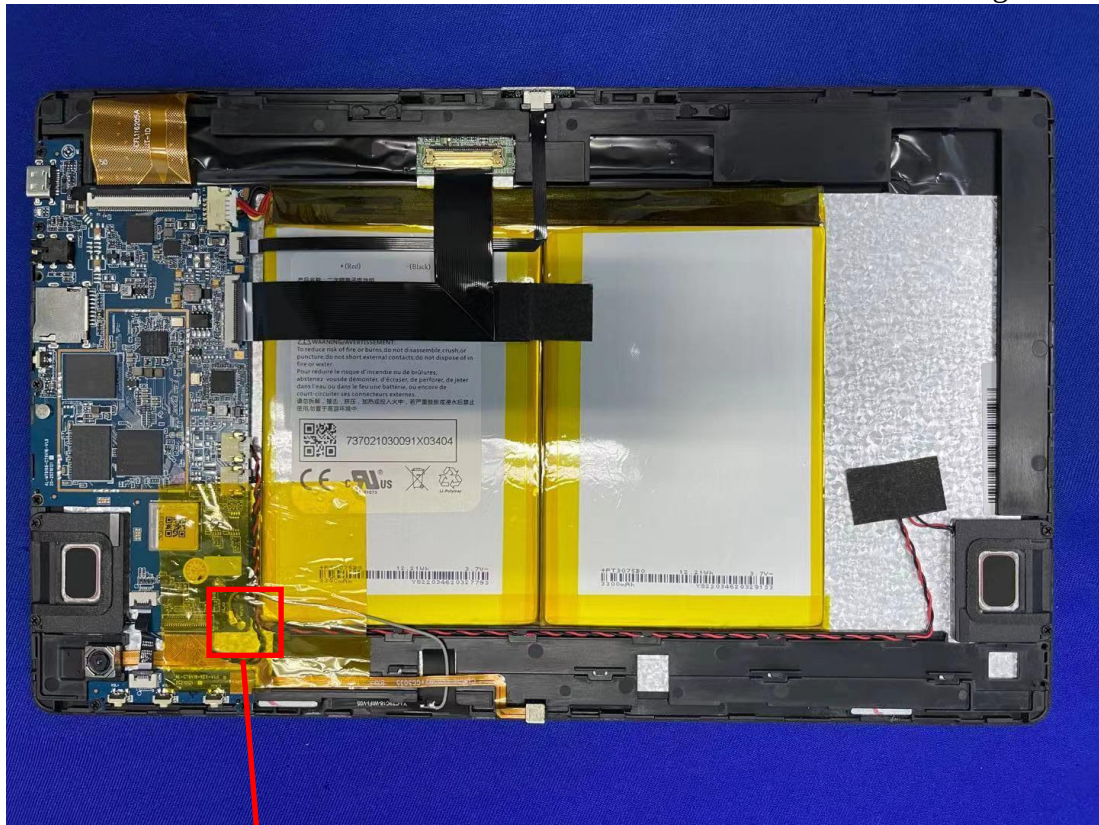

BT/WIFI Ant

Figure 12
Inside Configuration of the EUT

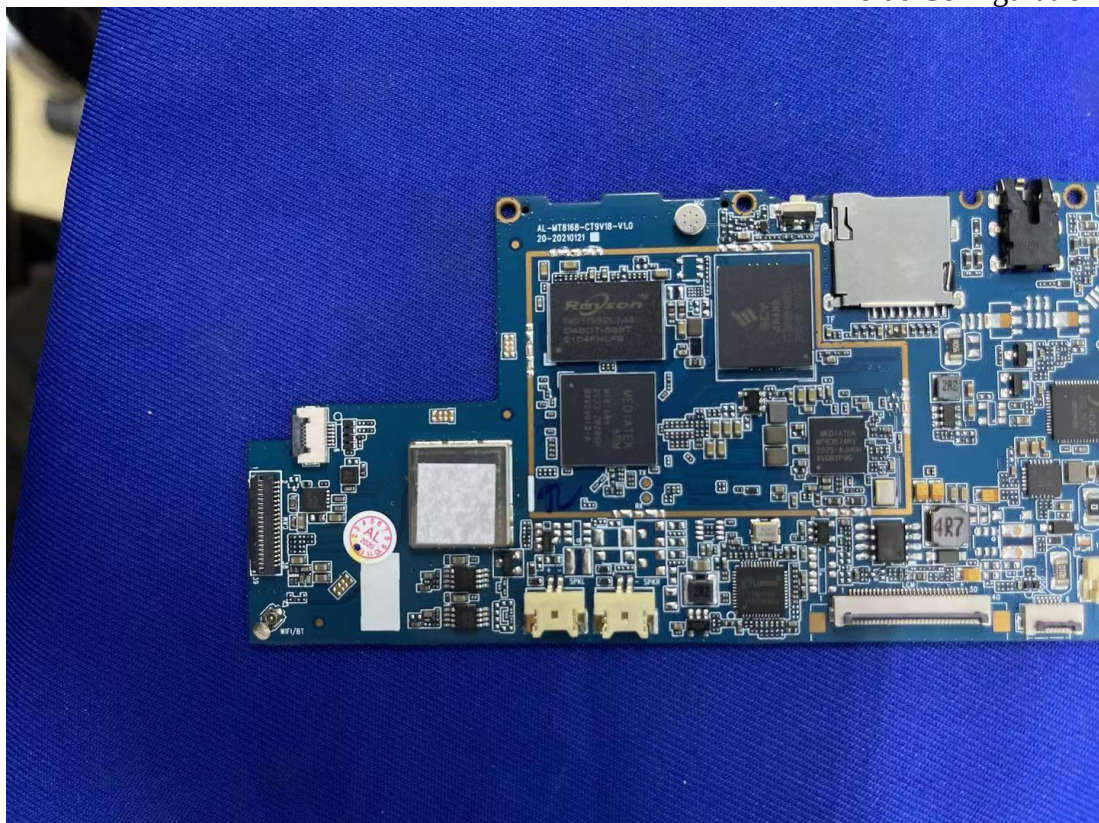


Figure 13
Inside Configuration of the EUT

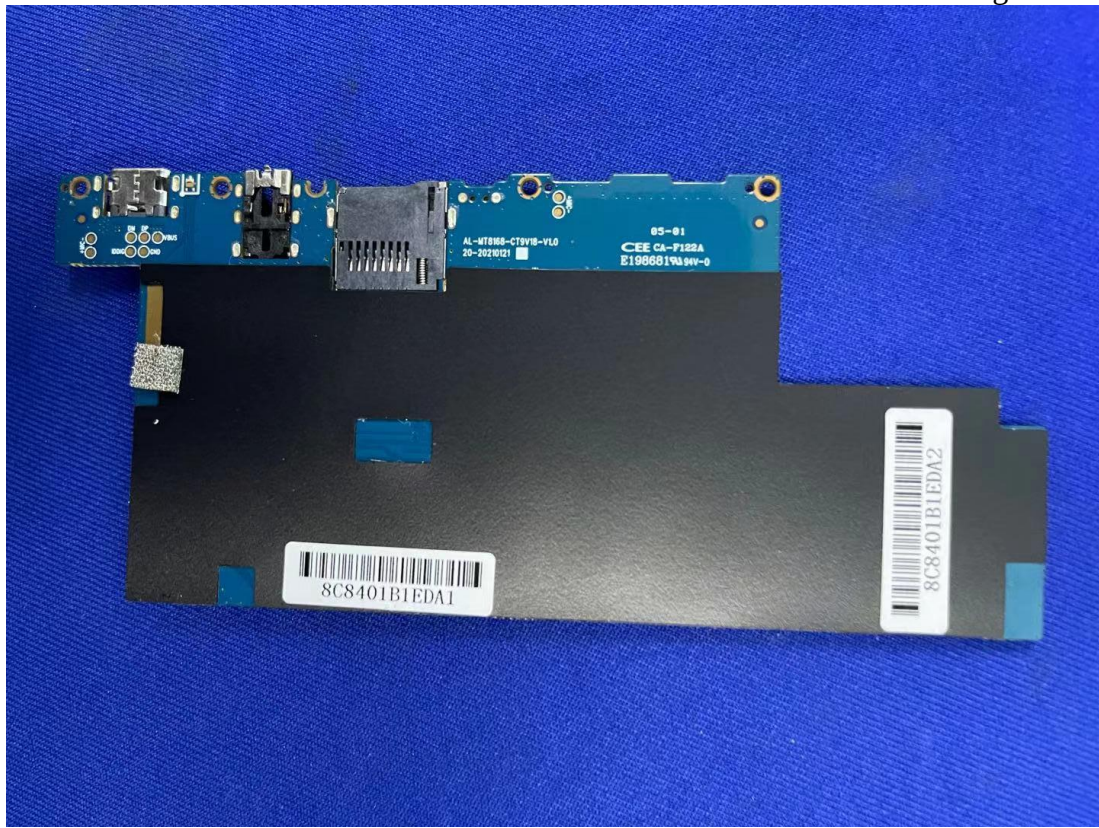


Figure 14
Inside Configuration of the EUT

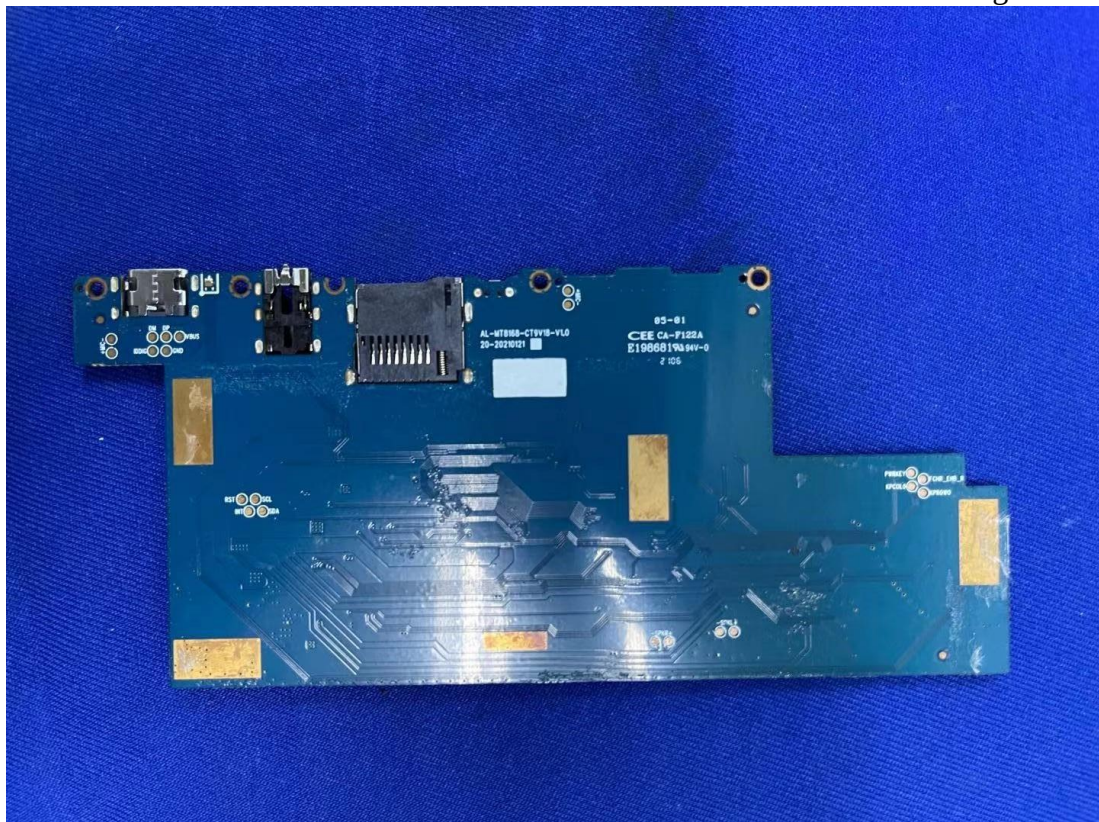


Figure 15
Inside Configuration of the EUT

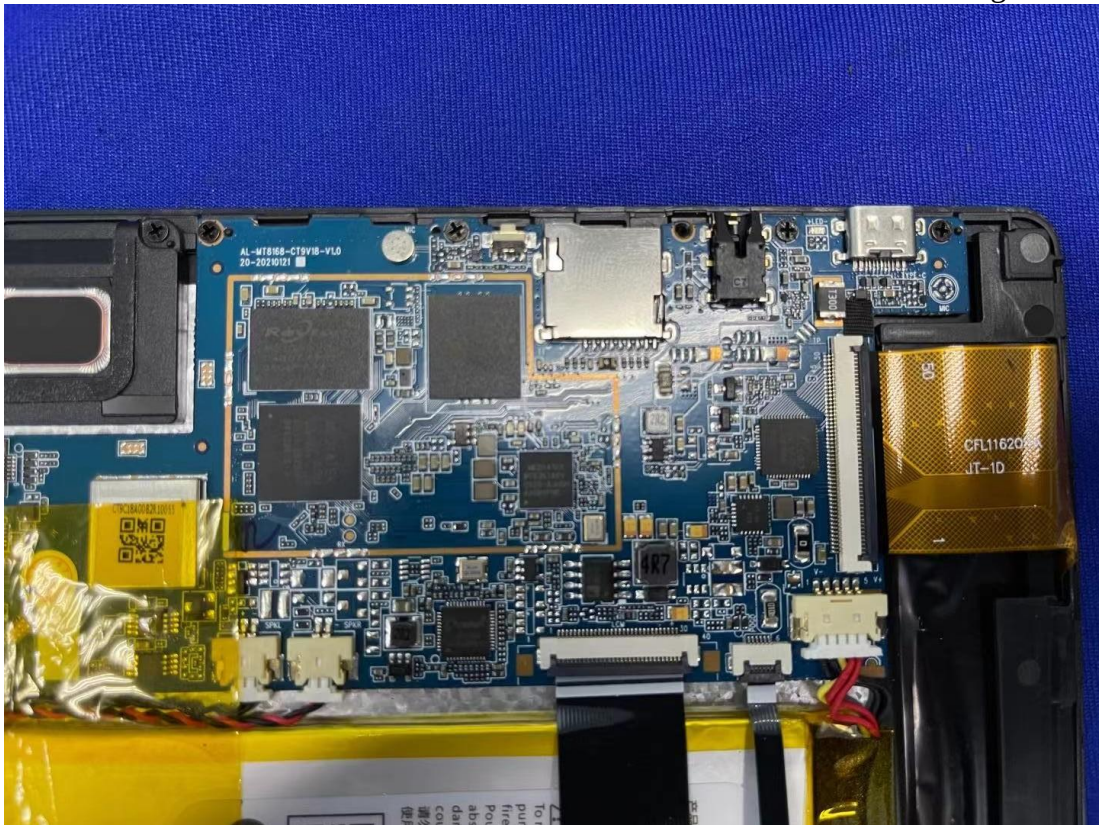


Figure 16
Inside Configuration of the EUT

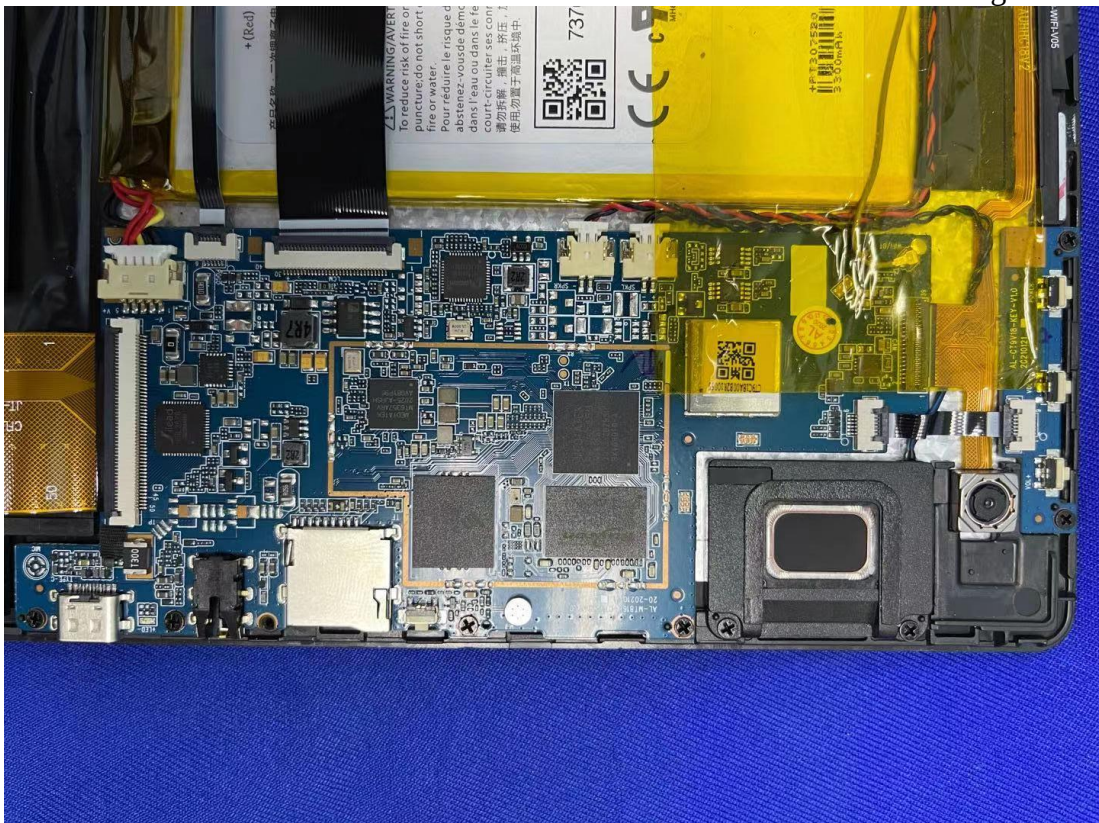


Figure 17
Inside Configuration of the EUT

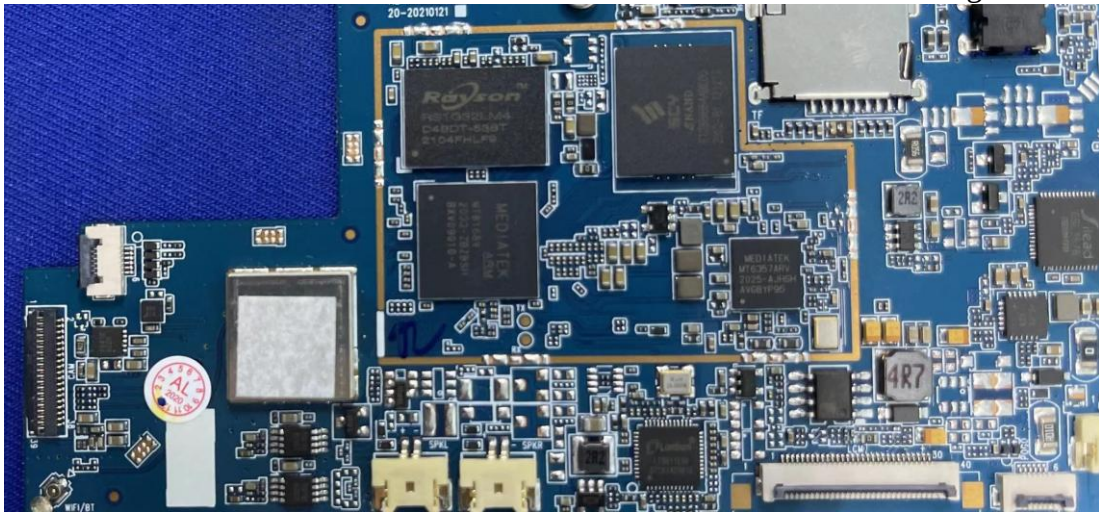


Figure 18
Inside Configuration of the EUT



Figure 19
Inside Configuration of the EUT

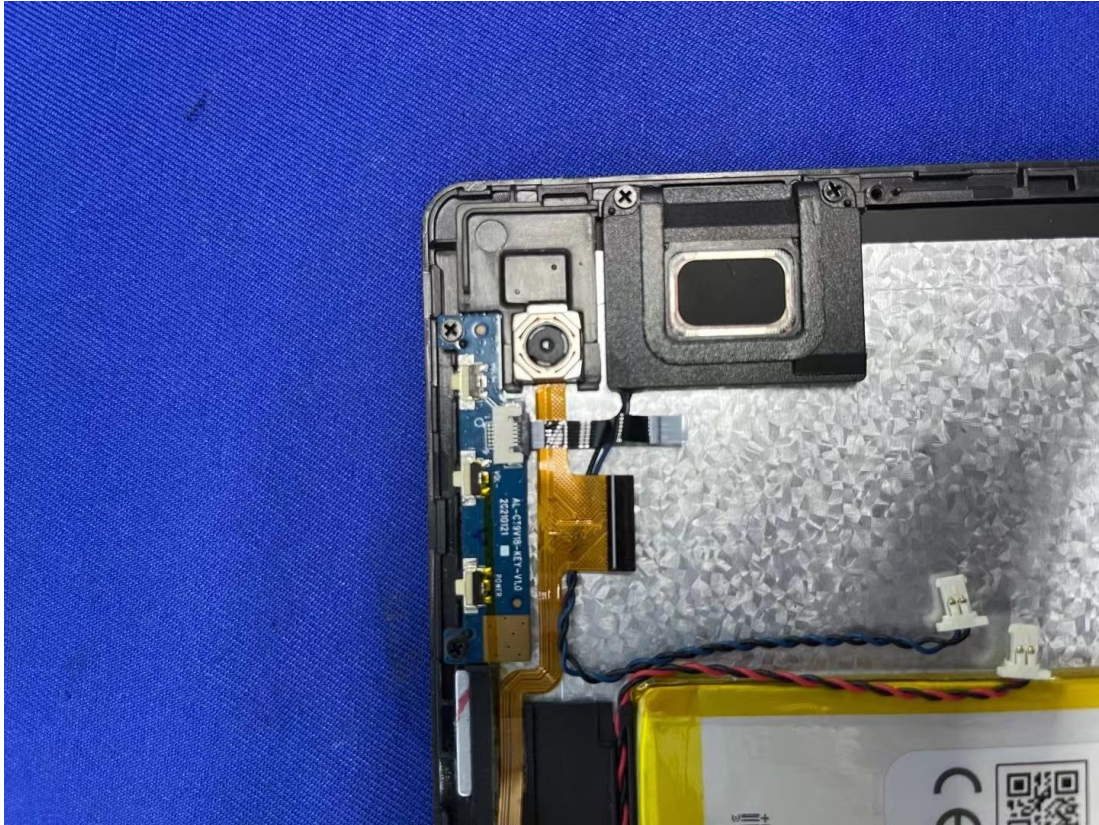


Figure 20
Inside Configuration of the EUT



Figure 21
Inside Configuration of the EUT

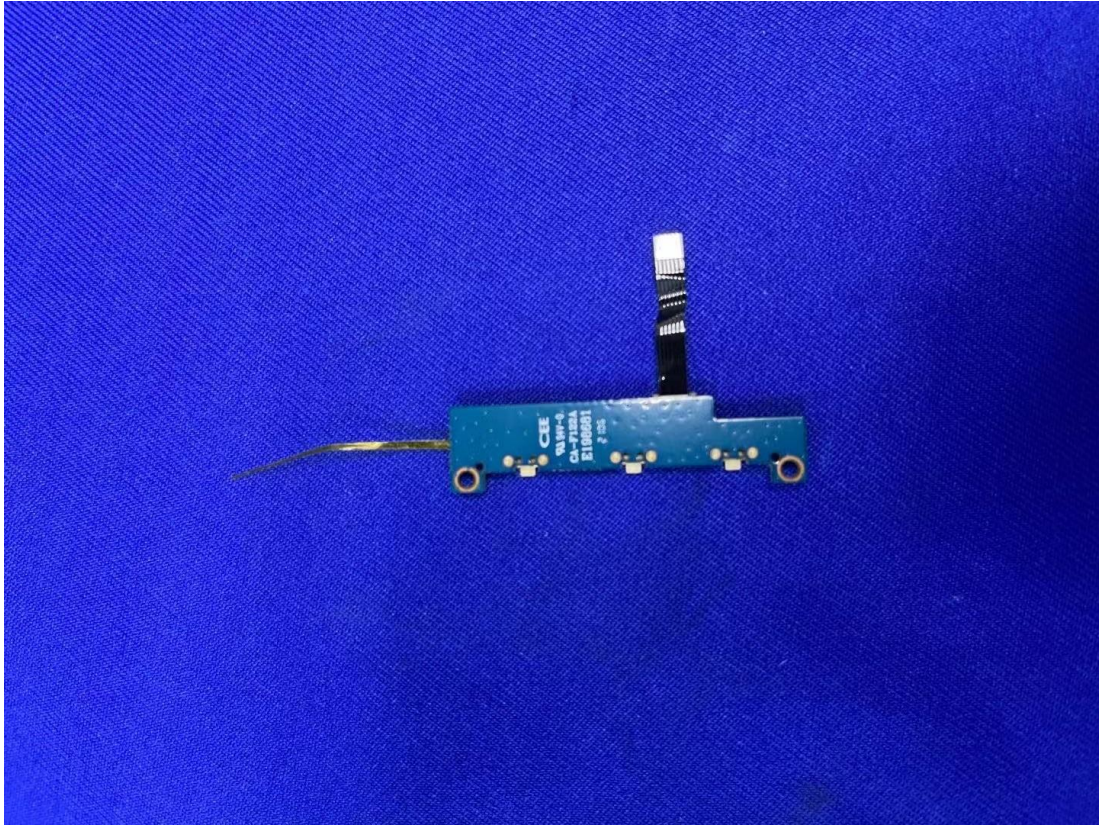


Figure 22
Inside Configuration of the EUT



Figure 23
Inside Configuration of the EUT



Figure 24
Inside Configuration of the EUT



Figure 25
Inside Configuration of the EUT

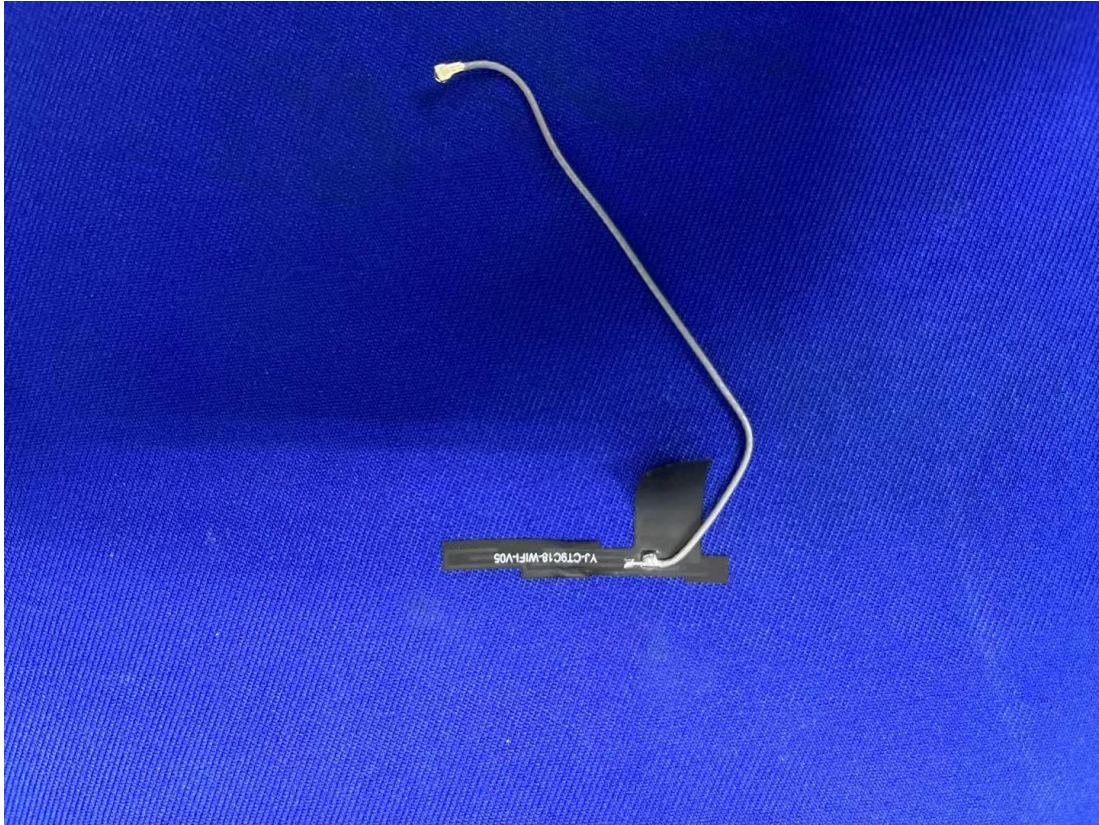


Figure 26
Adapter



Figure 27
Adapter